


Operating Instructions Proline Promag W 400 HART

Electromagnetic flowmeter

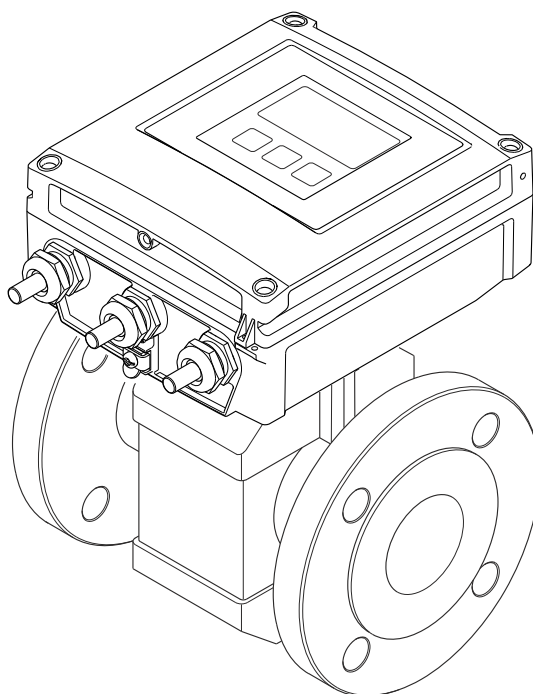

www.nicsanat.com

021-87700210

Endress+Hauser 
People for Process Automation

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these Instructions.

Table of contents

1	Document information	6		
1.1	Document function	6		
1.2	Symbols used	6		
1.2.1	Safety symbols	6		
1.2.2	Electrical symbols	6		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information	7		
1.2.5	Symbols in graphics	7		
1.3	Documentation	7		
1.3.1	Standard documentation	8		
1.3.2	Supplementary device-dependent documentation	8		
1.4	Registered trademarks	8		
2	Basic safety instructions	9		
2.1	Requirements for the personnel	9		
2.2	Designated use	9		
2.3	Workplace safety	10		
2.4	Operational safety	10		
2.5	Product safety	11		
2.6	IT security	11		
3	Product description	12		
3.1	Product design	12		
4	Incoming acceptance and product identification	13		
4.1	Incoming acceptance	13		
4.2	Product identification	13		
4.2.1	Transmitter nameplate	14		
4.2.2	Sensor nameplate	15		
4.2.3	Symbols on measuring device	16		
5	Storage and transport	17		
5.1	Storage conditions	17		
5.2	Transporting the product	17		
5.2.1	Measuring devices without lifting lugs	17		
5.2.2	Measuring devices with lifting lugs	18		
5.2.3	Transporting with a fork lift	18		
5.3	Packaging disposal	18		
6	Installation	19		
6.1	Installation conditions	19		
6.1.1	Mounting position	19		
6.1.2	Requirements from environment and process	21		
6.1.3	Special mounting instructions	23		
6.2	Mounting the measuring device	24		
6.2.1	Required tools	24		
6.2.2	Preparing the measuring device	24		
6.2.3	Mounting the sensor	24		
6.2.4	Mounting the transmitter of the remote version	30		
6.2.5	Turning the transmitter housing	32		
6.2.6	Turning the display module	34		
6.3	Post-installation check	35		
7	Electrical connection	36		
7.1	Connection conditions	36		
7.1.1	Required tools	36		
7.1.2	Requirements for connecting cable	36		
7.1.3	Terminal assignment	38		
7.1.4	Shielding and grounding	40		
7.1.5	Requirements for the supply unit	40		
7.1.6	Preparing the measuring device	40		
7.1.7	Preparing the connecting cable for the remote version	40		
7.2	Connecting the measuring device	41		
7.2.1	Connecting the remote version	41		
7.2.2	Connecting the transmitter	43		
7.2.3	Ensuring potential equalization	44		
7.3	Special connection instructions	46		
7.4	Ensuring the degree of protection	46		
7.4.1	Degree of protection IP66/67, Type 4X enclosure	46		
7.4.2	Degree of protection IP68, Type 6P enclosure, with "Cust-potted" option	46		
7.5	Post-connection check	46		
8	Operation options	48		
8.1	Overview of operation options	48		
8.2	Structure and function of the operating menu	49		
8.2.1	Structure of the operating menu	49		
8.2.2	Operating philosophy	50		
8.3	Access to the operating menu via the local display	51		
8.3.1	Operational display	51		
8.3.2	Navigation view	53		
8.3.3	Editing view	55		
8.3.4	Operating elements	56		
8.3.5	Opening the context menu	57		
8.3.6	Navigating and selecting from list	59		
8.3.7	Calling the parameter directly	59		
8.3.8	Calling up help text	60		
8.3.9	Changing the parameters	61		
8.3.10	User roles and related access authorization	62		
8.3.11	Disabling write protection via access code	62		
8.3.12	Enabling and disabling the keypad lock	62		

8.4	Access to the operating menu via the Web browser	63	10.9	Protecting settings from unauthorized access	113
8.4.1	Function range	63	10.9.1	Write protection via access code ...	113
8.4.2	Prerequisites	63	10.9.2	Write protection via write protection switch	114
8.4.3	Establishing a connection	64			
8.4.4	Logging on	65	11	Operation	116
8.4.5	User interface	65	11.1	Reading the device locking status	116
8.4.6	Disabling the Web server	66	11.2	Adjusting the operating language	116
8.4.7	Logging out	67	11.3	Configuring the display	116
8.5	Access to the operating menu via the operating tool	67	11.4	Reading measured values	116
8.5.1	Connecting the operating tool	67	11.4.1	Process variables	116
8.5.2	Field Xpert SFX350, SFX370	68	11.4.2	Totalizer	117
8.5.3	FieldCare	68	11.4.3	Input values	117
8.5.4	AMS Device Manager	69	11.4.4	Output values	118
8.5.5	SIMATIC PDM	70	11.5	Adapting the measuring device to the process conditions	119
8.5.6	Field Communicator 475	70	11.6	Performing a totalizer reset	119
9	System integration	71	11.7	Showing data logging	120
9.1	Overview of device description files	71	12	Diagnostics and troubleshooting ..	122
9.1.1	Current version data for the device ...	71	12.1	General troubleshooting	122
9.1.2	Operating tools	71	12.2	Diagnostic information via light emitting diodes	123
9.2	Measured variables via HART protocol	71	12.2.1	Transmitter	123
9.3	Other settings	72	12.3	Diagnostic information on local display	125
9.3.1	Burst mode functionality in accordance with HART 7 Specification	72	12.3.1	Diagnostic message	125
			12.3.2	Calling up remedial measures	127
10	Commissioning	75	12.4	Diagnostic information in the Web browser .	128
10.1	Function check	75	12.4.1	Diagnostic options	128
10.2	Switching on the measuring device	75	12.4.2	Calling up remedy information	128
10.3	Establishing a connection via FieldCare	75	12.5	Diagnostic information in FieldCare	129
10.4	Setting the operating language	75	12.5.1	Diagnostic options	129
10.5	Configuring the measuring device	76	12.5.2	Calling up remedy information	130
10.5.1	Defining the tag name	82	12.6	Adapting the diagnostic information	130
10.5.2	Configuring the status input	82	12.6.1	Adapting the diagnostic behavior ...	130
10.5.3	Configuring the current output	84	12.6.2	Adapting the status signal	130
10.5.4	Configuring the pulse/frequency/switch output	85	12.7	Overview of diagnostic information	131
10.5.5	Configuring the local display	92	12.8	Pending diagnostic events	134
10.5.6	Configuring the output conditioning	94	12.9	Diagnostic list	134
10.5.7	Configuring the low flow cut off	96	12.10	Event logbook	135
10.5.8	Configuring empty pipe detection ...	98	12.10.1	Event history	135
10.5.9	Configuring the HART input	99	12.10.2	Filtering the event logbook	136
10.6	Advanced settings	101	12.10.3	Overview of information events	136
10.6.1	Setting the system units	103	12.11	Resetting the measuring device	137
10.6.2	Carrying out a sensor adjustment ...	105	12.11.1	Function scope of "Device reset" parameter	137
10.6.3	Configuring the totalizer	105	12.12	Device information	137
10.6.4	Carrying out additional display configurations	106	12.13	Firmware history	140
10.6.5	Performing electrode cleaning	108			
10.6.6	Administration configuration	109	13	Maintenance	141
10.7	Configuration management	109	13.1	Maintenance tasks	141
10.7.1	Function range of "Configuration management" parameter	110	13.1.1	Exterior cleaning	141
10.8	Simulation	111	13.1.2	Interior cleaning	141
			13.1.3	Replacing seals	141
			13.2	Measuring and test equipment	141
			13.3	Endress+Hauser services	141

14	Repair	142
14.1	General notes	142
14.2	Spare parts	142
14.3	Endress+Hauser services	142
14.4	Return	142
14.5	Disposal	142
14.5.1	Removing the measuring device	142
14.5.2	Disposing of the measuring device ..	143
15	Accessories	144
15.1	Device-specific accessories	144
15.1.1	For the transmitter	144
15.1.2	For the sensor	144
15.2	Communication-specific accessories	144
15.3	Service-specific accessories	145
15.4	System components	145
16	Technical data	146
16.1	Application	146
16.2	Function and system design	146
16.3	Input	146
16.4	Output	149
16.5	Power supply	152
16.6	Performance characteristics	153
16.7	Installation	155
16.8	Environment	155
16.9	Process	156
16.10	Mechanical construction	157
16.11	Operability	174
16.12	Certificates and approvals	176
16.13	Application packages	177
16.14	Accessories	178
16.15	Documentation	178
17	Appendix	180
17.1	Overview of the operating menu	180
17.1.1	"Operation" menu	180
17.1.2	"Setup" menu	181
17.1.3	"Diagnostics" menu	187
17.1.4	"Expert" menu	191
Index		209

1 Document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used

1.2.1 Safety symbols

Symbol	Meaning
 DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
 WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
 NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.		Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Tool symbols

Symbol	Meaning
	Torx screwdriver
	Phillips head screwdriver
	Open-ended wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Series of steps
	Result of a sequence of actions
	Help in the event of a problem
	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3, ...	Item numbers		Series of steps
A, B, C, ...	Views	A-A, B-B, C-C, ...	Sections
	Hazardous area		Safe area (non-hazardous area)
	Flow direction		

1.3 Documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.



For a detailed list of the individual documents along with the documentation code

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

HART®

Registered trademark of the HART Communication Foundation, Austin, USA

Microsoft®

Registered trademark of the Microsoft Corporation, Redmond, Washington, USA

Applicator®, FieldCare®, Field Xpert™, HistoROM®, Heartbeat Technology™

Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use

Application and media

The measuring device described in these Instructions is intended only for flow measurement of liquids with a minimum conductivity of 5 $\mu\text{S}/\text{cm}$.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section →  7.

 This measuring device is optionally tested in accordance with OIML R49 and has an EC type-examination certificate according to Measuring Instruments Directive 2004/22/EC (MID) for service subject to legal metrological control ("custody transfer") for cold water (Annex MI-001).

The permitted fluid temperature in these applications is 0 to 50 °C.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

⚠ WARNING

Danger of breakage of the sensor due to corrosive or abrasive fluids!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Observe the specified pressure and temperature range.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

The external surface temperature of the housing can increase by max. 10 K due to the power consumption of the electronic components. Hot process fluids passing through the measuring device will further increase the surface temperature of the housing. The surface of the sensor, in particular, can reach temperatures which are close to the fluid temperature.

Possible burn hazard due to fluid temperatures!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ It is recommended to wear gloves on account of the higher risk of electric shock.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

Environmental requirements

If a plastic transmitter housing is permanently exposed to certain steam and air mixtures, this can damage the housing.

- ▶ If you are unsure, please contact your Endress+Hauser Sales Center for clarification.
- ▶ If used in an approval-related area, observe the information on the nameplate.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.


3 Product description

The device consists of a transmitter and a sensor.

Two device versions are available:

- Compact version - transmitter and sensor form a mechanical unit.
- Remote version - transmitter and sensor are mounted in separate locations.

3.1 Product design

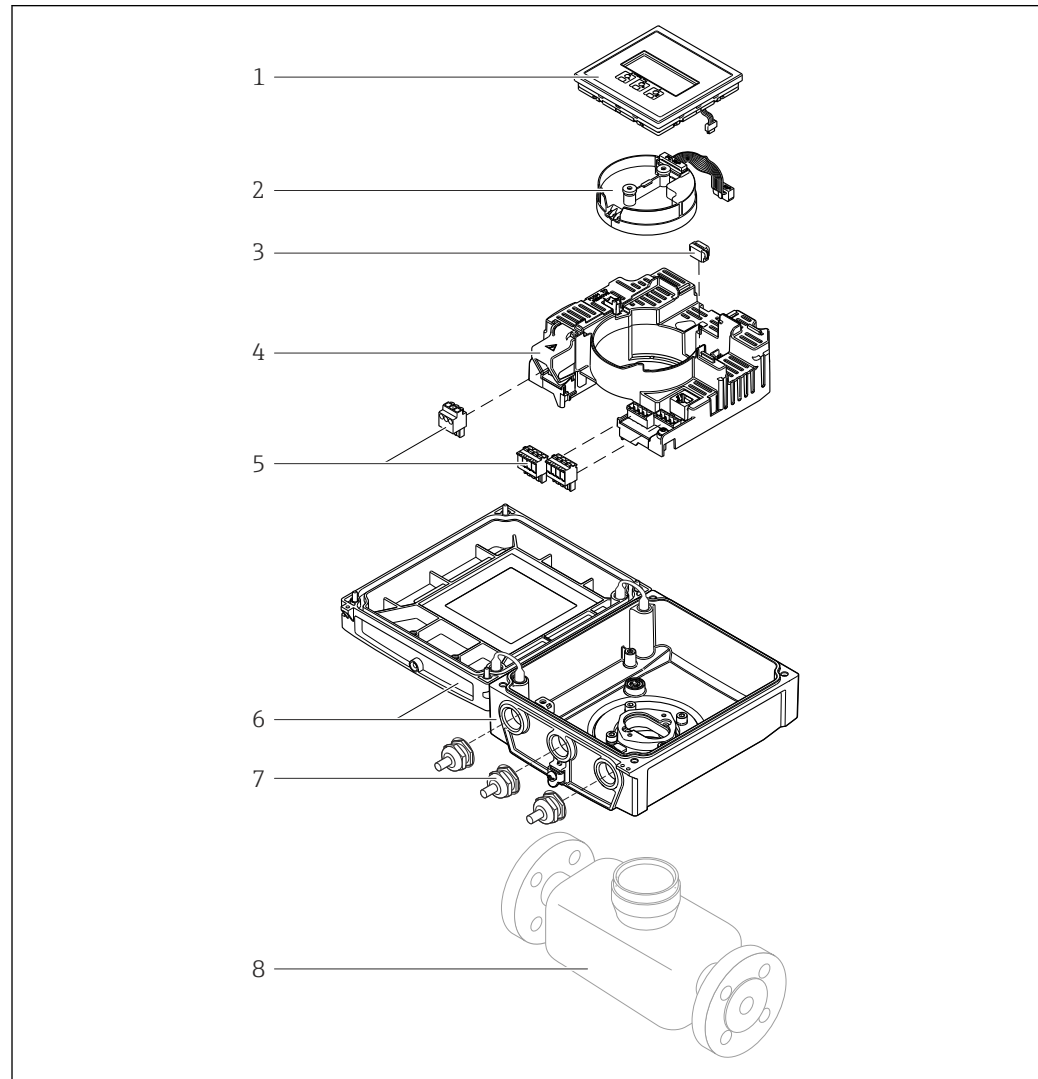


A0017218

 1 Important components of the compact version


- 1 Display module
- 2 Smart sensor electronics module
- 3 HistoROM DAT (plug-in memory)
- 4 Main electronics module
- 5 Terminals (screw terminals, some available as plug-in terminals) or fieldbus connectors
- 6 Transmitter housing, compact version
- 7 Cable glands
- 8 Sensor, compact version

4 Incoming acceptance and product identification


4.1 Incoming acceptance

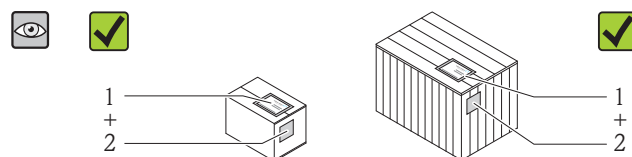


Are the order codes on the delivery note (1) and the product sticker (2) identical?

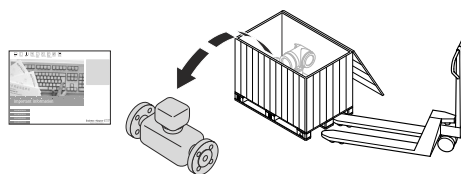

Are the goods undamaged?

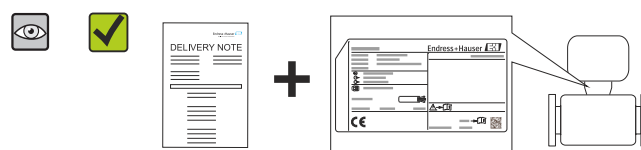

Do the nameplate data match the ordering information on the delivery note?

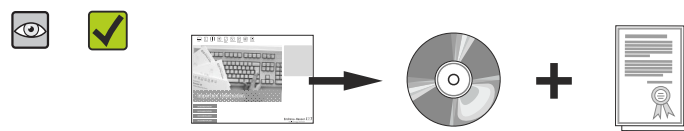

Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?



- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section → 14.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate

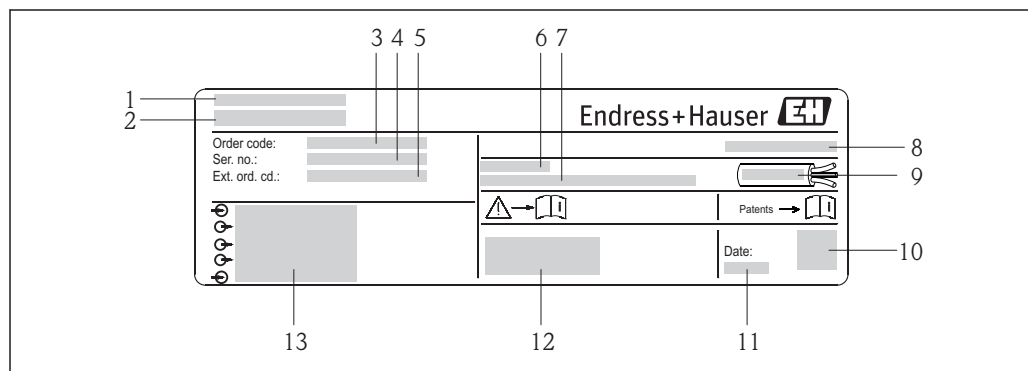


A0017346

 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Permitted ambient temperature (T_a)
- 7 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 8 Degree of protection
- 9 Permitted temperature range for cable
- 10 2-D matrix code
- 11 Manufacturing date: year-month
- 12 CE mark, C-Tick
- 13 Electrical connection data, e.g. available inputs and outputs, supply voltage

4.2.2 Sensor nameplate

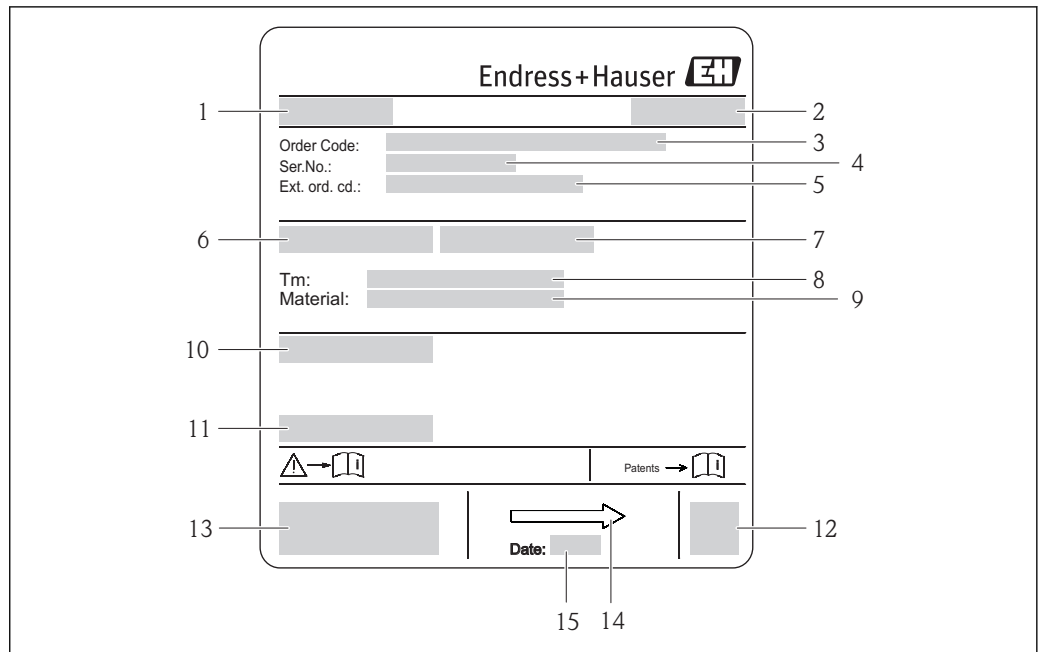

A0017186

3 Example of sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (ext. ord. cd.)
- 6 Nominal diameter of sensor
- 7 Test pressure of the sensor
- 8 Fluid temperature range
- 9 Material of lining and electrodes
- 10 Degree of protection: e.g. IP, NEMA
- 11 Permitted ambient temperature (T_a)
- 12 2-D matrix code
- 13 CE mark, C-Tick
- 14 Flow direction
- 15 Manufacturing date: year-month

Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport


5.1 Storage conditions

Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus and bacteria infestation can damage the lining.
- Store in a dry and dust-free place.
- Do not store outdoors.
- Storage temperature →  155

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

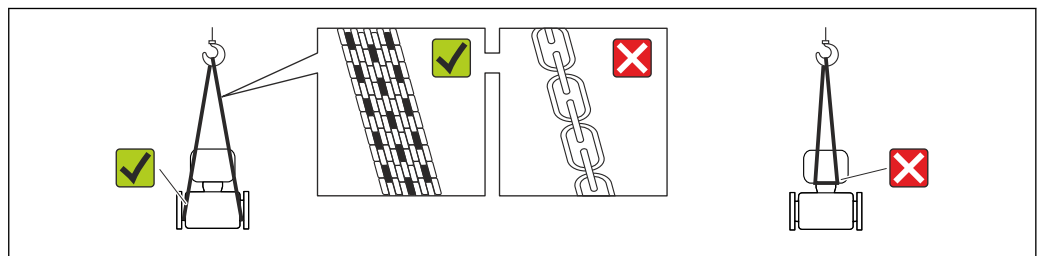

A0015604



Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

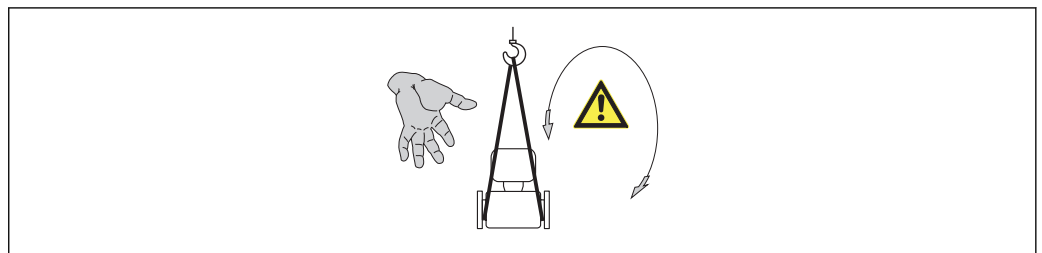

A0015606

5.2.2 Measuring devices with lifting lugs

⚠ CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.


5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

⚠ CAUTION

Risk of damaging the magnetic coil

- ▶ If transporting by forklift, do not lift the sensor by the metal casing.
- ▶ This would buckle the casing and damage the internal magnetic coils.

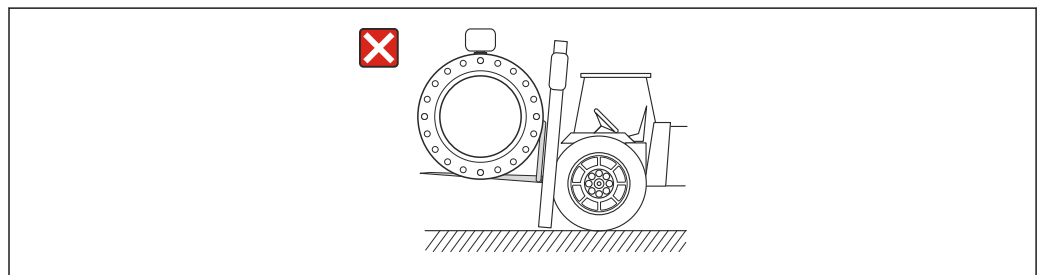

A0023726

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion

6 Installation

6.1 Installation conditions

6.1.1 Mounting position

Mounting location

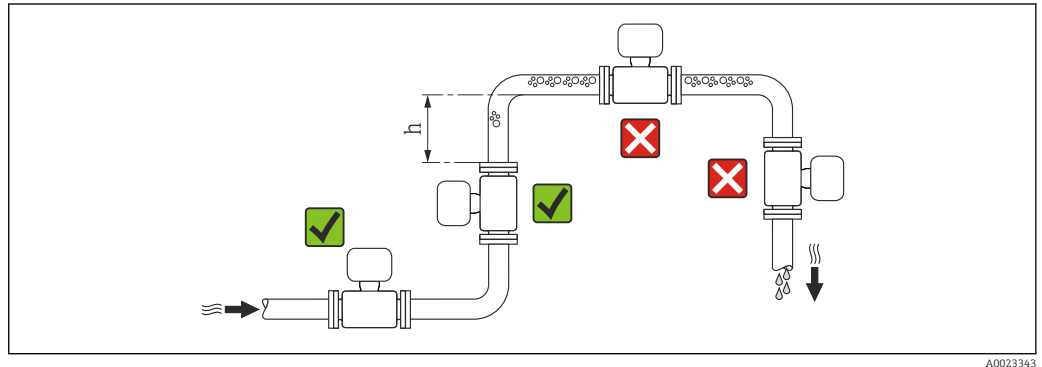

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow: $h \geq 2 \times DN$


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

Install a siphon with a vent valve downstream of the sensor in down pipes whose length $h \geq 5 \text{ m}$ (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime.

 For information on the liner's resistance to partial vacuum

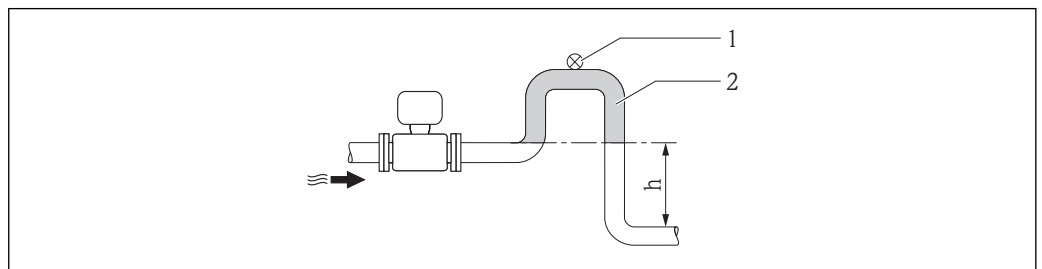


4 Installation in a down pipe

- 1 Vent valve
- 2 Pipe siphon
- h Length of down pipe

Installation in partially filled pipes

A partially filled pipe with a gradient necessitates a drain-type configuration.

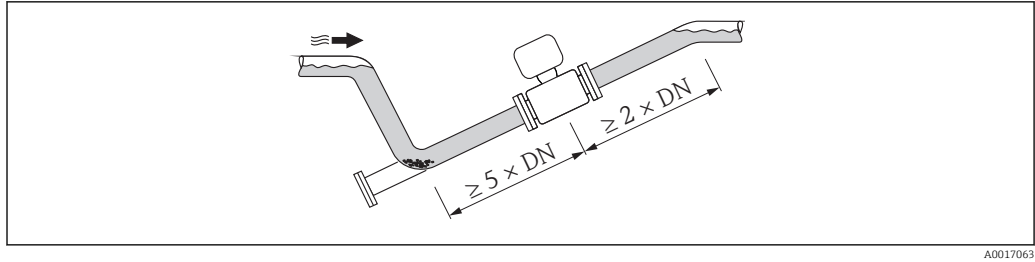

A0017063


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

An optimum orientation position helps avoid gas and air accumulations and deposits in the measuring tube.

The measuring device also offers the empty pipe detection function to detect partially filled measuring pipes in the event of outgassing fluids or variable process pressures.


Vertical

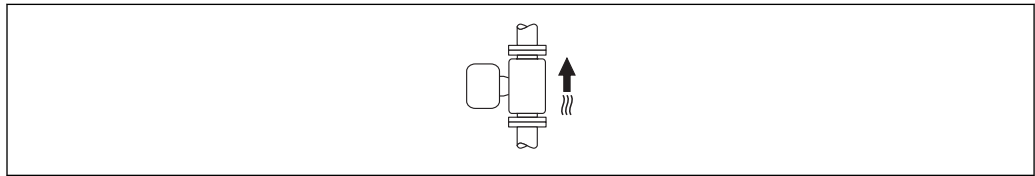

A0015591

Optimum for self-emptying pipe systems and for use in conjunction with empty pipe detection.

Horizontal

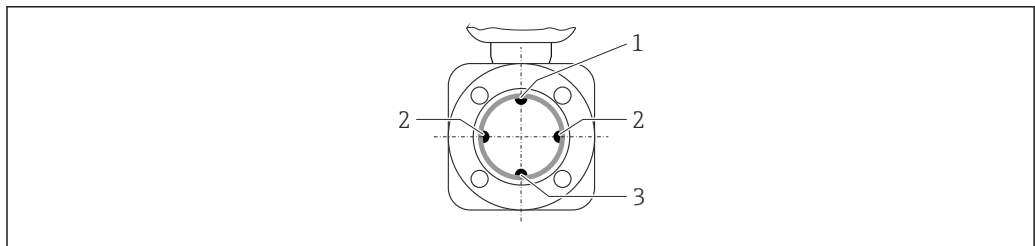

A0016260

- 1 EPD electrode for empty pipe detection
- 2 Measuring electrodes for signal detection
- 3 Reference electrode for potential equalization




- The measuring electrode plane must be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.
- Empty pipe detection only works if the transmitter housing is pointing upwards as otherwise there is no guarantee that the empty pipe detection function will actually respond to a partially filled or empty measuring tube.

Inlet and outlet runs

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows.

Observe the following inlet and outlet runs to comply with accuracy specifications:

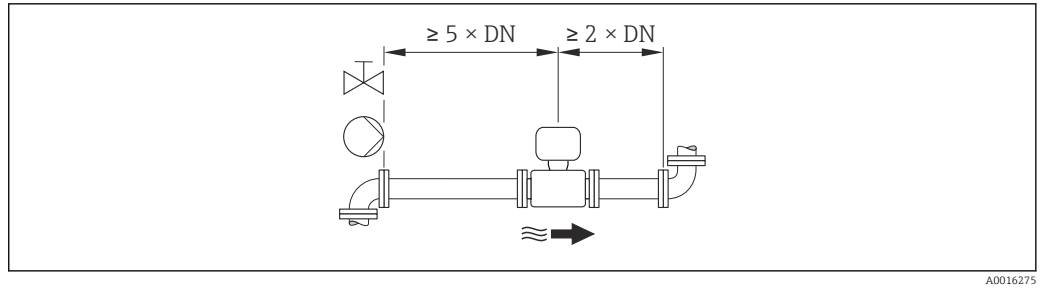

A0016275

i To keep within the in-service maximum permissible errors for custody transfer no additional requirements apply with regard to the graphic illustrated above.

Installation dimensions

i For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Requirements from environment and process

Ambient temperature range

Transmitter	-40 to +60 °C (-40 to +140 °F)
Local display	-20 to +60 °C (-4 to +140 °F), the readability of the display may be impaired at temperatures outside the temperature range.
Sensor	
Liner	Do not exceed or fall below the permitted temperature range of the liner .

If operating outdoors:


- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

Temperature tables

i Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.

i For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

System pressure

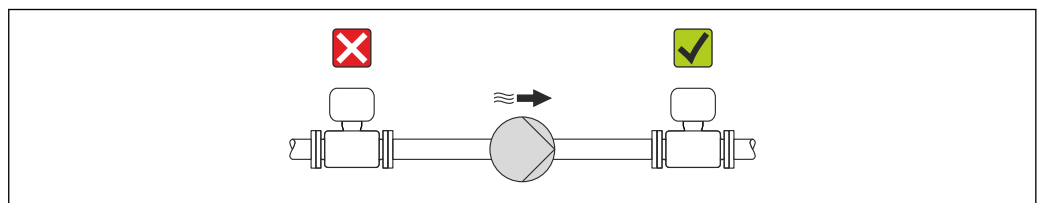

A0015594

Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.

i Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.


- i** ■ For information on the liner's resistance to partial vacuum → 157
- For information on the shock resistance of the measuring system → 156
- For information on the vibration resistance of the measuring system → 156

Vibrations

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.

It is also advisable to mount the sensor and transmitter separately.

- i** ■ For information on the shock resistance of the measuring system → 156
- For information on the vibration resistance of the measuring system → 156

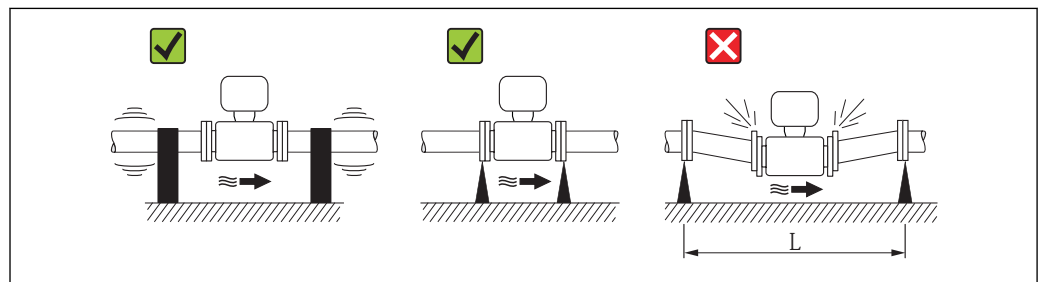

A0016266


5 Measures to avoid device vibrations ($L > 10\text{ m}$ (33 ft))

Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids. The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders.

i The nomogram only applies to liquids with a viscosity similar to that of water.

1. Calculate the ratio of the diameters d/D .
2. From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the d/D ratio.

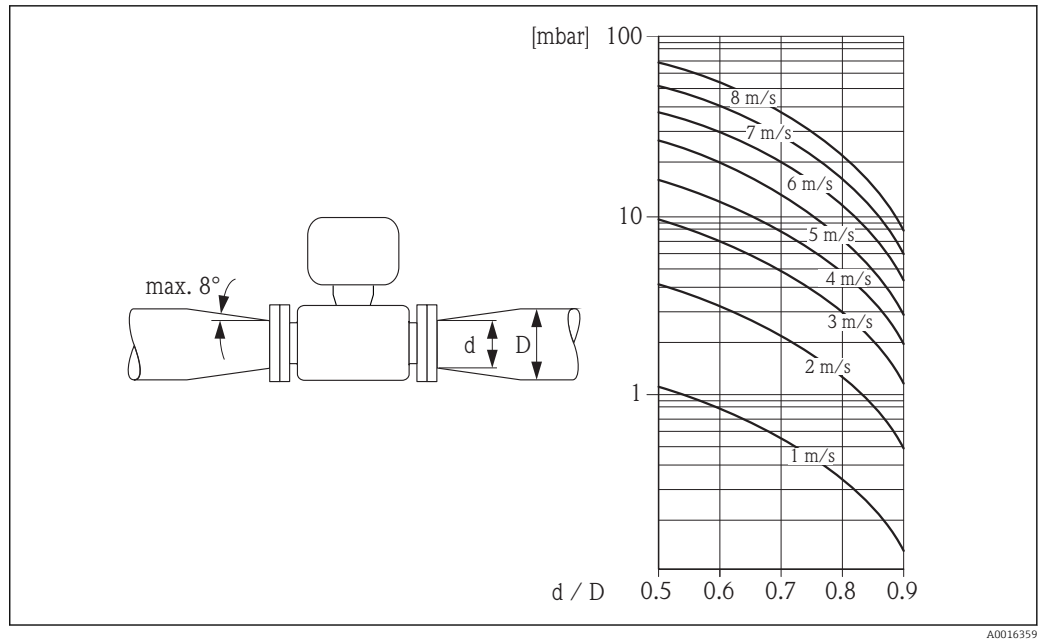


A0016359

6.1.3 Special mounting instructions

Display protection

- To ensure that the optional display protection can be easily opened, maintain the following minimum head clearance: 350 mm (13.8 in)

Permanent immersion in water

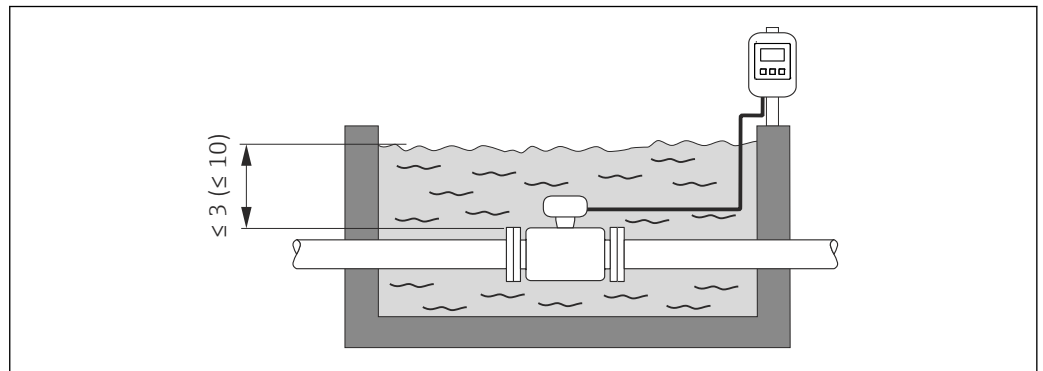


A0017296

6 Engineering unit in m(ft)

i Replacement of cable gland on connection housing → **153**

Buried applications

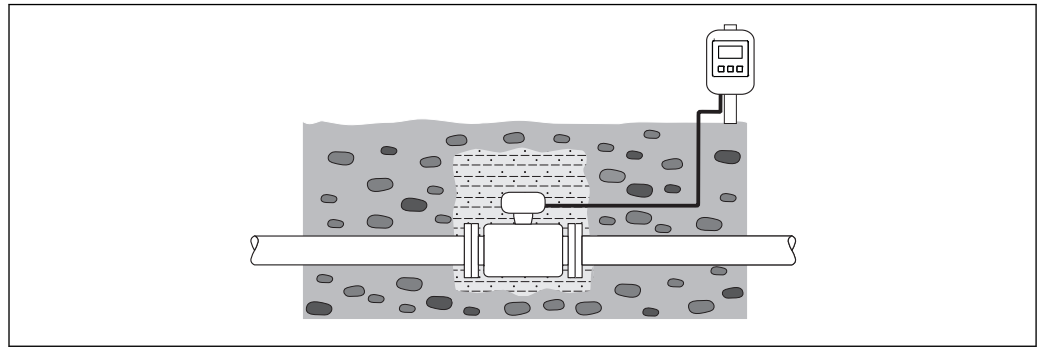

A0017298

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

- Torque wrench
- For wall mounting:
 - Open-ended wrench for hexagonal screw max. M5
- For pipe mounting:
 - Open-ended wrench AF 8
 - Phillips head screwdriver PH 2
- For turning the transmitter housing (compact version):
 - Phillips head screwdriver PH 2
 - Torx screwdriver TX 20
 - Open-ended wrench AF 7

For sensor

For flanges and other process connections:

- Screws, nuts, seals etc. are not included in the scope of supply and must be provided by the customer.
- Appropriate mounting tools

6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the sensor


⚠ WARNING

Danger due to improper process sealing!

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the gaskets are clean and undamaged.
- ▶ Install the gaskets correctly.

1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.

2. To ensure compliance with device specifications, install the measuring device between the pipe flanges in a way that it is centered in the measurement section.
3. If using ground disks, comply with the Installation Instructions provided.
4. Observe required screw tightening torques → 25.
5. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

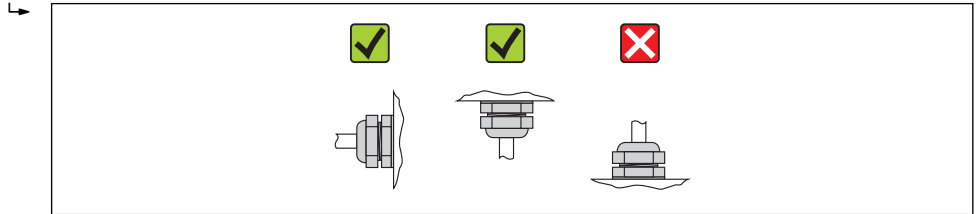

A0013964

Mounting the seals

⚠ CAUTION

An electrically conductive layer could form on the inside of the measuring tube!

Risk of measuring signal short circuit.

- Do not use electrically conductive sealing compounds such as graphite.

Comply with the following instructions when installing seals:

- Make sure that the seals do not protrude into the piping cross-section.
- For DIN flanges: only use seals according to DIN EN 1514-1.
- For "hard rubber" lining: additional seals are **always** required.
- For "polyurethane" lining: generally additional seals are **not** required.

Mounting the ground cable/ground disks

Comply with the information on potential equalization and detailed mounting instructions for the use of ground cables/ground disks → 44.

Screw tightening torques

Please note the following:

- The screw tightening torques listed below apply only to lubricated threads and to pipes not subjected to tensile stress.
- Tighten the screws uniformly and in diagonally opposite sequence.
- Overtightening the screws will deform the sealing faces or damage the seals.

Screw tightening torques for EN 1092-1 (DIN 2501), PN 6/10/16/25/40

Nominal diameter [mm]	Pressure rating [bar]	Threaded fasteners [mm]	Max. screw tightening torque [Nm]	
			Hard rubber	Polyurethane
25	PN 40	4 × M12	–	15
32	PN 40	4 × M16	–	24
40	PN 40	4 × M16	–	31
50	PN 40	4 × M16	48	40
65 ¹⁾	PN 16	8 × M16	32	27
65	PN 40	8 × M16	32	27
80	PN 16	8 × M16	40	34
80	PN 40	8 × M16	40	34
100	PN 16	8 × M16	43	36
100	PN 40	8 × M20	59	50

Nominal diameter [mm]	Pressure rating [bar]	Threaded fasteners [mm]	Max. screw tightening torque [Nm]	
			Hard rubber	Polyurethane
125	PN 16	8 × M16	56	48
125	PN 40	8 × M24	83	71
150	PN 16	8 × M20	74	63
150	PN 40	8 × M24	104	88
200	PN 10	8 × M20	106	91
200	PN 16	12 × M20	70	61
200	PN 25	12 × M24	104	92
250	PN 10	12 × M20	82	71
250	PN 16	12 × M24	98	85
250	PN 25	12 × M27	150	134
300	PN 10	12 × M20	94	81
300	PN 16	12 × M24	134	118
300	PN 25	16 × M27	153	138
350	PN 6	12 × M20	111	120
350	PN 10	16 × M20	112	118
350	PN 16	16 × M24	152	165
350	PN 25	16 × M30	227	252
400	PN 6	16 × M20	90	98
400	PN 10	16 × M24	151	167
400	PN 16	16 × M27	193	215
400	PN 25	16 × M33	289	326
450	PN 6	16 × M20	112	126
450	PN 10	20 × M24	153	133
450	PN 16	20 × M27	198	196
450	PN 25	20 × M33	256	253
500	PN 6	20 × M20	119	123
500	PN 10	20 × M24	155	171
500	PN 16	20 × M30	275	300
500	PN 25	20 × M33	317	360
600	PN 6	20 × M24	139	147
600	PN 10	20 × M27	206	219
600 ¹⁾	PN 16	20 × M33	415	443
600	PN 25	20 × M36	431	516
700	PN 6	24 × M24	148	139
700	PN 10	24 × M27	246	246
700	PN 16	24 × M33	278	318
700	PN 25	24 × M39	449	507
800	PN 6	24 × M27	206	182
800	PN 10	24 × M30	331	316
800	PN 16	24 × M36	369	385
800	PN 25	24 × M45	664	721
900	PN 6	24 × M27	230	637

Nominal diameter [mm]	Pressure rating [bar]	Threaded fasteners [mm]	Max. screw tightening torque [Nm]	
			Hard rubber	Polyurethane
900	PN 10	28 × M30	316	307
900	PN 16	28 × M36	353	398
900	PN 25	28 × M45	690	716
1000	PN 6	28 × M27	218	208
1000	PN 10	28 × M33	402	405
1000	PN 16	28 × M39	502	518
1000	PN 25	28 × M52	970	971
1200	PN 6	32 × M30	319	299
1200	PN 10	32 × M36	564	568
1200	PN 16	32 × M45	701	753
1400	PN 6	36 × M33	430	398
1400	PN 10	36 × M39	654	618
1400	PN 16	36 × M45	729	762
1600	PN 6	40 × M33	440	417
1600	PN 10	40 × M45	946	893
1600	PN 16	40 × M52	1007	1100
1800	PN 6	44 × M36	547	521
1800	PN 10	44 × M45	961	895
1800	PN 16	44 × M52	1108	1003
2000	PN 6	48 × M39	629	605
2000	PN 10	48 × M45	1047	1092
2000	PN 16	48 × M56	1324	1261

1) Designed acc. to EN 1092-1 (not to DIN 2501)

Screw tightening torques for ASME B16.5, Class 150/300

Nominal diameter		Pressure rating	Threaded fasteners	Max. screw tightening torque [Nm] ([lbf · ft])	
				Hard rubber	Polyurethane
[mm]	[in]	[psi]	[in]		
25	1	Class 150	4 × ½	–	7 (5)
25	1	Class 300	4 × 5/8	–	8 (6)
40	1 ½	Class 150	4 × ½	–	10 (7)
40	1 ½	Class 300	4 × ¾	–	15 (11)
50	2	Class 150	4 × 5/8	35 (26)	22 (16)
50	2	Class 300	8 × 5/8	18 (13)	11 (8)
80	3	Class 150	4 × 5/8	60 (44)	43 (32)
80	3	Class 300	8 × ¾	38 (28)	26 (19)
100	4	Class 150	8 × 5/8	42 (31)	31 (23)
100	4	Class 300	8 × ¾	58 (43)	40 (30)
150	6	Class 150	8 × ¾	79 (58)	59 (44)
150	6	Class 300	12 × ¾	70 (52)	51 (38)
200	8	Class 150	8 × ¾	107 (79)	80 (59)

Nominal diameter		Pressure rating	Threaded fasteners	Max. screw tightening torque [Nm] ([lbf · ft])	
[mm]	[in]	[psi]	[in]	Hard rubber	Polyurethane
250	10	Class 150	12 × 7/8	101 (74)	75 (55)
300	12	Class 150	12 × 7/8	133 (98)	103 (76)
350	14	Class 150	12 × 1	135 (100)	158 (117)
400	16	Class 150	16 × 1	128 (94)	150 (111)
450	18	Class 150	16 × 1 1/8	204 (150)	234 (173)
500	20	Class 150	20 × 1 1/8	183 (135)	217 (160)
600	24	Class 150	20 × 1 1/4	268 (198)	307 (226)

Screw tightening torques for AWWA C207, Class D

Nominal diameter		Threaded fasteners	Max. screw tightening torque [Nm] ([lbf · ft])	
[mm]	[in]	[in]	Hard rubber	Polyurethane
700	28	28 × 1 1/4	247 (182)	292 (215)
750	30	28 × 1 1/4	287 (212)	302 (223)
800	32	28 × 1 1/2	394 (291)	422 (311)
900	36	32 × 1 1/2	419 (309)	430 (317)
1000	40	36 × 1 1/2	420 (310)	477 (352)
1050	42	36 × 1 1/2	528 (389)	518 (382)
1200	48	44 × 1 1/2	552 (407)	531 (392)
1350	54	44 × 1 3/4	730 (538)	–
1500	60	52 × 1 3/4	758 (559)	–
1650	66	52 × 1 3/4	946 (698)	–
1800	72	60 × 1 3/4	975 (719)	–
2000	78	64 × 2	853 (629)	–

Screw tightening torques for AS 2129, Table E

Nominal diameter	Threaded fasteners	Max. screw tightening torque [Nm]	
[mm]	[mm]	Hard rubber	Polyurethane
50	4 × M16	32	–
80	4 × M16	49	–
100	8 × M16	38	–
150	8 × M20	64	–
200	8 × M20	96	–
250	12 × M20	98	–
300	12 × M24	123	–
350	12 × M24	203	–
400	12 × M24	226	–
450	16 × M24	226	–
500	16 × M24	271	–
600	16 × M30	439	–
700	20 × M30	355	–

Nominal diameter [mm]	Threaded fasteners [mm]	Max. screw tightening torque [Nm]	
		Hard rubber	Polyurethane
750	20 × M30	559	–
800	20 × M30	631	–
900	24 × M30	627	–
1000	24 × M30	634	–
1200	32 × M30	727	–

Screw tightening torques for AS 4087, PN 16

Nominal diameter [mm]	Threaded fasteners [mm]	Max. screw tightening torque [Nm]	
		Hard rubber	Polyurethane
50	4 × M16	32	–
80	4 × M16	49	–
100	4 × M16	76	–
150	8 × M20	52	–
200	8 × M20	77	–
250	8 × M20	147	–
300	12 × M24	103	–
350	12 × M24	203	–
375	12 × M24	137	–
400	12 × M24	226	–
450	12 × M24	301	–
500	16 × M24	271	–
600	16 × M27	393	–
700	20 × M27	330	–
750	20 × M30	529	–
800	20 × M33	631	–
900	24 × M33	627	–
1000	24 × M33	595	–
1200	32 × M33	703	–

Screw tightening torques for JIS B2220, 10/20K

Nominal diameter [mm]	Pressure rating [bar]	Threaded fasteners [mm]	Max. screw tightening torque [Nm]	
			Hard rubber	Polyurethane
25	10K	4 × M16	–	19
25	20K	4 × M16	–	19
32	10K	4 × M16	–	22
32	20K	4 × M16	–	22
40	10K	4 × M16	–	24
40	20K	4 × M16	–	24
50	10K	4 × M16	40	33
50	20K	8 × M16	20	17
65	10K	4 × M16	55	45

Nominal diameter [mm]	Pressure rating [bar]	Threaded fasteners [mm]	Max. screw tightening torque [Nm]	
			Hard rubber	Polyurethane
65	20K	8 × M16	28	23
80	10K	8 × M16	29	23
80	20K	8 × M20	42	35
100	10K	8 × M16	35	29
100	20K	8 × M20	56	48
125	10K	8 × M20	60	51
125	20K	8 × M22	91	79
150	10K	8 × M20	75	63
150	20K	12 × M22	81	72
200	10K	12 × M20	61	52
200	20K	12 × M22	91	80
250	10K	12 × M22	100	87
250	20K	12 × M24	159	144
300	10K	16 × M22	74	63
300	20K	16 × M24	138	124

6.2.4 Mounting the transmitter of the remote version

⚠ CAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature .
- ▶ If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.


⚠ CAUTION

Excessive force can damage the housing!

- ▶ Avoid excessive mechanical stress.

The transmitter of the remote version can be mounted in the following ways:

- Wall mounting
- Pipe mounting

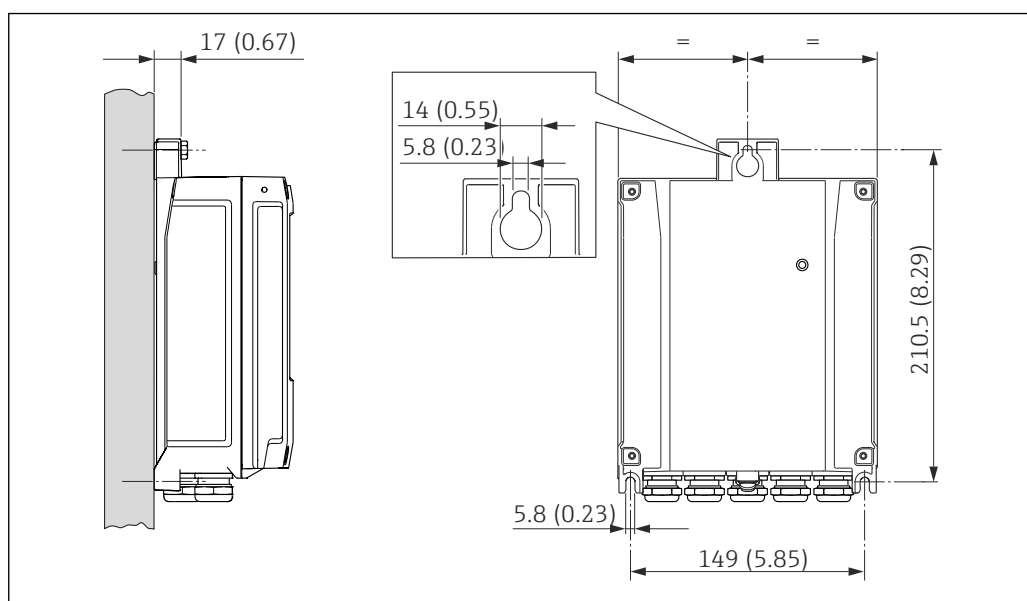Wall mounting

A0020523


7 Engineering unit mm (in)

1. Drill the holes.
2. Insert wall plugs into the drilled holes.
3. Screw in the securing screws slightly at first.
4. Fit the transmitter housing over the securing screws and mount in place.
5. Tighten the securing screws.

Post mounting**⚠ WARNING****Excessive tightening torque applied to the fixing screws on plastic housing!**

Risk of damaging the plastic transmitter.

- Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

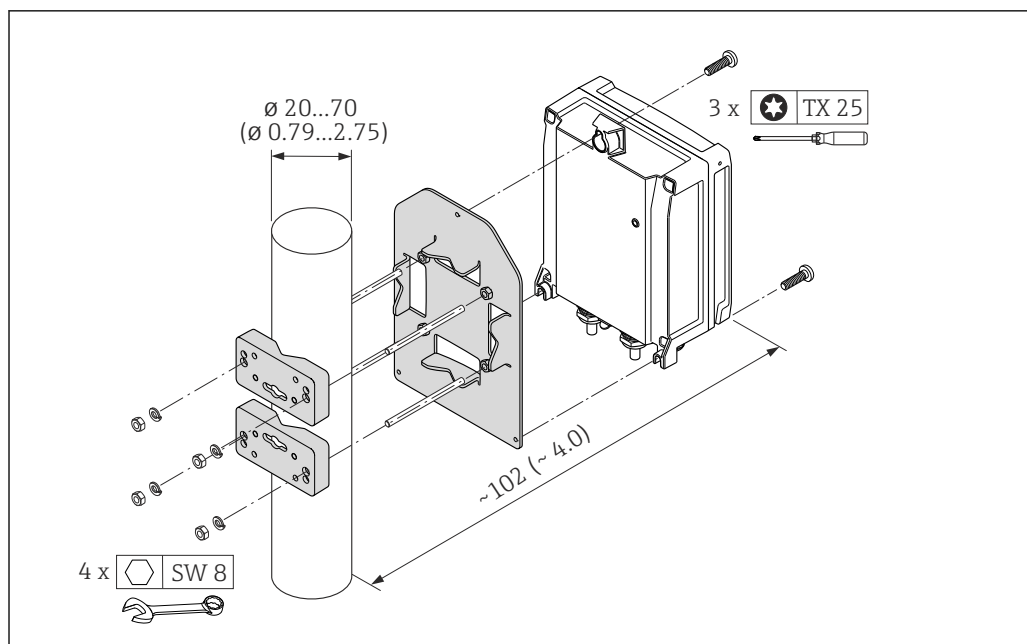


A0020705


8 Engineering unit mm (in)

6.2.5 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

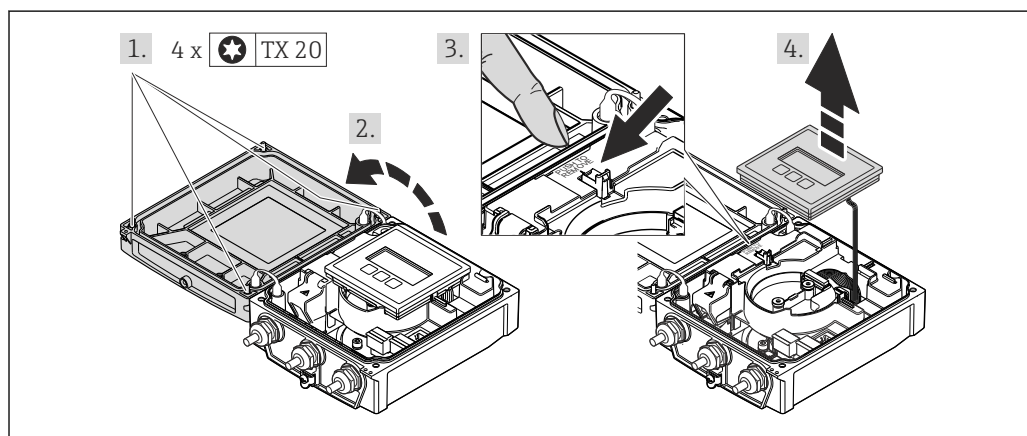


A0021602

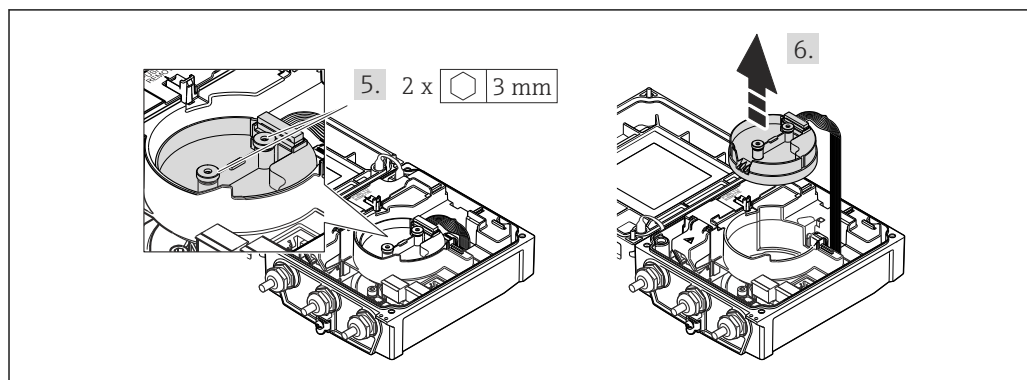

A0021603

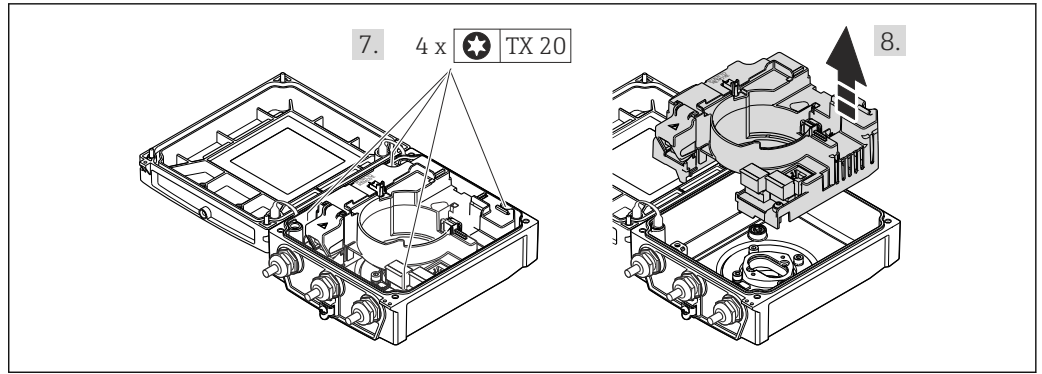

A0021604

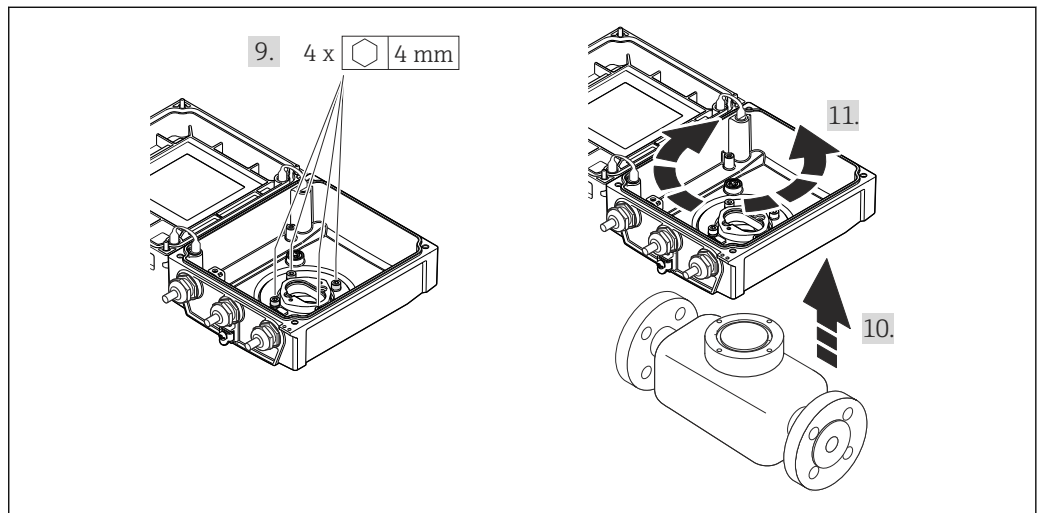

A0021605

1. Loosen the fixing screws of the housing cover (when reassembling, pay attention to the tightening torque → 34).
2. Open the housing cover.
3. Unlock the display module.
4. Remove the display module.
5. Loosen the fixing screws of the smart sensor electronics module (when reassembling, pay attention to the tightening torque → 34).
6. Remove the smart sensor electronics module (when reassembling, pay attention to the coding of the plug → 33).
7. Loosen the fixing screws of the main electronics module (when reassembling, pay attention to the tightening torque → 34).
8. Remove the main electronics module.
9. Loosen the fixing screws of the transmitter housing (when reassembling, pay attention to the tightening torque → 34).
10. Lift the transmitter housing.
11. Turn the housing to the desired position in increments of 90°.

Reassembling the transmitter housing

⚠ WARNING

Excessive tightening torque applied to the fixing screws!

Damage to the transmitter.


- When reassembling, tighten the fixing screws as per the tightening torque:

Step	Fixing screw	Tightening torques for housing made of:	
		Aluminum	Plastic
1	Housing cover	2.5 Nm (1.8 lbf ft)	1 Nm (0.7 lbf ft)
5	Smart sensor electronics module	0.6 Nm (0.4 lbf ft)	
7	Main electronics module	1.5 Nm (1.1 lbf ft)	
10	Transmitter housing	5.5 Nm (4.1 lbf ft)	

NOTICE**Plug of the smart sensor electronics module connected incorrectly!**

No measuring signal is output.

- Plug in the plug of the smart sensor electronics module as per the coding.

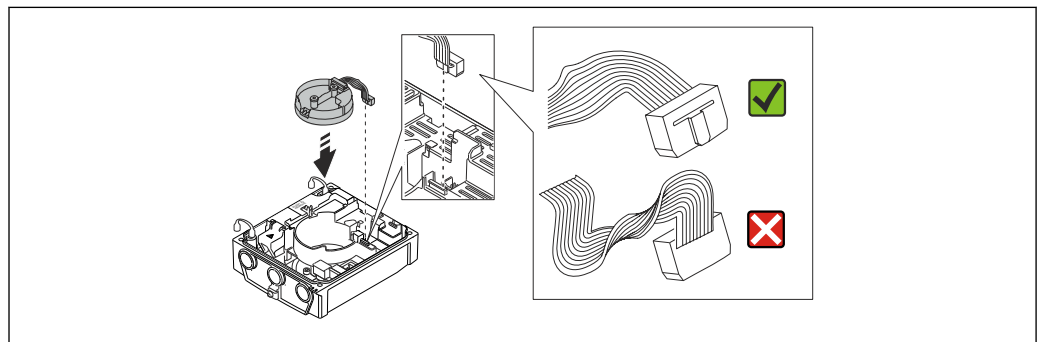


A0021585

- Reverse the procedure to reassemble the measuring device.

6.2.6 Turning the display module

The display module can be turned to optimize display readability and operability.

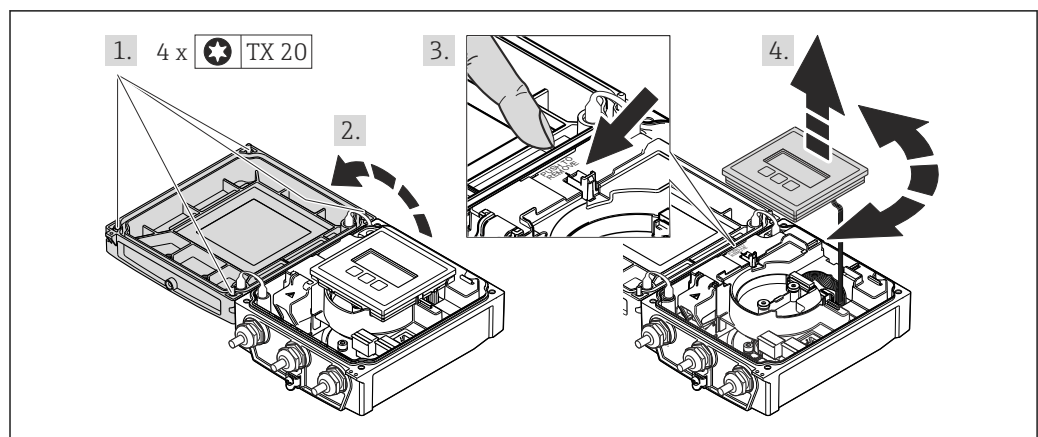

A0021617

1. Loosen the fixing screws of the housing cover (when reassembling, pay attention to the tightening torque → 35).
2. Open the housing cover.
3. Unlock the display module.
4. Pull out the display module and turn it to the desired position in increments of 90°.

Reassembling the transmitter housing

⚠ WARNING

Excessive tightening torque applied to the fixing screws!

Damage to the transmitter.

- When reassembling, tighten the fixing screws as per the tightening torque:

Step	Fixing screw	Tightening torque for housing made of:	
		Aluminum	Plastic
1	Housing cover	2.5 Nm (1.8 lbf ft)	1 Nm (0.7 lbf ft)

- Reverse the procedure to reassemble the measuring device.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	☐
Does the measuring device conform to the measuring point specifications? For example: ▪ Process temperature ▪ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) ▪ Ambient temperature ▪ Measuring range	☐
Has the correct orientation for the sensor been selected ? ▪ According to sensor type ▪ According to medium temperature ▪ According to medium properties (outgassing, with entrained solids)	☐
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping ?	☐
Are the measuring point identification and labeling correct (visual inspection)?	☐
Is the device adequately protected from precipitation and direct sunlight?	☐
Have the fixing screws been tightened with the correct tightening torque?	☐

7 Electrical connection

i The measuring device does not have an internal circuit breaker. For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

7.1 Connection conditions

7.1.1 Required tools

- Torque wrench
- For cable entries: Use corresponding tools
- For housing cover: Torx screwdriver or flat-blade screwdriver
- Wire stripper
- When using stranded cables: crimping tool for ferrule

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Permitted temperature range

- -40°C (-40°F) to $+80^{\circ}\text{C}$ ($+176^{\circ}\text{F}$)
- Minimum requirement: cable temperature range $\geq$ ambient temperature $+20^{\circ}\text{K}$

Power supply cable

Standard installation cable is sufficient.

Signal cable

Current output

- For 0-20 mA and 4-20 mA: standard installation cable is sufficient.
- For 4-20 mA HART: Shielded cable recommended. Observe grounding concept of the plant.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

Connecting cable for remote version


Electrode cable

Standard cable	3 $\times$ 0.38 mm ² (20 AWG) with common, braided copper shield ($\phi \sim 7$ mm (0.28 in)) and individual shielded cores
Cable for empty pipe detection (EPD)	4 $\times$ 0.38 mm ² (20 AWG) with common, braided copper shield ($\phi \sim 7$ mm (0.28 in)) and individual shielded cores
Conductor resistance	$\leq 50 \Omega/\text{km}$ (0.015 Ω/ft)

Capacitance: core/shield	≤ 420 pF/m (128 pF/ft)
Operating temperature	-20 to +80 °C (-68 to +176 °F)

Coil current cable

Standard cable	2 × 0.75 mm ² (18 AWG) with common, braided copper shield ($\phi \sim 7$ mm (0.28")) and individually shielded cores
Conductor resistance	≤ 37 Ω /km (0.011 Ω /ft)
Capacitance: core/core, shield grounded	≤ 120 pF/m (37 pF/ft)
Operating temperature	-20 to +80 °C (-68 to +176 °F)
Test voltage for cable insulation	$\leq$ AC 1433 V r.m.s. 50/60 Hz or $\geq$ DC 2026 V

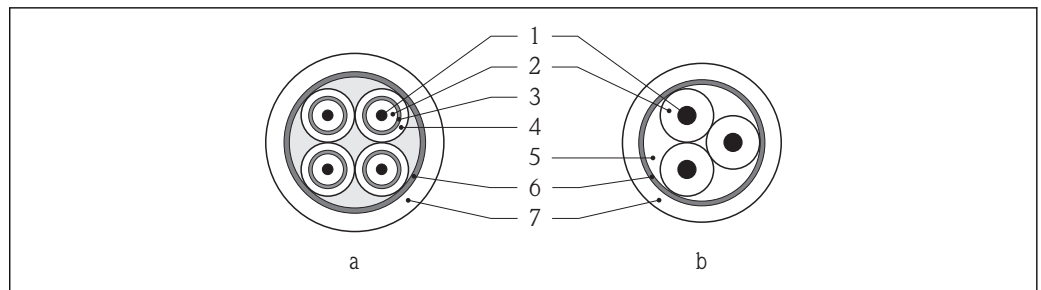

A0003194

9 Cable cross-section

- a Electrode cable
- b Coil current cable
- 1 Core
- 2 Core insulation
- 3 Core shield
- 4 Core jacket
- 5 Core reinforcement
- 6 Cable shield
- 7 Outer jacket

Reinforced connecting cables

Reinforced connecting cables with an additional, reinforcing metal braid should be used for:

- When laying the cable directly in the ground
- Where there is a risk of damage from rodents
- If using the device below IP68 degree of protection

Operation in zones of severe electrical interference

The measuring system meets the general safety requirements → 177 and EMC specifications → 156.

Grounding is by means of the ground terminal provided for the purpose inside the connection housing. The stripped and twisted lengths of cable shield to the ground terminal must be as short as possible.

Cable diameter

- Cable glands supplied:
 - For standard cable: M20 × 1.5 with cable $\phi 6$ to 12 mm (0.24 to 0.47 in)
 - For reinforced cable: M20 × 1.5 with cable $\phi 9.5$ to 16 mm (0.37 to 0.63 in)
- (Plug-in) spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)


7.1.3 Terminal assignment

Transmitter

0-20 mA/4-20 mA HART connection version with additional outputs and inputs

The sensor can be ordered with terminals.

Connection methods available		Possible options for order code "Electrical connection"
Outputs	Power supply	
Terminals	Terminals	- Option A: coupling M20x1 - Option B: thread M20x1 - Option C: thread G ½" - Option D: thread NPT ½"

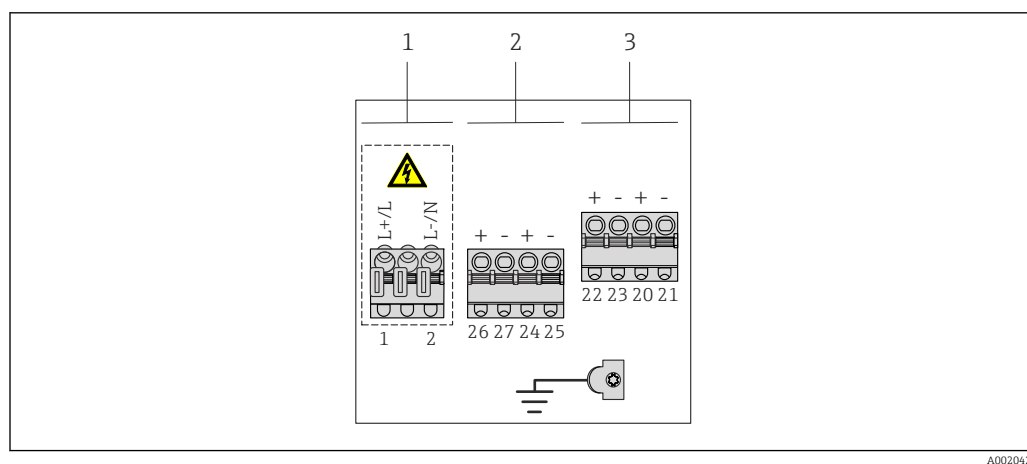

A0020424

- 1 Supply voltage
 2 Output 1 (26/27) and output 2 (24/25)
 3 Output 3 (22/23) and input 1 (20/21)


Supply voltage

Order code for "Power supply"	Terminal numbers	
	1 (L+/L)	2 (L-/N)
Option L (wide range power unit)	AC100 to 240 V	
	AC/DC24 V	

Signal transmission 0-20 mA/4-20 mA HART with additional outputs and inputs

Order code for "Output" and "Input"	Terminal numbers							
	Output 1		Output 2		Output 3		Input	
	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option H	4-20 mA HART (active) 0-20 mA (active)		Pulse/frequency output (passive)		Switch output (passive)		-	
Option I	4-20 mA HART (active) 0-20 mA (active)		Pulse/frequency/switch output (passive)		Pulse/frequency/switch output (passive)		Status input	
Option J	4-20 mA HART (active) 0-20 mA (active)		Permanently assigned Pulse output adjusted (passive)		Pulse/frequency/switch output (passive)		Status input	

Remote version

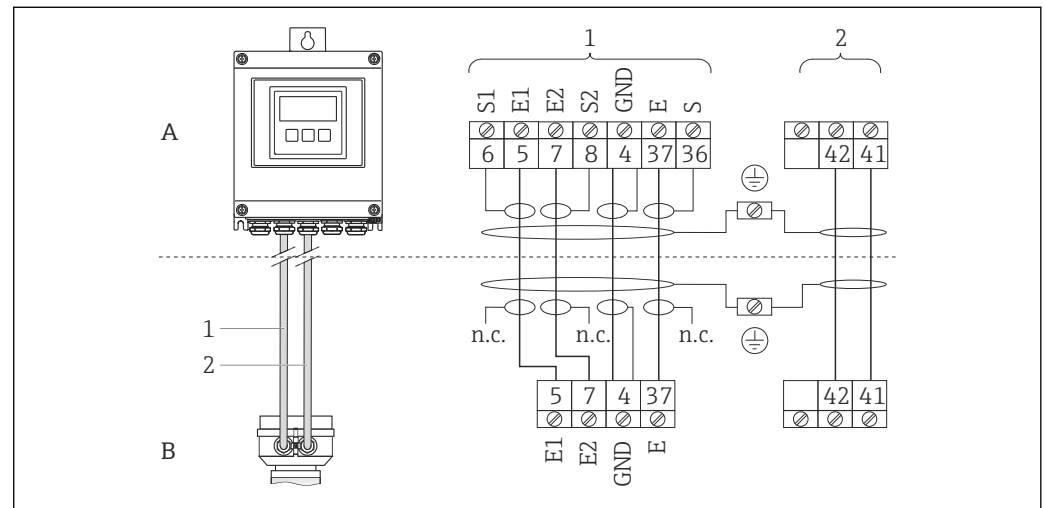

10 Remote version terminal assignment

A Transmitter wall-mount housing

B Sensor connection housing

1 Electrode cable

2 Coil current cable

n.c. Not connected, insulated cable shields

Terminal No. and cable colors: 6/5 = brown; 7/8 = white; 4 = green; 36/37 = yellow

7.1.4 Shielding and grounding

7.1.5 Requirements for the supply unit

Supply voltage

Transmitter

Order code for "Power supply"	Terminal voltage	Frequency range
Option L	AC100 to 240 V	50/ 60 Hz, ± 4 Hz
	AC/DC24 V	50/ 60 Hz, ± 4 Hz

7.1.6 Preparing the measuring device



1. Remove dummy plug if present.
2. If measuring device is delivered with cable glands:
Observe cable specification → 36.

7.1.7 Preparing the connecting cable for the remote version



When terminating the connecting cable, pay attention to the following points:

- In the case of electrode cables, make sure that the ferrules do not touch the core shields on the sensor side. Minimum distance = 1 mm (exception: green "GND" cable)
- In the case of coil current cables, insulate one core of the three-core wire at the level of the core reinforcement. You only require two cores for the connection.
- Fit the fine-wire cores with ferrules.

Transmitter

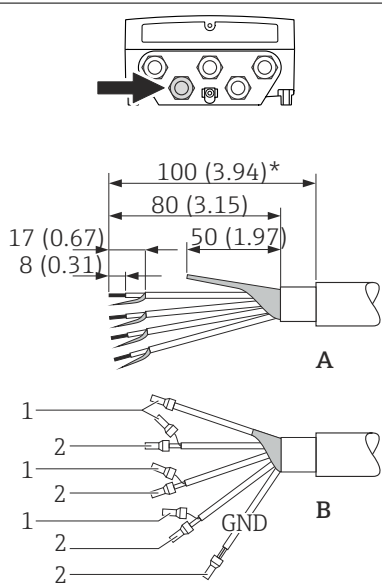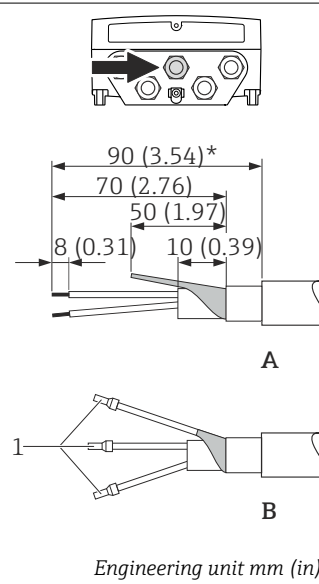Electrode cable	Coil current cable
 11 Engineering unit mm (in) A0021324	 12 Engineering unit mm (in) A0021325
A = Termination of the cables B = Termination of the fine-wire cores with ferrules 1 = Red ferrules, $\phi 1.0$ mm (0.04 in) 2 = White ferrules, $\phi 0.5$ mm (0.02 in) * = Stripping only for reinforced cables	

Sensor

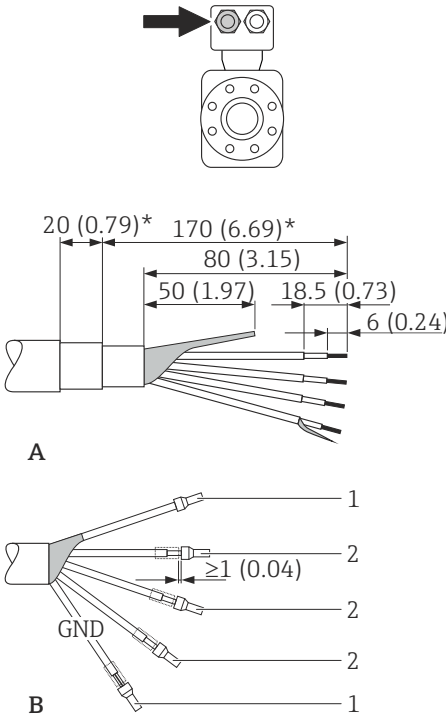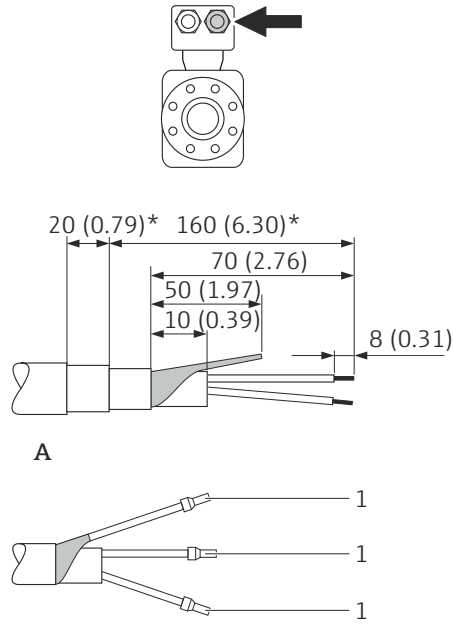Electrode cable	Coil current cable
 A = Termination of the cables B = Termination of the fine-wire cores with ferrules 1 = Red ferrules, $\phi 1.0$ mm (0.04 in) 2 = White ferrules, $\phi 0.5$ mm (0.02 in) * = Stripping only for reinforced cables	 A0016489

7.2 Connecting the measuring device

⚠ WARNING

Risk of electric shock! Components carry dangerous voltages!

- ▶ Have electrical connection work carried out by correspondingly trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ Observe grounding concept of the plant.
- ▶ Never mount or wire the measuring device while it is connected to the supply voltage.
- ▶ Before the supply voltage is applied, connect the protective ground to the measuring device.

7.2.1 Connecting the remote version

⚠ WARNING


Risk of damaging the electronic components!

- ▶ Ground the remote version: connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.
- ▶ Ground the connection housing of the sensor via the external screw terminal.

The following procedure (in the action sequence given) is recommended for the remote version:

1. Mount the sensor and transmitter.
2. Connect the connecting cable.


3. Connect the transmitter.

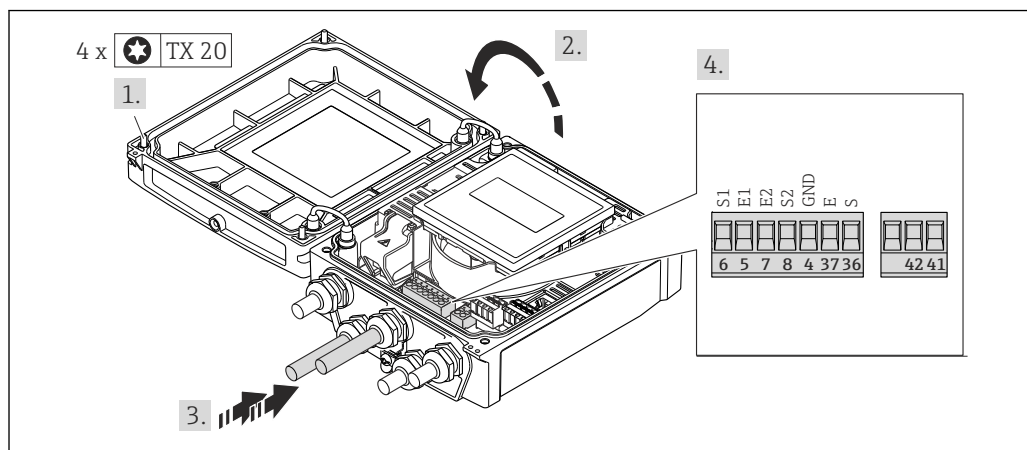

A0017445

13 Transmitter: main electronics module with terminals

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules
→ 40.
5. Connect the cable in accordance with the terminal assignment → 39.
6. Firmly tighten the cable glands.
7. **WARNING!** Housing degree of protection may be voided due to insufficient sealing of the housing. Screw in the screw without using any lubricant.
Reverse the removal procedure to reassemble the transmitter.

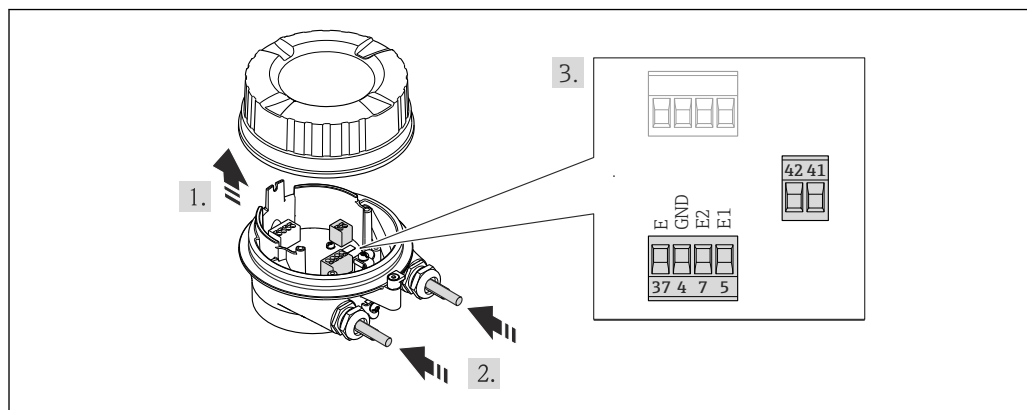

A0021527

14 Sensor: connection module

1. Loosen the securing clamp of the housing cover.
2. Unscrew and lift off the housing cover.
3. **NOTICE!** For conduit extensions: Fit O-ring on cable and push it back sufficiently. When inserting the cable, the O-ring must be located outside the conduit extension. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules
→ 40.
5. Connect the cable in accordance with the terminal assignment → 39.

6. Firmly tighten the cable glands.
7. **WARNING!** Housing degree of protection may be voided due to insufficient sealing of the housing. Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.
Reverse the procedure to reassemble the sensor.

7.2.2 Connecting the transmitter


⚠ WARNING

Housing degree of protection may be voided due to insufficient sealing of the housing.

- Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Tightening torques for plastic housing

Housing cover fixing screw	1.3 Nm
Cable entry	4.5 to 5 Nm
Ground terminal	2.5 Nm

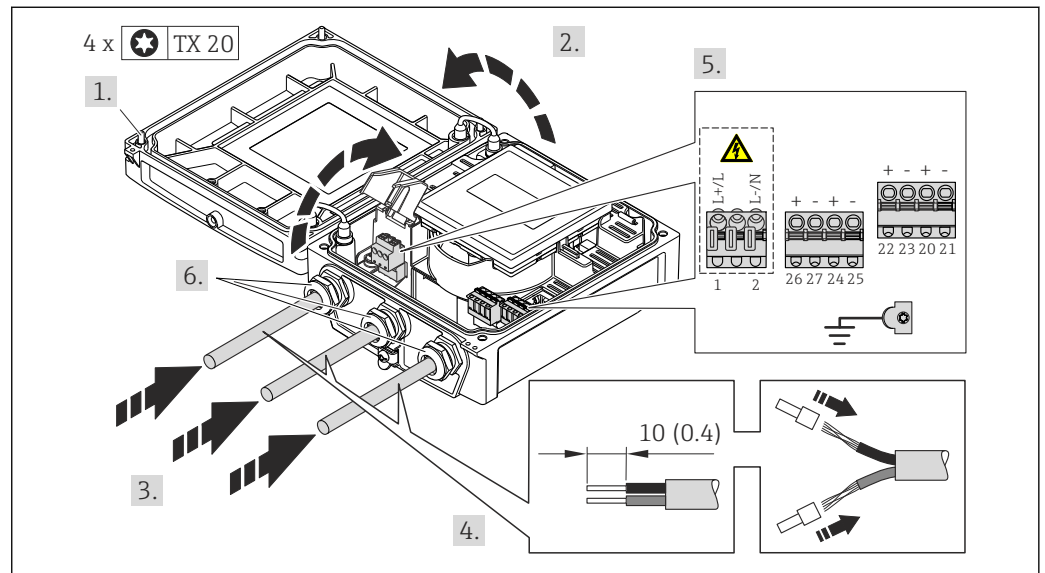

A0017268

15 Connecting the supply voltage and 0-20 mA/4-20 mA HART with additional outputs and inputs

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
5. Connect the cable in accordance with the terminal assignment → 38. For supply voltage: open the shock protection cover. For HART communication: when connecting the cable shielding to the ground terminal, observe the grounding concept of the facility.
6. Firmly tighten the cable glands.
7. **WARNING!** Housing degree of protection may be voided due to insufficient sealing of the housing. Screw in the screw without using any lubricant.
Reverse the removal procedure to reassemble the transmitter.

7.2.3 Ensuring potential equalization

Requirements


⚠ CAUTION

Electrode damage can result in the complete failure of the device!

- ▶ Same electrical potential for the fluid and sensor
- ▶ Remote version: same electrical potential for the sensor and transmitter
- ▶ Company-internal grounding concepts
- ▶ Pipe material and grounding

Connection examples for standard situations

Metal, grounded pipe

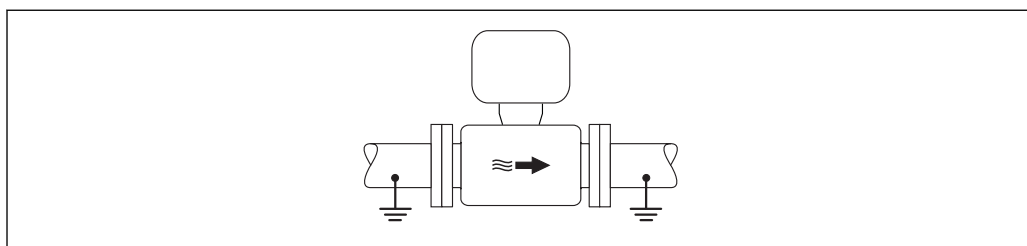

A0016315

16 Potential equalization via measuring tube


Connection example in special situations

Unlined and ungrounded metal pipe

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

Ground cable	Copper wire, at least 6 mm^2 (0.0093 in^2)
--------------	--

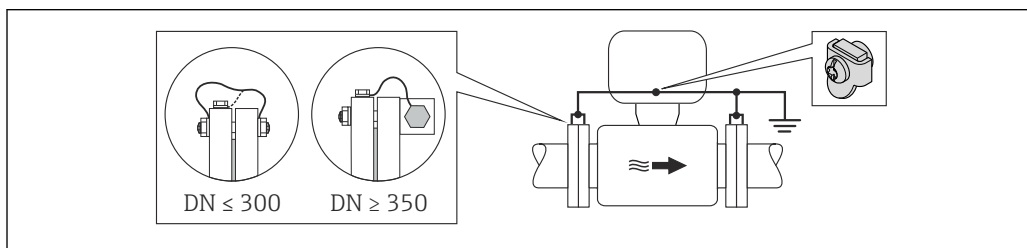

A0016317

17 Potential equalization via ground terminal and pipe flanges

1. Connect both sensor flanges to the pipe flange via a ground cable and ground them.
2. If $\text{DN} \leq 300$ (12"): Mount the ground cable directly on the conductive flange coating of the sensor with the flange screws. If $\text{DN} \geq 350$ (14"): Mount the ground cable directly on the metal transport bracket. Observe torques → 25.
3. Connect the connection housing of the transmitter or sensor to ground potential by means of the ground terminal provided for the purpose.


i For remote device versions, the ground terminal in the example always refers to the sensor and **not** to the transmitter.

Plastic pipe or pipe with insulating liner

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

Ground cable	Copper wire, at least 6 mm ² (0.0093 in ²)
--------------	---

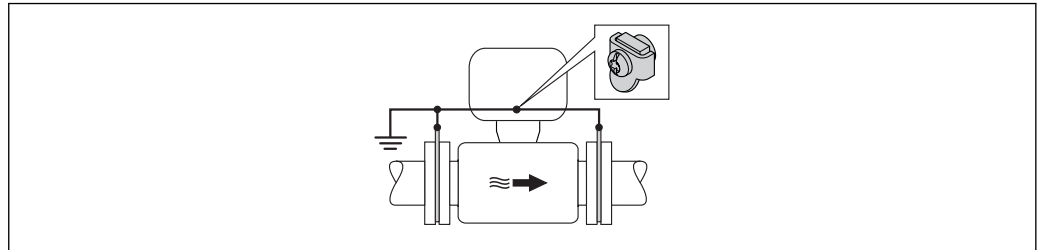

A0016318

18 Potential equalization via ground terminal and ground disks

1. Connect the ground disks to the ground terminal via the ground cable.
2. Connect the ground disks to ground potential.


i For remote device versions, the ground terminal in the example always refers to the sensor and **not** to the transmitter.

Pipe with a cathodic protection unit

This connection method is only used if the following two conditions are met:

- Metal pipe without liner or pipe with electrically conductive liner
- Cathodic protection is integrated in the personal protection equipment

Ground cable	Copper wire, at least 6 mm ² (0.0093 in ²)
--------------	---

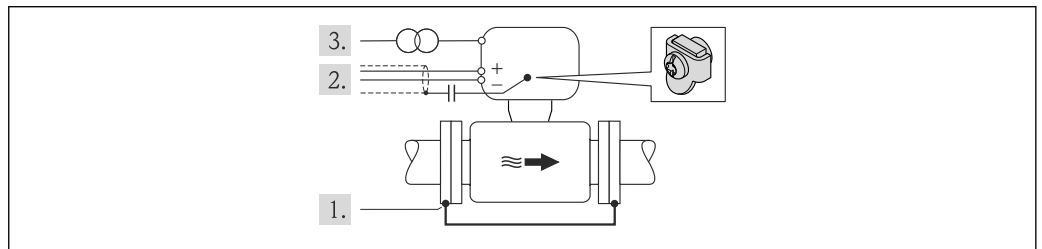

A0016319

Prerequisite: The sensor is installed in the pipe in a way that provides electrical insulation.

1. Connect the two flanges of the pipe to one another via a ground cable.
2. Guide the shield of the signal lines through a capacitor.
3. Connect the measuring device to the power supply such that it is floating in relation to the protective ground (isolation transformer).

i For remote device versions, the ground terminal in the example always refers to the sensor and **not** to the transmitter.

7.3 Special connection instructions


7.4 Ensuring the degree of protection

7.4.1 Degree of protection IP66/67, Type 4X enclosure

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
2. Tighten all housing screws and screw covers.
3. Firmly tighten the cable glands.
4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

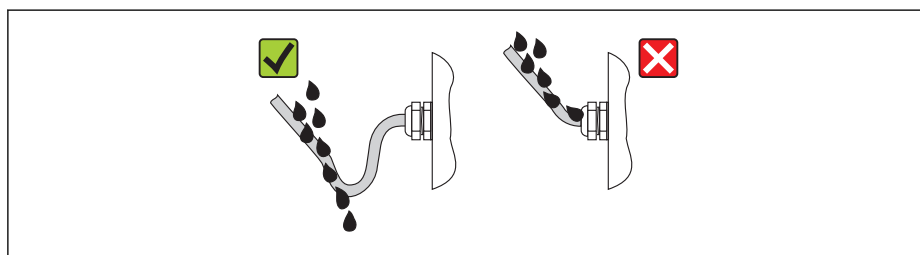

A0013960

5. Insert dummy plugs into unused cable entries.

7.4.2 Degree of protection IP68, Type 6P enclosure, with "Cust-potted" option

Depending on the version, the sensor fulfills all the requirements for the IP68 degree of protection, Type 6P enclosure and can be used as a remote version → 23.

The degree of protection of the transmitter is always only IP66/67, Type 4X enclosure and the transmitter must therefore be treated accordingly → 46.

To guarantee IP68 degree of protection, Type 6P enclosure for the "Cust-potted" options, carry out the following steps after the electrical connection:

1. Firmly tighten the cable glands (torque: 2 to 3.5 Nm) until there is no gap between the bottom of the cover and the housing support surface.
2. Firmly tighten the union nut of the cable glands.
3. Pot the field housing with a potting compound.
4. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
5. Tighten all housing screws and screw covers (torque: 20 to 30 Nm).

7.5 Post-connection check


Are cables or the device undamaged (visual inspection)?	☐
Do the cables comply with the requirements → 36?	☐
Do the cables have adequate strain relief?	☐

Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 46 ?	☐
Only for remote version: is the sensor connected to the right transmitter? Check the serial number on the nameplate of the sensor and transmitter.	☐
Does the supply voltage match the specifications on the transmitter nameplate ?	☐
Is the terminal assignment correct ?	☐
If supply voltage is present, do values appear on the display module?	☐
Is the potential equalization established correctly → 44?	☐
Are all housing covers installed and the screws tightened with the correct tightening torque?	☐



8 Operation options

8.1 Overview of operation options

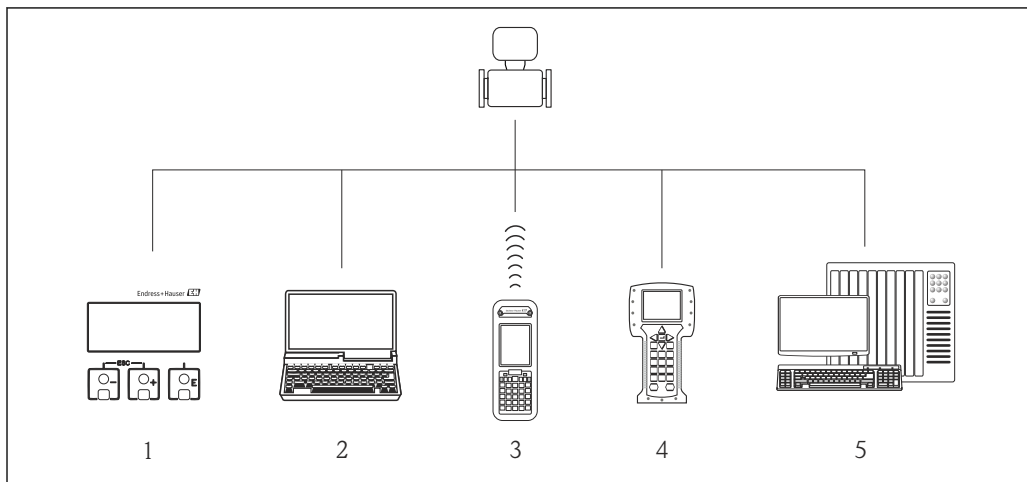

A0015607

- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 3 Field Xpert SFX350 or SFX370
- 4 Field Communicator 475
- 5 Control system (e.g. PLC)




For custody transfer, once the device has been put into circulation or sealed, its operation is restricted.

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu with menus and parameters →  180

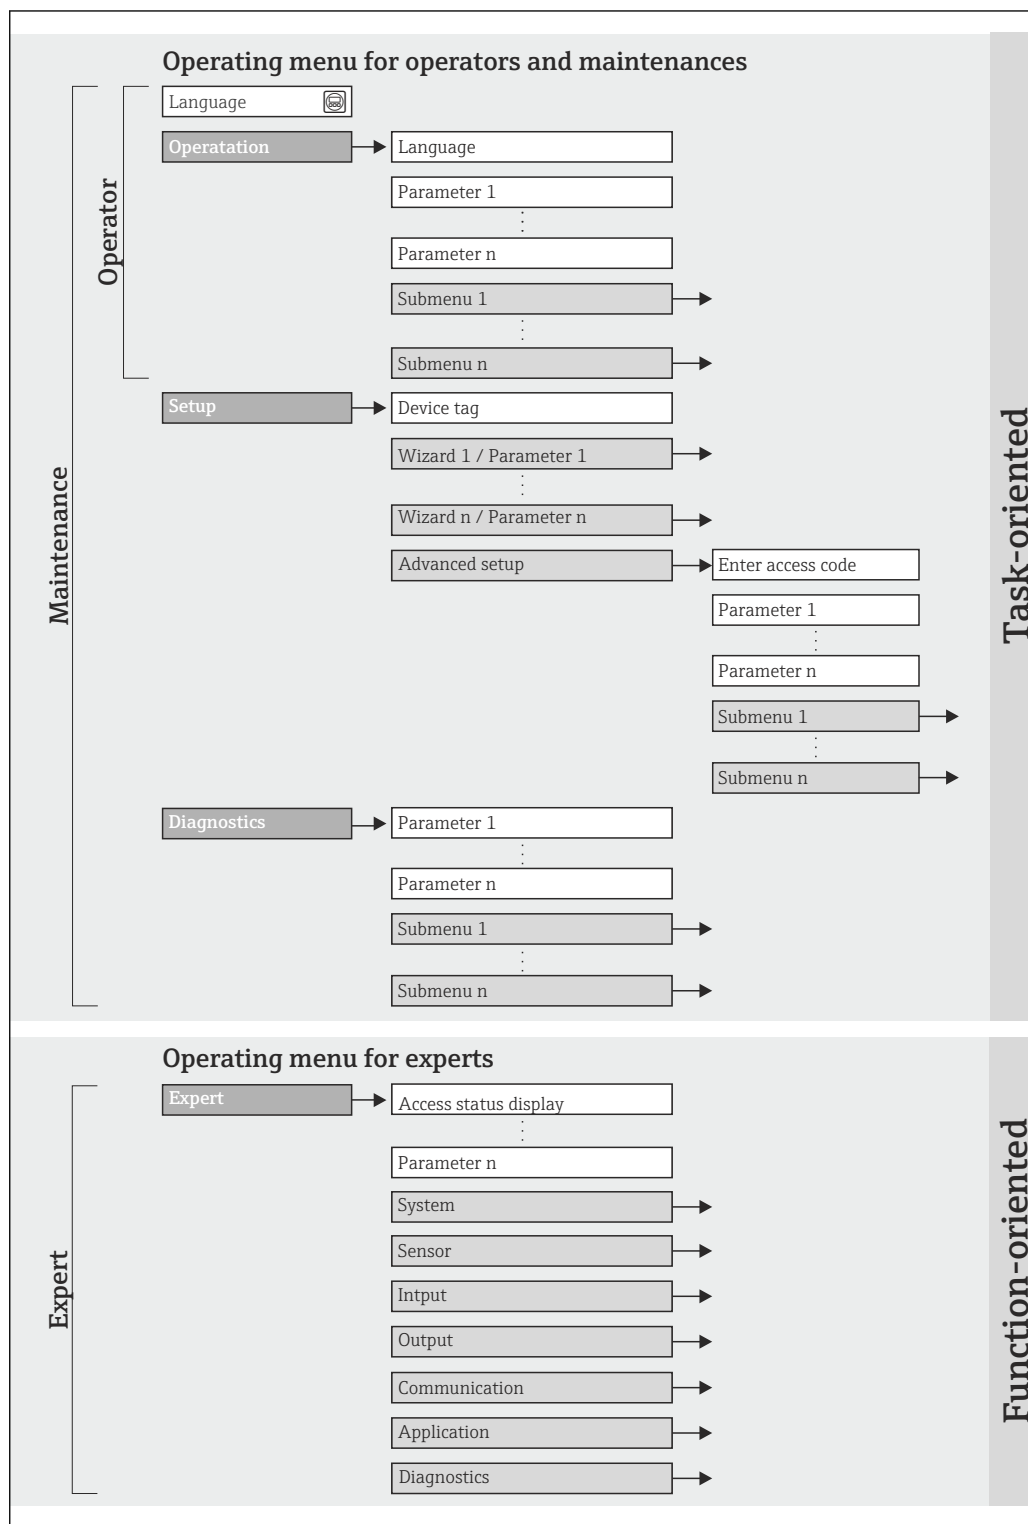

 19 Schematic structure of the operating menu

A0018237-EN

8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.




For custody transfer, once the device has been put into circulation or sealed, its operation is restricted.

Menu		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: - Configuring the operational display - Reading measured values	Defining the operating language - Configuring the operational display (e.g. display format, display contrast) - Resetting and controlling totalizers
Operation			
Setup		"Maintenance" role Commissioning: - Configuration of the measurement - Configuration of the inputs and outputs	Wizards for fast commissioning: - Setting the input - Configuring the outputs - Configuring the operational display - Defining the output conditioning - Configuring the low flow cut off - Configuring the empty pipe detection "Advanced setup" submenu: - For more customized configuration of the measurement (adaptation to special measuring conditions) - Configuration of totalizers - Configuration of electrode cleaning (optional) - Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Fault elimination: - Diagnostics and elimination of process and device errors - Measured value simulation	Contains all parameters for error detection and analyzing process and device errors: "Diagnostic list" submenu Contains up to 5 currently pending diagnostic messages. "Event logbook" submenu Contains up to 20 or 100 (order option "Extended HistoROM") event messages that have occurred. "Device information" submenu Contains information for identifying the device. "Measured values" submenu Contains all current measured values. "Data logging" submenu (order option "Extended HistoROM") Storage and visualization of up to 1000 measured values "Heartbeat Technology" submenu The functionality of the device is checked on demand and the verification results are documented. "Simulation" submenu Is used to simulate measured values or output values.

Menu		User role and tasks	Content/meaning
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: ▪ Commissioning measurements under difficult conditions ▪ Optimal adaptation of the measurement to difficult conditions ▪ Detailed configuration of the communication interface ▪ Error diagnostics in difficult cases	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: ▪ "System" submenu Contains all higher-order device parameters that do not pertain either to measurement or the measured value communication. ▪ "Sensor" submenu Configuration of the measurement. ▪ "Input" submenu (order option) Configuring the status input. ▪ "Output" submenu Configuring of the analog current outputs as well as the pulse/frequency and switch output. ▪ "Communication" submenu Configuration of the digital communication interface and the Web server. ▪ "Application" submenu Configuration of the functions that go beyond the actual measurement (e.g. totalizer). ▪ "Diagnostics" submenu Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

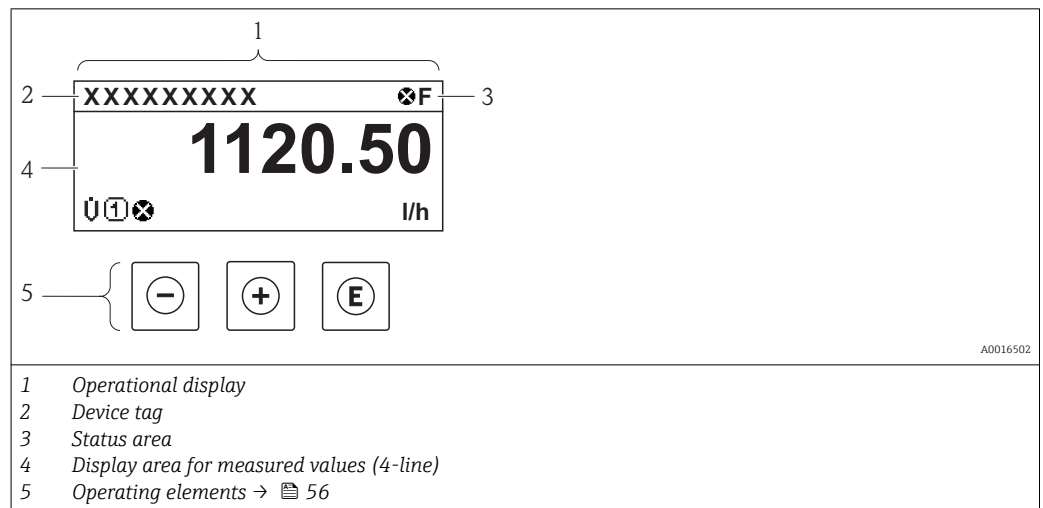

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 125
 - **F**: Failure
 - **C**: Function check
 - **S**: Out of specification
 - **M**: Maintenance required
- Diagnostic behavior → 126
 - **⊗**: Alarm
 - **⚠**: Warning
- **🔒**: Locking (the device is locked via the hardware)
- **↔**: Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

	Measured variable	Measurement channel number	Diagnostic behavior
	↓	↓	↓
Example			
			Appears only if a diagnostics event is present for this measured variable.

Measured variables

Symbol	Meaning
	Volume flow
	Conductivity
	Mass flow
	Totalizer  The measurement channel number indicates which of the three totalizers is displayed.
	Output  The measurement channel number indicates which of the outputs is displayed.
	Status input

Measurement channel numbers


Symbol	Meaning
	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).	

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.
For information on the symbols →  126

 The number and display format of the measured values can be configured via the **"Format display" parameter** →  92. "Operation" menu → Display → Format display

8.3.2 Navigation view

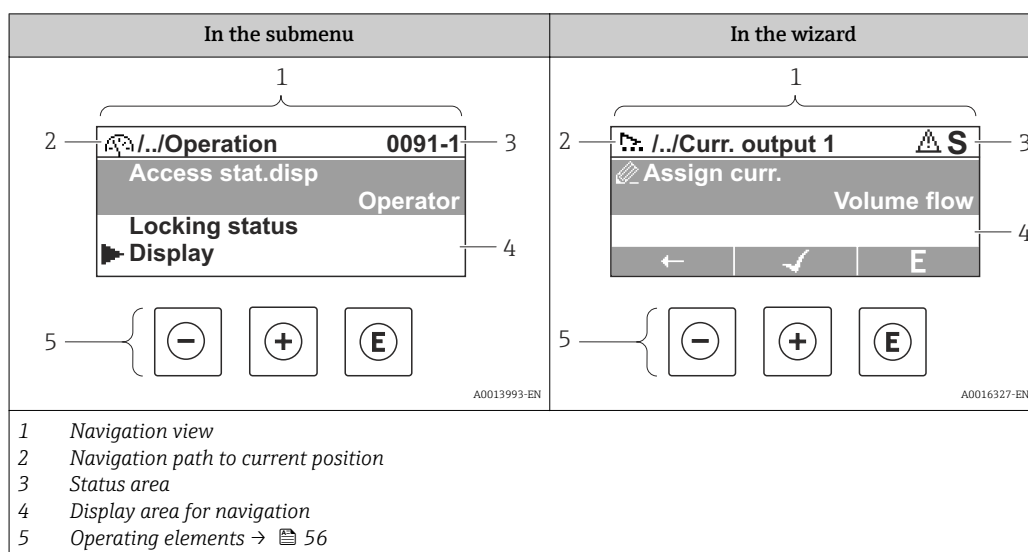

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

	- In the submenu: Display symbol for menu - In the wizard: Display symbol for wizard	Omission symbol for operating menu levels in between	Name of current - Submenu - Wizard - Parameter
	↓	↓	↓
Examples		/ .. /	Display
		/ .. /	Display



For more information about the menu icons, refer to the "Display area" section
 → 54

Status area

The following appears in the status area of the navigation view in the top right corner:

- Of the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal



- For information on the diagnostic behavior and status signal → 125
- For information on the function and entry of the direct access code → 59

Display area

Menus

Symbol	Meaning
	Operation Appears: - In the menu next to the "Operation" selection - At the left in the navigation path in the "Operation" menu
	Setup Appears: - In the menu next to the "Setup" selection - At the left in the navigation path in the "Setup" menu
	Diagnostics Appears: - In the menu next to the "Diagnostics" selection - At the left in the navigation path in the "Diagnostics" menu
	Expert Appears: - In the menu next to the "Expert" selection - At the left in the navigation path in the "Expert" menu

Submenus, wizards, parameters

Symbol	Meaning
	Submenu
	Wizard
	Parameters within a wizard  No display symbol exists for parameters in submenus.

Locking

Symbol	Meaning
	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. - By a user-specific access code - By the hardware write protection switch

Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
	Opens the editing view of the parameter.

8.3.3 Editing view

Numeric editor	Text editor
1 Editing view 2 Display area of the entered values 3 Input mask 4 Operating elements → 56	1 Editing view 2 Display area of the entered values 3 Input mask 4 Operating elements → 56

Input mask


The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor

Symbol	Meaning
 ... 	Selection of numbers from 0 to 9.
	Inserts decimal separator at the input position.
	Inserts minus sign at the input position.
	Confirms selection.
	Moves the input position one position to the left.
	Exits the input without applying the changes.
	Clears all entered characters.

Text editor

Symbol	Meaning
	Toggle - Between upper-case and lower-case letters - For entering numbers - For entering special characters
 ... 	Selection of letters from A to Z.

  	Selection of letters from a to z.
 	Selection of special characters.
	Confirms selection.
	Switches to the selection of the correction tools.
	Exits the input without applying the changes.
	Clears all entered characters.

Correction symbols under 

Symbol	Meaning
	Clears all entered characters.
	Moves the input position one position to the right.
	Moves the input position one position to the left.
	Deletes one character immediately to the left of the input position.

8.3.4 Operating elements

Key	Meaning
	Minus key <i>In a menu, submenu</i> Moves the selection bar upwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the previous parameter. <i>With a text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).
	Plus key <i>In a menu, submenu</i> Moves the selection bar downwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the next parameter. <i>With a text and numeric editor</i> Moves the selection bar to the right (forwards) in an input screen.

Key	Meaning
	Enter key <i>For operational display</i> - Pressing the key briefly opens the operating menu. - Pressing the key for 2 s opens the context menu. <i>In a menu, submenu</i> - Pressing the key briefly: - Opens the selected menu, submenu or parameter. - Starts the wizard. - If help text is open, closes the help text of the parameter. - Pressing the key for 2 s for parameter: - If present, opens the help text for the function of the parameter. <i>With a Wizard</i> Opens the editing view of the parameter. <i>With a text and numeric editor</i> - Pressing the key briefly: - Opens the selected group. - Carries out the selected action. - Pressing the key for 2 s confirms the edited parameter value.
	Escape key combination (press keys simultaneously) <i>In a menu, submenu</i> - Pressing the key briefly: - Exits the current menu level and takes you to the next higher level. - If help text is open, closes the help text of the parameter. - Pressing the key for 2 s returns you to the operational display ("home position"). <i>With a Wizard</i> Exits the wizard and takes you to the next higher level. <i>With a text and numeric editor</i> Closes the text or numeric editor without applying changes.
	Minus/Enter key combination (press the keys simultaneously) Reduces the contrast (brighter setting).
	Plus/Enter key combination (press and hold down the keys simultaneously) Increases the contrast (darker setting).
	Minus/Plus/Enter key combination (press the keys simultaneously) <i>For operational display</i> Enables or disables the keypad lock (only SD02 display module).

8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Simulation

Calling up and closing the context menu

The user is in the operational display.

- Press for 2 s.
↳ The context menu opens.

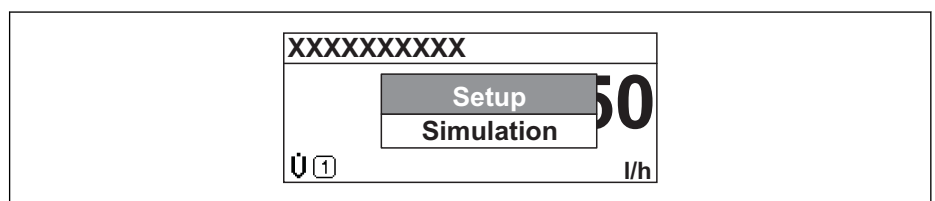

2. Press $\square + \boxplus$ simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu

1. Open the context menu.
2. Press $\boxplus$ to navigate to the desired menu.
3. Press $\boxminus$ to confirm the selection.
 - ↳ The selected menu opens.


8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.



For an explanation of the navigation view with symbols and operating elements
→ 53

Example: Setting the number of displayed measured values to "2 values"

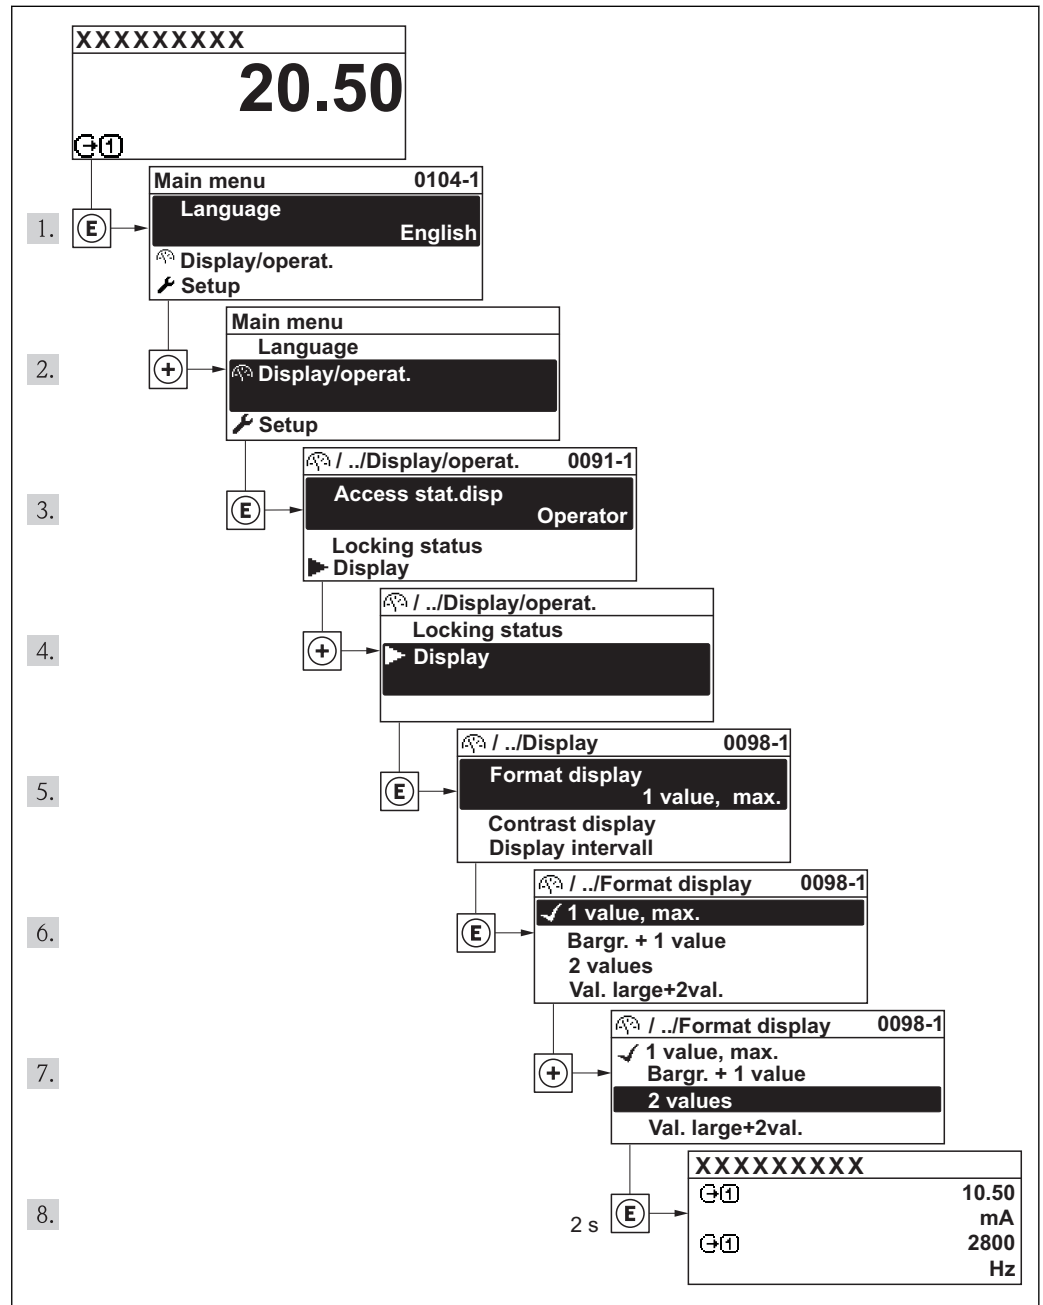

A0017448-EN


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

"Expert" menu → Direct access

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

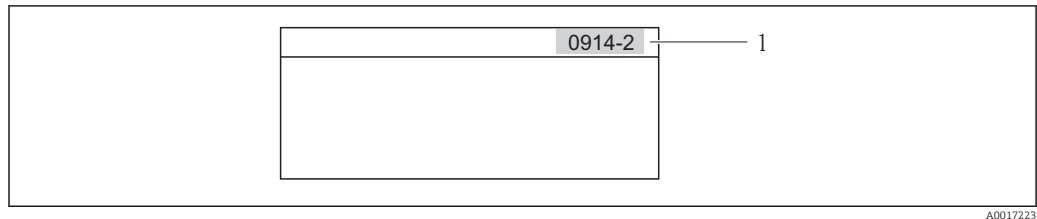

A0017223

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
Example: Input of "0914" → Parameter **Totalizer 1**
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.
Example: Input of "0914-2" → Parameter **Totalizer 2**



For the direct access codes of the individual parameters


8.3.8 Calling up help text

For some parameters, help texts exist, which the user can call up from the navigation view. These briefly describe the function of the parameter and thus support fast and reliable commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press  for 2 s.
↳ The help text for the selected parameter opens.

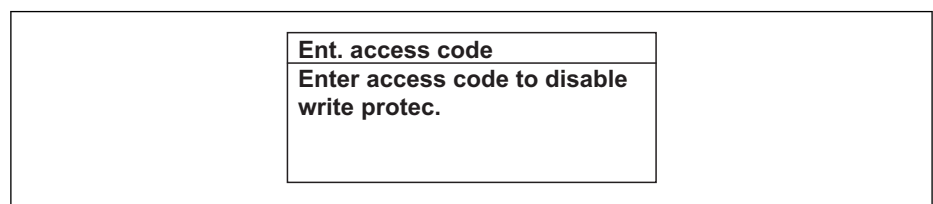

A0014002-EN


 20 Example: Help text for parameter "Enter access code"

2. Press  +  simultaneously.
↳ The help text is closed.

8.3.9 Changing the parameters

 For a description of the editing display - consisting of text editor and numeric editor - with symbols →  55, for a description of the operating elements →  56

Example: Changing the tag name in the "Tag description" parameter from 001-FT-101 to 001-FT-102

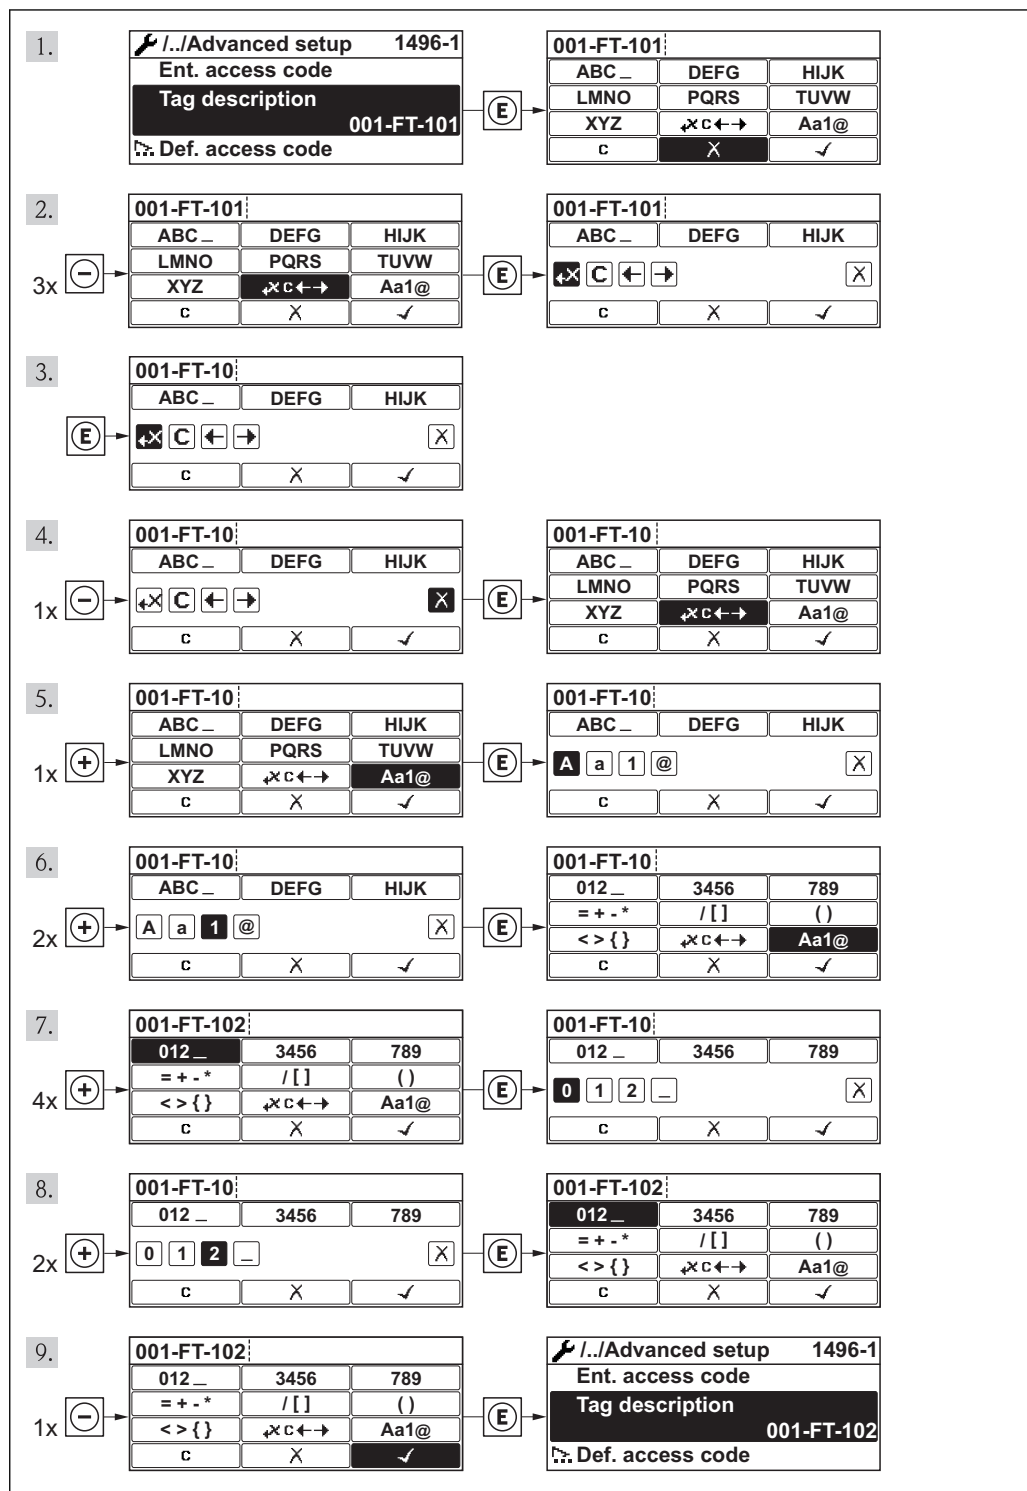

A0014020-EN

A message is displayed if the value entered is outside the permitted value range.

Ent. access code Invalid or out of range input value Min:0 Max:9999

A0014049-EN

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access.

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	-- 1)
Maintenance	✓	✓	✓	✓

- 1) Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

If an incorrect access code is entered, the user obtains the access rights of the "Operator" role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter. Navigation path: Operation → Access status display

8.3.11 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using the local display.

The locking of the write access via local operation can be disabled by entering the customer-defined access code via the respective access option.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
 - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

Local operation with touch control

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

The keypad lock is switched on automatically:

- Each time the device is restarted.
- If the device has not been operated for longer than one minute in the measured value display.

1. The device is in the measured value display.
Press the  key for longer than 2 seconds.
↳ A context menu appears.
2. In the context menu, select the **Keylock on** option.
↳ The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

1. The keypad lock is switched on.
Press the  key for longer than 2 seconds.
↳ A context menu appears.
2. In the context menu, select the **Keylock off** option.
↳ The keypad lock is switched off.

8.4 Access to the operating menu via the Web browser

8.4.1 Function range

Thanks to the integrated Web server the device can be operated and configured via a Web browser. The operating menu structure is the same as in the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

8.4.2 Prerequisites

Computer hardware

Interface	The computer must have an RJ45 interface.
Connecting cable	Standard Ethernet cable with RJ45 connector.
Screen	Recommended size: ≥ 12" (depends on the screen resolution)  Web server operation is not optimized for touch screens!

Computer software

Recommended operating systems	Microsoft Windows 7 or higher.  Microsoft Windows XP is supported.
Web browsers supported	■ Microsoft Internet Explorer 8 or higher ■ Mozilla Firefox ■ Google chrome

Computer settings

User rights	User rights are required for TCP/IP and proxy server settings (for changes to the IP address, subnet mask etc.).
Proxy server settings of the Web browser	The Web browser setting <i>Use proxy server for LAN</i> must be disabled .
JavaScript	JavaScript must be enabled.  If JavaScript cannot be enabled: enter <code>http://192.168.1.212/basic.html</code> in the address line of the Web browser. A fully functional but simplified version of the operating menu structure starts in the Web browser.  When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under Internet options.

Measuring device

Web server	Web server must be enabled; factory setting: ON  For information on enabling the Web server →  66
------------	---

8.4.3 Establishing a connection

Configuring the Internet protocol of the computer

IP address	192.168.1.XXX; for XXX all numerical values except: 0, 212 and 255 → e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

1. Switch on the measuring device and connect to the computer via the cable →  68.
2. If a 2nd network card is not used: all the applications on the notebook should be closed, or all the applications that require the Internet or network, such as e-mail, SAP applications, Internet or Windows Explorer, i.e. close all open Internet browsers.
3. Configure the properties of the Internet protocol (TCP/IP) as defined in the table above.

Starting the Web browser

1. Start the Web browser on the computer.
2. Enter the IP address of the Web server in the address line of the Web browser:
192.168.1.212

The login page appears.

A0017362

- 1 Device tag
- 2 Picture of device

If a login page does not appear, or if the page is incomplete → 123

8.4.4 Logging on

1. Select the preferred operating language for the Web browser.
2. Enter the access code.
3. Press **OK** to confirm your entry.

Access code	0000 (factory setting); can be changed by customer
-------------	--

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface

A0017757-EN

- 1 Picture of device
- 2 Function row with 6 functions
- 3 Device tag
- 4 Header
- 5 Working area
- 6 Navigation area

Header

The following information appears in the header:

- Device tag
- Device status with status signal → 128
- Current measured values

Function row

Functions	Meaning
Measured values	The measured values of the device are displayed
Menu	Access to the operating menu structure of the device, same as for the local display and operating tool
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	Data exchange between PC and measuring device: – Upload the configuration from the device (XML format, create configuration back-up) – Save the configuration to the device (XML format, restore configuration) – Export the event list (.csv file) – Export parameter settings (.csv file, create documentation of the measuring point configuration) – Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the device: ▪ Network settings (e.g. IP address, MAC address) ▪ Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server for the measuring device can be enabled and disabled as required via the **Web server functionality** parameter.

Navigation

"Expert" menu → Communication → Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	▪ Off ▪ On	On

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via "FieldCare" operating tool

8.4.7 Logging out

i Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.


1. Select the **Logout** entry in the function row.
↳ The home page with the Login box appears.
2. Close the Web browser.
3. Reset the modified properties of the Internet protocol (TCP/IP) if they are no longer needed → 64.

8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.5.1 Connecting the operating tool

Via HART protocol

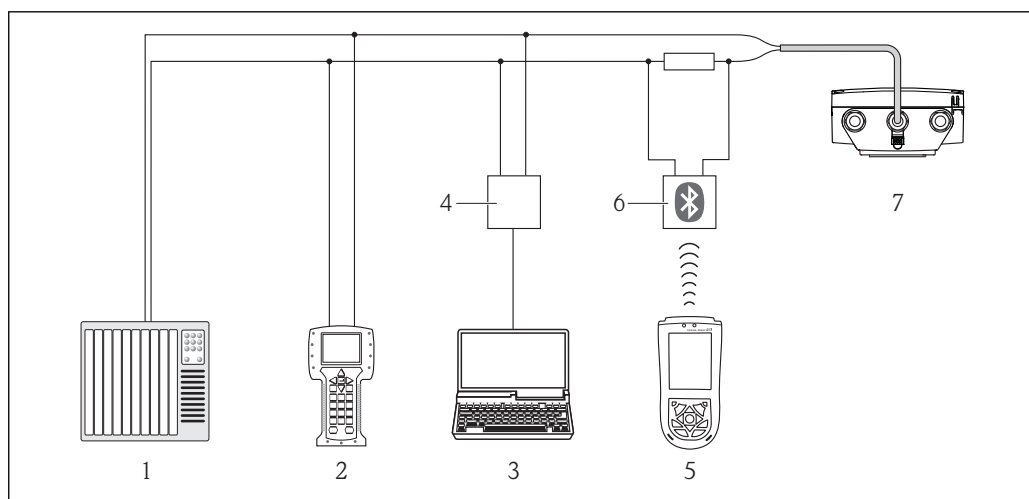


A0017124

21 Options for remote operation via HART protocol

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 VIATOR Bluetooth modem with connecting cable
- 7 Transmitter

Via service interface (CDI-RJ45)

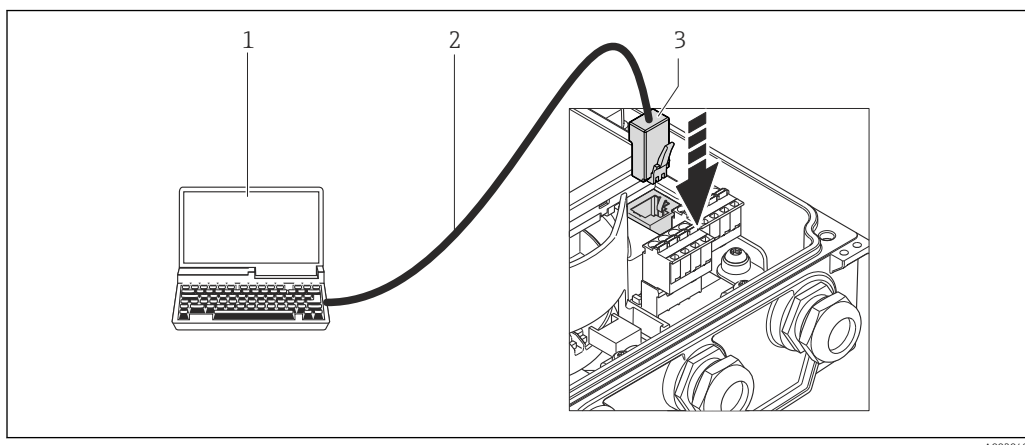

A0020481

- 1 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI -RJ45) of the measuring device with access to the integrated Web server

8.5.2 Field Xpert SFX350, SFX370

Function scope

Field Xpert SFX350 and Field Xpert SFX370 are mobile computers for commissioning and maintenance. They enable efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the **non-Ex area** (SFX350, SFX370) and the **Ex area** (SFX370).

 For details, see Operating Instructions BA01202S

Source for device description files

See data →  71

8.5.3 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access takes place via:

- HART protocol →  67
- Service interface CDI-RJ45 →  68

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

 For details, see Operating Instructions BA00027S and BA00059S

Source for device description files

See data →  71


Establishing a connection

Via service interface (CDI-RJ45)

1. Start FieldCare and launch the project.
2. In the network: Add a device.
↳ The **Add device** window opens.
3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
5. Select the desired device from the list and press **OK** to confirm.
↳ The **CDI Communication TCP/IP (Configuration)** window opens.
6. Enter the device address in the **IP address** field: 192.168.1.212 and press **Enter** to confirm.
7. Establish the online connection to the device.

 For details, see Operating Instructions BA00027S and BA00059S

User interface

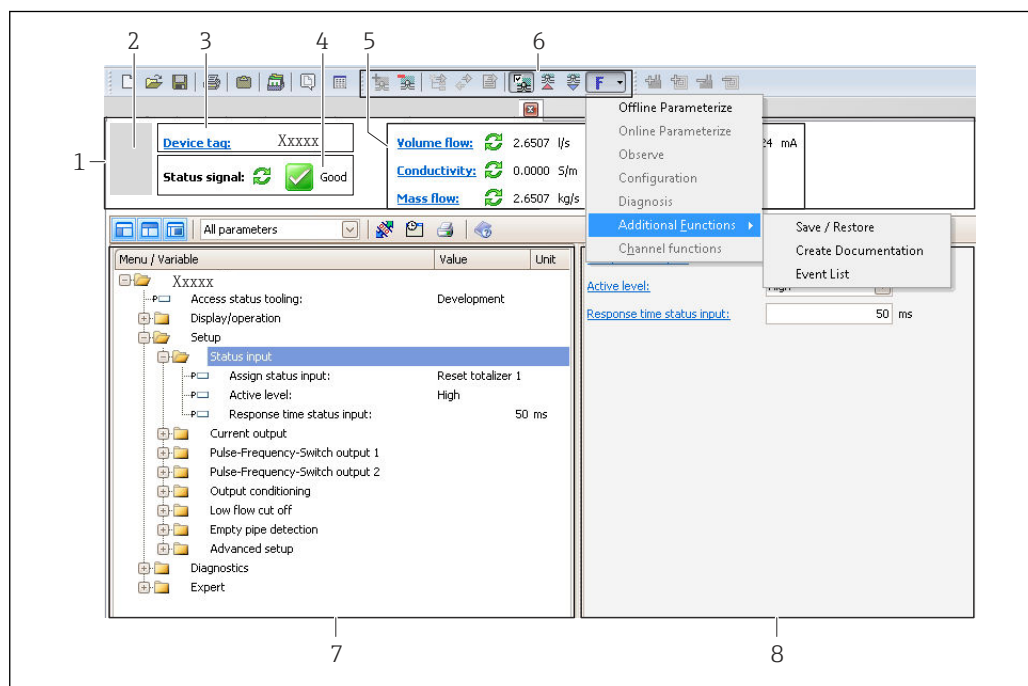

- 1 Header
- 2 Picture of device
- 3 Device tag
- 4 Status area with status signal → 128
- 6 Display area for current measured values
- 5 Event list with additional functions such as save/load, events list and document creation
- 7 Navigation area with operating menu structure
- 8 Operating range

8.5.4 AMS Device Manager

Function scope

Program from Emerson Process Management for operating and configuring measuring devices via HART protocol.

Source for device description files

See data →  71

8.5.5 SIMATIC PDM

Function scope

SIMATIC PDM is a standardized, manufacturer-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via HART protocol.

Source for device description files

See data →  71

8.5.6 Field Communicator 475

Function scope

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via HART protocol.

Source for device description files

See data →  71

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.05.zz	- On the title page of the Operating instructions - On transmitter nameplate → 13 - Parameter firmware version Diagnostics → Device info → Firmware version
Release date of firmware version	05.2014	---
Manufacturer ID	0x11	Manufacturer ID parameter Diagnostics → Device info → Manufacturer ID
Device type ID	0x67	Device type parameter Diagnostics → Device info → Device type
HART protocol revision	7	---
Device revision	6	- On transmitter nameplate → 13 Device revision parameter Diagnostics → Device info → Device revision

9.1.2 Operating tools

Operating tool via HART protocol	Sources for obtaining device descriptions
- Field Xpert SFX350 - Field Xpert SFX370	Use update function of handheld terminal
FieldCare	www.endress.com → Download Area - CD-ROM (contact Endress+Hauser) - DVD (contact Endress+Hauser)
AMS Device Manager (Emerson Process Management)	www.endress.com → Download Area
SIMATIC PDM (Siemens)	www.endress.com → Download Area
Field Communicator 475 (Emerson Process Management)	Use update function of handheld terminal

9.2 Measured variables via HART protocol

The following measured variables (HART device variables) are assigned to the dynamic variables at the factory:

Dynamic variables	Measured variables (HART device variables)
Primary dynamic variable (PV)	Volume flow
Secondary dynamic variable (SV)	Totalizer 1
Tertiary dynamic variable (TV)	Totalizer 2
Quaternary dynamic variable (QV)	Totalizer 3

The assignment of the measured variables to the dynamic variables can be modified and assigned as desired via local operation and the operating tool using the following parameters:

- Expert → Communication → HART output → Output → Assign PV
- Expert → Communication → HART output → Output → Assign SV
- Expert → Communication → HART output → Output → Assign TV
- Expert → Communication → HART output → Output → Assign QV

The following measured variables can be assigned to the dynamic variables:

Measured variables for PV (primary dynamic variable)

- Off
- Volume flow
- Mass flow
- Flow velocity
- Conductivity
- Electronic temperature

Measured variables for SV, TV, QV (secondary, tertiary and quaternary dynamic variable)

- Volume flow
- Mass flow
- Conductivity
- Electronic temperature
- Totalizer 1
- Totalizer 2
- Totalizer 3

Device variables

The device variables are permanently assigned. A maximum of 8 device variables can be transmitted:


- 0 = volume flow
- 1 = Mass flow
- 2 = conductivity
- 3 = flow velocity
- 4 = electronic temperature
- 5 = totalizer 1
- 6 = totalizer 2
- 7 = totalizer 3

9.3 Other settings

9.3.1 Burst mode functionality in accordance with HART 7 Specification

Navigation

"Expert" menu → Communication → HART output → Burst configuration → Burst configuration 1 to 3

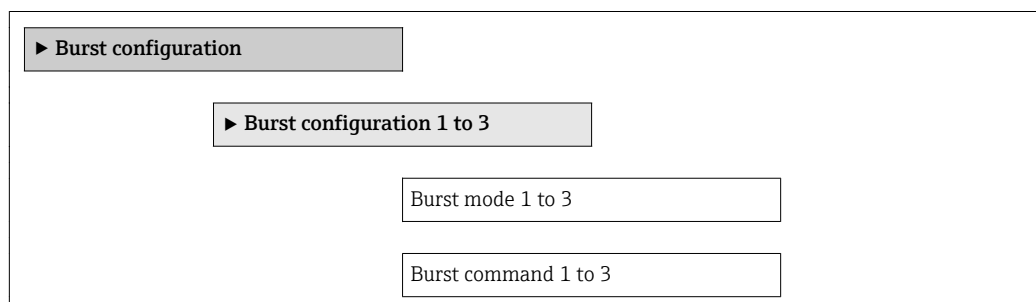

Burst variable 0
Burst variable 1
Burst variable 2
Burst variable 3
Burst variable 4
Burst variable 5
Burst variable 6
Burst variable 7
Burst trigger mode
Burst trigger level
Min. update period
Max. update period

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Burst mode 1 to 3	Activation of the HART burst mode for burst message X.  An external pressure or temperature sensor must also be in the Burst mode.	- Off - On	Off
Burst command 1 to 3	Select the HART command that is sent to the HART master. Command 1 option: Read out the primary variable. Command 2 option: Read out the current and the main measured value as a percentage. Command 3 option: Read out the dynamic HART variables and the current. Command 9 option: Read out the dynamic HART variables including the related status. Command 33 option: Read out the dynamic HART variables including the related unit. Command 48 option: Read out the complete device diagnostics.	- Command 1 - Command 2 - Command 3 - Command 9 - Command 33 - Command 48	Command 2

Parameter	Description	Selection / User entry	Factory setting
Burst variable 0	Assignment of the individual HART variables (PV, SV, TV, QV) and assignment of the process variables available in the device to the HART command.	■ Volume flow ■ Mass flow ■ Flow velocity ■ Conductivity ■ Electronic temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Density ■ Temperature ■ HART input ■ Percent Of Range ■ Measured current ■ Primary variable (PV) ■ Secondary variable (SV) ■ Tertiary variable (TV) ■ Quaternary variable (QV) ■ Not used	Volume flow
Burst variable 1	See burst variable 0.	See burst variable 0.	Not used
Burst variable 2	See burst variable 0.	See burst variable 0.	Not used
Burst variable 3	See burst variable 0.	See burst variable 0.	Not used
Burst variable 4	See burst variable 0.	See burst variable 0.	Not used
Burst variable 5	See burst variable 0.	See burst variable 0.	Not used
Burst variable 6	See burst variable 0.	See burst variable 0.	Not used
Burst variable 7	See burst variable 0.	See burst variable 0.	Not used
Burst trigger mode	Use this function to select the event that triggers burst message X. ■ Continuous option: The message is triggered in a time-controlled manner, at least observing the time interval defined in the Burst min period parameter. ■ Window option: The message is triggered if the specified measured value has changed by the value in the Burst trigger level parameter. ■ Rising option: The message is triggered if the specified measured value exceeds the value in the Burst trigger level parameter. ■ Falling option: The message is triggered if the specified measured value drops below the value in the Burst trigger level parameter. ■ On change option: The message is triggered if the measured value changes.	■ Continuous ■ Window ■ Rising ■ Falling ■ On change	Continuous
Burst trigger level	For entering the burst trigger value. Together with the option selected in the Burst trigger mode parameter the burst trigger value determines the time of burst message X.	Positive floating-point number	2.0E-38
Min. update period	Use this function to enter the minimum time span between two burst commands of burst message X.	Positive integer	1 000 ms
Max. update period	Use this function to enter the maximum time span between two burst commands of burst message X.	Positive integer	2 000 ms

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist → 35
- "Post-connection check" checklist → 46

10.2 Switching on the measuring device

- ▶ After a successful function check, switch on the measuring device.
 - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display.


i If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" → 122.

10.3 Establishing a connection via FieldCare

- For FieldCare connection → 67
- For establishing a connection via FieldCare → 69
- For FieldCare user interface → 69

10.4 Setting the operating language

Factory setting: English or ordered local language

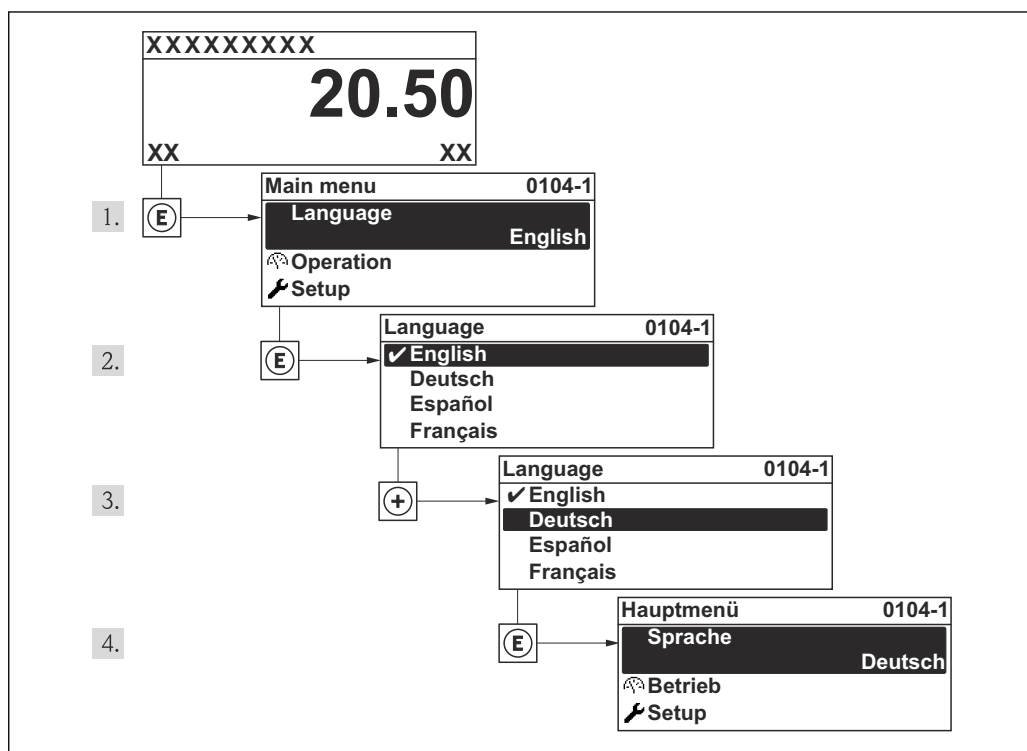


22 Taking the example of the local display

A0013996

10.5 Configuring the measuring device

The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.

Navigation to the **Setup** menu

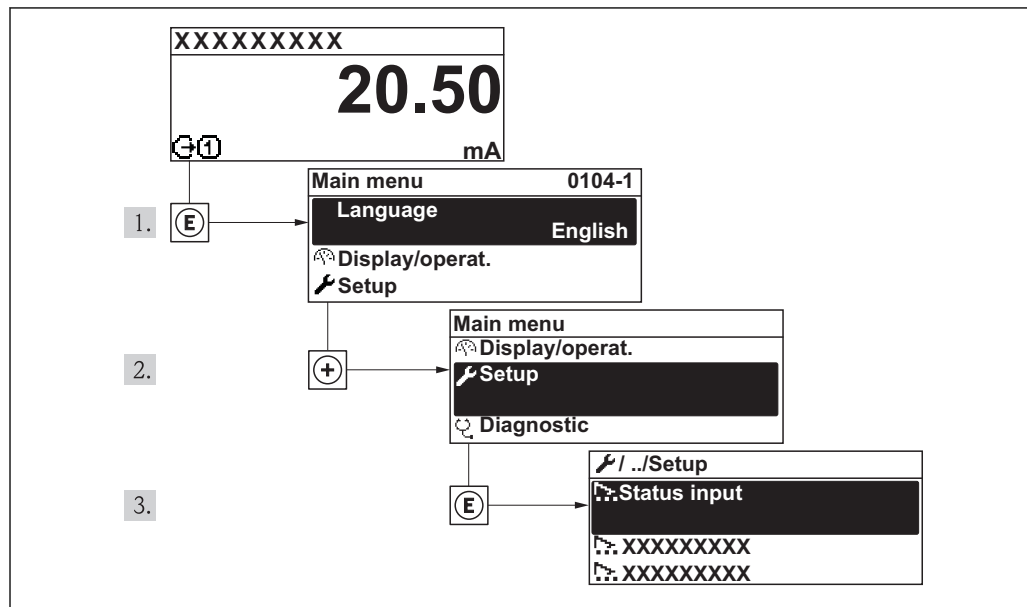

A0017444-EN

23 Using the example of the local display

Navigation

"Setup" menu

 Setup

Device tag

▶ Status input

Assign status input

Active level

Response time status input

▶ Current output 1

Assign current output

Mass flow unit

Volume flow unit

Conductivity unit

Current span

0/4 mA value

20 mA value

Failure mode

Failure current

► Pulse/frequency/switch output 1 to 2

Operating mode

Assign pulse output

Assign frequency output

Switch output function

Assign diagnostic behavior

Assign limit

Assign flow direction check

Assign status

Mass flow unit

Mass unit

Volume flow unit

Conductivity unit

Volume unit

Density unit

Unit totalizer

Unit totalizer

Unit totalizer

Value per pulse

Pulse width

Failure mode

Minimum frequency value

Maximum frequency value

Measuring value at minimum
frequencyMeasuring value at maximum
frequency

Failure mode

Failure frequency

Switch-on value

Switch-off value

Switch-on delay

Switch-off delay

Failure mode

Invert output signal

► Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Value 2 display

Value 3 display

0% bargraph value 3

100% bargraph value 3

Value 4 display

► Output conditioning

Display damping

Assign current output

Damping output 1

Measuring mode output 1

Assign frequency output

Damping output 1

Measuring mode output 1

Assign pulse output

Measuring mode output 1

► Low flow cut off

Assign process variable

On value low flow cutoff

Off value low flow cutoff

Pressure shock suppression

► Empty pipe detection

Empty pipe detection

New adjustment

Switch point empty pipe detection

Response time empty pipe detection

► HART input

Capture mode

Device ID

Device type

Manufacturer ID

Burst command

Slot number

Timeout

Failure mode

Failure value

► Advanced setup

Enter access code

► System units

Volume flow unit

Volume unit

Conductivity unit

Temperature unit

Mass flow unit

Mass unit

Density unit

► Sensor adjustment

Installation direction

► Totalizer 1 to 3

Assign process variable

Unit totalizer

Totalizer operation mode

Failure mode

► Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Decimal places 1

Value 2 display

Decimal places 2

Value 3 display

0% bargraph value 3

100% bargraph value 3

Decimal places 3

Value 4 display

Decimal places 4

Display language

Display interval

Display damping

Header

Header text

Separator

Backlight

► Electrode cleaning circuit


Electrode cleaning circuit

ECC duration

ECC recovery time

10.5.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

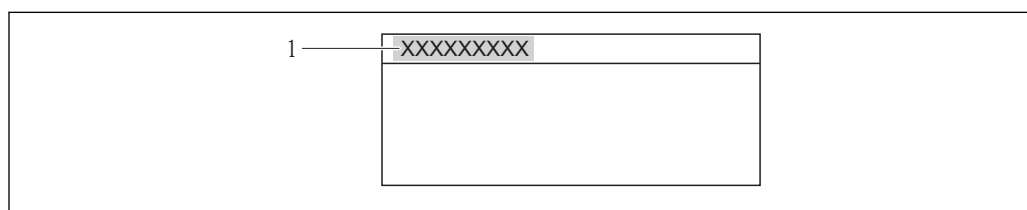

A0013375

 24 Header of the operational display with tag name

1 Device tag

 The number of characters displayed depends on the characters used.

Entry of the tag name in the "FieldCare" operating tool →  69

Navigation

"Setup" menu → Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promag

10.5.2 Configuring the status input

The **Status input** submenu guides you systematically through all the parameters that have to be set for configuring the input.

 The submenu only appears if the device was ordered with a status input .

Navigation

"Setup" menu → Status input

Structure of the submenu

▶ Status input

Assign status input

Active level

Response time status input

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Assign status input	Select the function for the status input.	■ Off ■ Reset totalizer 1 ■ Reset totalizer 2 ■ Reset totalizer 3 ■ Reset all totalizers ■ Flow override	Off
Active level	Specify the input signal level at which the assigned function is triggered.	■ High ■ Low	High
Response time status input	Specify the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms


10.5.3 Configuring the current output

The **"Current output 1" wizard** guides you systematically through all the parameters that have to be set for configuring the current output.

Navigation

"Setup" menu → Current output 1

Structure of the wizard

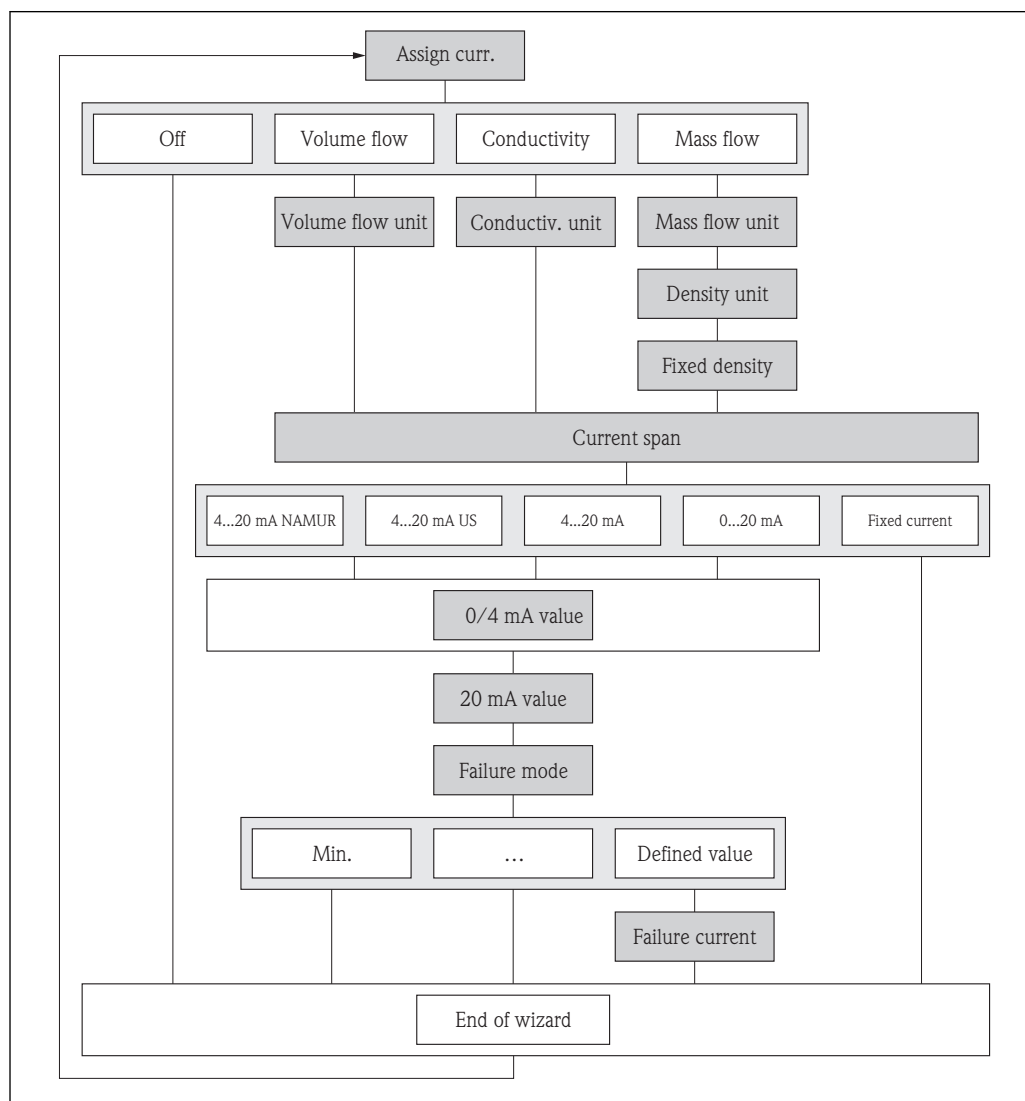

A0017434-EN

25 "Current output 1" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Assign current output	Select process variable for current output.	- Off - Volume flow - Mass flow - Flow velocity - Conductivity - Electronic temperature	Volume flow
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - kg/h - lb/min
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - l/h - gal/min (us)
Conductivity unit	Select conductivity unit. <i>Result</i> The selected unit applies for: - Current output - Frequency output - Switch output - Simulation process variable	Unit choose list	μS/cm
Density unit	Select density unit. <i>Result</i> The selected unit applies for: - Output - Simulation process variable	Unit choose list	Country-specific: - kg/l - lb/ft³
Fixed density	Enter fixed value for medium density.	0.01 to 15 000 kg/m ³	1 000 kg/m ³
Current span	Select current range for process value output and upper/lower level for alarm signal.	4...20 mA NAMUR 4...20 mA US 4...20 mA 0...20 mA - Fixed current	4...20 mA NAMUR
0/4 mA value	Enter 4 mA value.	Signed floating-point number	0 l/h
20 mA value	Enter 20 mA value.	Signed floating-point number	0.025 l/h
Failure mode	Define output behavior in alarm condition.	- Min. - Max. - Last valid value - Actual value - Defined value	Max.
Failure current	Enter current output value in alarm condition.	3.59 ⁻³ to 22.5 ⁻³ mA	22.5 mA

10.5.4 Configuring the pulse/frequency/switch output


The **Pulse/frequency/switch output 1 to 2** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Configuring the pulse output

Navigation

"Setup" menu → Pulse/frequency/switch output 1 to 2

Structure of the wizard for the pulse output

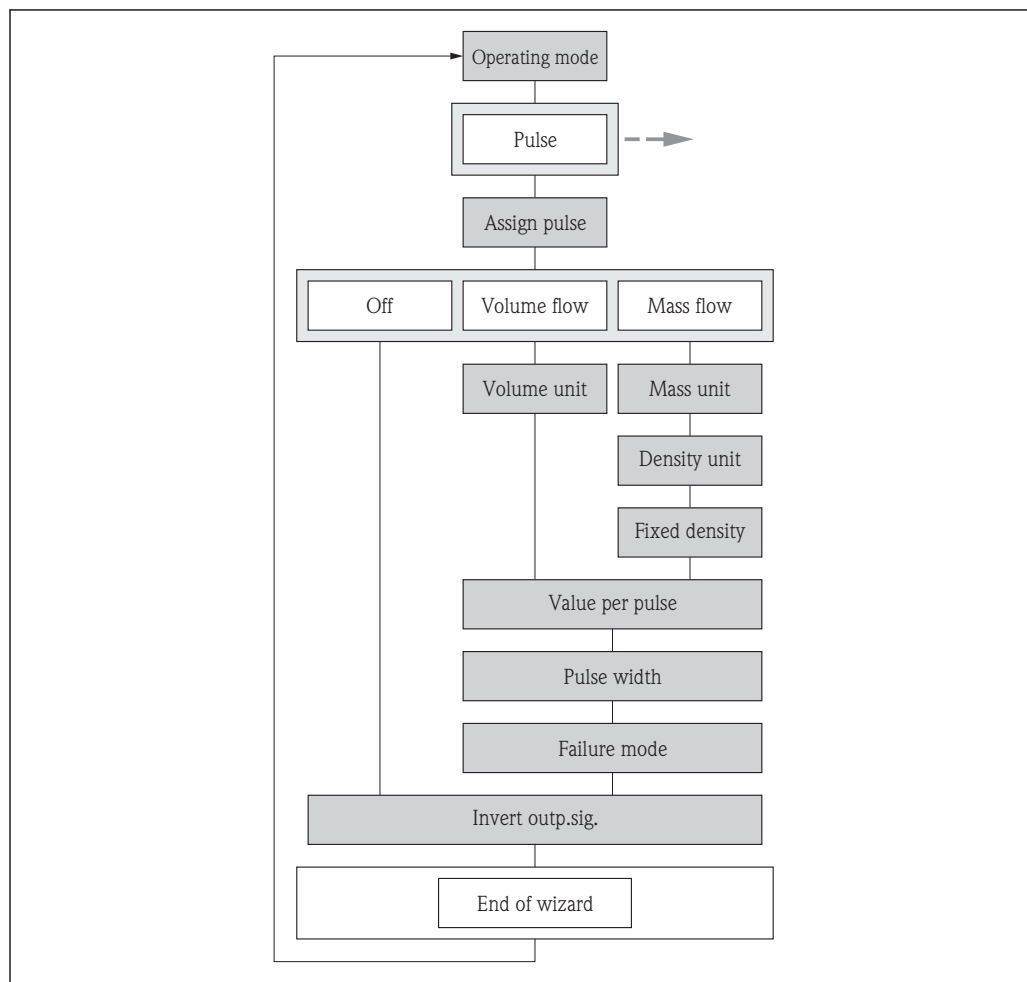

A0017435-EN

26 "Pulse/frequency/switch output 1 to 2" wizard in the "Setup" menu: "Operating mode" parameter "Pulse" option

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse
Assign pulse output	Select process variable for pulse output.	■ Off ■ Volume flow ■ Mass flow	Off
Mass unit	Select mass unit. <i>Result</i> The selected unit is taken from: Mass flow unit parameter	Unit choose list	Country-specific: ■ kg ■ lb


Parameter	Description	Selection / User entry	Factory setting
Volume unit	Select volume unit. Result The selected unit is taken from: Volume flow unit parameter	Unit choose list	Country-specific: ■ l ■ gal (us)
Density unit	Select density unit. <i>Result</i> The selected unit applies for: ■ Output ■ Simulation process variable	Unit choose list	Country-specific: ■ kg/l ■ lb/ft³
Fixed density	Enter fixed value for medium density.	0.01 to 15 000 kg/m ³	1 000 kg/m ³
Value per pulse	Enter measured value at which a pulse is output.	Signed floating-point number	0
Pulse width	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms
Failure mode	Define output behavior in alarm condition.	■ Actual value ■ No pulses	No pulses
Invert output signal	Invert the output signal.	■ No ■ Yes	No

Configuring the frequency output

Navigation

"Setup" menu → Pulse/frequency/switch output 1 to 2

Structure of the wizard for the frequency output

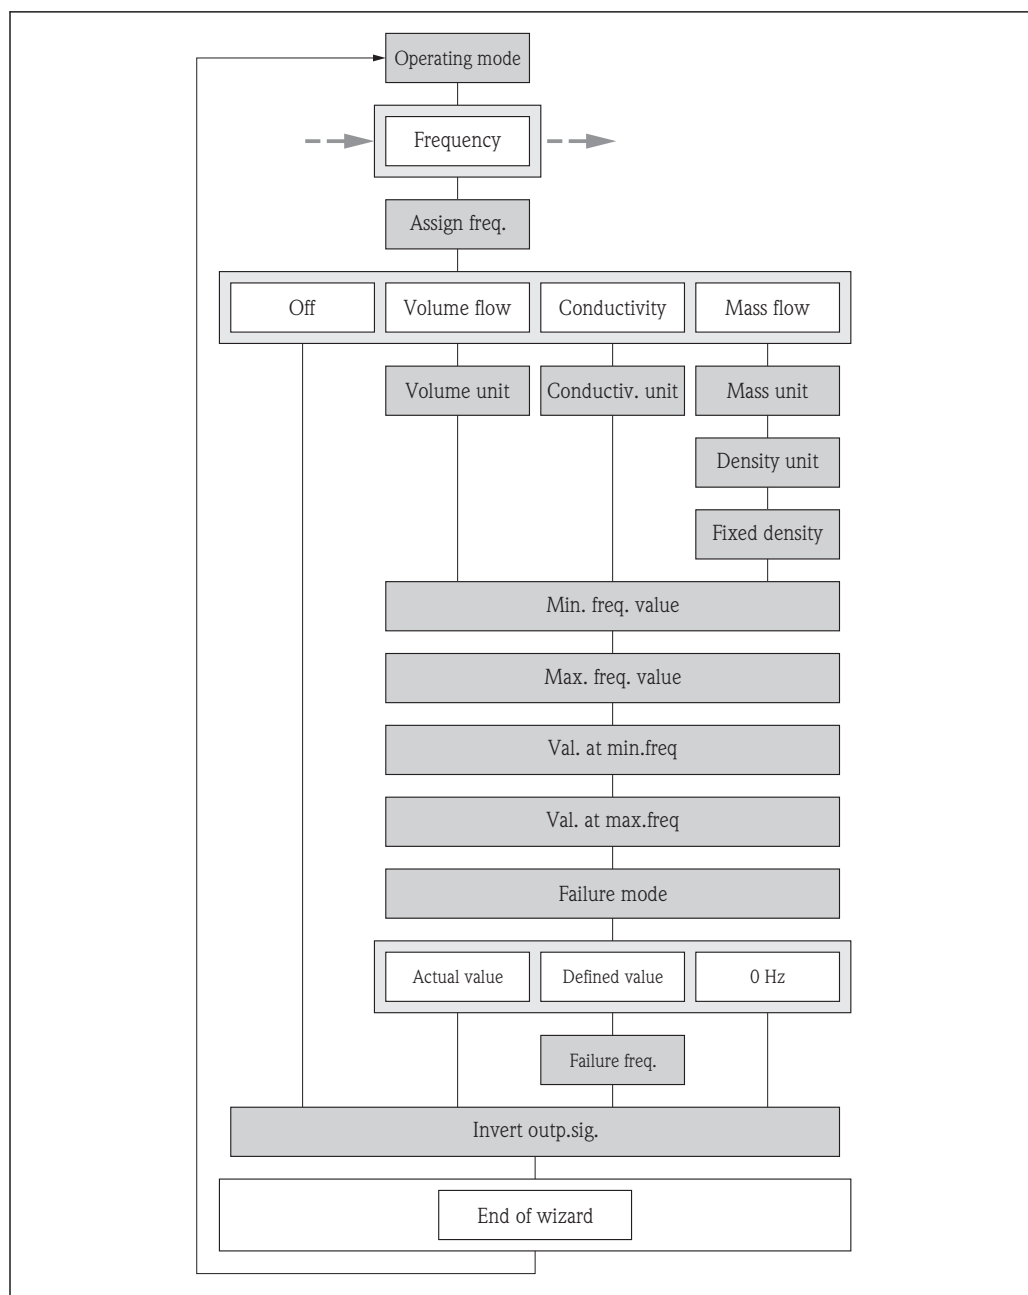

A0017436-EN

27 "Pulse/frequency/switch output 1 to 2" wizard in the "Setup" menu "Operating mode" parameter "Frequency" option

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse
Assign frequency output	Select process variable for frequency output.	■ Off ■ Volume flow ■ Mass flow ■ Flow velocity ■ Conductivity ■ Electronic temperature	Off

Parameter	Description	Selection / User entry	Factory setting
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - kg/h - lb/min
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - l/h - gal/min (us)
Conductivity unit	Select conductivity unit. <i>Result</i> The selected unit applies for: - Current output - Frequency output - Switch output - Simulation process variable	Unit choose list	μS/cm
Density unit	Select density unit. <i>Result</i> The selected unit applies for: - Output - Simulation process variable	Unit choose list	Country-specific: - kg/l - lb/ft³
Minimum frequency value	Enter minimum frequency.	0.0 to 12 500.0 Hz	0.0 Hz
Maximum frequency value	Enter maximum frequency.	0.0 to 12 500.0 Hz	12 500.0 Hz
Measuring value at minimum frequency	Enter measured value for minimum frequency.	Signed floating-point number	0
Measuring value at maximum frequency	Enter measured value for maximum frequency.	Signed floating-point number	0
Failure mode	Define output behavior in alarm condition.	- Actual value - Defined value 0 Hz	0 Hz
Failure frequency	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	Invert the output signal.	- No - Yes	No


Configuring the switch output

Navigation

"Setup" menu → Pulse/frequency/switch output 1 to 2




Structure of the wizard for the switch output

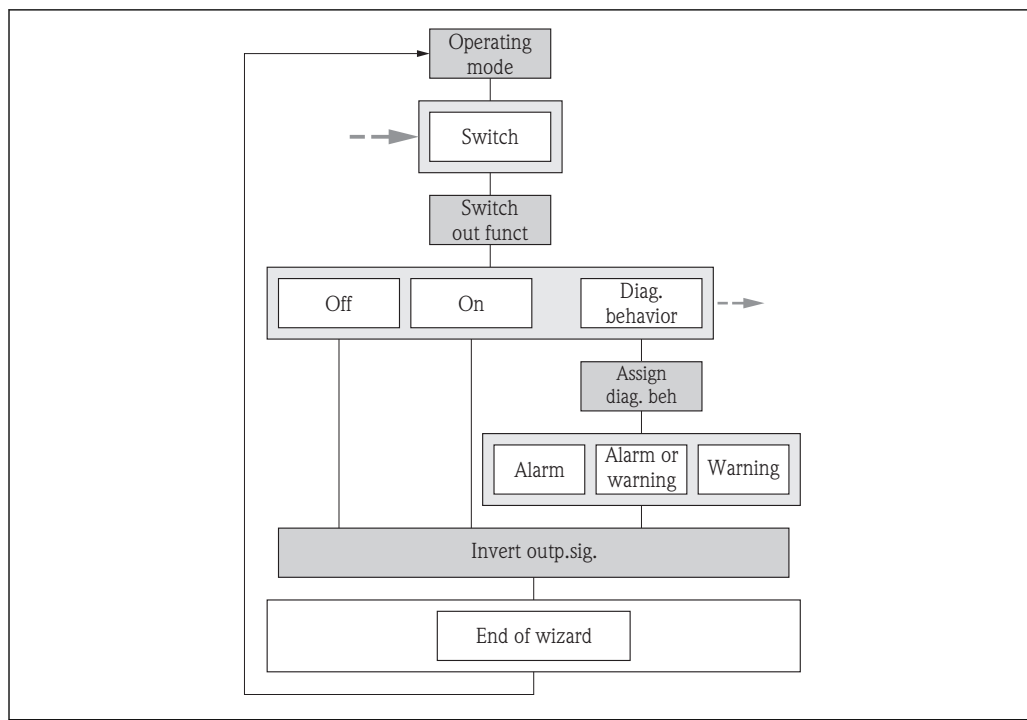

A0017439-EN

- 28 "Pulse/frequency/switch output 1 to 2" wizard in the "Setup" menu: "Operating mode" parameter "Switch" option (part 1)

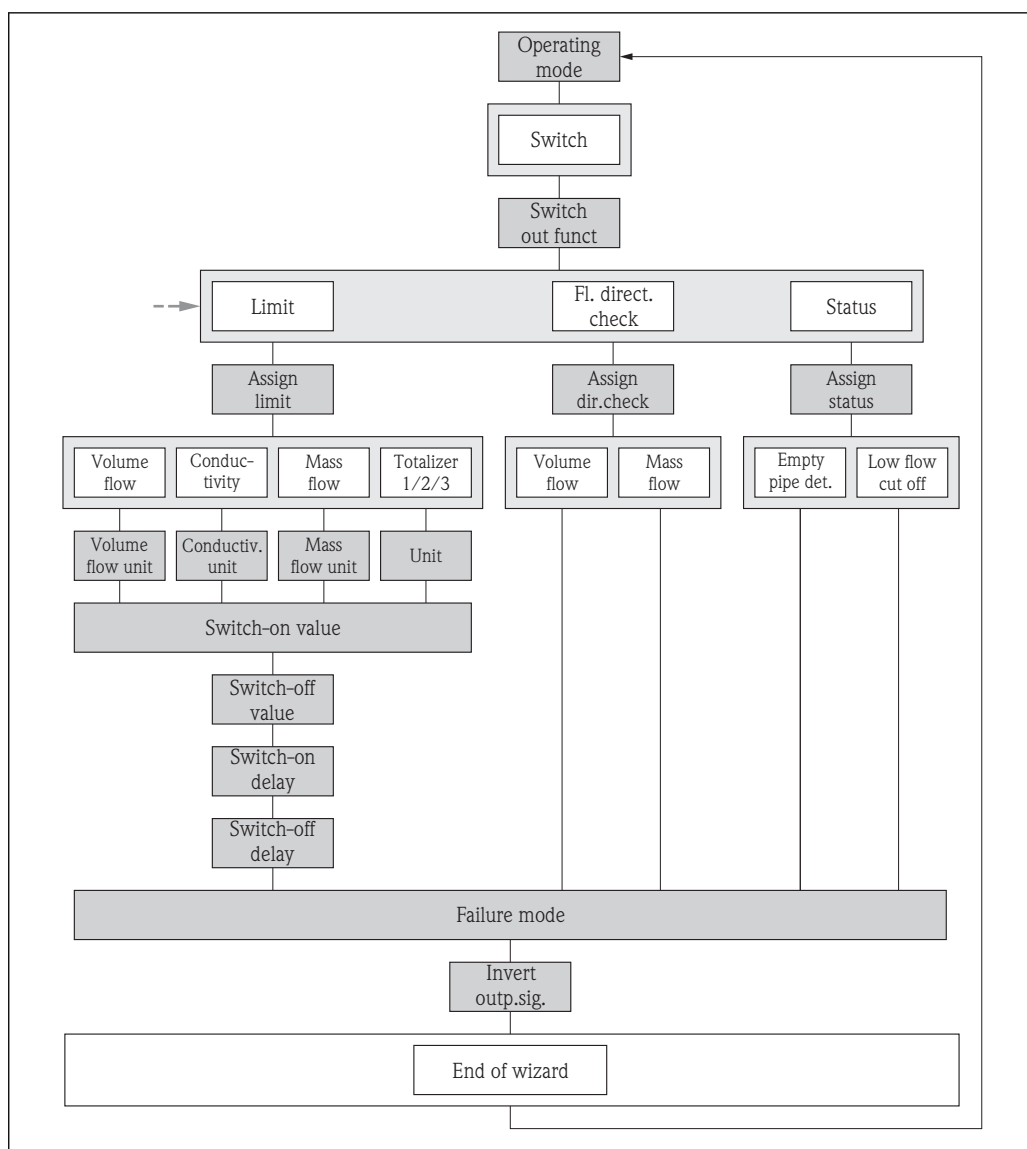

29 "Pulse/frequency/switch output 1 to 2" wizard in the "Setup" menu: "Operating mode" parameter "Switch" option (part 2)

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse
Switch output function	Select function for switch output.	■ Off ■ On ■ Diagnostic behavior ■ Limit ■ Flow direction check ■ Status	Off
Assign diagnostic behavior	Select diagnostic behavior for switch output.	■ Alarm ■ Alarm or warning ■ Warning	Alarm

Parameter	Description	Selection / User entry	Factory setting
Assign limit	Select process variable for limit function.	- Off - Volume flow - Mass flow - Flow velocity - Conductivity - Electronic temperature - Totalizer 1 - Totalizer 2 - Totalizer 3	Volume flow
Assign flow direction check	Select process variable for flow direction monitoring.	- Off - Volume flow - Mass flow	Volume flow
Assign status	Select device status for switch output.	- Empty pipe detection - Low flow cut off	Empty pipe detection
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - kg/h - lb/min
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - l/h - gal/min (us)
Conductivity unit	Select conductivity unit. <i>Result</i> The selected unit applies for: - Current output - Frequency output - Switch output - Simulation process variable	Unit choose list	μS/cm
Unit totalizer	Select process variable totalizer unit.	Unit choose list	l
Switch-on value	Enter measured value for the switch-on point.	Signed floating-point number	0 l/h
Switch-off value	Enter measured value for the switch-off point.	Signed floating-point number	0 l/h
Switch-on delay	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Switch-off delay	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	Define output behavior in alarm condition.	- Actual status - Open - Closed	Open
Invert output signal	Invert the output signal.	- No - Yes	No


10.5.5 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can be configured for configuring the local display.

Navigation

"Setup" menu → Display

Structure of the wizard

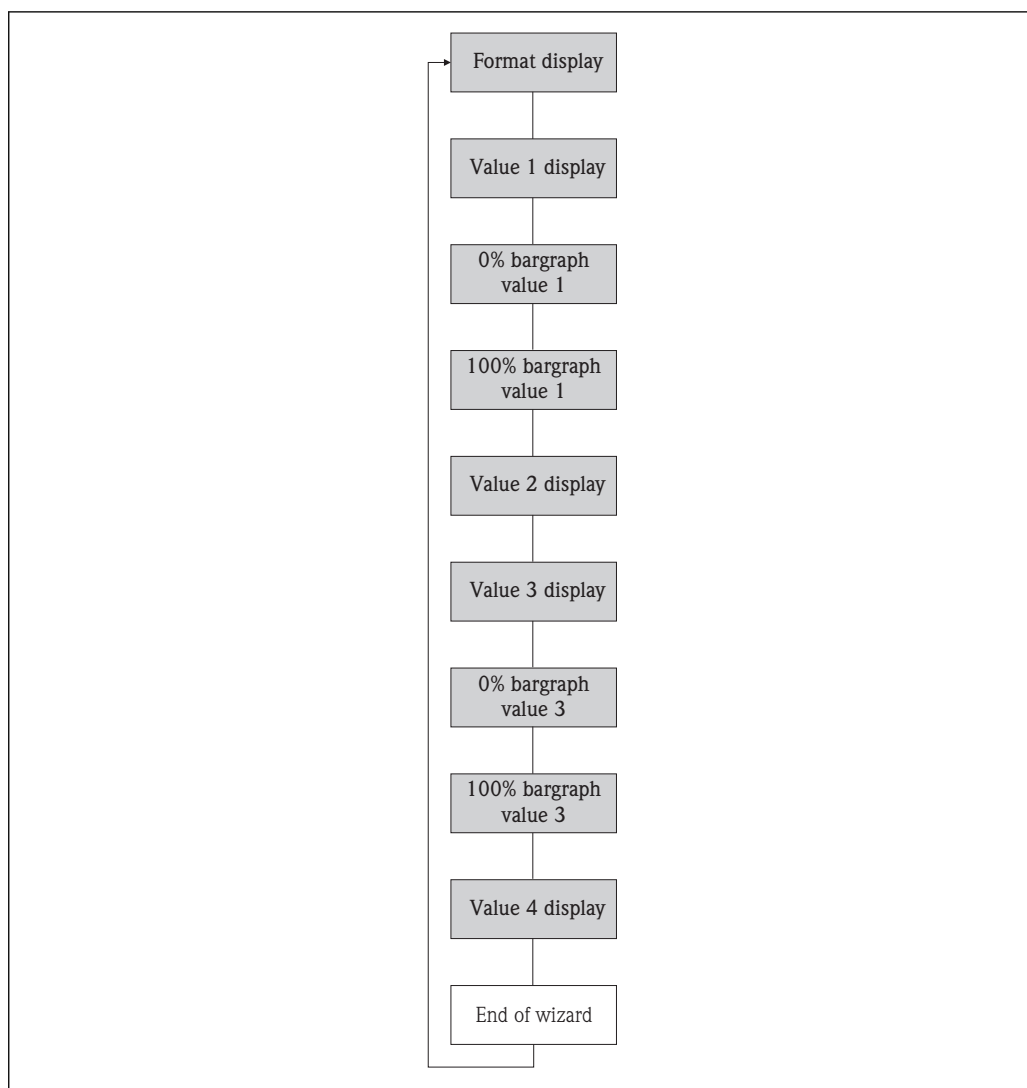

A0013797-EN

30 "Display" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	–	Select how measured values are shown on the display.	1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values	1 value, max. size
Value 1 display	–	Select the measured value that is shown on the local display.	- Volume flow - Mass flow - Conductivity - Temperature - Electronic temperature - Totalizer 1 - Totalizer 2 - Totalizer 3 - Current output 1	Volume flow

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
0% bargraph value 1	–	Enter 0% value for bar graph display.	Signed floating-point number	0 l/h
100% bargraph value 1	–	Enter 100% value for bar graph display.	Signed floating-point number	0.025 l/h
Value 2 display	–	Select the measured value that is shown on the local display.	Picklist (see 1st display value)	None
Value 3 display	–	Select the measured value that is shown on the local display.	Picklist (see 1st display value)	None
0% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	0
100% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	–	Select the measured value that is shown on the local display.	Picklist (see 1st display value)	None

10.5.6 Configuring the output conditioning


Navigation

"Setup" menu → Output conditioning

Navigation

"Setup" menu → Output conditioning

Structure of the "Output conditioning" wizard/"Output conditioning" submenu

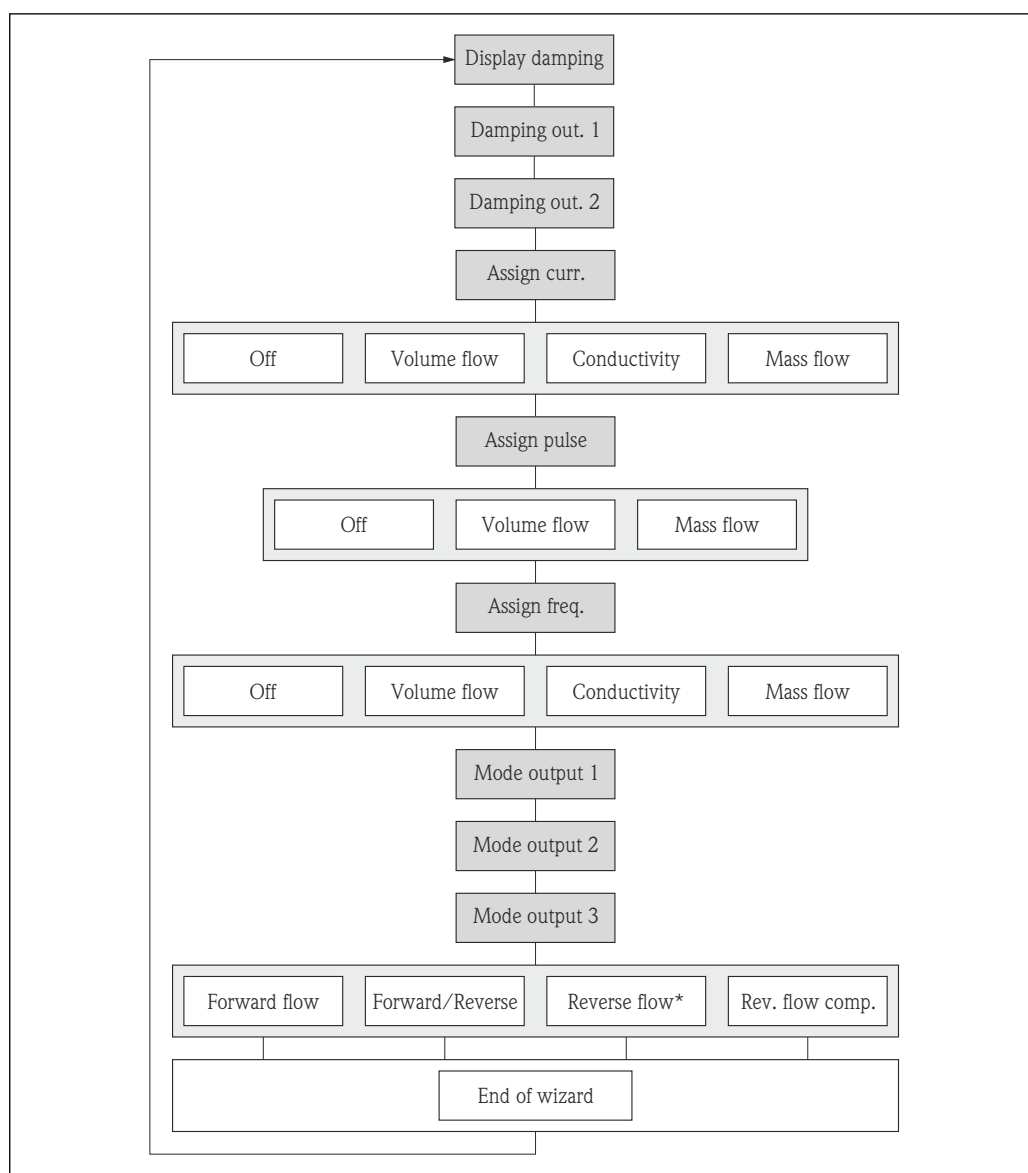

A0017459-EN

31 "Output conditioning" wizard in the "Setup" menu

Reverse flow* = option only for pulse and frequency output

Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Display damping	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Assign current output	Select process variable for current output.	- Off - Volume flow - Mass flow - Flow velocity - Conductivity - Electronic temperature	Volume flow
Damping output 1	Set reaction time for output signal to fluctuations in the measured value.	0 to 999.9 s	1 s
Measuring mode output 1	Select measuring mode for output.	- Forward flow - Forward/Reverse flow - Reverse flow compensation	Forward flow

Parameter	Description	User entry / Selection	Factory setting
Assign frequency output	Select process variable for frequency output.	- Off - Volume flow - Mass flow - Flow velocity - Conductivity - Electronic temperature	Off
Damping output 1	Set reaction time for output signal to fluctuations in the measured value.	0 to 999.9 s	1 s
Measuring mode output 1	Select measuring mode for output.	- Forward flow - Forward/Reverse flow - Reverse flow - Reverse flow compensation	Forward flow
Assign pulse output	Select process variable for pulse output.	- Off - Volume flow - Mass flow	Off
Measuring mode output 1	Select measuring mode for output.	- Forward flow - Forward/Reverse flow - Reverse flow - Reverse flow compensation	Forward flow
Assign frequency output	Select process variable for frequency output.	- Off - Volume flow - Mass flow - Flow velocity - Conductivity - Electronic temperature	Off
Damping output 1	Set reaction time for output signal to fluctuations in the measured value.	0 to 999.9 s	1 s
Measuring mode output 1	Select measuring mode for output.	- Forward flow - Forward/Reverse flow - Reverse flow - Reverse flow compensation	Forward flow
Assign pulse output	Select process variable for pulse output.	- Off - Volume flow - Mass flow	Off
Measuring mode output 1	Select measuring mode for output.	- Forward flow - Forward/Reverse flow - Reverse flow - Reverse flow compensation	Forward flow


10.5.7 Configuring the low flow cut off

The **Low flow cut off** wizard guides you systematically through all the parameters that have to be set for configuring the low flow cut off.

Navigation

"Setup" menu → Low flow cut off

Structure of the wizard

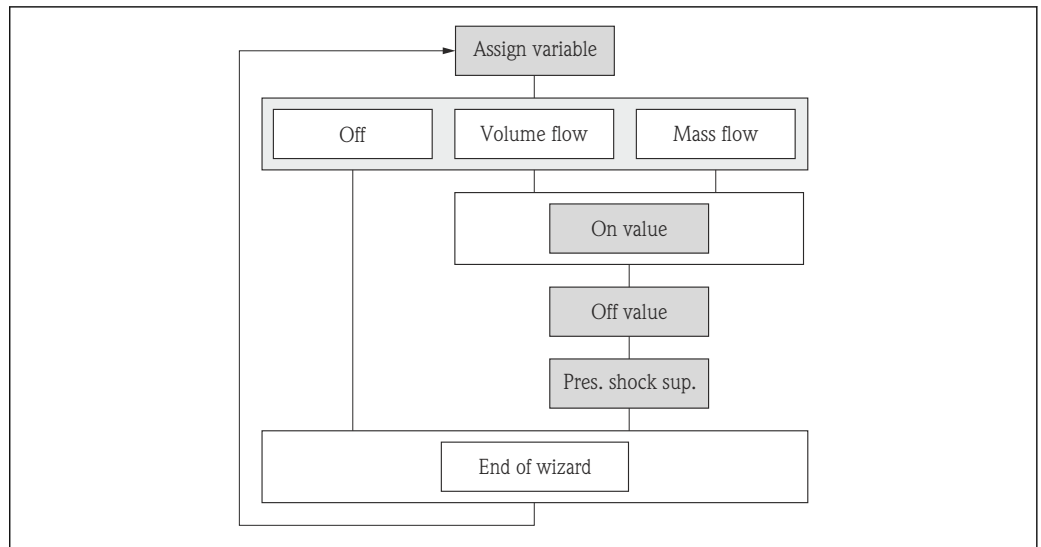

A0020524-EN

32 "Low flow cut off" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Assign process variable	Select process variable for low flow cut off.	- Off - Volume flow - Mass flow	Volume flow
On value low flow cutoff	Enter on value for low flow cut off.	Signed floating-point number	0 l/h
Off value low flow cutoff	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s


10.5.8 Configuring empty pipe detection

The **Empty pipe detection** wizard guides you systematically through all the parameters that have to be set for configuring empty pipe detection.

Navigation

"Setup" menu → Empty pipe detection

Structure of the wizard

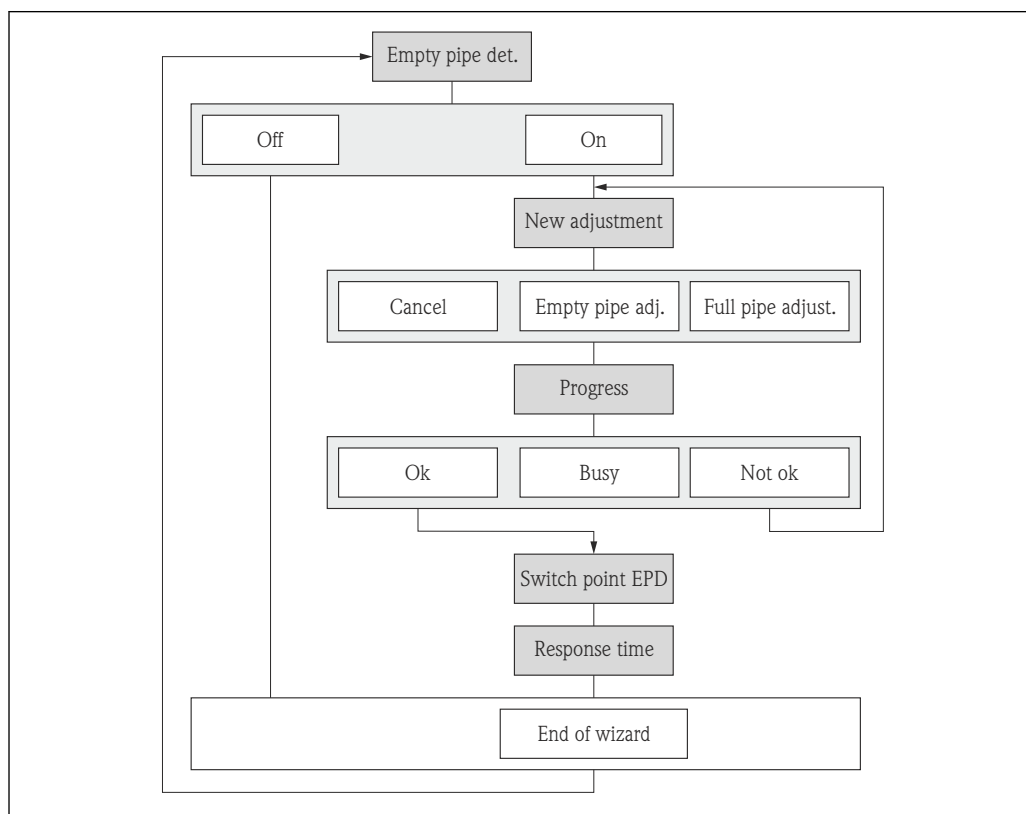

A0017210-EN

33 "Empty pipe detection" wizard in the "Setup" menu

Parameter overview with brief description


Parameter	Description	Selection / User interface / User entry	Factory setting
Empty pipe detection	Switch empty pipe detection on and off.	■ Off ■ On	Off
New adjustment	Select type of adjustment.	■ Cancel ■ Empty pipe adjust ■ Full pipe adjust	Cancel
Progress		■ Ok ■ Busy ■ Not ok	
Switch point empty pipe detection	Enter hysteresis in %, below this value the measuring tube will be detected as empty.	0 to 100 %	50 %
Response time empty pipe detection	Enter the time before diagnostic message S862 "Pipe empty" is displayed for empty pipe detection.	0 to 100 s	1 s

10.5.9 Configuring the HART input

The **HART input** submenu contains all the parameters that must be configured for the configuration of the HART input.

Navigation

"Setup" menu → HART input

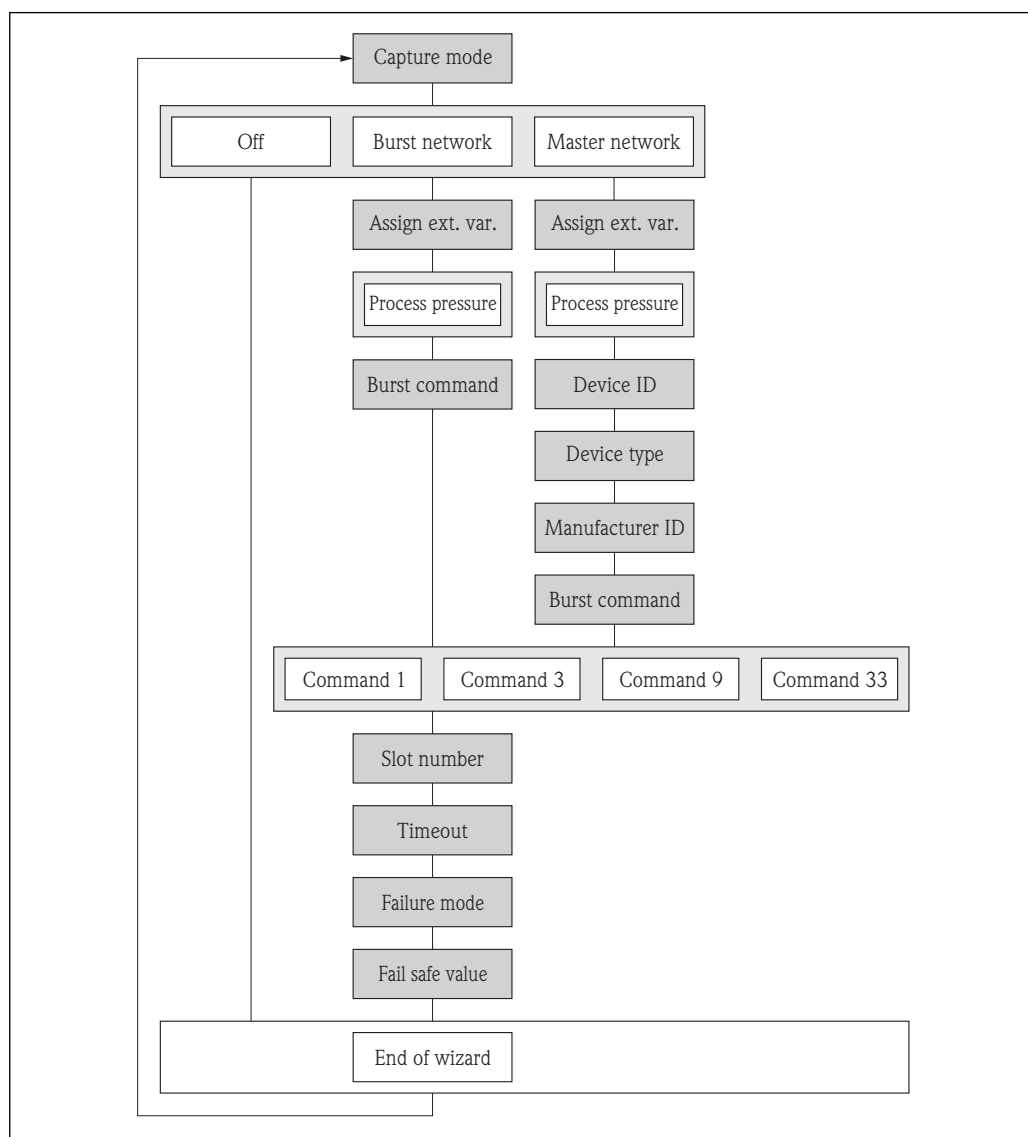

A0016338-EN

34 "HART input" wizard in the "Setup" menu

Parameter overview with brief description


Parameter	Description	Selection / User entry	Factory setting
Capture mode	Select capture mode via burst or master communication.	■ Off ■ Burst network ■ Master network	Off
Device ID	Enter device ID of external device.	Positive integer	0
Device type	Enter device type of external device.	0 to 255	0
Manufacturer ID	Enter manufacture ID of external device.	0 to 255	0

Parameter	Description	Selection / User entry	Factory setting
Burst command	Select command to read in external process variable.	■ Command 1 ■ Command 3 ■ Command 9 ■ Command 33	Command 1
Slot number	Define position of external process variable in burst command.	1 to 4	1
Timeout	Enter deadline for process variable of external device.  If the deadline is exceeded, diagnostic message F410 data transmission is output.	1 to 120 s	5 s
Failure mode	Define behavior if external process variable is missed.	■ Alarm ■ Last valid value ■ Defined value	Alarm
Failure value	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

10.6 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

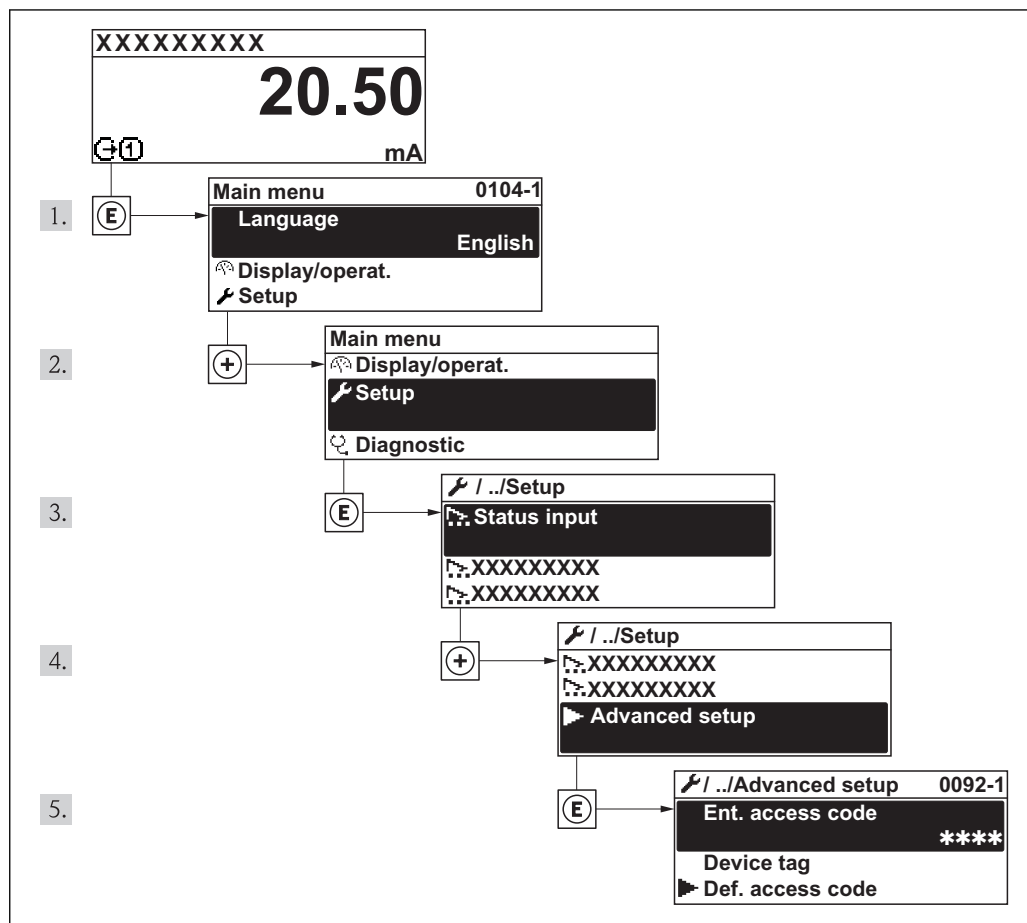

A0017519-EN

35 Taking the example of the local display

Navigation

"Setup" menu → Advanced setup

► Advanced setup

Enter access code

► System units

Volume flow unit

Volume unit

Conductivity unit

Temperature unit

Mass flow unit

Mass unit

Density unit

► Sensor adjustment

Installation direction

► Totalizer 1 to 3

Assign process variable

Unit totalizer

Totalizer operation mode

Failure mode

► Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Decimal places 1

Value 2 display

Decimal places 2

Value 3 display

0% bargraph value 3

100% bargraph value 3

Decimal places 3

Value 4 display

Decimal places 4

Display language

Display interval
Display damping
Header
Header text
Separator
Backlight
► Electrode cleaning circuit
Electrode cleaning circuit
ECC duration
ECC recovery time
ECC cleaning cycle
ECC Polarity
► Administration
► Define access code
Define access code
Confirm access code
Device reset

10.6.1 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

Navigation

"Setup" menu → Advanced setup → System units

► System units
Volume flow unit
Volume unit
Conductivity unit

Temperature unit
Mass flow unit
Mass unit
Density unit

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - l/h - gal/min (us)
Volume unit	Select volume unit. Result The selected unit is taken from: Volume flow unit parameter	Unit choose list	Country-specific: - l - gal (us)
Conductivity unit	Select conductivity unit. <i>Result</i> The selected unit applies for: - Current output - Frequency output - Switch output - Simulation process variable	Unit choose list	µS/cm
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: - Output - Reference temperature - Simulation process variable	Unit choose list	Country-specific: °C (Celsius) °F (Fahrenheit)
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - kg/h - lb/min
Mass unit	Select mass unit. <i>Result</i> The selected unit is taken from: Mass flow unit parameter	Unit choose list	Country-specific: - kg - lb
Density unit	Select density unit. <i>Result</i> The selected unit applies for: - Output - Simulation process variable - Density adjustment (in Expert menu)	Unit choose list	Country-specific: - kg/l - lb/ft³

10.6.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

▶ Sensor adjustment

Installation direction

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	■ Flow in arrow direction ■ Flow against arrow direction	Flow in arrow direction

10.6.3 Configuring the totalizer

In the **"Totalizer 1 to 3"** submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to 3

▶ Totalizer 1 to 3

Assign process variable

Unit totalizer

Totalizer operation mode

Failure mode

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Assign process variable	Select process variable for totalizer.	■ Off ■ Volume flow ■ Mass flow	Volume flow
Unit totalizer	Select process variable totalizer unit.	Unit choose list	l
Totalizer operation mode	Select totalizer calculation mode.	■ Net flow total ■ Forward flow total ■ Reverse flow total	Net flow total
Failure mode	Define totalizer behavior in alarm condition.	■ Stop ■ Actual value ■ Last valid value	Stop

10.6.4 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu → Advanced setup → Display

▶ Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Decimal places 1

Value 2 display

Decimal places 2

Value 3 display

0% bargraph value 3

100% bargraph value 3

Decimal places 3

Value 4 display

Decimal places 4

Display language

Display interval

Display damping

Header

Header text

Separator

Backlight

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	–	Select how measured values are shown on the display.	1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values	1 value, max. size
Value 1 display	–	Select the measured value that is shown on the local display.	- Volume flow - Mass flow - Conductivity - Temperature - Electronic temperature - Totalizer 1 - Totalizer 2 - Totalizer 3 - Current output 1	Volume flow
0% bargraph value 1	–	Enter 0% value for bar graph display.	Signed floating-point number	0 l/h
100% bargraph value 1	–	Enter 100% value for bar graph display.	Signed floating-point number	0.025 l/h
Decimal places 1	–	Select the number of decimal places for the display value.	- x - x.x - x.xx - x.xxx - x.xxxx	x.xx
Value 2 display	–	Select the measured value that is shown on the local display.	Picklist (see 1st display value)	None
Decimal places 2	–	Select the number of decimal places for the display value.	- x - x.x - x.xx - x.xxx - x.xxxx	x.xx
Value 3 display	–	Select the measured value that is shown on the local display.	Picklist (see 1st display value)	None
0% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	0
100% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	–	Select the number of decimal places for the display value.	- x - x.x - x.xx - x.xxx - x.xxxx	x.xx
Value 4 display	–	Select the measured value that is shown on the local display.	Picklist (see 1st display value)	None
Decimal places 4	–	Select the number of decimal places for the display value.	- x - x.x - x.xx - x.xxx - x.xxxx	x.xx

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Display language	–	Set display language.	■ English ■ Deutsch ■ Français ■ Español ■ Italiano ■ Nederlands ■ Portuguesa ■ Polski ■ русский язык (Russian) ■ Svenska ■ Türkçe ■ 中文 (Chinese) ■ 日本語 (Japanese) ■ 한국어 (Korean) ■ العربية (Arabic) ■ Bahasa Indonesia ■ ภาษาไทย (Thai) ■ tiếng Việt (Vietnamese) ■ čeština (Czech)	English (alternatively, the ordered language is preset in the device)
Display interval	–	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	–	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	–	Select header contents on local display.	■ Device tag ■ Free text	Device tag
Header text	–	Enter display header text.		-----
Separator	–	Select decimal separator for displaying numerical values.	■ . ■ ,	.
Backlight	–	Switch the local display backlight on and off.  Only for device version with onsite display SD03 (touch control)	■ Disable ■ Enable	Enable

10.6.5 Performing electrode cleaning

The **Electrode cleaning circuit** wizard guides you systematically through all the parameters that have to be set for configuring electrode cleaning.

 The wizard only appears if the device was ordered with an electrode cleaning circuit.

Navigation

"Setup" menu → Advanced setup → Electrode cleaning circuit

▶ Electrode cleaning circuit

Electrode cleaning circuit

ECC duration

ECC recovery time

ECC cleaning cycle
ECC Polarity

Parameter overview with brief description

Parameter	Description	Selection / User entry / User interface	Factory setting
Electrode cleaning circuit	Enable the cyclic electrode cleaning circuit.	- Off - On	Off
ECC duration	Enter the duration of electrode cleaning in seconds.	0.01 to 30 s	2 s
ECC recovery time	Define recovery time after electrode cleaning. During this time the current output values will be held at last valid value.	1 to 3.0 ⁺³⁸ s	5 s
ECC cleaning cycle	Enter the pause duration between electrode cleaning cycles.	0.5 to 168 h	40 min
ECC Polarity	Select the polarity of the electrode cleaning circuit.	- Positive - Negative	Depends on the electrode material

10.6.6 Administration configuration

The **Administration** submenu contains administrative parameters.

Navigation

"Setup" menu → Advanced setup → Administration

► Administration
Define access code
Device reset

Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes via the local display.	0 to 9999	0
Device reset	Restart or reset device manually.	- Cancel - To delivery settings - Restart device	Cancel

10.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup display** submenu.

Navigation

"Setup" menu → Advanced setup → Configuration backup display

▶ Configuration backup display

Operating time

Last backup

Configuration management

Comparison result

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection	Factory setting
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m), seconds (s)	–
Last backup	–	Indicates when the last data backup was saved to the display module.	Days (d), hours (h), minutes (m), seconds (s)	–
Configuration management	A local display is provided.	Select action for managing the device data in the display module.	■ Cancel ■ Execute backup ■ Restore ■ Duplicate ■ Compare ■ Clear backup data	Cancel
Comparison result	–	Comparison between present device data and display backup.	■ Settings identical ■ Settings not identical ■ No backup available ■ Backup settings corrupt ■ Check not done ■ Dataset incompatible	Check not done

10.7.1 Function range of "Configuration management" parameter

Options	Description
Execute backup	The current device configuration is backed up from the integrated HistoROM to the device's display module. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the display module to the device's integrated HistoROM. The backup copy includes the transmitter data of the device.
Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.

Options	Description
Compare	The device configuration saved in the display module is compared with the current device configuration of the integrated HistoROM.
Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.

 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.8 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

 The parameters displayed depend on:

- The selected device order
- The set operating mode of the pulse/frequency/switch outputs

Navigation

"Diagnostics" menu → Simulation

► Simulation

Assign simulation process variable

Value process variable

Simulation status input

Input signal level

Simulation current output 1

Value current output 1

Frequency simulation 1 to 2

Frequency value 1 to 2

Pulse simulation 1 to 2

Pulse value 1 to 2

Switch output simulation 1 to 2

Switch status 1 to 2

Simulation device alarm

Diagnostic event category
Simulation diagnostic event

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	- Off - Volume flow - Mass flow - Conductivity	Off
Value process variable	A process variable is selected in the Assign simulation process variable parameter.	Enter the simulation value for the selected process variable.	Signed floating-point number	0
Simulation status input	–	Switch simulation of the status input on and off.	- Off - On	Off
Input signal level	–	Select the signal level for the simulation of the status input.	- High - Low	High
Simulation current output 1	–	Switch simulation of the current output on and off.	- Off - On	Off
Value current output 1	The On option is selected in the Current output simulation parameter.	Enter the current value for simulation.	$3.59 \cdot 10^{-3}$ to $22.5 \cdot 10^{-3}$ mA	3.59 mA
Frequency simulation 1 to 2	–	Switch simulation of the frequency output on and off.	- Off - On	Off
Frequency value 1 to 2	The On option is selected in the Frequency output simulation parameter.	Enter the frequency value for simulation.	0.0 to 12 500.0 Hz	0.0 Hz
Pulse simulation 1 to 2	The Down-count. val. option is selected in the Simulation pulse output parameter.	Switch simulation of the pulse output on and off.  If the Fixed value option is selected, the Pulse width parameter defines the pulse width of the pulses output.	- Off - Fixed value - Down-counting value	Off
Pulse value 1 to 2	The Down-count. val. option is selected in the Simulation pulse output parameter.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation 1 to 2	–	Switch simulation of switch output on and off.	- Off - On	Off
Switch status 1 to 2	The On option is selected in the Switch output simulation parameter.	Select the status of the status output for the simulation.	- Open - Closed	Open
Simulation device alarm	–	Switch the device alarm on and off.	- Off - On	Off

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Diagnostic event category	–	Select the category of the diagnostic event.	■ Sensor ■ Electronics ■ Configuration ■ Process	Process
Simulation diagnostic event	–	Switch simulation of the diagnostic event on and off. For the simulation, you can choose from the diagnostic events of the category selected in the Diagnostic event category parameter.	■ Off ■ Picklist Diagnostic events (depends on the selected category)	Off

10.9 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code for the local display and Web browser
- Write protection via write protection switch
- Write protection via keypad lock → 62

10.9.1 Write protection via access code

The effects of the customer-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are write-protected and their values can no longer be changed.
- Device access via the Web browser is protected, as are the parameters for the measuring device configuration.

Navigation

"Setup" menu → Advanced setup → Administration → Define access code

► Define access code

Define access code

Confirm access code

Defining the access code via local display

1. Navigate to the **Enter access code** parameter.
2. Max. Define a max. 4-digit numeric code as an access code.
3. Enter the access code again to confirm the code.
 - ↳ The -symbol appears in front of all write-protected parameters.


The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected

parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

-  If write access is activated via access code, it can be also be deactivated only via the access code → 62.
- The user role with which the user is currently logged on via the local display → 62 is indicated by the **Access status display** parameter. Navigation path: "Operation" menu → Access status display

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from write protection via the local display. Despite the defined access code, these parameters can always be modified even if the other parameters are locked.

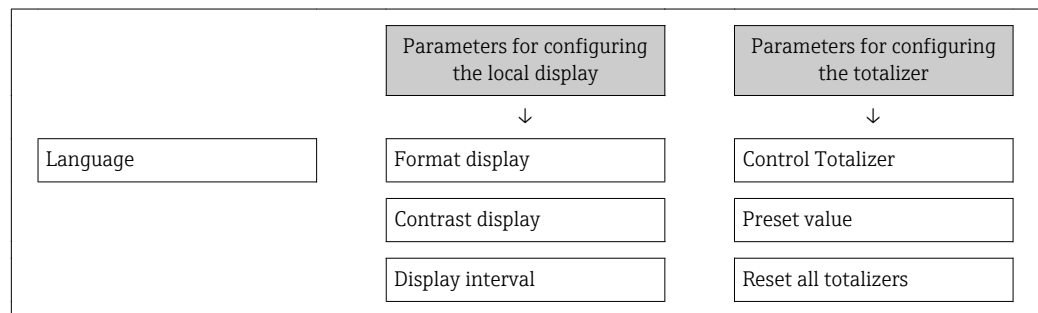

Defining the access code via the Web browser

1. Navigate to the **"Enter access code" parameter**.
2. Max. Define a max. 4-digit numeric code as an access code.
3. Enter the access code again to confirm the code.
 - ↳ The Web browser switches to the login page.

 If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

 The user role with which the user is currently logged on via the Web browser is indicated by the **Access status tooling** parameter.


Navigation path: "Operation" menu → Access status tooling

10.9.2 Write protection via write protection switch

Unlike write protection via a user-specific access code, this allows write access to the entire operating menu - other than the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via service interface (CDI-RJ45)
- Via HART protocol

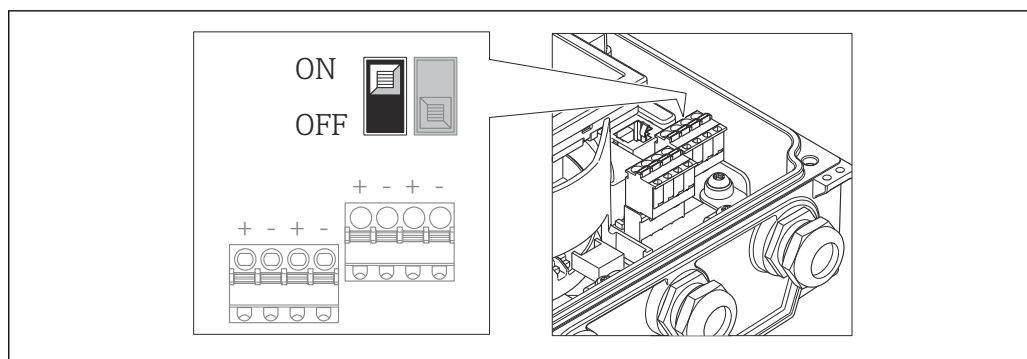

A0017260

1. Loosen the 4 fixing screws on the housing cover and open the housing cover.
2. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables the hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables the hardware write protection.
 - ↳ If hardware write protection is enabled, the **Locking status** parameter displays the **Hardware locked** option. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

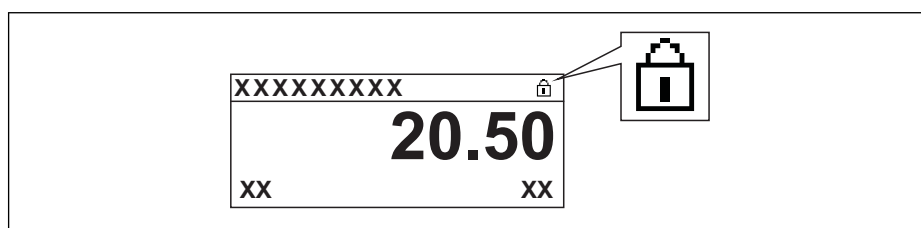

A0015870

If hardware write protection is disabled, no option is displayed in the **Locking status** parameter. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

3. **WARNING!** Excessive tightening torque applied to the fixing screws! Risk of damaging the plastic transmitter. Tighten the fixing screws as per the tightening torque →  32.

Reverse the removal procedure to reassemble the transmitter.

11 Operation

11.1 Reading the device locking status

The write protection types that are currently active can be determined using the **Locking status** parameter.

Navigation

"Operation" menu → Locking status

Function scope of "Locking status" parameter

Options	Description
None	The access status displayed in " Access status display " parameter applies →  62. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters .
Temporarily locked	Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

Information →  75



For information on the operating languages supported by the measuring device
→  176

11.3 Configuring the display

- Basic settings for local display →  92
- Advanced settings for local display →  106

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

11.4.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for every process variable.

Navigation

"Diagnostics" menu → Measured values → Process variables

► Process variables

Volume flow

Mass flow

Conductivity

Parameter overview with brief description

Parameter	Description	User interface
Volume flow	Displays the volume flow currently measured.	Signed floating-point number
Mass flow	Displays the mass flow currently calculated.	Signed floating-point number
Conductivity	Displays the corrected volume flow currently calculated.	Signed floating-point number

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer

► Totalizer

Totalizer value 1 to 3

Totalizer overflow 1 to 3

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface	Factory setting
Totalizer value 1 to 3	In the Assign process variable parameter in the Totalizer 1 to 3 submenu, one of the following options is selected: - Volume flow - Mass flow	Displays the current totalizer counter value.	Signed floating-point number	01
Totalizer overflow 1 to 3	In the Assign process variable parameter in the Totalizer 1 to 3 submenu, one of the following options is selected: - Volume flow - Mass flow	Displays the current totalizer overflow.	Integer with sign	0

11.4.3 Input values

The **Input values** submenu guides you systematically to the individual input values.

 The submenu only appears if the device was ordered with a status input → 38..

Navigation

"Diagnostics" menu → Measured values → Input values

Structure of the submenu

► Input values

Value status input

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Value status input	Displays the current input signal level.	- High - Low	Low

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.



The parameters displayed depend on:

- The selected device order
- The set operating mode of the pulse/frequency/switch outputs

Navigation

"Diagnostics" menu → Measured values → Output values

► Output values

Output current 1

Measured current 1

Pulse output 1

Output frequency 1

Switch status 1

Output frequency 2

Pulse output 2

Switch status 2

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Output current 1	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA	3.59 mA
Measured current 1	Displays the current value currently measured for the current output.	0 to 30 mA	0 mA
Pulse output 1	Displays the value currently measured for the pulse output.	Positive floating-point number	0 Hz
Output frequency 1	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz	0.0 Hz
Switch status 1	Displays the current switch output status.	- Open - Closed	Open
Output frequency 1	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz	0.0 Hz

Parameter	Description	User interface	Factory setting
Pulse output 1	Displays the value currently measured for the pulse output.	Positive floating-point number	0 Hz
Switch status 1	Displays the current switch output status.	- Open - Closed	Open

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu
- Advanced settings using the **Advanced setup** submenu

11.6 Performing a totalizer reset

In the **Operation** submenu the totalizers are reset:

- Control Totalizer
- Reset all totalizers

Function scope of "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize	The totalizer is set to the defined start value in Preset value parameter and the totaling process is restarted.

Function scope of "Reset all totalizers" parameter

Options	Description
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

Navigation

"Operation" menu → Operation

► Totalizer handling

Control Totalizer 1 to 3

Preset value 1 to 3

Reset all totalizers

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Control Totalizer 1 to 3	Control totalizer value.	- Totalize - Reset + hold - Preset + hold - Reset + totalize - Preset + totalize	Totalize
Preset value 1 to 3	Specify start value for totalizer.	Signed floating-point number	0 l
Reset all totalizers	Reset all totalizers to 0 and start.	- Cancel - Reset + totalize	Cancel


11.7 Showing data logging

In the device, the extended function of the HistoROM must be enabled (order option) so that the **Data logging** submenu appears. This contains all the parameters for the measured value history.

 The data logging history is also available via the FieldCare plant asset management tool →  68.

Function scope

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

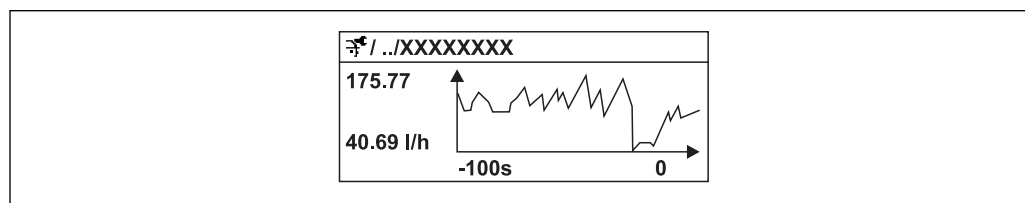

A0016222

 36 Chart of a measured value trend


- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

 If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu → Data logging

"Data logging" submenu

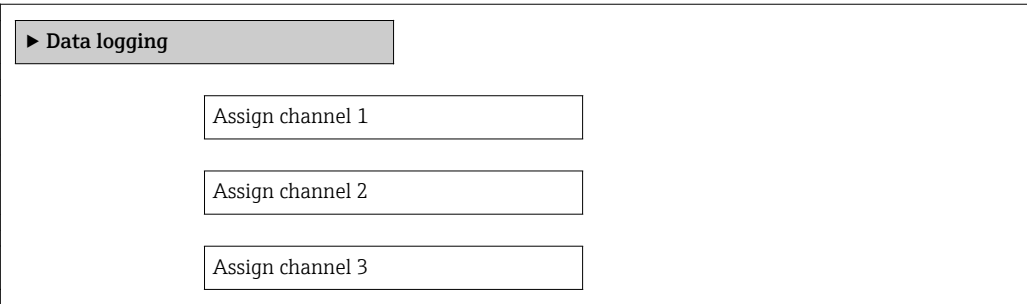

The figure shows the 'Data logging' submenu interface. At the top, there is a header bar with the text '► Data logging'. Below this, there are three input fields, each with a label 'Assign channel 1', 'Assign channel 2', and 'Assign channel 3' respectively. The fields are arranged vertically and are empty, suggesting they are for user input.

Assign channel 4

Logging interval

Clear logging data

► Display channel 1

► Display channel 2

► Display channel 3

► Display channel 4

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Assign channel 1 to 4	Assign process variable to logging channel.	■ Off ■ Volume flow ■ Mass flow ■ Flow velocity ■ Conductivity ■ Electronic temperature ■ Current output 1	Off
Logging interval	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	10.0 s
Clear logging data	Clear the entire logging data.	■ Cancel ■ Clear data	Cancel

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Problem	Possible causes	Remedial action
Local display dark and no output signals	Supply voltage does not match that specified on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the main electronics module correctly.	Check terminals.
Local display dark and no output signals	Main electronics module is defective.	Order spare part → 142.
Local display dark and no output signals	The connector between the main electronics module and display module is not plugged in correctly.	Check the connection and correct if necessary.
Local display dark and no output signals	The connecting cable is not plugged in correctly.	1. Check the connection of the electrode cable and correct if necessary. 2. Check the connection of the coil current cable and correct if necessary.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	- Set the display brighter by simultaneously pressing $\boxplus$ + $\boxminus$. - Set the display darker by simultaneously pressing $\boxminus$ + $\boxplus$.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 142.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 131
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	- Press $\boxminus$ + $\boxplus$ for 2 s ("home position"). - Press $\boxminus$. - Set the desired language in the Language parameter.
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	- Check the cable and the connector between the main electronics module and display module. - Order spare part → 142.

For output signals

Problem	Possible causes	Remedial action
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 142.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	- Check and correct parameter configuration. - Observe limit values specified in the "Technical Data".

For access

Problem	Possible causes	Remedial action
No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position .
No write access to parameters	Current user role has limited access authorization	1. Check user role → 62. 2. Enter correct customer-specific access code → 62.
No connection via HART protocol	Missing or incorrectly installed communication resistor.	Install the communication resistor (250 Ω) correctly. Observe the maximum load .
No connection via HART protocol	Commubox - Connected incorrectly - Configured incorrectly - Drivers not installed correctly - USB interface on computer configured incorrectly	Observe the documentation for the Commubox.  FXA195 HART: Document "Technical Information" TI00404F
Not connecting to Web server	Incorrect IP address	Check the IP address: 192.168.1.212 → 64
Not connecting to Web server	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) → 64. 2. Check the network settings with the IT manager.
Not connecting to Web server	Web server disabled	Via the "FieldCare" operating tool check whether the Web server of the measuring device is enabled and enable it if necessary → 66.
No or incomplete display of contents in the Web browser	- JavaScript not enabled - JavaScript cannot be enabled	1. Enable JavaScript. 2. Enter http://192.168.1.212/basic.html as the IP address.
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
Web browser frozen and operation no longer possible	Connection lost	1. Check cable connection and power supply. 2. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	1. Use the correct Web browser version → 63. 2. Clear the Web browser cache and restart the Web browser.
Content of Web browser incomplete or difficult to read	Unsuitable view settings.	Change the font size/display ratio of the Web browser.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Various light emitting diodes (LEDs) on the main electronics module of the transmitter provide information on device status.


LED	Color	Meaning
Power	Off	Supply voltage is off or too low
	Green	Supply voltage is ok
Link/Activity	Orange	Link available but no activity
	Flashing orange	Activity present

LED	Color	Meaning
Communication	Flashing white	HART communication is active.
Alarm	Green	Measuring device is ok
	Flashing green	Measuring device not configured
	Off	Firmware error
	Red	Main error
	Flashing red	Error
	Flashing red/green	Start measuring device

12.3 Diagnostic information on local display

12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

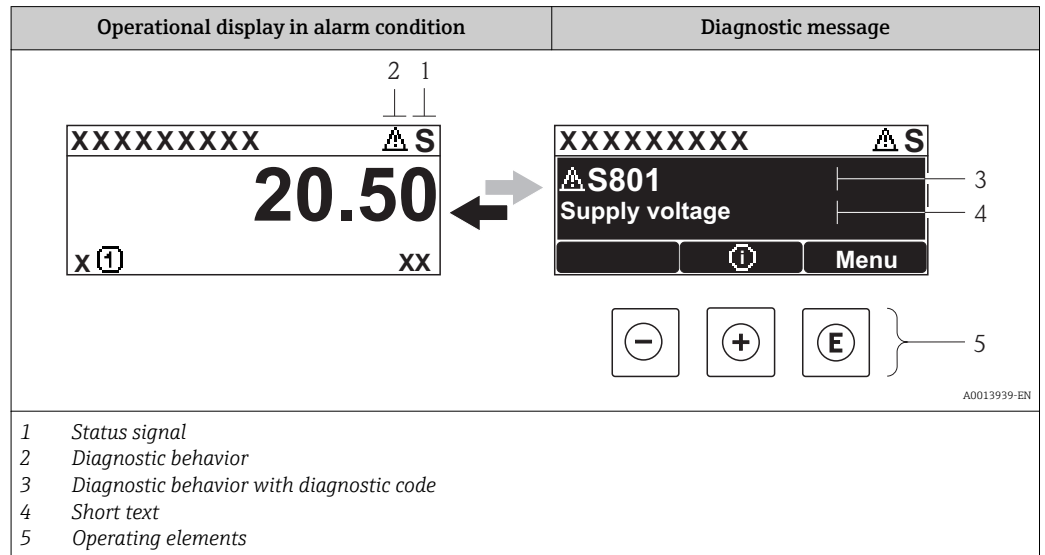

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- i** Other diagnostic events that have occurred can be called up in the **Diagnostics** menu:
- Via parameters → 134
 - Via submenus → 134

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

- i** The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
F A0013956	Failure A device error has occurred. The measured value is no longer valid.
C A0013959	Function check The device is in service mode (e.g. during a simulation).
S A0013958	Out of specification The device is operated: ■ Outside its technical specification limits (e.g. outside the process temperature range) ■ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)
M A0013957	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior

Symbol	Meaning
 A0013961	Alarm - Measurement is interrupted. - Signal outputs and totalizers assume the defined alarm condition. - A diagnostic message is generated. - The background lighting changes to red.
 A0013962	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.

Diagnostic information


The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

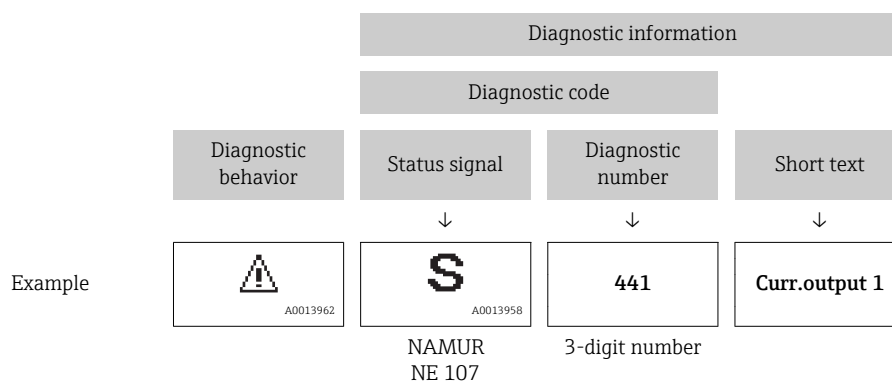

Operating elements

Key	Meaning
 A0013970	Plus key <i>In a menu, submenu</i> Opens the message about the remedial measures.
 A0013952	Enter key <i>In a menu, submenu</i> Opens the operating menu.

12.3.2 Calling up remedial measures

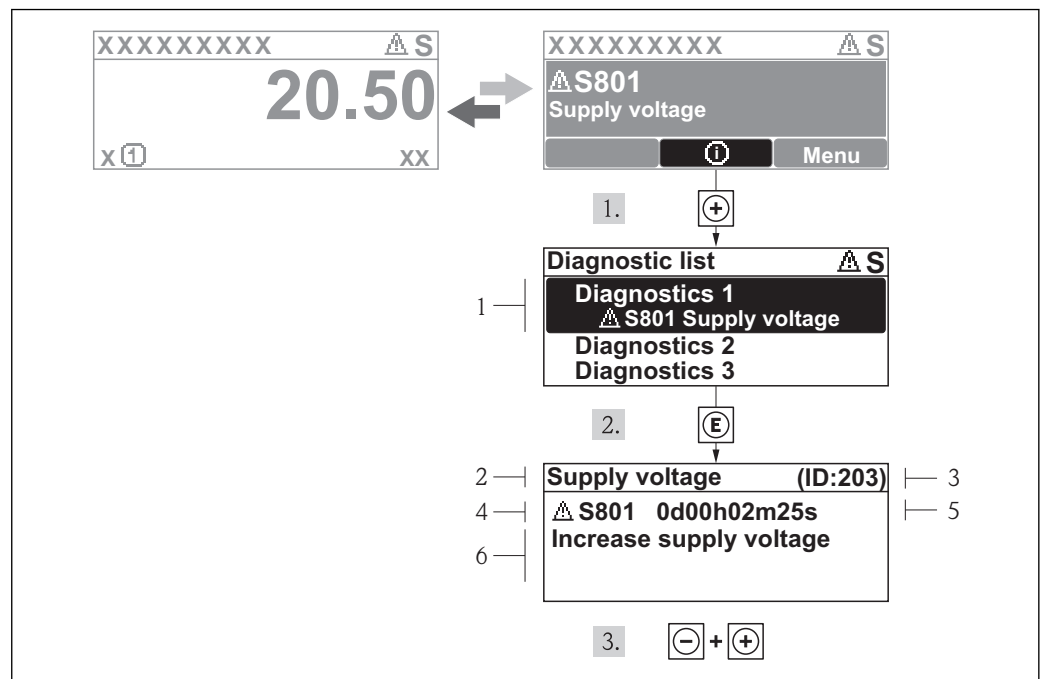

37 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press **+** (ⓘ symbol).
 - ↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **+** or **-** and press **E**.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press **-** + **+** simultaneously.
 - ↳ The message for the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or the **Previous diagnostics** parameter.

1. Press **E**.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **-** + **+** simultaneously.
 - ↳ The message for the remedial measures closes.

12.4 Diagnostic information in the Web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

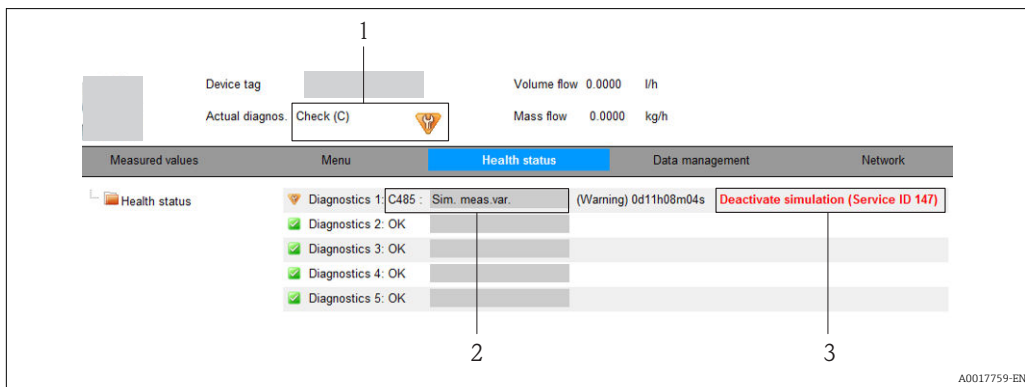

1 Status area with status signal

2 Diagnostic information → 126

3 Remedial measures with Service ID

A0017759-EN

i Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:

- Via parameters → 134
- Via submenus → 134

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
 A0017271	Failure A device error has occurred. The measured value is no longer valid.
 A0017278	Function check The device is in service mode (e.g. during a simulation).
 A0017277	Out of specification The device is operated: ▪ Outside its technical specification limits (e.g. outside the process temperature range) ▪ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)
 A0017276	Maintenance required Maintenance is required. The measured value is still valid.

i The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in FieldCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

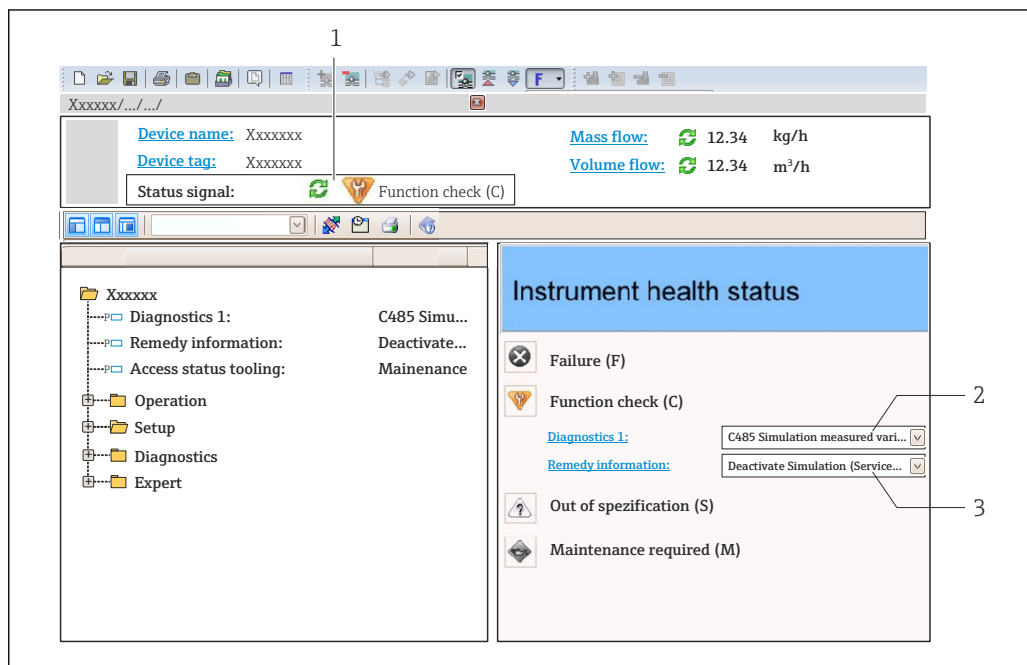


- 1 Status area with status signal → 125
- 2 Diagnostic information → 126
- 3 Remedial measures with Service ID

i Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:

- Via parameters → 134
- Via submenu → 134

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

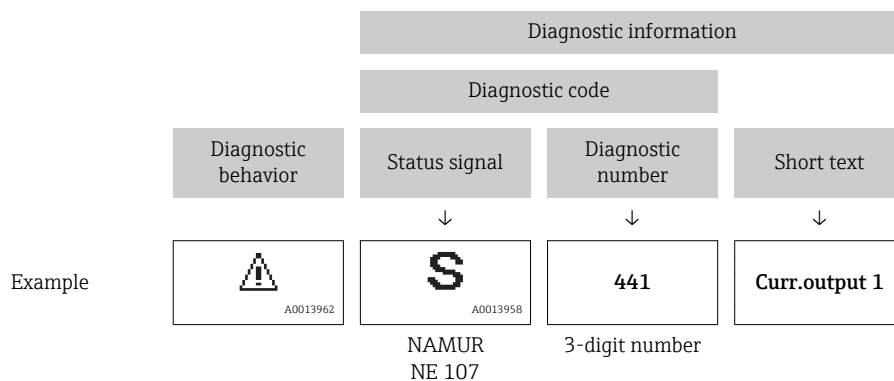

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.


1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
↳ A tool tip with remedy information for the diagnostic event appears.

12.6 Adapting the diagnostic information

12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for certain diagnostic information in the **Diagnostic behavior** submenu.

"Expert" menu → System → Diagnostic handling → Diagnostic behavior

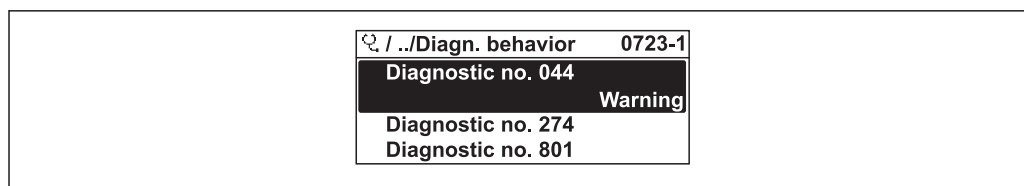

A0014048-EN

 38 Using the example of the local display

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description
Alarm	Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.
Warning	Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostics message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is entered in the Event logbook (events list) submenu only and is not displayed in alternation with the measured value display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

12.6.2 Adapting the status signal

Each item of diagnostic information is assigned a specific status signal at the factory. The user can change this assignment for certain diagnostic information in the **Diagnostic event category** submenu.

"Expert" menu → Communication → Diagnostic event category

Available status signals

Configuration as per HART 7 Specification (Condensed Status), in accordance with NAMUR NE107.

Symbol	Meaning
F A0013956	Failure A device error has occurred. The measured value is no longer valid.
C A0013959	Function check The device is in service mode (e.g. during a simulation).
S A0013958	Out of specification The device is operated: - Outside its technical specification limits (e.g. outside the process temperature range) - Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)
M A0013957	Maintenance required Maintenance is required. The measured value remains valid.
N A0023076	Has no effect on the condensed status.

12.7 Overview of diagnostic information

i The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

i In the case of some items of diagnostic information, the status signal and the diagnostic behavior can be changed. Adapt the diagnostic information → 130

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of sensor				
004	Sensor	1. Change sensor 2. Contact service	S	Alarm ¹⁾
022	Sensor temperature	1. Change main electronic module 2. Change sensor	F	Alarm
043	Sensor short circuit	1. Check sensor and cable 2. Change sensor or cable	S	Warning
062	Sensor connection	1. Check sensor connections 2. Contact service	F	Alarm
082	Data storage	1. Check module connections 2. Contact service	F	Alarm
083	Memory content	1. Restart device 2. Contact service	F	Alarm
190	Special event 1	Contact service	F	Alarm
Diagnostic of electronic				
201	Device failure	1. Restart device 2. Contact service	F	Alarm
222	Electronic drift	Change main electronic module	F	Alarm
242	Software incompatible	1. Check software 2. Flash or change main electronics module	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
252	Modules incompatible	1. Check electronic modules 2. Change electronic modules	F	Alarm
261	Electronic modules	1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	F	Alarm
262	Module connection	1. Check module connections 2. Change main electronics	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	1. Restart device 2. Change main electronic module	F	Alarm
272	Main electronic failure	1. Restart device 2. Contact service	F	Alarm
273	Main electronic failure	Change electronic	F	Alarm
281	Electronic initialization	Firmware update active, please wait!	F	Alarm
283	Memory content	1. Reset device 2. Contact service	F	Alarm
302	Device verification active	Device verification active, please wait.	C	Warning
311	Electronic failure	1. Reset device 2. Contact service	F	Alarm
311	Electronic failure	1. Do not reset device 2. Contact service	M	Warning
322	Electronic drift	1. Perform verification manually 2. Change electronic	S	Warning
375	I/O communication failed	1. Restart device 2. Change main electronic module	F	Alarm
382	Data storage	1. Insert DAT module 2. Change DAT module	F	Alarm
383	Memory content	1. Restart device 2. Check or change DAT module 3. Contact service	F	Alarm
390	Special event 2	Contact service	F	Alarm
Diagnostic of configuration				
410	Data transfer	1. Check connection 2. Retry data transfer	F	Alarm
411	Up-/download active	Up-/download active, please wait	C	Warning
431	Trim 1	Carry out trim	C	Warning
437	Configuration incompatible	1. Restart device 2. Contact service	F	Alarm
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	M	Warning
441	Current output 1	1. Check process 2. Check current output settings	S	Warning ¹⁾
442	Frequency output 1 to 2	1. Check process 2. Check frequency output settings	S	Warning ¹⁾
443	Pulse output 1 to 2	1. Check process 2. Check pulse output settings	S	Warning ¹⁾
453	Flow override	Deactivate flow override	C	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
484	Simulation failure mode	Deactivate simulation	C	Alarm
485	Simulation measured variable	Deactivate simulation	C	Warning
491	Simulation current output 1	Deactivate simulation	C	Warning
492	Simulation frequency output 1 to 2	Deactivate simulation frequency output	C	Warning
493	Simulation pulse output 1 to 2	Deactivate simulation pulse output	C	Warning
494	Switch output simulation 1 to 2	Deactivate simulation switch output	C	Warning
495	Simulation diagnostic event	Deactivate simulation	C	Warning
496	Simulation status input	Deactivate simulation status input	C	Warning
500	Electrode 1 potential exceeded	1. Check process cond. 2. Increase system pressure	F	Alarm
500	Electrode difference voltage too high	1. Check process cond. 2. Increase system pressure	F	Alarm
530	Electrode cleaning is running	1. Check process cond. 2. Increase system pressure	C	Warning
531	Empty pipe detection	Execute EPD adjustment	S	Warning ¹⁾
537	Configuration	1. Check IP addresses in network 2. Change IP address	F	Warning
540	Custody transfer mode failed	1. Deactivate custody transfer mode 2. Reactivate custody transfer mode	F	Alarm
590	Special event 3	Contact service	F	Alarm
Diagnostic of process				
803	Current loop	1. Check wiring 2. Change I/O module	F	Alarm
832	Electronic temperature too high	Reduce ambient temperature	S	Warning ¹⁾
833	Electronic temperature too low	Increase ambient temperature	S	Warning ¹⁾
834	Process temperature too high	Reduce process temperature	S	Warning ¹⁾
835	Process temperature too low	Increase process temperature	S	Warning ¹⁾
842	Process limit	Low flow cut off active! 1. Check low flow cut off configuration	S	Warning
862	Empty pipe	1. Check for gas in process 2. Adjust empty pipe detection	S	Warning ¹⁾
882	Input signal	1. Check input configuration 2. Check external device or process conditions	F	Alarm
937	EMC interference	Change main electronic module	S	Warning ¹⁾

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
938	EMC interference	1. Check ambient conditions regarding EMC influence 2. Change main electronic module	F	Alarm
990	Special event 4	Contact service	F	Alarm

1) Diagnostic status is changeable.

12.8 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

 To call up the measures to rectify a diagnostic event:


- Via local display →  127
- Via Web browser →  128
- Via "FieldCare" operating tool →  130

 Other pending diagnostic events can be displayed in the **Diagnostic list** submenu →  134

Navigation

"Diagnostics" menu

Structure of the submenu

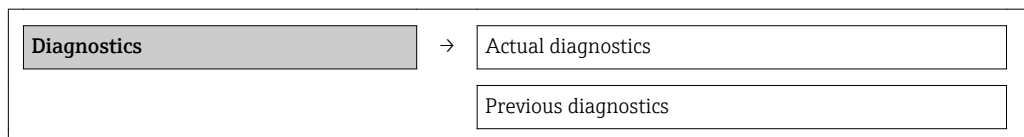


Parameter overview with brief description

Parameter	Prerequisite	Description	User interface	Factory setting
Actual diagnostics	1 diagnostic event has occurred.	Displays the current diagnostic event along with the diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.	–
Previous diagnostics	2 diagnostic events have already occurred.	Displays the diagnostic event that occurred prior to the current diagnostic event along with the diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.	–

12.9 Diagnostic list

In the **Diagnostic list** submenu, up to 5 currently pending diagnostic events can be displayed along with the related diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

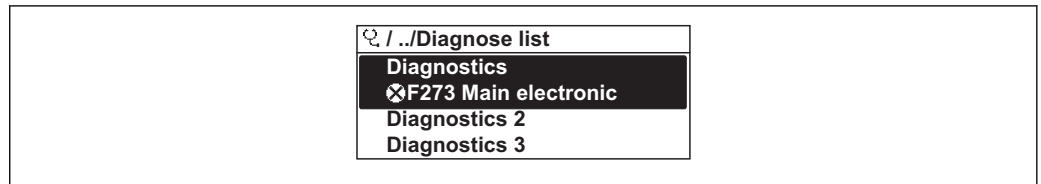Navigation path**Diagnostics** menu → **Diagnostic list** submenu

A0014006-EN

 39 Illustrated using the example of the local display


To call up the measures to rectify a diagnostic event:

- Via local display →  127
- Via Web browser →  128
- Via "FieldCare" operating tool →  130


12.10 Event logbook

12.10.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Events list

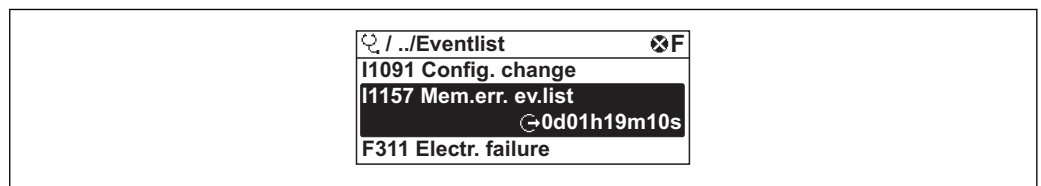

A0014008-EN

 40 Illustrated using the example of the local display

A maximum of 20 event messages can be displayed in chronological order. If the advanced HistoROM function is enabled in the device (order option), up to 100 entries can be displayed.

The event history includes entries for:

- Diagnostic events →  131
- Information events →  136

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - : Event has occurred
 - : Event has ended
- Information event
 - : Event has occurred



To call up the measures to rectify a diagnostic event:

- Via local display →  127
- Via Web browser →  128
- Via "FieldCare" operating tool →  130

For filtering the displayed event messages →  136

12.10.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.10.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1184	Display connected
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1278	I/O module reset detected
I1335	Firmware changed
I1351	Empty pipe detection adjustment failure
I1353	Empty pipe detection adjustment ok
I1361	Wrong web server login
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed

Info number	Info name
I1457	Failed:Measured error verification
I1459	Failed: I/O module verification
I1461	Failed: Sensor verification
I1462	Failed:Sensor electronic module verifc.
I1517	Custody transfer active
I1518	Custody transfe inactive

12.11 Resetting the measuring device

Using the **Device reset** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

Navigation

"Setup" menu → Advanced setup → Administration → Device reset

► Administration

► Define access code

Define access code

Confirm access code

Device reset

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Restart or reset device manually.	- Cancel - To delivery settings - Restart device	Cancel

12.11.1 Function scope of "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
History reset	Every parameter is reset to its factory setting.

12.12 Device information

The **Device information** submenu contains all the parameters that display different information for identifying the device.

Navigation

"Diagnostics" menu → Device information

► Device information

Device tag

Serial number

Firmware version

Device name

Order code

Extended order code 1

Extended order code 2

Extended order code 3

ENP version

Custody transfer counter

Timestamp last custody transfer

Device revision

Device ID

Device type

Manufacturer ID

IP address

Subnet mask

Default gateway

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /)	Promag 400
Serial number	Displays the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	79AFF16000

Parameter	Description	User interface	Factory setting
Firmware version	Displays the device firmware version installed.	Character string with the following format: xx.yy.zz	01.05
Device name	Displays the name of the transmitter.	Character string composed of letters, numbers and certain punctuation marks.	Promag 400
Order code	Displays the device order code.	Character string composed of letters, numbers and certain punctuation marks	-
Extended order code 1	Displays the 1st part of the extended order code.	Character string	-
Extended order code 2	Displays the 2nd part of the extended order code.	Character string	-
Extended order code 3	Displays the 3rd part of the extended order code.	Character string	-
ENP version	Displays the version of the electronic nameplate.	Character string in the format xx.yy.zz	2.02.00
Custody transfer counter		0 to 65 535	0
Counter custody transfer changes		0 to 65 535	0
Timestamp last custody transfer			
Device revision	Displays the device revision with which the device is registered with the HART Communication Foundation.	0 to 255	6
Device ID	Displays the device ID for identifying the device in a HART network.	Positive integer	6-digit hexadecimal number
Device type	Displays the device type with which the measuring device is registered with the HART Communication Foundation.	0 to 255	103
Manufacturer ID	Displays the manufacturer ID with which the measuring device is registered with the HART Communication Foundation.	0 to 255	17
IP address	Displays the IP address of the Web server of the measuring device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet)	255.255.255.0
Default gateway	Displays the default gateway.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0

12.13 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
10.2013	01.04.00	Option 76	Original firmware	Operating Instructions	BA01063D/06/EN/02.13
05.2014	01.05.00	Option 73	■ In accordance with HART 7 Specification ■ Integrated HART input ■ SD03 keypad lock ■ Modification of SIL functionality ■ HistoROM data logging in FieldCare "HistoROM" module ■ Simulation of diagnostic events ■ Ability to access Heartbeat Technology application package	Operating Instructions	BA01063D/06/EN/03.14

 Flashing the firmware to the current version or to the previous version is possible via the service interface (CDI) .

 For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

 The manufacturer's information is available:

- In the Download Area of the Endress+Hauser Internet site: www.endress.com → Download
- Specify the following details:
 - Text search: Manufacturer's information
 - Search range: documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

WARNING

Cleaning agents can damage the plastic transmitter housing!

- ▶ Do not use high-pressure steam.
- ▶ Only use the permitted cleaning agents specified.

Permitted cleaning agents for the plastic transmitter housing

- Commercially available household cleaners
- Methyl alcohol or isopropyl alcohol
- Mild soap solutions

13.1.2 Interior cleaning

No interior cleaning is planned for the device.

13.1.3 Replacing seals

The sensor's seals (particularly aseptic molded seals) must be replaced periodically.

The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature.

Replacement seals (accessory) →  178

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

 For a list of some of the measuring and test equipment, refer to the "Accessories" chapter of the "Technical Information" document for the device.

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by correspondingly trained customers.
- Certified devices can be converted into other certified devices by Endress+Hauser Service or at the factory only.

Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document every repair and each conversion and enter them into the W@M life cycle management database.

14.2 Spare parts

W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter in the **Device information** submenu →  137.

14.3 Endress+Hauser services



Contact your Endress+Hauser Sales Center for information on services and spare parts.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.

2. **WARNING!** Danger to persons from process conditions. Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

Carry out the mounting and connection steps from the chapters "Mounting the measuring device" and "Connecting the measuring device" in the logically reverse sequence. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Display protection	Is used to protect the display against impact or scoring from sand in desert areas.  For details, see Special Documentation SD00333F
Connecting cable for remote version	Coil current and electrode cables, various lengths, reinforced cables available on request.
Ground cable	Set, consisting of two ground cables for potential equalization.
Post mounting kit	Post mounting kit for transmitter.
Compact → remote conversion kit	For converting a compact device version to a remote device version.
Promag 50/53 → Promag 400 conversion kit	For converting a Promag with transmitter 50/53 to a Promag 400.

15.1.2 For the sensor

Accessories	Description
Ground disks	Are used to ground the fluid in lined measuring tubes to ensure proper measurement.  For details, see Installation Instructions EA00070D

15.2 Communication-specific accessories

Accessories	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface.  For details, see "Technical Information" TI00404F
HART Loop Converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.  For details, see "Technical Information" TI00429F and Operating Instructions BA00371F
Wireless HART adapter SWA70	Is used for the wireless connection of field devices. The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks with minimum cabling complexity.  For details, see Operating Instructions BA00061S
Fieldgate FXA320	Gateway for the remote monitoring of connected 4-20 mA measuring devices via a Web browser.  For details, see "Technical Information" TI00025S and Operating Instructions BA00053S

Fieldgate FXA520	Gateway for the remote diagnostics and remote configuration of connected HART measuring devices via a Web browser.  For details, see "Technical Information" TI00025S and Operating Instructions BA00051S
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area .  For details, see Operating Instructions BA01202S
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area and the Ex area .  For details, see Operating Instructions BA01202S

15.3 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: - Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, accuracy or process connections. - Graphic illustration of the calculation results Administration, documentation and access to all project-related data and parameters throughout the entire life cycle of a project. Applicator is available: - Via the Internet: https://wapps.endress.com/applicator - On CD-ROM for local PC installation.
W@M	Life cycle management for your plant W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant device information, such as the device status, spare parts and device-specific documentation, is available for every device over the entire life cycle. The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records. W@M is available: - Via the Internet: www.endress.com/lifecyclemanagement - On CD-ROM for local PC installation.
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  For details, see Operating Instructions BA00027S and BA00059S

15.4 System components

Accessories	Description
Memograph M graphic display recorder	The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.  For details, see "Technical Information" TI00133R and Operating Instructions BA00247R

16 Technical data

16.1 Application

The measuring device described in these Instructions is intended only for flow measurement of liquids with a minimum conductivity of 5 $\mu\text{S}/\text{cm}$.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are adequately resistant.

16.2 Function and system design

Measuring principle Electromagnetic flow measurement on the basis of *Faraday's law of magnetic induction*.

Measuring system The device consists of a transmitter and a sensor.
Two device versions are available:

- Compact version - transmitter and sensor form a mechanical unit.
- Remote version - transmitter and sensor are mounted in separate locations.

For information on the structure of the device

16.3 Input

Measured variable **Direct measured variables**

- Volume flow (proportional to induced voltage)
- Electrical conductivity

i In custody transfer: only volume flow

Calculated measured variables

Mass flow

Measuring range Typically $v = 0.01$ to 10 m/s (0.03 to 33 ft/s) with the specified accuracy
Electrical conductivity: 5 to $10000 \mu\text{S}/\text{cm}$

Flow characteristic values in SI units

Nominal diameter		Recommended flow	Factory settings		
[mm]	[in]	Min./max. full scale value ($v \sim 0.3/10 \text{ m/s}$)	Full scale value current output ($v \sim 2.5 \text{ m/s}$)	Pulse value ($\sim 2 \text{ pulse/s}$)	Low flow cut off ($v \sim 0.04 \text{ m/s}$)
		[m^3/h]	[m^3/h]	[m^3]	[m^3/h]
25	1	9 to $300 \text{ dm}^3/\text{min}$	$75 \text{ dm}^3/\text{min}$	0.5 dm^3	$1 \text{ dm}^3/\text{min}$
32	–	15 to $500 \text{ dm}^3/\text{min}$	$125 \text{ dm}^3/\text{min}$	1 dm^3	$2 \text{ dm}^3/\text{min}$
40	$1 \frac{1}{2}$	25 to $700 \text{ dm}^3/\text{min}$	$200 \text{ dm}^3/\text{min}$	1.5 dm^3	$3 \text{ dm}^3/\text{min}$

Nominal diameter		Recommended flow	Factory settings		
			Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[mm]	[in]	[m³/h]	[m³/h]	[m³]	[m³/h]
50	2	35 to 1 100 dm³/min	300 dm³/min	2.5 dm³	5 dm³/min
65	–	60 to 2 000 dm³/min	500 dm³/min	5 dm³	8 dm³/min
80	3	90 to 3 000 dm³/min	750 dm³/min	5 dm³	12 dm³/min
100	4	145 to 4 700 dm³/min	1 200 dm³/min	10 dm³	20 dm³/min
125	–	220 to 7 500 dm³/min	1 850 dm³/min	15 dm³	30 dm³/min
150	6	20 to 600	150	0.025	2.5
200	8	35 to 1 100	300	0.05	5
250	10	55 to 1 700	500	0.05	7.5
300	12	80 to 2 400	750	0.1	10
350	14	110 to 3 300	1 000	0.1	15
375	15	140 to 4 200	1 200	0.15	20
400	16	140 to 4 200	1 200	0.15	20
450	18	180 to 5 400	1 500	0.25	25
500	20	220 to 6 600	2 000	0.25	30
600	24	310 to 9 600	2 500	0.3	40
700	28	420 to 13 500	3 500	0.5	50
750	30	480 to 15 000	4 000	0.5	60
800	32	550 to 18 000	4 500	0.75	75
900	36	690 to 22 500	6 000	0.75	100
1 000	40	850 to 28 000	7 000	1	125
–	42	950 to 30 000	8 000	1	125
1 200	48	1 250 to 40 000	10 000	1.5	150
–	54	1 550 to 50 000	13 000	1.5	200
1 400	–	1 700 to 55 000	14 000	2	225
–	60	1 950 to 60 000	16 000	2	250
1 600	–	2 200 to 70 000	18 000	2.5	300
–	66	2 500 to 80 000	20 500	2.5	325
1 800	72	2 800 to 90 000	23 000	3	350
–	78	3 300 to 100 000	28 500	3.5	450
2 000	–	3 400 to 110 000	28 500	3.5	450

Flow characteristic values in US units

Nominal diameter		Recommended flow	Factory settings		
			Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[in]	[mm]	[gal/min]	[gal/min]	[gal]	[gal/min]
1	25	2.5 to 80	18	0.2	0.25
–	32	4 to 130	30	0.2	0.5

Nominal diameter		Recommended flow	Factory settings		
			Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[in]	[mm]	[gal/min]	[gal/min]	[gal]	[gal/min]
1 ½	40	7 to 190	50	0.5	0.75
2	50	10 to 300	75	0.5	1.25
–	65	16 to 500	130	1	2
3	80	24 to 800	200	2	2.5
4	100	40 to 1250	300	2	4
–	125	60 to 1950	450	5	7
6	150	90 to 2650	600	5	12
8	200	155 to 4850	1200	10	15
10	250	250 to 7500	1500	15	30
12	300	350 to 10600	2400	25	45
14	350	500 to 15000	3600	30	60
15	375	600 to 19000	4800	50	60
16	400	600 to 19000	4800	50	60
18	450	800 to 24000	6000	50	90
20	500	1000 to 30000	7500	75	120
24	600	1400 to 44000	10500	100	180
28	700	1900 to 60000	13500	125	210
30	750	2150 to 67000	16500	150	270
32	800	2450 to 80000	19500	200	300
36	900	3100 to 100000	24000	225	360
40	1000	3800 to 125000	30000	250	480
42	–	4200 to 135000	33000	250	600
48	1200	5500 to 175000	42000	400	600
54	–	9 to 300 Mgal/d	75 Mgal/d	0.0005 Mgal/d	1.3 Mgal/d
–	1400	10 to 340 Mgal/d	85 Mgal/d	0.0005 Mgal/d	1.3 Mgal/d
60	–	12 to 380 Mgal/d	95 Mgal/d	0.0005 Mgal/d	1.3 Mgal/d
–	1600	13 to 450 Mgal/d	110 Mgal/d	0.0008 Mgal/d	1.7 Mgal/d
66	–	14 to 500 Mgal/d	120 Mgal/d	0.0008 Mgal/d	2.2 Mgal/d
72	1800	16 to 570 Mgal/d	140 Mgal/d	0.0008 Mgal/d	2.6 Mgal/d
78	–	18 to 650 Mgal/d	175 Mgal/d	0.0010 Mgal/d	3.0 Mgal/d
–	2000	20 to 700 Mgal/d	175 Mgal/d	0.0010 Mgal/d	2.9 Mgal/d

Recommended measuring range

"Flow limit" section → 157

 For custody transfer, the applicable approval determines the permitted measuring range and the pulse value.

Operable flow range

Over 1000 : 1



For custody transfer, the operable flow range is 100 : 1 to 250 : 1, depending on the nominal diameter. Further details are specified by the applicable approval.

Input signal

External measured values



Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section → 145

It is recommended to read in external measured values to calculate the following measured variables:

Corrected volume flow

HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

Status input

Maximum input values	■ DC 30 V ■ 6 mA
Response time	Adjustable: 5 to 200 ms
Input signal level	■ Low signal: DC -3 to +5 V ■ High signal: DC 12 to 30 V
Assignable functions	■ Off ■ Reset totalizers 1-3 separately ■ Reset all totalizers ■ Flow override

16.4 Output

Output signal

Current output

Current output	Can be set as: ■ 4-20 mA NAMUR ■ 4-20 mA US ■ 4-20 mA HART ■ 0-20 mA
Maximum output values	■ DC 24 V (no flow) ■ 22.5 mA
Load	0 to 700 Ω
Resolution	0.5 μA
Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	■ Volume flow ■ Mass flow ■ Flow velocity ■ Conductivity ■ Electronic temperature

Pulse/frequency/switch output

Function	- With the order code for "Output; Input", option H: output 2 can be set as a pulse or frequency output - With the order code for "Output; Input", option I: output 2 and 3 can be set as a pulse, frequency or switch output - With the order code for "Output; Input", option J: output 2 firmly assigned as certified pulse output
Version	Passive, open collector
Maximum input values	- DC 30 V 250 mA
Voltage drop	For 25 mA: $\leq$ DC 2 V
Pulse output	
Pulse width	Adjustable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Adjustable
Assignable measured variables	- Volume flow - Mass flow
Frequency output	
Output frequency	Adjustable: 0 to 12 500 Hz
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	- Volume flow - Mass flow - Conductivity - Flow velocity - Electronic temperature
Switch output	
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	- Off - On - Diagnostic behavior - Limit value: - Off - Volume flow - Mass flow - Conductivity - Flow velocity - Totalizer 1-3 - Electronic temperature - Flow direction monitoring - Status - Empty pipe detection - Low flow cut off

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Current output

4-20 mA

Failure mode	Selectable (as per NAMUR recommendation NE 43): - Minimum value: 3.6 mA - Maximum value: 22 mA - Defined value: 3.59 to 22.5 mA - Actual value - Last valid value
---------------------	---

0-20 mA

Failure mode	Choose from: - Maximum alarm: 22 mA - Defined value: 0 to 22.5 mA
---------------------	--

HART

Device diagnostics	Device condition can be read out via HART Command 48
---------------------------	--

Pulse/frequency/switch output

Pulse output

Failure mode	Choose from: - Actual value - No pulses
---------------------	--

Frequency output

Failure mode	Choose from: - Actual value 0 Hz - Defined value: 0 to 12 500 Hz
---------------------	--

Switch output

Failure mode	Choose from: - Current status - Open - Closed
---------------------	---

Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.

 Status signal as per NAMUR recommendation NE 107

Operating tool

- Via digital communication:
 - HART protocol
- Via service interface

Plain text display	With information on cause and remedial measures
---------------------------	---

Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

Low flow cut off The switch points for low flow cut off are user-selectable.

Galvanic isolation The following connections are galvanically isolated from each other:

- Inputs
- Outputs
- Power supply

Protocol-specific data **HART**

- For information on the device description files →  71
- For information on the dynamic variables and measured variables (HART device variables) →  71

16.5 Power supply

Terminal assignment →  38

Supply voltage **Transmitter**

Order code for "Power supply"	Terminal voltage	Frequency range
Option L	AC100 to 240 V	50/ 60 Hz, ±4 Hz
	AC/DC24 V	50/ 60 Hz, ±4 Hz

Power consumption	Order code for "Output"	Maximum power consumption
	Option H: 4-20mA HART, pulse/frequency/switch output, switch output	30 VA/8 W
	Option I: 4-20mA HART, 2 x pulse/frequency/switch output, status input	30 VA/8 W
	Option J: 4-20mA HART, certified pulse output, pulse/frequency/switch output, status input	30 VA/8 W

Current consumption **Transmitter**

Order code for "Power supply"	Maximum Current consumption	Maximum switch-on current
Option L: AC 100 to 240 V	145 mA	25 A (< 5 ms)
Option L: AC/DC 24 V	350 mA	27 A (< 5 ms)

Power supply failure

- Totalizers stop at the last value measured.
- Configuration is retained in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection

Potential equalization → 44

Terminals

Transmitter

- Supply voltage cable: plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Signal cable: plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Electrode cable: spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Coil current cable: spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

Sensor connection housing

Spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

Cable entries

Cable entry thread

- M20 x 1.5
- Via adapter:
 - NPT 1/2"
 - G 1/2"

Cable gland

- For standard cable: M20 x 1.5 with cable ϕ 6 to 12 mm (0.24 to 0.47 in)
- For reinforced cable: M20 x 1.5 with cable ϕ 9.5 to 16 mm (0.37 to 0.63 in)

 If metal cable entries are used, use a grounding plate.

Cable specification

16.6 Performance characteristics

Reference operating conditions

In accordance with DIN EN 29104

- Medium temperature: $+28 \pm 2$ °C ($+82 \pm 4$ °F)
- Ambient temperature: $+22 \pm 2$ °C ($+72 \pm 4$ °F)
- Warm-up period: 30 min

Installation

- Inlet run $> 10 \times DN$
- Outlet run $> 5 \times DN$
- Sensor and transmitter grounded.
- The sensor is centered in the pipe.

 No special requirements must be observed at the inlet and outlet runs to keep within the in-service maximum permissible errors for custody transfer.

Maximum measured error


Error limits under reference operating conditions

o.r. = of reading

Volume flow


- ± 0.5 % o.r. ± 1 mm/s (0.04 in/s)
- Optional: ± 0.2 % o.r. ± 2 mm/s (0.08 in/s)

 Fluctuations in the supply voltage do not have any effect within the specified range.

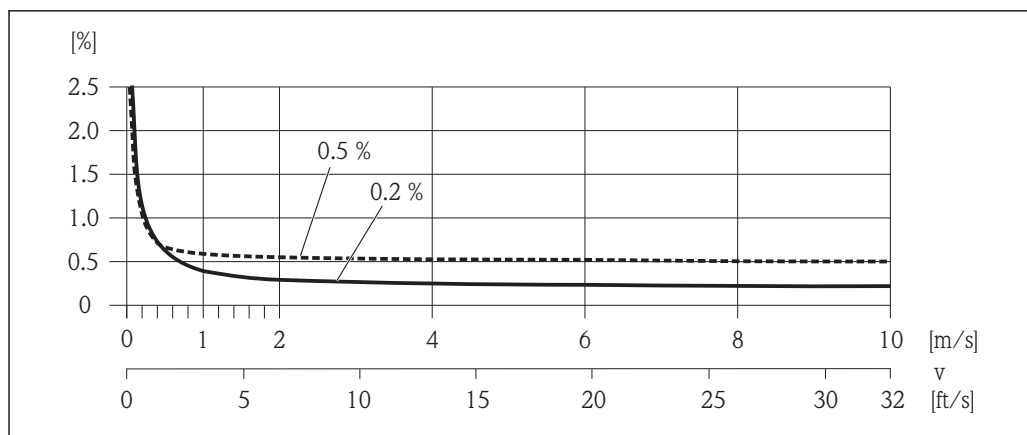

A0005531

41 Maximum measured error in % o.r.

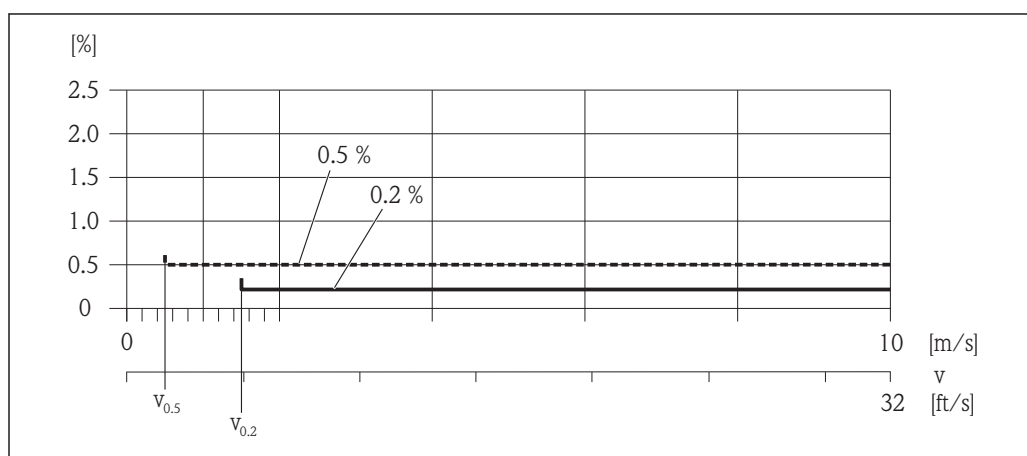

A0017051

42 Flat Spec in % o.r.

Flat Spec flow values 0.5 %

Nominal diameter		$v_{0.5}$	
[mm]	[in]	[m/s]	[ft/s]
25 to 600	1 to 24	0.5	1.64

Flat Spec flow values 0.2 %

Nominal diameter		$v_{0.2}$	
[mm]	[in]	[m/s]	[ft/s]
25 to 600	1 to 24	1.5	4.92

Electrical conductivity

Max. measured error not specified.

Accuracy of outputs

o.r. = of reading

The outputs have the following base accuracy specifications.

Current output

Accuracy	Max. $\pm 5 \mu\text{A}$
----------	--------------------------

Pulse/frequency output

Accuracy	Max. $\pm 50 \text{ ppm o.r.}$ (across the complete ambient temperature range)
----------	--

Repeatability

o.r. = of reading

Volume flow

max. $\pm 0.1 \% \text{ o.r.} \pm 0.5 \text{ mm/s}$ (0.02 in/s)

Electrical conductivity

Max. $\pm 5 \% \text{ o.r.}$

Influence of ambient temperature

o.r. = of reading

Current output

Temperature coefficient	Max. $\pm 0.005 \% \text{ o.r./}^{\circ}\text{C}$
-------------------------	---

Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

16.7 Installation

"Mounting requirements" → 19

16.8 Environment

Ambient temperature range

→ 21

Storage temperature

The storage temperature corresponds to the operating temperature range of the measuring transmitter and the appropriate measuring sensors.

- Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner.
- If protection caps or protective covers are mounted these should never be removed before installing the measuring device.

Atmosphere

If a plastic transmitter housing is permanently exposed to certain steam and air mixtures, this can damage the housing.

 If you are unsure, please contact your Endress+Hauser Sales Center for clarification.

Degree of protection	Transmitter ■ As standard: IP66/67, type 4X enclosure ■ When housing is open: IP20, type 1 enclosure Sensor ■ As standard: IP66/67, type 4X enclosure ■ Optionally available for remote version: – IP66/67, type 4X enclosure; fully welded, with protective varnish EN ISO 12944 C5-M. Suitable for use in corrosive atmospheres. – IP68, type 6P enclosure; fully welded, with protective varnish as per EN ISO 12944 C5-M. Suitable for permanent immersion in water ≤3 m (10 ft) or 48 hours at depths ≤ 10 m (30 ft). – IP68, type 6P enclosure; fully welded, with protective varnish as per EN ISO 12944 Im1/Im2/Im3. Suitable for permanent immersion in saline water ≤3 m (10 ft) or 48 hours at depths ≤10 m (30 ft) or in buried applications.
Shock resistance	Compact version 6 ms 30 g, according to IEC 60068-2-27 Remote version ■ Transmitter: 6 ms 30 g, according to IEC 60068-2-27 ■ Sensor: 6 ms 50 g, according to IEC 60068-2-27
Vibration resistance	Compact version ■ Vibration sinusoidal, 1 g peak, according to IEC 60068-2-6 ■ Vibration broad-band random, 1.54 g rms, according to IEC 60068-2-64 Remote version ■ Transmitter – Vibration sinusoidal, 1 g peak, according to IEC 60068-2-6 – Vibration broad-band random, 1.54 g rms, according to IEC 60068-2-64 ■ Sensor: – Vibration sinusoidal, 2 g peak, according to IEC 60068-2-6 – Vibration broad-band random, 2.70 g rms, according to IEC 60068-2-64
Mechanical load	■ Protect the transmitter housing against mechanical effects, such as shock or impact; the use of the remote version is sometimes preferable. ■ Never use the transmitter housing as a ladder or climbing aid.
Electromagnetic compatibility (EMC)	■ As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21) ■ Complies with emission limits for industry as per EN 55011 (Class A)  For details refer to the Declaration of Conformity.

16.9 Process

Medium temperature range	■ 0 to +80 °C (+32 to +176 °F) for hard rubber, DN 50 to 2000 (2 to 78") ■ -20 to +50 °C (-4 to +122 °F) for polyurethane, DN 25 to 1200 (1 to 48")  In custody transfer mode, the permitted fluid temperature is 0 to +50 °C (+32 to +122 °F).
--------------------------	--

Conductivity $\geq 5 \mu\text{S}/\text{cm}$ for liquids in general



Note that in the case of the remote version, the requisite minimum conductivity also depends on the cable length.

Pressure-temperature ratings



An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document

Pressure tightness

Liner: hard rubber

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:		
[mm]	[in]	+25 °C (+77 °F)	+50 °C (+122 °F)	+80 °C (+176 °F)
50...2000	2...78	0 (0)	0 (0)	0 (0)

Liner: polyurethane

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:	
[mm]	[in]	+25 °C (+77 °F)	+50 °C (+122 °F)
25...1200	1...48	0 (0)	0 (0)

Flow limit

The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the velocity of flow (v) to the physical properties of the fluid:

- $v < 2 \text{ m/s}$ (6.56 ft/s): for abrasive fluids (e.g. potter's clay, lime milk, ore slurry)
- $v > 2 \text{ m/s}$ (6.56 ft/s): for fluids producing buildup (e.g. wastewater sludges)



A necessary increase in the flow velocity can be achieved by reducing the sensor nominal diameter.



For an overview of the measuring range full scale values, see the "Measuring range" section → 146



For custody transfer, the applicable approval determines the permitted measuring range.

Pressure loss

- No pressure loss occurs if the sensor is installed in a pipe with the same nominal diameter.
- Pressure losses for configurations incorporating adapters according to DIN EN 545 → 22

System pressure

→ 21

Vibrations

→ 22

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

Weight

Compact version

Weight data:

- Including the transmitter
 - Order code for "Housing", option M, Q: 1.3 kg (2.9 lb)
 - Order code for "Housing", option A, R: 2.0 kg (4.4 lb)
- Excluding packaging material

*Weight in SI units**Standard version*

EN 1092-1 (DIN 2501)			
DN [mm]	Pressure rating	Weight [kg]	
		Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
25	PN 40	5	5.7
32	PN 40	6	6.7
40	PN 40	8	8.7
50	PN 40	9	9.7
65	PN 16	10	10.7
80	PN 16	12	12.7
100	PN 16	14	14.7
125	PN 16	20	20.7
150	PN 16	24	24.7
200	PN 10	43	43.7
250	PN 10	63	63.7
300	PN 10	68	68.7
350	PN 6	105	105.7
375	PN 6	120	120.7
400	PN 6	120	120.7
450	PN 6	161	161.7
500	PN 6	156	156.7
600	PN 6	208	208.7
700	PN 6	304	304.7
800	PN 6	357	357.7
900	PN 6	485	485.7
1000	PN 6	589	589.7
1200	PN 6	850	850.7
1400	PN 6	1300	1300.7
1600	PN 6	1700	1700.7
1800	PN 6	2200	2200.7
2000	PN 6	2800	2800.7

AS 4087, PN 16		
DN [mm]	Weight [kg]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
80	12	12.7
100	14	14.7
150	24	24.7

JIS B2220, 10K		
DN [mm]	Weight [kg]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
25	5	5.7
32	5	5.7
40	6	6.7
50	7	7.7
65	9	9.7
80	11	11.7
100	13	13.7
125	19	19.7
150	23	23.7
200	40	40.7
250	68	68.7
300	70	70.7

Order code for "Design", option A

Option A "Insertion length short; ISO/DVGW to DN400, DN450-2000 1:1"

EN 1092-1 (DIN 2501)			
DN [mm]	Order code for "Housing", option M, Q Polycarbonate plastic ¹⁾		
	Weight [kg]		
	PN 6	PN 10	PN 16
450	100	113	139
500	115	133	179
600	156	163	224
700	191	241	288
800	241	316	350
900	309	394	441
1000	360	469	563
1200	530	718	840
1400	785	1115	1201
1600	1059	1625	1842

EN 1092-1 (DIN 2501)			
DN [mm]	Order code for "Housing", option M, Q Polycarbonate plastic ¹⁾		
	Weight [kg]		
	PN 6	PN 10	PN 16
1800	1419	2108	2354
2000	1878	2631	2926

1) Values for aluminum transmitter, AlSi10Mg, coated: + 0.7 kg

AS 2129, Table E		
DN [mm]	Weight [kg]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
450	144	144.7
500	183	183.7
600	261	261.7
700	347	347.7
750	434	434.7
800	494	494.7
900	691	691.7
1000	762	762.7
1200	1238	1238.7

AS 4087, PN 16		
DN [mm]	Weight [kg]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
450	134	134.7
500	183	183.7
600	261	261.7
700	368	368.7
750	446	446.7
800	504	504.7
900	703	703.7
1000	760	760.7
1200	1220	1220.7

Order code for "Calibration flow", options H and K, or options H/K or order code for "Sensor option", option CA

Option	Description
H	MID Type Examination Cert MI-001
K	OIML R49 Class 2
CA	IP66/67, Type 4X, fully welded; corrosion protection EN ISO 12944 C5-M

EN 1092-1 (DIN 2501)			
DN [mm]	Pressure rating	Weight [kg]	
		Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
25	PN 40	9	9.7
32	PN 40	10	10.7
40	PN 40	11	11.7
50	PN 40	12	12.7
65	PN 16	13	13.7
80	PN 16	15	15.7
100	PN 16	17	17.7
125	PN 16	22	22.7
150	PN 16	27	27.7
200	PN 10	38	38.7
250	PN 10	51	51.7
300	PN 10	60	60.7

AS 2129, PN 16		
DN [mm]	Weight [kg]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
80	15	15.7
100	17	17.7
125	22	22.7
150	27	27.7

JIS B2220, 10K		
DN [mm]	Weight [kg]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
25	9	9.7
32	10	10.7
40	10	10.7
50	11	11.7
65	12	12.7
80	13	13.7
100	15	15.7
125	20	20.7
150	25	25.7
200	34	34.7
250	50	50.7
300	57	57.7

Weight in US units

Standard version

ASME B16.5, Class 150		
DN [in]	Weight [lbs]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
1	11	12.5
1½	18	19.5
2	20	21.5
3	26	27.5
4	31	32.5
6	53	54.5
8	95	96.5
10	161	162.5
12	238	239.5
14	386	387.5
16	452	453.5
18	562	563.5
20	628	629.5
24	893	894.5

AWWA C207, Class D		
DN [in]	Weight [lbs]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
28	882	883.5
30	1014	1015.5
32	1213	1214.5
36	1764	1765.5
40	1985	1986.5
42	2426	2427.5
48	3087	3088.5
54	4851	4852.5
60	5954	5955.5
66	8159	8160.5
72	9041	9042.5
78	10143	10144.5

Order code for "Design", option A

Option A "Insertion length short; ISO/DVGW to DN400, DN450-2000 1:1"

ASME B16.5, Class 150		
DN [in]	Weight [lbs]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
18	423	424.5
20	505	506.5
24	668	667.5

AWWA C207, Class D		
DN [in]	Weight [lbs]	
	Order code for "Housing", option M, Q Polycarbonate plastic	Order code for "Housing", option A, R Aluminum, AlSi10Mg, coated
28	589	590.5
30	703	704.5
32	847	848.5
36	1039	1040.5
40	1297	1298.5
42	1480	1481.5
48	1989	1990.5
54	2809	2810.5
60	3517	3518.5
66	4701	4702.5
72	5665	5666.5
78	6866	6867.5

Order code for "Sensor option", option CA

Option CA "IP66/67, Type 4X, fully welded; corrosion protection EN ISO 12944 C5-M

ASME B16.5, Class 150	
DN [in]	Weight [lbs]
1	17.6
1½	19.8
2	24.3
3	33.1
4	41.9
6	61.7
8	97.0
10	134.5
12	189.6

Transmitter remote version

Wall-mount housing

Depends on the material of the wall-mount housing:

- Polycarbonate plastic: 1.3 kg (2.9 lb)
- Aluminum, AlSi10Mg, coated: 2.0 kg (4.4 lb)

Sensor remote version

Weight data:

- Including sensor connection housing
- Excluding the connecting cable
- Excluding packaging material

Weight in SI units

Standard version

EN 1092-1 (DIN 2501)		
DN [mm]	Pressure rating	Weight [kg]
25	PN 40	5
32	PN 40	6
40	PN 40	7
50	PN 40	9
65	PN 16	10
80	PN 16	12
100	PN 16	14
125	PN 16	20
150	PN 16	24
200	PN 10	43
250	PN 10	63
300	PN 10	68
350	PN 6	103
375	PN 6	118
400	PN 6	118
450	PN 6	159
500	PN 6	154
600	PN 6	206
700	PN 6	302
800	PN 6	355
900	PN 6	483
1000	PN 6	587
1200	PN 6	848
1400	PN 6	1298
1600	PN 6	1698
1800	PN 6	2198
2000	PN 6	2798

AS 4087, PN 16	
DN [mm]	Weight [kg]
80	12
100	14
125	20
150	24

JIS B2220, 10K	
DN [mm]	Weight [kg]
25	5
32	5
40	6
50	7
65	9
80	11
100	13
125	19
150	23
200	40
250	67
300	70

Order code for "Design", option A

Option A "Insertion length short; ISO/DVGW to DN400, DN450-2000 1:1"

EN 1092-1 (DIN 2501)			
DN [mm]	Weight [kg]		
	PN 6	PN 10	PN 16
450	98	111	139
500	113	131	179
600	154	161	224
700	190	240	288
800	240	315	350
900	308	393	441
1000	359	468	563
1200	529	717	840
1400	784	1114	1200
1600	1058	1624	1841
1800	1418	2107	2353
2000	1877	2630	2925

AS 2129, Table E	
DN [mm]	Weight [kg]
450	142
500	181
600	259
700	346
750	433
800	493
900	690
1000	761
1200	1237

AS 4087, PN 16	
DN [mm]	Weight [kg]
450	132
500	181
600	259
700	367
750	445
800	503
900	702
1000	759
1200	1219

Order code for "Calibration flow", options H and K or order code for "Sensor option", option CA

Option	Description
H	MID Type Examination Cert MI-001
K	OIML R49 Class 2
CA	IP66/67, Type 4X, fully welded; corrosion protection EN ISO 12944 C5-M

EN 1092-1 (DIN 2501)		
DN [mm]	Pressure rating	[kg]
25	PN 40	6.5
32	PN 40	8
40	PN 40	8.5
50	PN 40	10
65	PN 16	11
80	PN 16	13
100	PN 16	15
125	PN 16	20

EN 1092-1 (DIN 2501)		
DN [mm]	Pressure rating	[kg]
150	PN 16	25
200	PN 10	36
250	PN 10	49
300	PN 10	58

AS 4087, PN 16	
DN [mm]	[kg]
80	13
100	15
150	25

JIS B2220, 10K	
DN [mm]	Weight [kg]
25	6.5
32	7.5
40	7.5
50	9
65	10
80	11
100	13
125	18
150	23
200	32
250	48
300	55

Weight in US units

Standard version

ASME B16.5, Class 150	
DN [in]	Weight [lbs]
1	11
1½	15
2	20
3	26
4	31
6	53
8	95

ASME B16.5, Class 150	
DN [in]	Weight [lbs]
10	161
12	238
14	381
16	448
18	558
20	624
24	889

AWWA C207, Class D	
DN [in]	Weight [lbs]
28	878
30	1010
32	1208
36	1760
40	1980
42	2421
48	3083
54	4847
60	5949
66	8154
72	9036
78	10139

Order code for "Design", option A

Option A "Insertion length short; ISO/DVGW to DN400, DN450-2000 1:1"

ASME B16.5, Class 150	
DN [in]	Weight [lbs]
18	420
20	501
24	664

AWWA C207, Class D	
DN [in]	Weight [lbs]
28	587
30	701
32	845
36	1036
40	1294

AWWA C207, Class D	
DN [in]	Weight [lbs]
42	1477
48	1987
54	1273
60	3515
66	4699
72	5662
78	6864

Order code for "Sensor option", option CA

Option CA "IP66/67, Type 4X, fully welded; corrosion protection EN ISO 12944 C5-M"

ASME B16.5, Class 150	
DN [in]	Weight [lbs]
1	13
1½	15.5
2	20
3	29
4	37
6	57
8	93
10	130
12	185

Measuring tube
specification

Nominal diameter		Pressure rating				Measuring tube internal diameter			
		EN (DIN)	ASME AWWA	AS 2129 AS 4087	JIS	Hard rubber		Polyurethane	
[mm]	[in]					[mm]	[in]	[mm]	[in]
25	1	PN 40	Class 150	–	20K	–	–	24	0.94
32	–	PN 40	–	–	20K	–	–	32	1.26
40	1½	PN 40	Class 150	–	20K	–	–	38	1.50
50	2	PN 40	Class 150	Table E, PN 16	10K	50	1.97	50	1.97
65	–	PN 16	–	–	10K	66	2.60	66	2.60
80	3	PN 16	Class 150	Table E, PN 16	10K	79	3.11	79	3.11
100	4	PN 16	Class 150	Table E, PN 16	10K	102	4.02	102	4.02
125	–	PN 16	–	–	10K	127	5.00	127	5.00
150	6	PN 16	Class 150	Table E, PN 16	10K	156	6.14	156	6.14
200	8	PN 10	Class 150	Table E, PN 16	10K	204	8.03	204	8.03
250	10	PN 10	Class 150	Table E, PN 16	10K	258	10.2	258	10.2
300	12	PN 10	Class 150	Table E, PN 16	10K	309	12.2	309	12.2
350	14	PN 6	Class 150	Table E, PN 16	–	342	13.5	342	13.5

Nominal diameter		Pressure rating				Measuring tube internal diameter			
		EN (DIN)	ASME AWWA	AS 2129 AS 4087	JIS	Hard rubber		Polyurethane	
[mm]	[in]					[mm]	[in]	[mm]	[in]
375	15	–	–	PN 16	–	392	15.4	–	–
400	16	PN 6	Class 150	Table E, PN 16	–	392	15.4	392	15.4
450	18	PN 6	Class 150	–	–	437	17.2	437	17.2
500	20	PN 6	Class 150	Table E, PN 16	–	492	19.4	492	19.4
600	24	PN 6	Class 150	Table E, PN 16	–	594	23.4	594	23.4
700	28	PN 6	Class D	Table E, PN 16	–	692	27.2	692	27.2
750	30	–	Class D	Table E, PN 16	–	742	29.2	742	29.2
800	32	PN 6	Class D	Table E, PN 16	–	794	31.3	794	31.3
900	36	PN 6	Class D	Table E, PN 16	–	891	35.1	891	35.1
1 000	40	PN 6	Class D	Table E, PN 16	–	994	39.1	994	39.1
–	42	–	Class D	–	–	1 043	41.1	1 043	41.1
1 200	48	PN 6	Class D	Table E, PN 16	–	1 197	47.1	1 197	47.1
–	54	–	Class D	–	–	1 339	52.7	–	–
1 400	–	PN 6	–	–	–	1 402	55.2	–	–
–	60	–	Class D	–	–	1 492	58.7	–	–
1 600	–	PN 6	–	–	–	1 600	63.0	–	–
–	66	–	Class D	–	–	1 638	64.5	–	–
1 800	72	PN 6	Class D	–	–	1 786	70.3	–	–
2 000	78	PN 6	Class D	–	–	1 989	78.3	–	–

Materials

Transmitter housing

Compact version, standard

- Order code for "Housing", option **A** "Compact, aluminum coated":
Aluminum, AlSi10Mg, coated
- Order code for "Housing", option **M**: polycarbonate plastic
- Window material:
 - For order code for "Housing", option **A**: glass
 - For order code for "Housing", option **M**: plastic


Compact version, inclined

- Order code for "Housing", option **R** "Compact, aluminum coated":
Aluminum, AlSi10Mg, coated
- Order code for "Housing", option **Q**: polycarbonate plastic
- Window material:
 - For order code for "Housing", option **R**: glass
 - For order code for "Housing", option **Q**: plastic

Remote version (wall-mount housing)

- Order code for "Housing", option **P** "Compact, aluminum coated":
Aluminum, AlSi10Mg, coated
- Order code for "Housing", option **N**: polycarbonate plastic
- Window material:
 - For order code for "Housing", option **P**: glass
 - For order code for "Housing", option **N**: plastic

Cable entries/cable glands

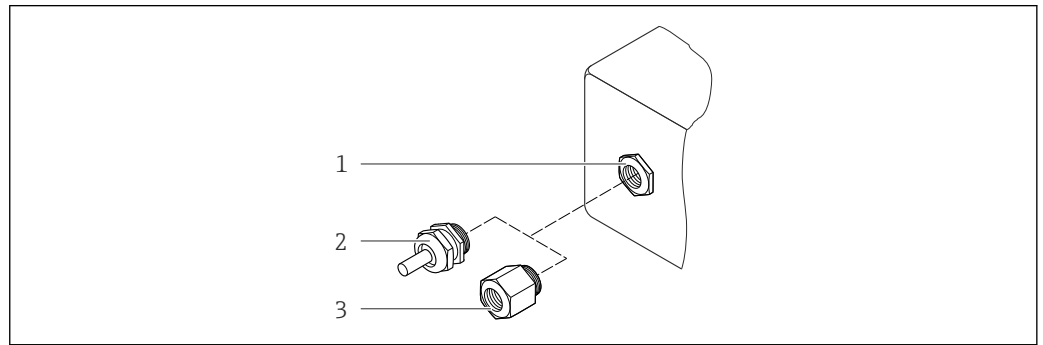

43 Possible cable entries/cable glands

- 1 Cable entry in transmitter housing, wall-mount housing or connection housing with internal thread M20 x 1.5
- 2 Cable gland M20 x 1.5
- 3 Adapter for cable entry with internal thread G 1/2" or NPT 1/2"

Compact and remote versions and sensor connection housing

Cable entry/cable gland	Material
Cable gland M20 x 1.5	Plastic
Remote version: cable gland M20 x 1.5 Option of reinforced connecting cable	■ Sensor connection housing: Nickel-plated brass ■ Transmitter wall-mount housing: Plastic
Adapter for cable entry with internal thread G 1/2" or NPT 1/2"	Nickel-plated brass

Connecting cable for remote version

Electrode and coil current cable

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket

Sensor housing

- DN 25 to 300 (1 to 12"):
 - Aluminum, AlSi10Mg, coated
 - Carbon steel with Al/Zn protective coating
- DN 50 to 300 (2 to 12"):
 - Carbon steel with protective varnish (IP68)
- DN 350 to 2000 (14 to 78"):
 - Carbon steel with protective varnish

Sensor connection housing

- Standard: aluminum, AlSi10Mg, coated (IP66/67)
- Option:
 - Polycarbonate for IP68 with DN 50 to 300 (2 to 12")
 - Polycarbonate for order code "Sensor option", option CA...CE "Corrosion protection" with DN 350 to 2000 (14 to 78")

Measuring tubes

- DN 25 to 300 (1 to 12")¹⁾: stainless steel, 1.4301/1.4306/304/304L
- DN 350 to 1200 (14 to 48")¹⁾: stainless steel, 1.4301/304
- DN 1350 to 2000 (54 to 78")¹⁾: stainless steel, 1.4301 similar to 304

Liner

- DN 25 to 1200 (1 to 48"): polyurethane
- DN 50 to 2000 (2 to 78"): hard rubber

Electrodes

- Stainless steel, 1.4435 (316L)
- Alloy C22, 2.4602 (UNS N06022)
- Tantalum

Process connections

EN 1092-1 (DIN 2501)

- DN 25 to 1200¹⁾:
 - Stainless steel, 1.4404/1.4571/F316L
 - Carbon steel, A105/FE410WB/P250GH/S235JRG2/S235JR+N
- DN 1350 to 2000¹⁾:
 - Stainless steel, 1.4404/1.4571
 - Carbon steel, P250GH/S235JRG2
- DN 450 to 2000²⁾:
 - Carbon steel, A105/S235JRG2

EN 1092-1 (DIN 2501), PN6:

DN 350 to 1000¹⁾:
Carbon steel, A105/FE410WB/S235JRG2

ASME B16.5

- DN 25 to 1200 (1 to 48"):
 - Stainless steel, F316L similar to 1.4404
- DN 25 to 300 (1 to 12")²⁾:
 - Carbon steel, A105 similar to 1.0432
- DN 350 to 1200 (14 to 48")²⁾:
 - Carbon steel, A105/A515 Grade 70

1) For carbon steel flange material with Al/Zn protective coating (DN 25 to 300 (1 to 12")), protective varnish (IP68) (DN 50 to 300 (2 to 12")) or protective varnish ≥ DN 350 (14")

2) Order Code for "Design", Option A "Insertion length short"

AWWA C207

- DN 48":
Carbon steel, A105/A181/P265GH/S275JR
- DN 54 to 72":
Carbon steel, P265GH similar to 1.0425
- DN 48 to 78"²⁾:
Carbon steel, A105/A181/P265GH/S275JR

AS 2129

- DN 50 to 1200:
Carbon steel, A105/S235JRG2
- DN 350 to 1200²⁾:
Carbon steel, A105/FE410WB/P235GH/P265GH/S235JRG2

AS 4087

- DN 50 to 1200:
Carbon steel, A105/S275JR
- DN 350 to 1200²⁾:
Carbon steel, A105/P265GH/S275JR

JIS B2220

- Stainless steel, F316L similar to 1.4404
- Carbon steel, A105/A350LF2¹⁾

Seals

In accordance with DIN EN 1514-1

Accessories*Display protection*

Stainless steel, 1.4301 (304L)

Ground disks

- Stainless steel, 1.4435 (316L)
- Alloy C22, 2.4602 (UNS N06022)
- Tantalum

Fitted electrodes

Measurement, reference and empty pipe detection electrodes available as standard with:

- 1.4435 (316L)
- Alloy C22, 2.4602 (UNS N06022)
- Tantalum

Optionally available with DN 350 to 2000 (14 to 78"):
Exchangeable measuring electrodes made from 1.4435 (316L)

Process connections

- EN 1092-1 (DIN 2501) ³⁾
 - DN ≤ 300: fixed flange (PN 10/16/25/40) = form A
 - DN ≥ 350: fixed flange (PN 6/10/16/25) = flat face
 - DN 450 to 2000 ⁴⁾: fixed flange (PN 6/10/16) = flat face
- ASME B16.5
 - DN 25 to 600 (1 to 24"): fixed flange (Class 150)
 - DN 350 to 2000 (14 to 78") ⁴⁾: fixed flange (Class 150)
 - DN 25 to 150 (1 to 6"): fixed flange (Class 300)
- AWWA C207
 - DN 48 to 72": fixed flange (Class D)
 - DN 48 to 78" ⁴⁾: fixed flange (Class D)
- AS 2129
 - DN 50 to 1200: fixed flange (Table E)
 - DN 350 to 1200 ⁴⁾: fixed flange (Table E)
- AS 4087
 - DN 50 to 1200: fixed flange (PN 16)
 - DN 350 to 1200 ⁴⁾: fixed flange (PN 16)
- JIS B2220
 - DN 50 to 300: fixed flange (10K)
 - DN 25 to 300: fixed flange (20K)

 For information on the materials of the process connections →  172


Surface roughness

Electrodes with 1.4435 (316L); Alloy C22, 2.4602 (UNS N06022); tantalum:
≤ 0.3 to 0.5 µm (11.8 to 19.7 µin)
(All data relate to parts in contact with fluid)

16.11 Operability

Local operation

Via display module

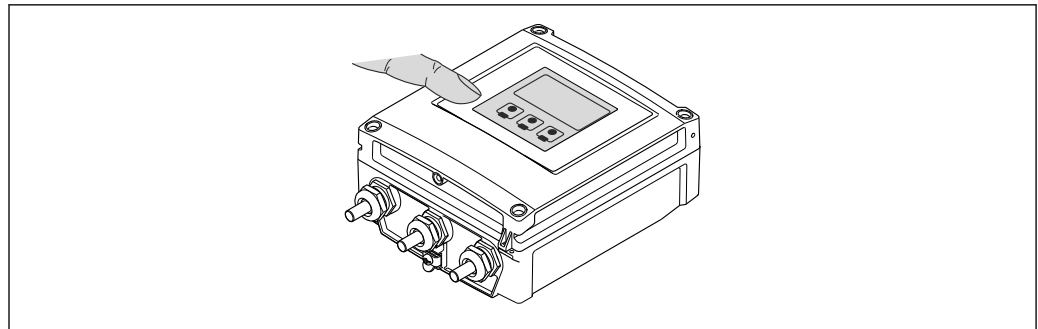

A0020538

Display elements

- 4-line display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +50 °C (-4 to +122 °F)
The readability of the display may be impaired at temperatures outside the temperature range.

3) Dimensions as per DIN 2501, DN 65 (2 1/2") PN 16 and DN 600 (24") PN 16 only as per EN 1092-1

4) Order code for "Design", option A "Insertion length short"

Operating elements

External operation via touch control; 3 optical keys: ☺, ☹, ☒


Additional functionality

- Data backup function
The device configuration can be saved in the display module.
- Data comparison function
The device configuration saved in the display module can be compared to the current device configuration.
- Data transfer function
The transmitter configuration can be transmitted to another device using the display module.

Remote operation

Via HART protocol

This communication interface is available in device versions with a HART output.

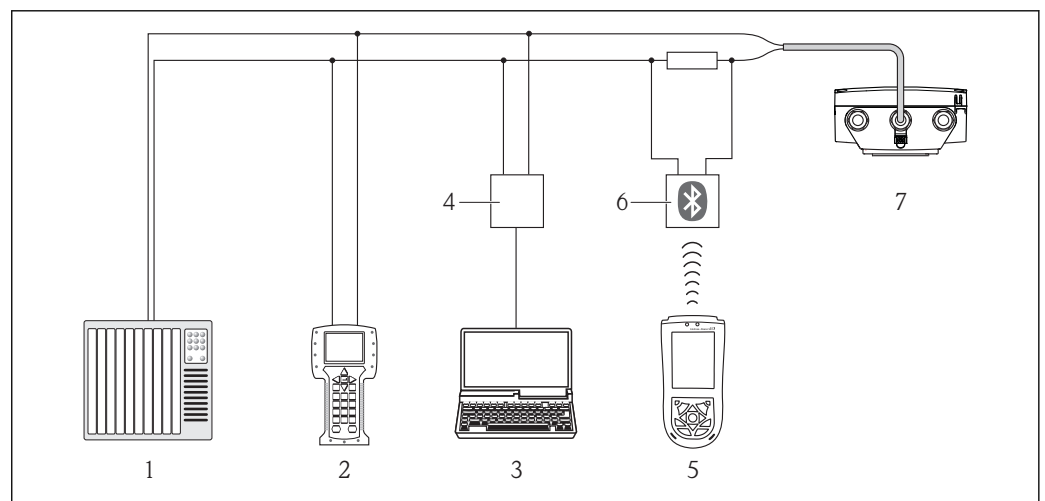

A0017124


44 Options for remote operation via HART protocol

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 VIATOR Bluetooth modem with connecting cable
- 7 Transmitter

Service interface

Via service interface (CDI-RJ45)

HART

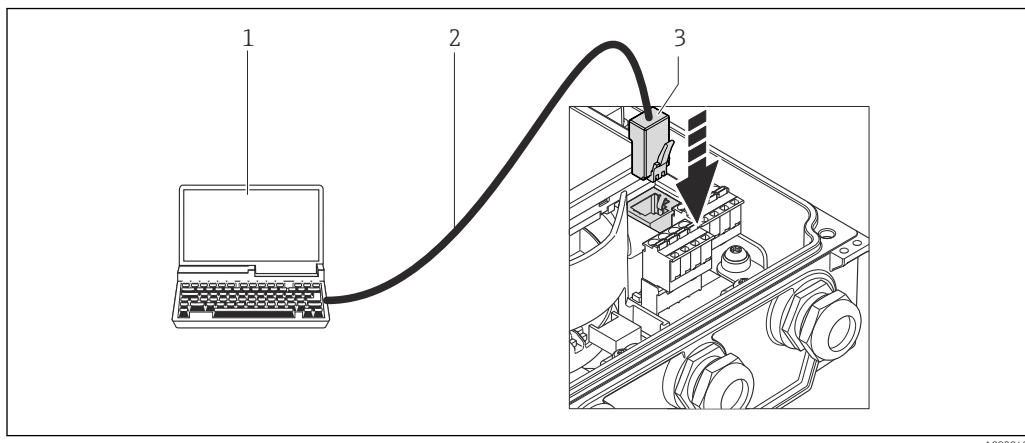

A0020481

- 1 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI -RJ45) of the measuring device with access to the integrated Web server

Languages

Can be operated in the following languages:

- Via local display:
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech
- Via "FieldCare" operating tool:
English, German, French, Spanish, Italian, Chinese, Japanese
- Via Web browser
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech

16.12 Certificates and approvals

CE mark

The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

C-Tick symbol

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

Ex approval

The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Control Drawing" document. Reference is made to this document on the nameplate.

Drinking water approval

- ACS
- KTW/W270
- NSF 61
- WRAS BS 6920

Measuring instrument approval

Promag W 400 is (optionally) approved as a cold water meter (MI-001) for volume measurement in service subject to legal metrological control in accordance with the European Measuring Instruments Directive 2004/22/EC (MID).

Promag W 400 is qualified to OIML R49 and has an OIML Certificate of Conformity (optional).

Other standards and guidelines

- EN 60529
Degrees of protection provided by enclosures (IP code)
- EN 61010-1
Safety requirements for electrical equipment for measurement, control and laboratory use
- IEC/EN 61326
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).
- ANSI/ISA-61010-1 (82.02.01): 2004
Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use - Part 1 General Requirements
- CAN/CSA-C22.2 No. 61010-1-04
Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use - Part 1 General Requirements
- NAMUR NE 21
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 105
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Cleaning

Package	Description
Electrode cleaning circuit (ECC)	The electrode cleaning circuit (ECC) function has been developed to have a solution for applications where magnetite (Fe_3O_4) deposits frequently occur (e.g. hot water). Since magnetite is highly conductive this build up leads to measuring errors and ultimately to the loss of signal. The application package is designed to AVOID build up of highly conductive matter and thin layers (typical of magnetite).

Diagnostics functions

Package	Description
HistoROM extended function	Comprises extended functions concerning the event log and the activation of the measured value memory. Event log: Memory volume is extended from 20 message entries (basic version) to up to 100 entries. Data logging (line recorder): - Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. - Data logging is visualized via the local display or FieldCare.

Heartbeat Technology

Package	Description
Heartbeat Verification +Monitoring	Heartbeat Monitoring: Continuously supplies monitoring data, which are characteristic of the measuring principle, for an external condition monitoring system. This makes it possible to: - Draw conclusions - using these data and other information - about the impact the measuring application has on the measuring performance over time. - Schedule servicing in time. - Monitor the product quality, e.g. gas pockets. Heartbeat Verification: Makes it possible to check the device functionality on demand when the device is installed, without having to interrupt the process. - Access via onsite operation or other operating interfaces, such as FieldCare for instance. - End-to-end, traceable documentation of the verification results, including report. - Makes it possible to extend calibration intervals in accordance with operator's risk assessment.

16.14 Accessories

 Overview of accessories available for order →  144

16.15 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions

Measuring device	Documentation code
Promag W 400	KA01114D

Technical Information

Measuring device	Documentation code
Promag W 400	TI01046D

Supplementary device-
dependent documentation

Special documentation

Contents	Documentation code
Heartbeat Technology	SD01183D
Information on Custody Transfer Measurement	SD01230D

Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	 Overview of accessories available for order →  144

17 Appendix

17.1 Overview of the operating menu

The following graphic provides an overview of the entire operating menu structure with its menus, submenus and parameters. The page reference indicates where a description of the parameter can be found in the manual.

Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

For the Order Code "Application Package", the associated parameters are described in the Special Documentation.

Display language	→ 108
Operation	→ 180
Setup	→ 181
Diagnostics	→ 187
Expert	→ 191

17.1.1 "Operation" menu

Navigation Operation

Operation	→ 116
Display language	→ 108
Web server language	
Access status display	
Access status tooling	
Locking status	
► Display	→ 92
Format display	→ 93
Contrast display	

Backlight	→ 108
Display interval	→ 108
► Totalizer handling	
Control Totalizer 1 to 3	→ 120
Preset value 1 to 3	→ 120
Reset all totalizers	→ 120

17.1.2 "Setup" menu

Navigation  Setup

Setup	→ 76
Device tag	→ 82
► Status input	→ 82
Assign status input	→ 83
Active level	→ 83
Response time status input	→ 83
► Current output 1	→ 84
Assign current output	→ 85
Mass flow unit	→ 85
Volume flow unit	→ 85
Conductivity unit	→ 85
Current span	→ 85
0/4 mA value	→ 85
20 mA value	→ 85
Failure mode	→ 85
Failure current	→ 85

► Pulse/frequency/switch output 1 to 2

→ 86

Operating mode

→ 86

Assign pulse output

→ 86

Assign frequency output

→ 88

Switch output function

→ 91

Assign diagnostic behavior

→ 91

Assign limit

→ 92

Assign flow direction check

→ 92

Assign status

→ 92

Mass flow unit

→ 89

Mass unit

→ 86

Volume flow unit

→ 89

Conductivity unit

→ 89

Volume unit

→ 87

Density unit

→ 87

Unit totalizer

→ 92

Unit totalizer

→ 92

Unit totalizer

→ 92

Value per pulse

→ 87

Pulse width

→ 87

Failure mode

→ 87

Minimum frequency value

→ 89

Maximum frequency value

→ 89

Measuring value at minimum frequency

→ 89

Measuring value at maximum frequency	→ 89
Failure mode	→ 89
Failure frequency	→ 89
Switch-on value	→ 92
Switch-off value	→ 92
Switch-on delay	→ 92
Switch-off delay	→ 92
Failure mode	→ 92
Invert output signal	→ 87
► Display	→ 92
Format display	→ 93
Value 1 display	→ 93
0% bargraph value 1	→ 94
100% bargraph value 1	→ 94
Value 2 display	→ 94
Value 3 display	→ 94
0% bargraph value 3	→ 94
100% bargraph value 3	→ 94
Value 4 display	→ 94
► Output conditioning	→ 94
Display damping	→ 95
Assign current output	→ 95
Damping output 1	→ 95
Measuring mode output 1	→ 95

Assign frequency output	→ 96
Damping output 1	→ 96
Measuring mode output 1	→ 96
Assign pulse output	→ 96
Measuring mode output 1	→ 96
► Low flow cut off	→ 96
Assign process variable	→ 97
On value low flow cutoff	→ 97
Off value low flow cutoff	→ 97
Pressure shock suppression	→ 97
► Empty pipe detection	→ 98
Empty pipe detection	→ 98
New adjustment	→ 98
Switch point empty pipe detection	→ 98
Response time empty pipe detection	→ 98
► HART input	→ 99
Capture mode	→ 99
Device ID	→ 99
Device type	→ 99
Manufacturer ID	→ 99
Burst command	→ 100
Slot number	→ 100
Timeout	→ 100

Failure mode	→ 100
Failure value	→ 100
► Advanced setup	→ 101
Enter access code	
► System units	→ 103
Volume flow unit	→ 104
Volume unit	→ 104
Conductivity unit	→ 104
Temperature unit	→ 104
Mass flow unit	→ 104
Mass unit	→ 104
Density unit	→ 104
► Sensor adjustment	→ 105
Installation direction	→ 105
► Totalizer 1 to 3	→ 105
Assign process variable	→ 105
Unit totalizer	→ 105
Totalizer operation mode	→ 105
Failure mode	→ 105
► Display	→ 92
Format display	→ 93
Value 1 display	→ 93
0% bargraph value 1	→ 94
100% bargraph value 1	→ 94
Decimal places 1	→ 107

Value 2 display	→ 94
Decimal places 2	→ 107
Value 3 display	→ 94
0% bargraph value 3	→ 94
100% bargraph value 3	→ 94
Decimal places 3	→ 107
Value 4 display	→ 94
Decimal places 4	→ 107
Display language	→ 108
Display interval	→ 108
Display damping	→ 108
Header	→ 108
Header text	→ 108
Separator	→ 108
Backlight	→ 108
► Electrode cleaning circuit	→ 108
Electrode cleaning circuit	→ 109
ECC duration	→ 109
ECC recovery time	→ 109

ECC cleaning cycle	→ 109
ECC Polarity	→ 109
► Administration	→ 109
► Define access code	→ 113
Define access code	→ 109
Confirm access code	
Device reset	→ 109

17.1.3 "Diagnostics" menu

Navigation   Diagnostics

🔍 Diagnostics	→ 134
Actual diagnostics	→ 134
Previous diagnostics	→ 134
Operating time from restart	
Operating time	→ 110
► Diagnostic list	
Diagnostics 1	
Diagnostics 2	
Diagnostics 3	
Diagnostics 4	
Diagnostics 5	
► Event logbook	
Filter options	
► Event list	

► Device information
→  137

Device tag

→  138

Serial number

→  138

Firmware version

→  139

Device name

→  139

Order code

→  139

Extended order code 1

→  139

Extended order code 2

→  139

Extended order code 3

→  139

ENP version

→  139

Custody transfer counter

→  139

Timestamp last custody transfer

→  139

Device revision

→  139

Device ID

→  139

Device type

→  139

Manufacturer ID

→  139

IP address

→  139

Subnet mask

→  139

Default gateway

→  139
► Measured values
► Process variables
→  116

Volume flow

→  117

Mass flow

→  117

Conductivity

→  117

► Totalizer

→ 105

Totalizer value 1 to 3

→ 117

Totalizer overflow 1 to 3

→ 117

► Input values

→ 117

Value status input

→ 118

► Output values

→ 118

Output current 1

→ 118

Measured current 1

→ 118

Pulse output 1

→ 118

Output frequency 1

→ 118

Switch status 1

→ 118

Output frequency 2

→ 118

Pulse output 2

→ 118

Switch status 2

→ 118

► Data logging

→ 120

Assign channel 1

→ 121

Assign channel 2

Assign channel 3

Assign channel 4

Logging interval

→ 121

Clear logging data

→ 121

► Display channel 1

► Display channel 2

► Display channel 3

► Display channel 4

**► Heartbeat****► Performing verification**

Year

Month

Day

Hour

AM/PM

Minute

Verification mode

External device information

External reference voltage 1

External reference voltage 2

Start verification

Progress

Measured values

Output values

Status

Overall result

► Verification results

Date/time

Verification ID

Operating time

Overall result

Sensor

Sensor electronic module	
I/O module	
► Monitoring results	
Noise	
Coil current shot time	
Reference electrode potential against PE	
► Simulation	→ 111
Assign simulation process variable	→ 112
Value process variable	→ 112
Simulation status input	→ 112
Input signal level	→ 112
Simulation current output 1	→ 112
Value current output 1	→ 112
Frequency simulation 1 to 2	→ 112
Frequency value 1 to 2	→ 112
Pulse simulation 1 to 2	→ 112
Pulse value 1 to 2	→ 112
Switch output simulation 1 to 2	→ 112
Switch status 1 to 2	→ 112
Simulation device alarm	→ 112
Diagnostic event category	→ 113
Simulation diagnostic event	→ 113

17.1.4 "Expert" menu

The following tables provide an overview of the **Expert** menu with its submenus and parameters. The direct access code to the parameter is given in brackets. The page reference indicates where a description of the parameter can be found in the manual.



Navigation



Expert

Expert	
Direct access (0106)	
Locking status (0004)	
Access status display (0091)	
Access status tooling (0005)	
Enter access code (0003)	
► System	→ 192
► Sensor	→ 194
► Input	
► Output	→ 198
► Communication	→ 200
► Application	→ 203
► Diagnostics	→ 204

"System" submenu

Navigation



Expert → System

► System	
► Display	→ 92
Display language (0104)	→ 108
Format display (0098)	→ 93
Value 1 display (0107)	→ 93
0% bargraph value 1 (0123)	→ 94
100% bargraph value 1 (0125)	→ 94
Decimal places 1 (0095)	→ 107

Value 2 display (0108)	→ 94
Decimal places 2 (0117)	→ 107
Value 3 display (0110)	→ 94
0% bargraph value 3 (0124)	→ 94
100% bargraph value 3 (0126)	→ 94
Decimal places 3 (0118)	→ 107
Value 4 display (0109)	→ 94
Decimal places 4 (0119)	→ 107
Display interval (0096)	→ 108
Display damping (0094)	→ 108
Header (0097)	→ 108
Header text (0112)	→ 108
Separator (0101)	→ 108
Contrast display (0105)	
Backlight (0111)	→ 108
Access status display (0091)	
► Diagnostic handling	
Alarm delay (0651)	
► Diagnostic behavior	
Assign behavior of diagnostic no. 441 (0657)	
Assign behavior of diagnostic no. 442 (0658)	
Assign behavior of diagnostic no. 443 (0659)	
Assign behavior of diagnostic no. 531 (0741)	

Assign behavior of diagnostic no. 832 (0681)	
Assign behavior of diagnostic no. 833 (0682)	
Assign behavior of diagnostic no. 862 (0745)	
Assign behavior of diagnostic no. 937 (0743)	
Assign behavior of diagnostic no. 302 (0739)	
► Administration	→ 109
► Define access code	→ 113
Define access code	→ 109
Confirm access code	
Device reset (0000)	→ 109
Activate SW option (0029)	
Software option overview (0015)	

"Sensor" submenu

Navigation

 Expert → Sensor

► Sensor	
► Measured values	
► Process variables	→ 116
Volume flow (1838)	→ 117
Mass flow (1847)	→ 117
Conductivity (1850)	→ 117
► Totalizer	→ 105
Totalizer value 1 to 3 (0911-1 to 3)	→ 117
Totalizer overflow 1 to 3 (0910-1 to 3)	→ 117

► Input values

→ 117

Value status input (1353)

→ 118

► Output values

→ 118

Output current 1 (0361-1)

→ 118

Measured current 1 (0366-1)

→ 118

Pulse output 1 (0456-1)

→ 118

Output frequency 1 (0471-1)

→ 118

Switch status 1 (0461-1)

→ 118

Output frequency 2 (0471-2)

→ 118

Pulse output 2 (0456-2)

→ 118

Switch status 2 (0461-2)

→ 118

► System units

→ 103

Volume flow unit (0553)

→ 104

Volume unit (0563)

→ 104

Conductivity unit (0582)

→ 104

Temperature unit (0557)

→ 104

Mass flow unit (0554)

→ 104

Mass unit (0574)

→ 104

Density unit (0555)

→ 104

Date/time format (2812)

► User-specific units

User volume text (0567)

User volume offset (0569)

User volume factor (0568)

User mass text (0560)

User mass offset (0562)	
User mass factor (0561)	
► Process parameters	
Filter options (6710)	
Flow damping (6661)	
Flow override (1839)	
Conductivity damping (1803)	
Conductivity measurement (6514)	
► Low flow cut off	→ 96
Assign process variable (1837)	→ 97
On value low flow cutoff (1805)	→ 97
Off value low flow cutoff (1804)	→ 97
Pressure shock suppression (1806)	→ 97
► Empty pipe detection	→ 98
Empty pipe detection (1860)	→ 98
Switch point empty pipe detection (6562)	→ 98
Response time empty pipe detection (1859)	→ 98
Empty pipe adjust value (6527)	
Full pipe adjust value (6548)	
Measured value EPD (6559)	
► Empty pipe adjust	
New adjustment (6560)	→ 98
► Electrode cleaning circuit	→ 108
Electrode cleaning circuit (6528)	→ 109

ECC duration (6555)	→ 109
ECC recovery time (6556)	→ 109
ECC cleaning cycle (6557)	→ 109
ECC Polarity (6631)	→ 109
► External compensation	
External value (6707)	
External density (6630)	
Fixed density (6623)	
► Sensor adjustment	→ 105
Installation direction (1809)	→ 105
Integration time (6533)	
Measuring period (6536)	
► Process variable adjustment	
Volume flow offset (1831)	
Volume flow factor (1832)	
Mass flow offset (1841)	
Mass flow factor (1846)	
Conductivity offset (1848)	
Conductivity factor (1849)	
► Calibration	
Nominal diameter (2807)	
Calibration factor (6522)	
Zero point (6546)	
Conductivity calibration factor (6718)	

"Current input" submenu

Navigation

 Expert → Input → Current input

► Input
► Current input
Current span (1605)
4 mA value (1606)
20 mA value (1607)
Failure mode (1601)
Failure value (1602)

► Output	
► Current output 1	→  84
Assign current output (0359-1)	→  85
Current span (0353-1)	→  85
Fixed current (0365-1)	
0/4 mA value (0367-1)	→  85
20 mA value (0372-1)	→  85
Measuring mode (0351-1)	
Damping output (0363-1)	
Response time (0378-1)	
Failure mode (0364-1)	→  85
Failure current (0352-1)	→  85

Output current 1 (0361-1)	→ 118
Measured current 1 (0366-1)	→ 118
► Pulse/frequency/switch output 1 to 2	→ 86
Operating mode (0469-1 to 2)	→ 86
Assign pulse output (0460-1 to 2)	→ 86
Value per pulse (0455-1 to 2)	→ 87
Pulse width (0452-1 to 2)	→ 87
Measuring mode (0457-1 to 2)	
Failure mode (0480-1 to 2)	→ 87
Pulse output 1 to 2 (0456-1 to 2)	→ 118
Assign frequency output (0478-1 to 2)	→ 88
Minimum frequency value (0453-1 to 2)	→ 89
Maximum frequency value (0454-1 to 2)	→ 89
Measuring value at minimum frequency (0476-1 to 2)	→ 89
Measuring value at maximum frequency (0475-1 to 2)	→ 89
Measuring mode (0479-1 to 2)	
Damping output (0477-1 to 2)	
Response time (0491-1 to 2)	
Failure mode (0451-1 to 2)	→ 89
Failure frequency (0474-1 to 2)	→ 89
Output frequency 1 to 2 (0471-1 to 2)	→ 118
Switch output function (0481-1 to 2)	→ 91
Assign diagnostic behavior (0482-1 to 2)	→ 91

Assign limit (0483-1 to 2)	→ 92
Switch-on value (0466-1 to 2)	→ 92
Switch-off value (0464-1 to 2)	→ 92
Assign flow direction check (0484-1 to 2)	→ 92
Assign status (0485-1 to 2)	→ 92
Switch-on delay (0467-1 to 2)	→ 92
Switch-off delay (0465-1 to 2)	→ 92
Failure mode (0486-1 to 2)	→ 92
Switch status 1 to 2 (0461-1 to 2)	→ 118
Invert output signal (0470-1 to 2)	→ 87

► Communication	
► HART input	→ 99
► Configuration	
Capture mode (7001)	→ 99
Device ID (7007)	→ 99
Device type (7008)	→ 99
Manufacturer ID (7009)	→ 99
Burst command (7006)	→ 100
Slot number (7010)	→ 100
Timeout (7005)	→ 100

Failure mode (7011)	→ 100
Failure value (7012)	→ 100
► Input	
Value (7003)	
Status (7004)	
► HART output	
► Configuration	
HART short tag (0220)	
Device tag (0215)	→ 82
HART address (0219)	
No. of preambles (0217)	
► Burst configuration	→ 72
► Burst configuration 1 to 3	→ 72
Burst mode 1 to 3 (2032-1 to 3)	→ 73
Burst command 1 to 3 (2031-1 to 3)	→ 73
Burst variable 0 (2033-1 to 3)	→ 74
Burst variable 1 (2034-1 to 3)	→ 74
Burst variable 2 (2035-1 to 3)	→ 74
Burst variable 3 (2036-1 to 3)	→ 74
Burst variable 4 (2037-1 to 3)	→ 74
Burst variable 5 (2038-1 to 3)	→ 74
Burst variable 6 (2039-1 to 3)	→ 74
Burst variable 7 (2040-1 to 3)	→ 74
Burst trigger mode (2044-1 to 3)	→ 74
Burst trigger level (2043-1 to 3)	→ 74

Min. update period (2042-1 to 3)	→ 74
Max. update period (2041-1 to 3)	→ 74
► Information	
Device revision (0204)	→ 139
Device ID (0221)	→ 139
Device type (0209)	
Manufacturer ID (0259)	
HART revision (0205)	
HART descriptor (0212)	
HART message (0216)	
Hardware revision (0206)	
Software revision (0224)	
HART date code (0202)	
► Output	→ 198
Assign PV (0234)	
Primary variable (PV) (0201)	
Assign SV (0235)	
Secondary variable (SV) (0226)	
Assign TV (0236)	
Tertiary variable (TV) (0228)	
Assign QV (0237)	
Quaternary variable (QV) (0203)	
► Web server	→ 66
Web server language (7221)	
MAC address (7214)	



IP address (7209)

→ 139

Subnet mask (7211)

→ 139

Default gateway (7210)

→ 139

Web server functionality (7222)

→ 66

► Diagnostic configuration

Event category 004 (0238)

Event category 441 (0210)

Event category 442 (0230)

Event category 443 (0231)

Event category 531 (0262)

Event category 832 (0218)

Event category 833 (0225)

Event category 834 (0227)

Event category 835 (0229)

Event category 862 (0214)

Event category 937 (0260)

► Application

Reset all totalizers (2806)

→ 120

► Totalizer 1 to 3

→ 105

Assign process variable (0914-1 to 3)

→ 105

Unit totalizer (0915-1 to 3)

→ 105

Totalizer operation mode
(0908-1 to 3)

→ 105

Control Totalizer 1 to 3 (0912-1 to 3)

→ 120

Preset value 1 to 3 (0913–1 to 3)	→ 120
Failure mode (0901–1 to 3)	→ 105

► Diagnostics	→ 134
Actual diagnostics (0691)	→ 134
Previous diagnostics (0690)	→ 134
Operating time from restart (0653)	
Operating time (0652)	→ 110
► Diagnostic list	
Diagnostics 1 (0692)	
Diagnostics 2 (0693)	
Diagnostics 3 (0694)	
Diagnostics 4 (0695)	
Diagnostics 5 (0696)	
► Event logbook	
Filter options (0705)	
► Event list	
► Device information	→ 137
Device tag (0011)	→ 138
Serial number (0009)	→ 138
Firmware version (0010)	→ 139
Device name (0013)	→ 139
Order code (0008)	→ 139
Extended order code 1 (0023)	→ 139
Extended order code 2 (0021)	→ 139

Extended order code 3 (0022)	→ 139
Configuration counter (0233)	
ENP version (0012)	→ 139
Custody transfer counter (14402)	→ 139
Timestamp last custody transfer (14403)	→ 139
Counter custody transfer changes (14401)	→ 139
IP address (7209)	→ 139
Subnet mask (7211)	→ 139
Default gateway (7210)	→ 139
► Data logging	→ 120
Assign channel 1 (0851)	→ 121
Assign channel 2 (0852)	
Assign channel 3 (0853)	
Assign channel 4 (0854)	
Logging interval (0856)	→ 121
Clear logging data (0855)	→ 121
► Display channel 1	
► Display channel 2	
► Display channel 3	
► Display channel 4	

► Min/max values

Reset min/max values (6541)

► Main electronic temperature

Minimum value (6547)

Maximum value (6545)

► Heartbeat

► Heartbeat base settings

Plant operator (2754)

Location (2755)

► Performing verification

Year (2846)

Month (2845)

Day (2842)

Hour (2843)

AM/PM (2813)

Minute (2844)

Verification mode (12105)

External device information (12101)

External reference voltage 1 (12106)

External reference voltage 2 (12107)

Start verification (12127)

Progress (2808)

Measured values (12102)

Output values (12103)

Status (12153)	
Overall result (12149)	
► Verification results	
Date/time (12142)	
Verification ID (12141)	
Operating time (12126)	
Overall result (12149)	
Sensor (12152)	
Sensor electronic module (12151)	
I/O module (12145)	
► Monitoring results	
Noise (12158)	
Coil current shot time (12150)	
Reference electrode potential against PE (12155)	
► Simulation	→ 111
Assign simulation process variable (1810)	→ 112
Value process variable (1811)	→ 112
Simulation status input (1355)	→ 112
Input signal level (1356)	→ 112
Simulation current output 1 (0354-1)	→ 112
Value current output 1 (0355-1)	→ 112
Frequency simulation 1 to 2 (0472-1 to 2)	→ 112
Frequency value 1 to 2 (0473-1 to 2)	→ 112
Pulse simulation 1 to 2 (0458-1 to 2)	→ 112



Pulse value 1 to 2 (0459-1 to 2)	→ 112
Switch output simulation 1 to 2 (0462-1 to 2)	→ 112
Switch status 1 to 2 (0463-1 to 2)	→ 112
Simulation device alarm (0654)	→ 112
Diagnostic event category (0738)	→ 113
Simulation diagnostic event (0737)	→ 113

Index

A

Access authorization to parameters	
Read access	62
Write access	62
Access code	62
Incorrect input	62
Adapters	22
Adapting the diagnostic behavior	130
Adapting the status signal	130
Ambient temperature	
Influence	155
Ambient temperature range	21
AMS Device Manager	69
Function	69
Application	9, 146
Applicator	146
Approvals	176

B

Buried applications	24
Burst mode	72

C

C-Tick symbol	176
Cable entries	
Technical data	153
Cable entry	
Degree of protection	46
CE mark	11, 176
Certificates	176
Checklist	
Post-connection check	46
Post-installation check	35
Cleaning	
Exterior cleaning	141
Interior cleaning	141
Commissioning	75
Advanced settings	101
Configuring the measuring device	76
Communication-specific data	71
Conductivity	157
Connecting cable	36
Connecting the measuring device	41
Connection	
see Electrical connection	
Connection examples, potential equalization	44
Connection preparations	40
Connection tools	36
Context menu	
Closing	57
Explanation	57
Opening	57
Current consumption	152
Current input (Submenu)	198

D

Declaration of Conformity	11
Define access code	113, 114
Degree of protection	46, 156
Design	
Measuring device	12
Designated use	9
Device components	12
Device description files	71
Device documentation	
Supplementary documentation	8
Device locking, status	116
Device name	
Sensor	15
Transmitter	14
Device repair	142
Device revision	71
Device type ID	71
Diagnostic behavior	
Explanation	126
Symbols	126
Diagnostic information	
Design, description	126, 129
FieldCare	129
Light emitting diodes	123
Local display	125
Overview	131
Remedial measures	131
Web browser	128
Diagnostic list	134
Diagnostic message	125
Diagnostics	
Symbols	125
Diagnostics (Menu)	187
DIP switch	
see Write protection switch	
Direct access	59
Direct access code	53
Disabling write protection	113
Display	
Current diagnostic event	134
Previous diagnostic event	134
see Local display	
Display area	
For operational display	52
In the navigation view	54
Display values	
For locking status	116
Disposal	142
Document	
Function	6
Symbols used	6
Document function	6
Documentation	178
Down pipe	19
Drinking water approval	176

E

ECC	108
Electrical connection	
Commubox FXA195	67
Commubox FXA195 (USB)	175
Degree of protection	46
Field Communicator	67
Field Communicator 475	175
Field Xpert SFX350/SFX370	175
Handheld terminals	67
Measuring device	36
Operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)	175
Operating tools	67
Via HART protocol	67, 175
Via service interface (CDI-RJ45)	68, 175
VIATOR Bluetooth modem	175
Web server	68, 175
Electromagnetic compatibility	156
Enabling write protection	113
Endress+Hauser services	
Maintenance	141
Repair	142
Environment	
Ambient temperature	21
Mechanical load	156
Shock resistance	156
Storage temperature	155
Vibration resistance	156
Error messages	
see Diagnostic messages	
Event history	135
Events list	135
Ex approval	176
Expert (Menu)	191
Extended order code	
Sensor	15
Transmitter	14
Exterior cleaning	141
F	
Field Communicator	
Function	70
Field Communicator 475	70
Field of application	
Residual risks	10
Field Xpert	
Function	68
Field Xpert SFX350	68
FieldCare	68
Device description file	71
Establishing a connection	69
Function	68
User interface	69
Filtering the event logbook	136
Firmware	
Release date	71
Version	71
Firmware history	140

Fitted electrodes	173
Flow direction	20
Flow limit	157
Function check	75
Function scope	
AMS Device Manager	69
Field Communicator	70
Field Communicator 475	70
Field Xpert	68
SIMATIC PDM	70
Functions	
see Parameter	
G	
Galvanic isolation	152
H	
Hardware write protection	114
HART input	
Settings	99
HART protocol	
Device variables	71
Measured variables	71
Help text	
Calling up	60
Close	60
Explanation	60
HistoROM	109
I	
I/O electronics module	12, 43
Identifying the measuring device	13
Immersion in water	23
Incoming acceptance	13
Influence	
Ambient temperature	155
Information on the document	6
Inlet runs	20
Input	146
Input mask	55
Inspection	
Installation	35
Received goods	13
Inspection check	
Connection	46
Installation	19
Installation conditions	
Adapters	22
Buried applications	24
Down pipe	19
Immersion in water	23
Inlet and outlet runs	20
Mounting location	19
Orientation	20
Partially filled pipe	19
System pressure	21
Vibrations	22
Installation dimensions	21
Interior cleaning	141

K

Keypad lock	
Disabling	62
Enabling	62

L

Languages, operation options	176
Line recorder	120
Local display	174
Editing view	55
Navigation view	53
see Diagnostic message	
see In alarm condition	
see Operational display	
Low flow cut off	152

M

Main electronics module	12
Maintenance tasks	141
Replacing seals	141
Managing the device configuration	109
Manufacturer ID	71
Manufacturing date	14, 15
Materials	170
Maximum measured error	153
Measured variables	
Calculated	146
Measured	146
see Process variables	
Measuring and test equipment	141
Measuring device	
Configuration	76
Conversion	142
Design	12
Disposal	143
Integrating via HART protocol	71
Mounting the sensor	24
Mounting the ground cable/ground disks	25
Mounting the seals	25
Screw tightening torques	25
Preparing for electrical connection	40
Preparing for mounting	24
Removing	142
Repair	142
Switch-on	75
Measuring instrument approval	176
Measuring principle	146
Measuring range	146
Measuring system	146
Measuring tube specification	169
Mechanical load	156
Media	9
Medium temperature range	156
Menu	
Diagnostics	134, 187
Expert	191
Operation	116, 180
Setup	76, 82, 181
Menus	

For measuring device configuration	76
For specific settings	101
Mounting dimensions	
see Installation dimensions	
Mounting location	19
Mounting preparations	24
Mounting requirements	
Installation dimensions	21
Mounting tools	24

N

Nameplate	
Sensor	15
Transmitter	14
Navigation path (navigation view)	53
Navigation view	
In the submenu	53
In the wizard	53
Numeric editor	55

O

Operable flow range	149
Operating elements	56, 126
Operating keys	
see Operating elements	
Operating menu	
Menus, submenus	49
Overview of menus with parameters	180
Structure	49
Submenus and user roles	50
Operating philosophy	50
Operation	116
Operation (Menu)	180
Operation options	48
Operational display	51
Operational safety	10
Order code	14, 15
Orientation (vertical, horizontal)	20
Outlet runs	20
Output	149
Output signal	149
Overview	
Operating menu	180

P

Packaging disposal	18
Parameter	
Changing	61
Enter a value	61
Parameter settings	
Administration (Submenu)	109, 137
Burst configuration 1 to 3 (Submenu)	72
Configuration backup display (Submenu)	109
Current output 1 (Wizard)	84
Data logging (Submenu)	120
Device information (Submenu)	137
Diagnostics (Menu)	134
Display (Submenu)	106
Display (Wizard)	92

Electrode cleaning circuit (Submenu)	108	Device components	142
Empty pipe detection (Wizard)	98	Replacing seals	141
For the status input	82	Requirements for personnel	9
HART input (Wizard)	99	Return	142
Input values (Submenu)	117	S	
Low flow cut off (Wizard)	96	Safety	9
Operation (Submenu)	119	Screw tightening torques	25
Output conditioning (Submenu)	94	Sensor	
Output conditioning (Wizard)	94	Mounting	24
Output values (Submenu)	118	Sensor (Submenu)	194
Process variables (Submenu)	116	Serial number	14, 15
Pulse/frequency/switch output 1 to 2 (Wizard)		Setting the operating language	75
86, 87,	89	Settings	
Sensor adjustment (Submenu)	105	Adapting the measuring device to the process	
Setup (Menu)	82	conditions	119
Simulation (Submenu)	111	Administration	109
Status input (Submenu)	82	Advanced display configurations	106
System units (Submenu)	103	Current output	84
Totalizer (Submenu)	117	Device reset	137
Totalizer 1 to 3 (Submenu)	105	Device tag	82
Web server (Submenu)	66	Electrode cleaning circuit (ECC)	108
Partially filled pipe	19	Empty pipe detection (EPD)	98
Performance characteristics	153	HART input	99
Post-connection check (checklist)	46	Local display	92
Post-installation check	75	Low flow cut off	96
Post-installation check (checklist)	35	Managing the device configuration	109
Potential equalization	44	Operating language	75
Power consumption	152	Output conditioning	94
Power supply failure	152	Pulse output	86
Pressure loss	157	Pulse/frequency/switch output	85, 87
Pressure tightness	157	Resetting the totalizer	119
Pressure-temperature ratings	157	Sensor adjustment	105
Process conditions		Simulation	111
Conductivity	157	Status input	82
Flow limit	157	Switch output	89
Medium temperature	156	System units	103
Pressure loss	157	Totalizer	105
Pressure tightness	157	Totalizer reset	119
Process connections	174	Setup (Menu)	181
Product safety	11	Shock resistance	156
Protecting parameter settings	113	Showing data logging	120
R		Signal on alarm	150
Read access	62	SIMATIC PDM	70
Reading measured values	116	Function	70
Recalibration	141	Software release	71
Reference operating conditions	153	Spare part	142
Registered trademarks	8	Spare parts	142
Remedial measures		Special connection instructions	46
Calling up	127	Standards and guidelines	177
Closing	127	Status area	
Remote operation	175	For operational display	51
Remote version		In the navigation view	53
Connecting the signal cables	41	Status signals	125, 128
Repair	142	Storage conditions	17
Notes	142	Storage temperature	17
Repair of a device	142	Storage temperature range	155
Repeatability	155	Structure	
Replacement		Operating menu	49

Submenu		
Administration	109, 137	
Advanced setup	101	
Burst configuration 1 to 3	72	
Configuration backup display	109	
Current input	198	
Data logging	120	
Device information	137	
Display	106	
Electrode cleaning circuit	108	
Events list	135	
Input values	117	
Operation	119	
Output conditioning	94	
Output values	118	
Overview	50	
Process variables	116	
Sensor	194	
Sensor adjustment	105	
Simulation	111	
Status input	82	
System	192	
System units	103	
Totalizer	117	
Totalizer 1 to 3	105	
Web server	66	
Supply unit		
Requirements	40	
Supply voltage	40, 152	
Surface roughness	174	
Symbols		
For communication	51	
For correction	55	
For diagnostic behavior	51	
For locking	51	
For measured variable	52	
For measurement channel number	52	
For menus	54	
For parameters	54	
For status signal	51	
For submenu	54	
For wizard	54	
In the status area of the local display	51	
In the text and numeric editor	55	
System (Submenu)	192	
System design		
Measuring system	146	
see Measuring device design		
System integration	71	
System pressure	21	
T		
Technical data, overview	146	
Temperature range		
Ambient temperature range for display	174	
Storage temperature	17	
Terminal assignment	38, 41, 43	
Terminals	153	
Text editor	55	
Tool tip		
see Help text		
Tools		
Electrical connection	36	
For mounting	24	
Transport	17	
Transmitter		
Connecting the signal cables	43	
Turning the display module	34	
Turning the housing	32	
Transporting the measuring device	17	
Troubleshooting		
General	122	
Turning the display module	34	
Turning the electronics housing		
see Turning the transmitter housing		
Turning the transmitter housing	32	
U		
Use of the measuring device		
Borderline cases	9	
Incorrect use	9	
see Designated use		
User roles	50	
V		
Version data for the device	71	
Vibration resistance	156	
Vibrations	22	
W		
W@M	141, 142	
W@M Device Viewer	13, 142	
Weight		
Compact version	158	
Sensor remote version	164	
Transport (notes)	17	
Wizard		
Current output 1	84	
Define access code	113	
Display	92	
Empty pipe detection	98	
HART input	99	
Low flow cut off	96	
Output conditioning	94	
Pulse/frequency/switch output 1 to 2	86, 87, 89	
Workplace safety	10	
Write access	62	
Write protection		
Via access code	113	
Via write protection switch	114	
Write protection switch	114	

www.addresses.endress.com
