

User Manual

cMT X Series Easyweb 2.0

www.nicsanat.com

021-87700210



Table of Contents

Chapter 1 System Settings.....	1
1.1 Overview	1
1.2 Ways to Log In Easyweb 2.0.....	1
1.3 Easyweb 2.0 Login Identities.....	2
1.4 Easyweb 2.0 Interface	3
Chapter 2 How to Use Webview	11
2.1 Overview	11
2.2 Enabling Webview.....	11
2.3 Log In Webview using an Internet Browser	11
2.4 When Webview Doesn't Open.....	13

Chapter 1 System Settings

1.1 Overview


Easyweb 2.0 is a web interface that allows users to configure parameters of cMT X Series HMI. Additionally, with its Webview feature, users can monitor HMIs through a web browser. This user manual explains the cMT X Series HMI features that can be configured using Easyweb 2.0.

1.2 Ways to Log In Easyweb 2.0

Connect an HMI via an Ethernet cable, and log in system settings in one of the following ways.


Via internet browser

Open internet browser (Windows Edge, Chrome, or Firefox), and enter HMI's IP address (e.g.: 192.168.2.121). The web page below opens. If Webview interface is shown after entering the IP address, please enter https://HMI_IP/admin to open Easyweb 2.0 system login page.

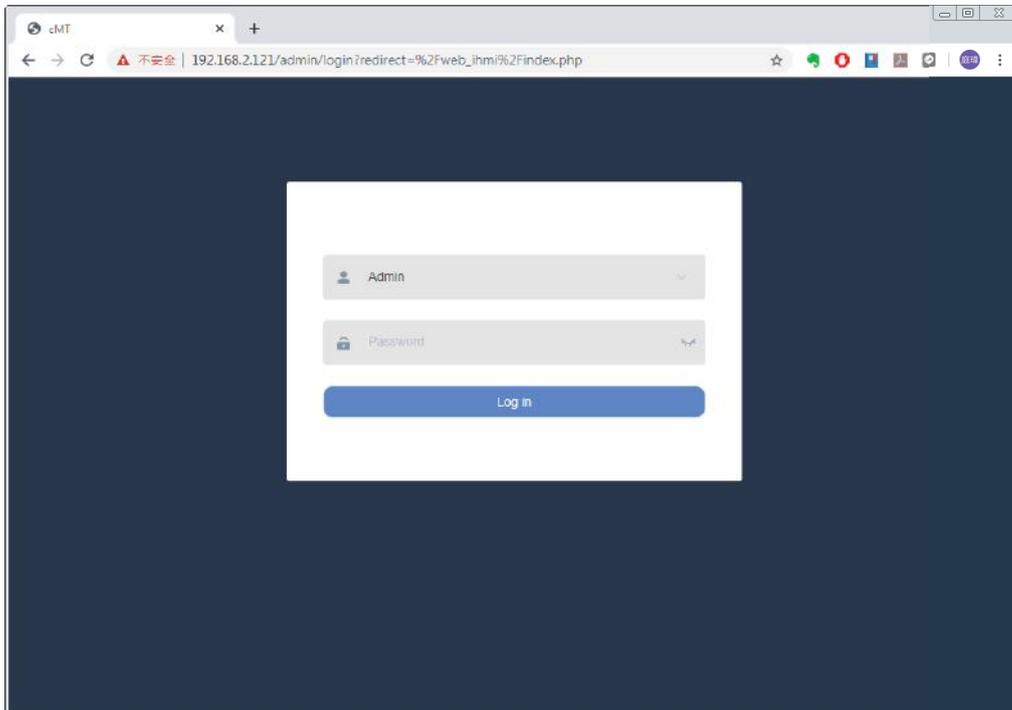

Set on cMT Viewer devices


Launch cMT Viewer App, tap Search, select the HMI and tap  icon to configure.

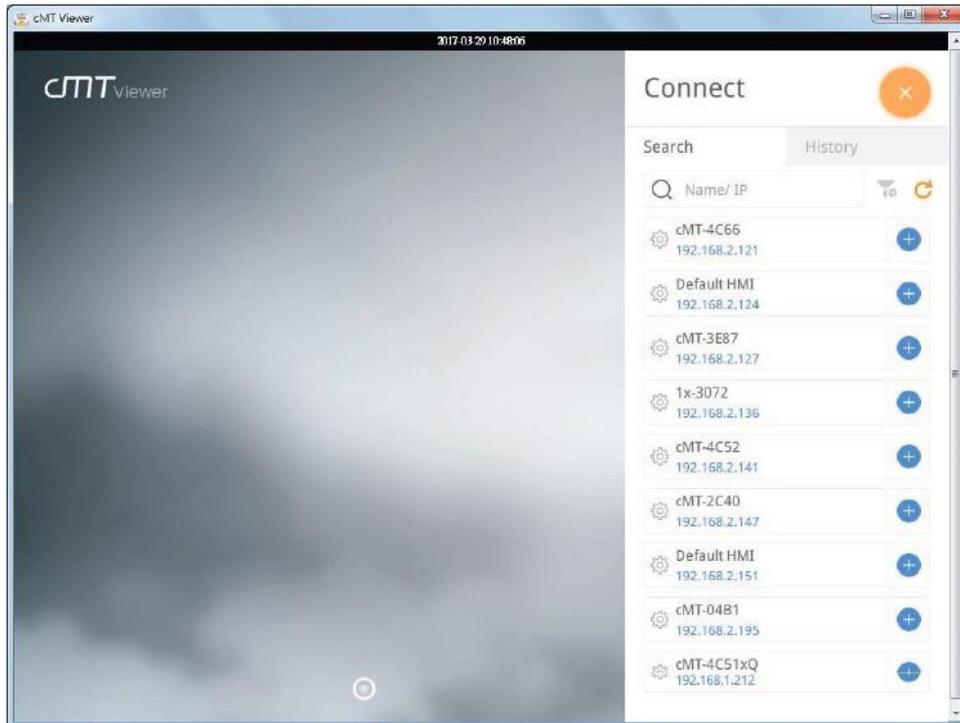

1.3 Easyweb 2.0 Login Identities

Three identity levels exist in Easyweb 2.0: [Admin], [Update], and [History]. [Admin] controls all the settings while [Update] controls limited items. For safety, specify a password before configuration. A password is needed for opening [History] settings, and the historical data can be backed up after logging in with password.


The default password is 111111. After successful login, the password for each identity level can be changed in [System Password] page.

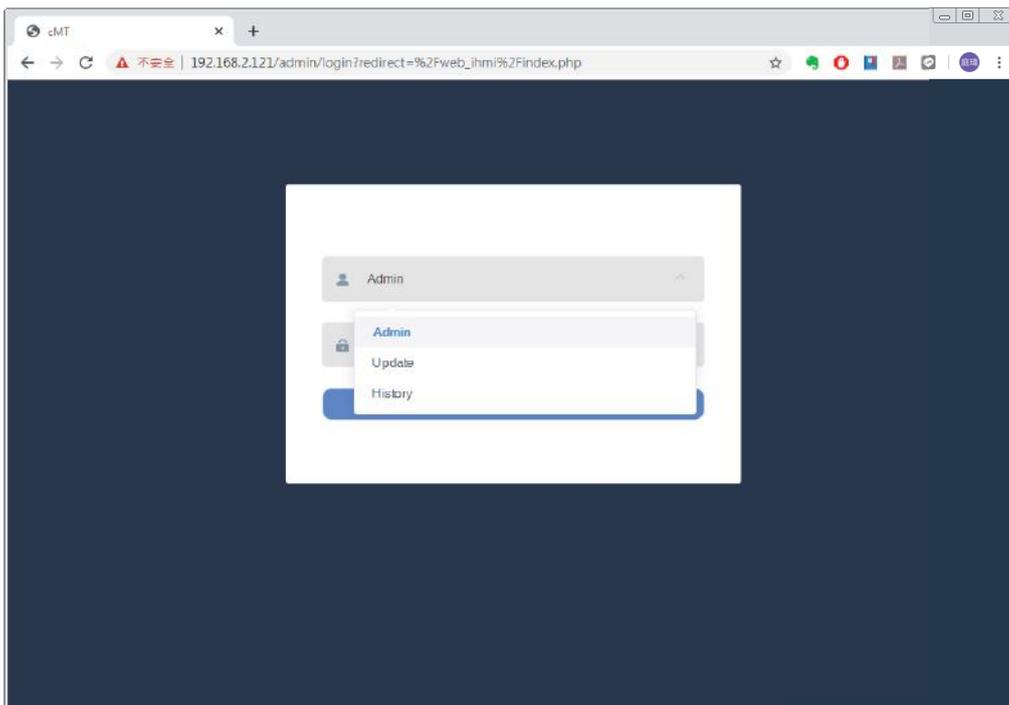

1.4 Easyweb 2.0 Interface


Dashboard

System status and HMI status are displayed in Dashboard after login.

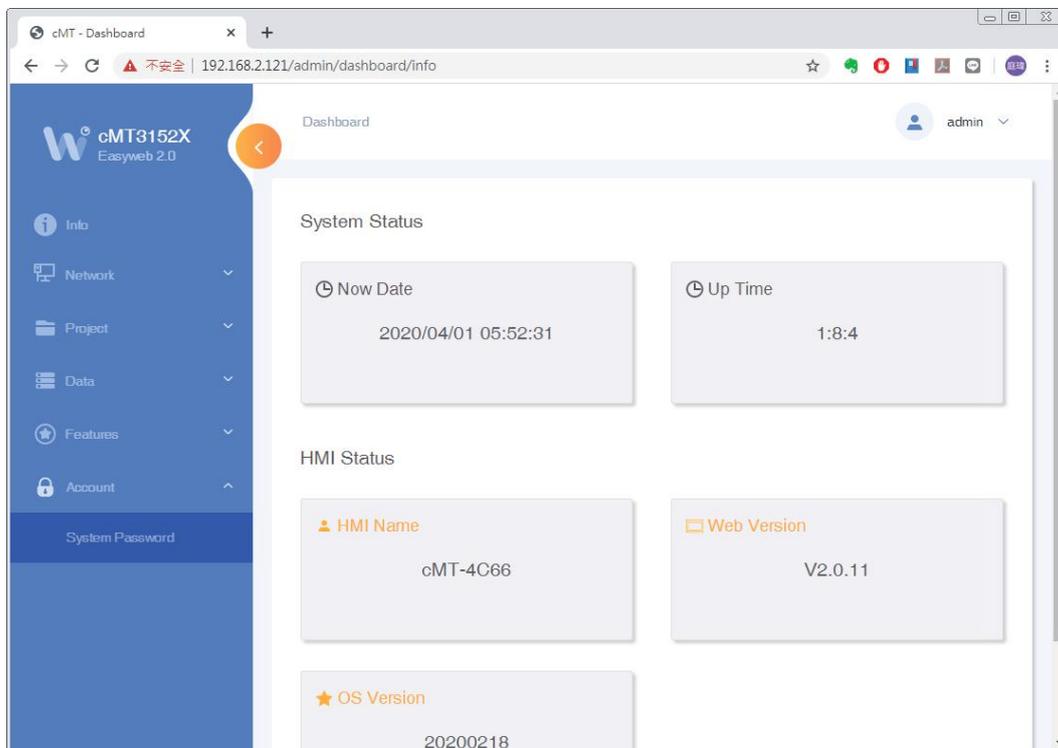


Info

In this page the user can edit HMI Name / Date / Time.

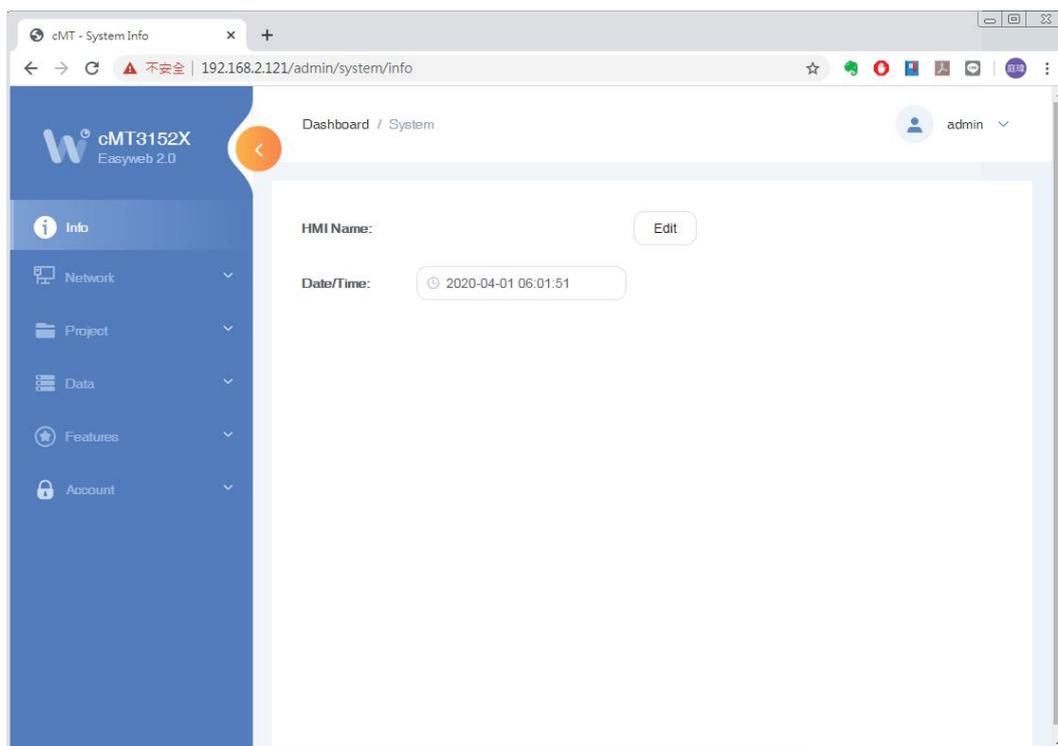


Network » Ethernet

In this page the user can set the IP address of each Ethernet port.

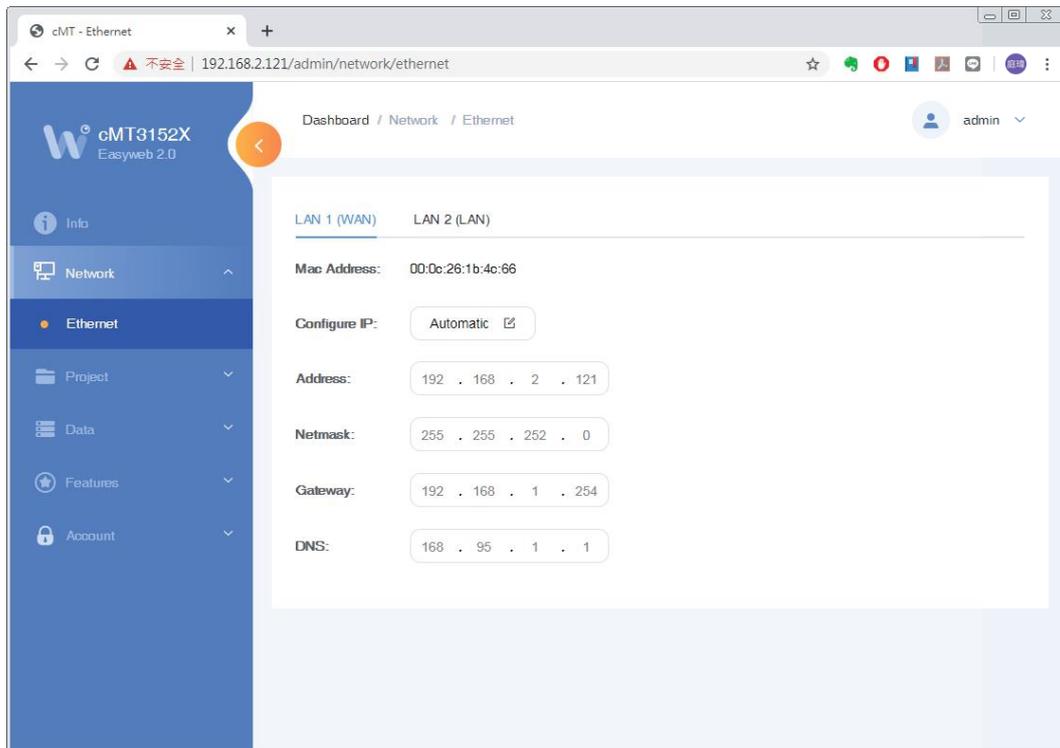

Project » Project Management

In this page the user can restart / update / back up the project file.

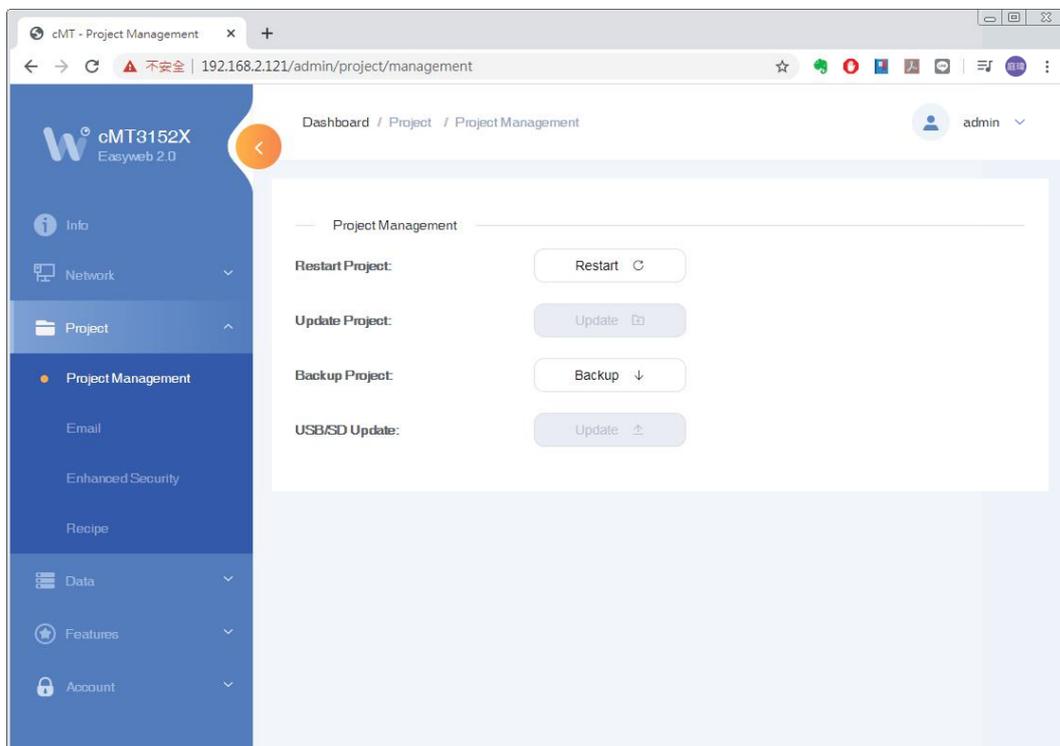

Project » Email

In this page the user can edit email contacts; e.g., the groups a contact is in, and email addresses.

Dashboard / Project / Email

SMTP Contacts Upload

*Host:

*Port:

*Username:

*Password:

*Confirm Password:

Authentication:

Encryption: None TLS SSL

Sender Information

*Name:

Project » Enhanced Security

In this page the user can set operable classes and password for each account.

Dashboard / Project / Enhanced Security


Accounts Import User Accounts

Please click [Save] button after editing data

ID	Hide	Account	Password	A	B	C	D	E	F	G	H	I
1		admin	111111	✓	✓	✓	✓	✓	✓	✓	✓	✓
2		user1	111	✓								
3		user2	222	✓	✓							
4		user3	333	✓	✓	✓						
5		user4	444	✓	✓	✓	✓					
6		user5	555	✓	✓	✓	✓	✓				
7		user6	666	✓	✓	✓	✓	✓	✓			

Project » Recipe


In this page the user can update, back up, or clear recipe data on HMI.

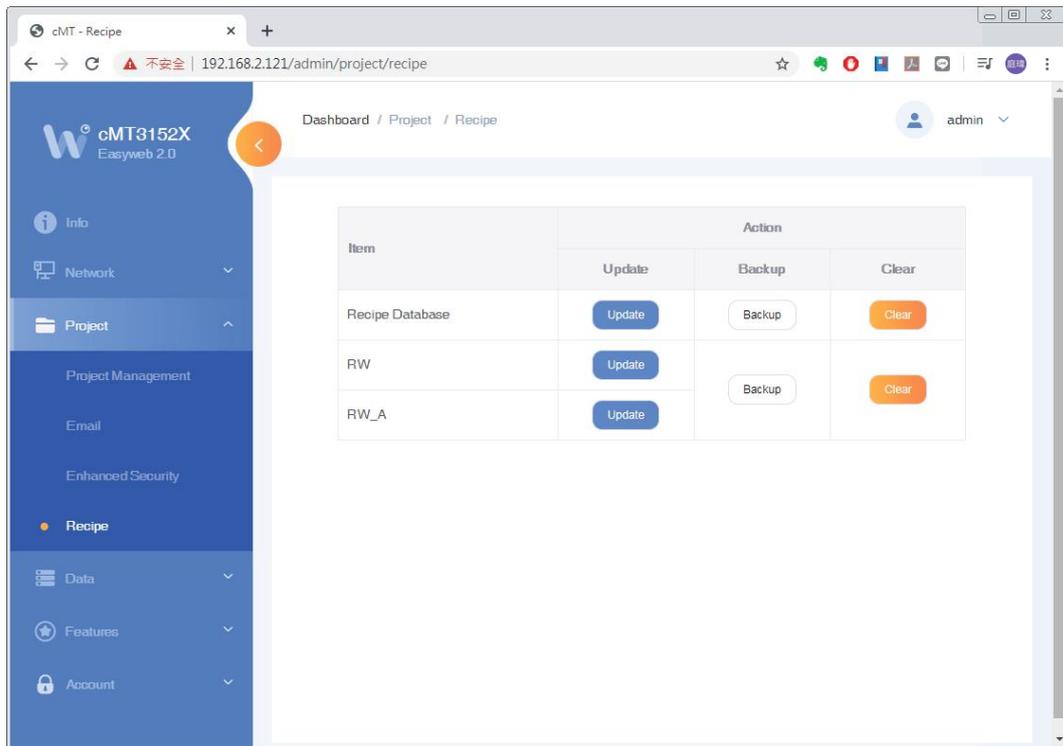

Item	Action		
	Update	Backup	Clear
Recipe Database	<button>Update</button>	<button>Backup</button>	<button>Clear</button>
RW	<button>Update</button>	<button>Backup</button>	<button>Clear</button>
RW_A	<button>Update</button>		

Data » Data Log & Trend Display

This page displays data log and the corresponding trend. The data can be exported or backed up.

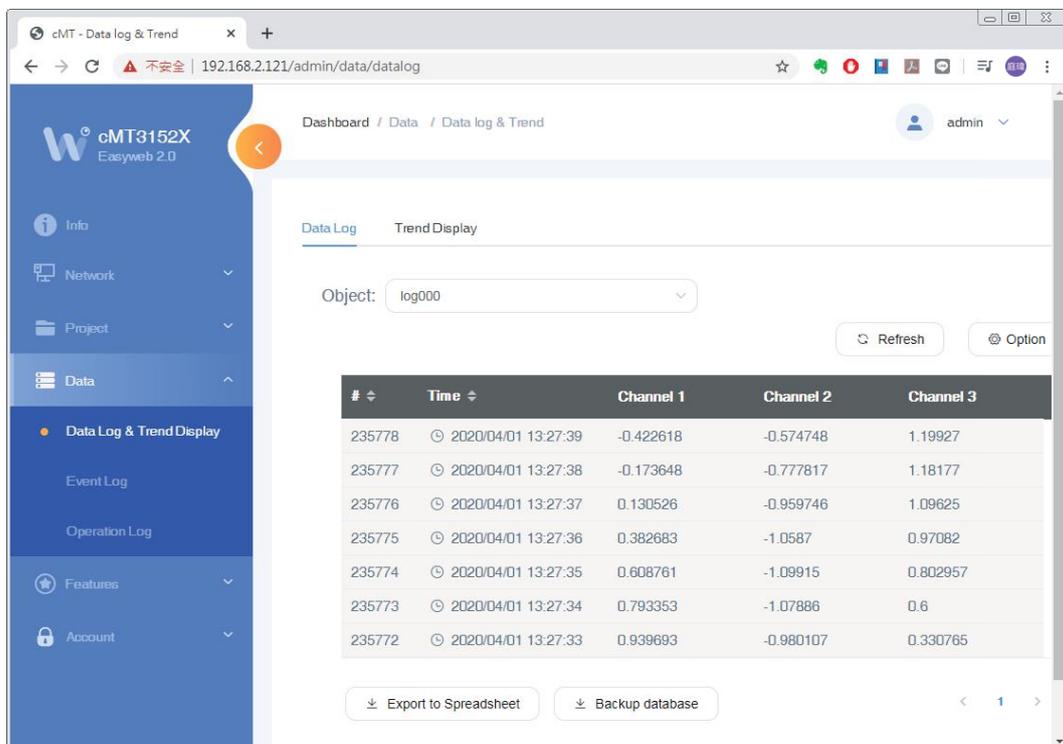


Object:

Refresh Option

#	Time	Channel 1	Channel 2	Channel 3
235778	2020/04/01 13:27:39	-0.422618	-0.574748	1.19927
235777	2020/04/01 13:27:38	-0.173648	-0.777817	1.18177
235776	2020/04/01 13:27:37	0.130526	-0.959746	1.09625
235775	2020/04/01 13:27:36	0.382683	-1.0587	0.97082
235774	2020/04/01 13:27:35	0.608761	-1.09915	0.802957
235773	2020/04/01 13:27:34	0.793353	-1.07886	0.6
235772	2020/04/01 13:27:33	0.939693	-0.980107	0.330765

Export to Spreadsheet Backup database

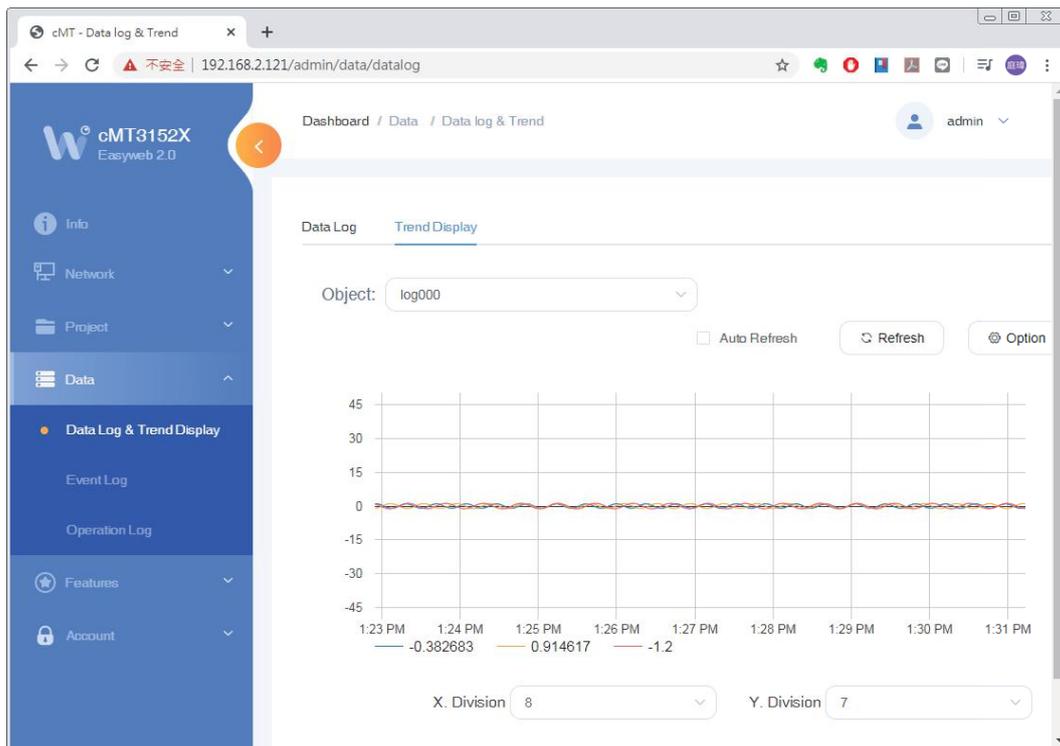


Data » Event Log

This page displays event logs, and the data can be exported or backed up.

#	Category	Event Message	Event trigger time	Return to normal time	Occurrence count
1	1	Tank Error !!	⌚ 2020/04/01 13:31:25	⌚	31
2	1	Machine Error !!	⌚ 2020/04/01 13:31:25	⌚ 2020/04/01 13:31:31	44
3	255	Start Memory Test	⌚ 2020/04/01 13:31:17	⌚	1
4	1	Flow Speed Error !!	⌚ 2020/04/01 13:31:12	⌚ 2020/04/01 13:31:20	17
5	1	Machine Error !!	⌚ 2020/04/01 13:31:10	⌚ 2020/04/01 13:31:18	43
6	1	Tank Error !!	⌚ 2020/04/01 13:31:06	⌚ 2020/04/01 13:31:15	30


Data » Operation Log

In this page the user can back up operation logs.

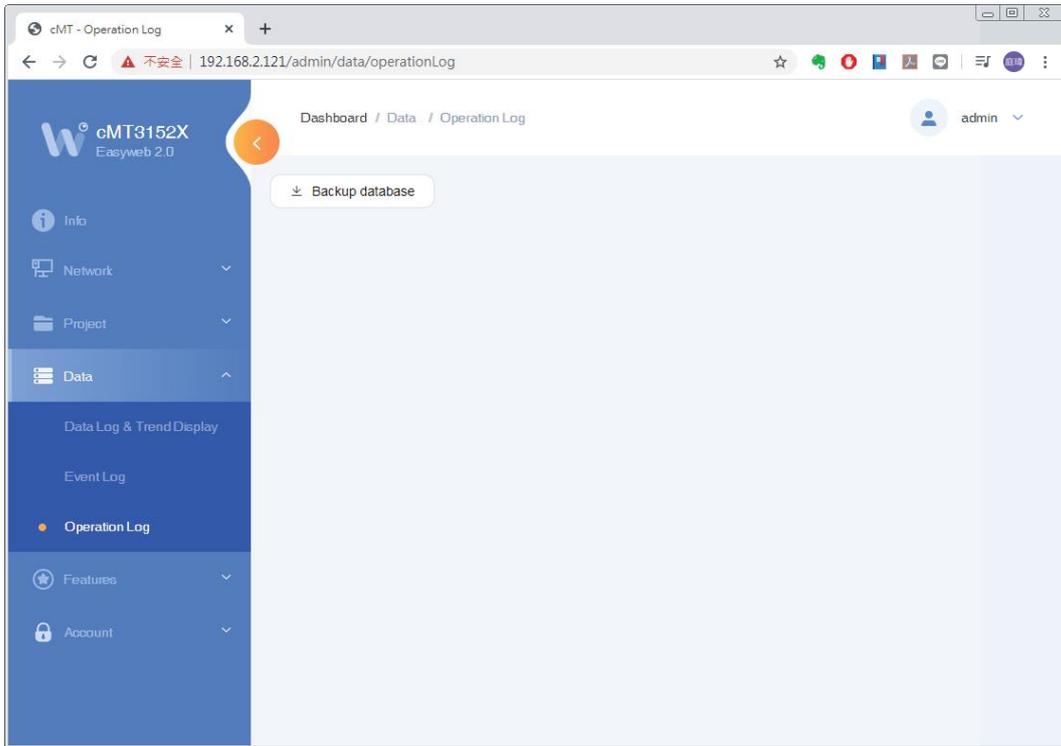


Features » Webview Setting

In this page the user can enable Webview and set password. Please see Chapter 2 in this user manual for more details.

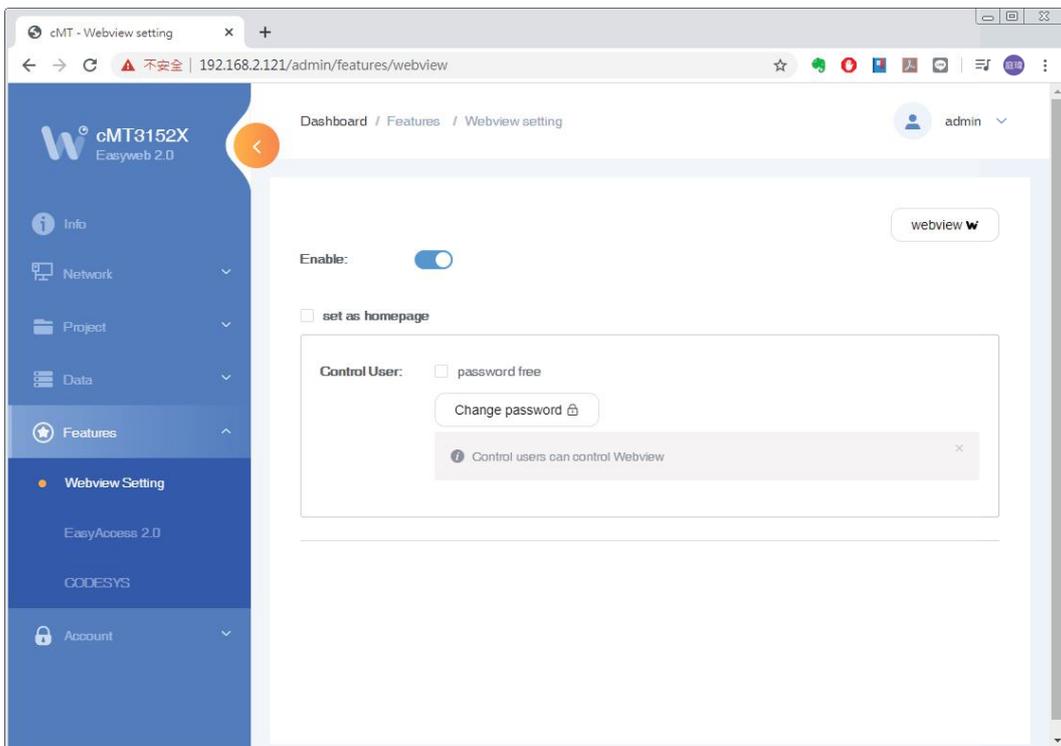


Features » EasyAccess 2.0

In this page the user can activate EasyAccess 2.0 and configure the proxy server.

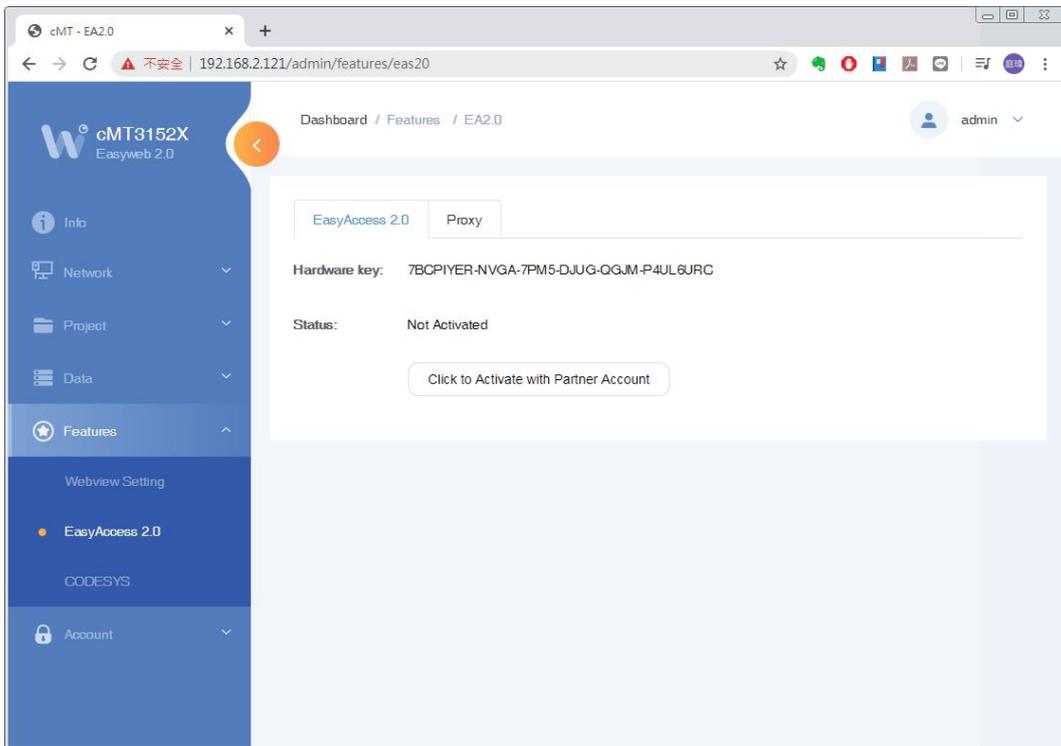

Features » CODESYS

In this page the user can activate CODESYS® and manage settings for firmware updates.

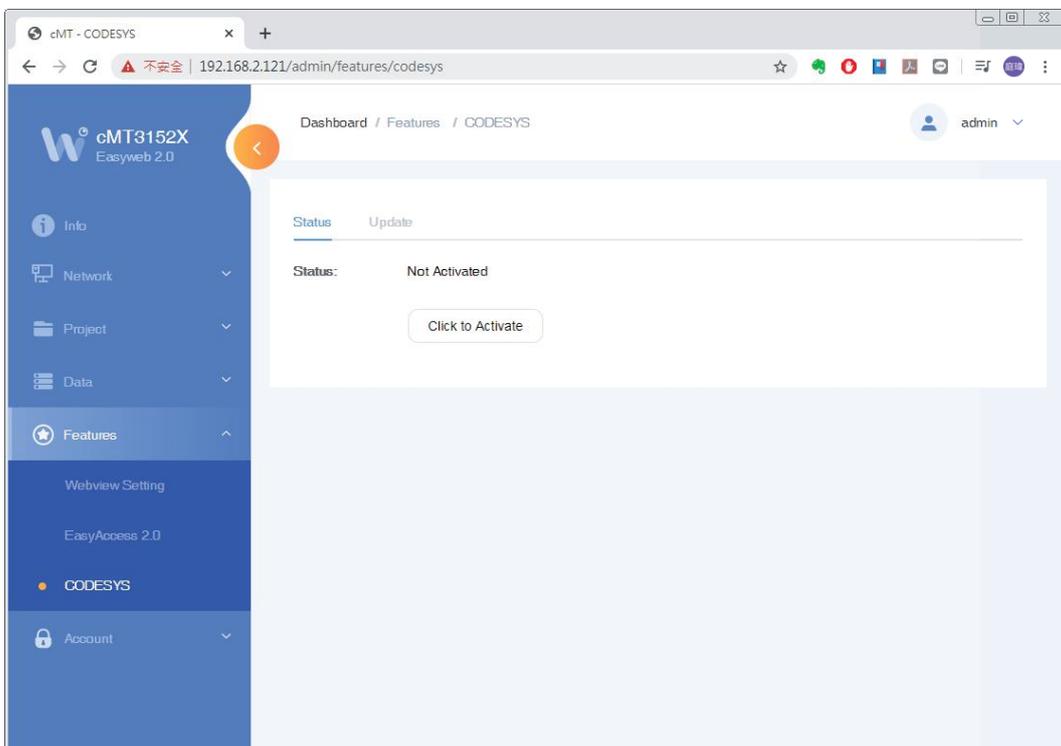

Account » System Password


There are four different levels of password protection: System Setting, Update Project, History, and User, and in this page the user can change the passwords. The default passwords are 111111.

[System Setting]: This is the highest level. It has an access to change all system settings, download, upload project, back up historical data, or change passwords for other levels.

[Upload Project]: This level can download, upload project, and back up historical data.

[History]: This level controls FTP access and it can back up historical data.

[User]: This level can operate cMT X projects via cMT Viewer. Other three levels above can all do this.

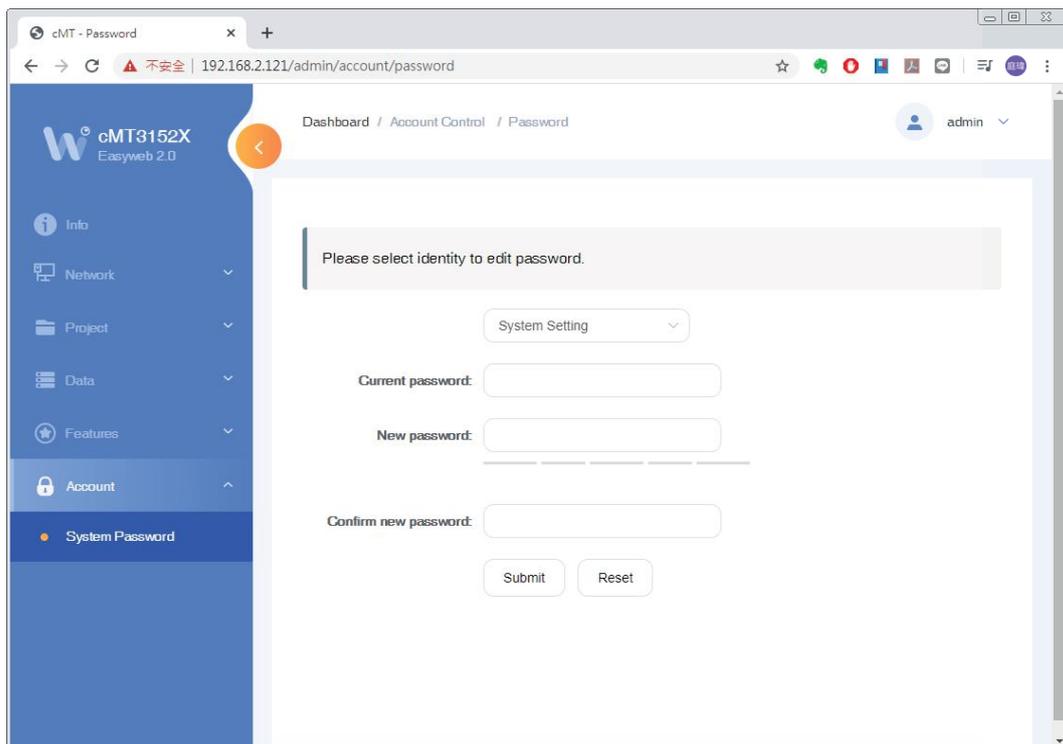

The screenshot shows a web browser window with the URL 192.168.2.121/admin/account/password. The page title is "cMT3152X Easyweb 2.0". The breadcrumb navigation is "Dashboard / Account Control / Password". The user is logged in as "admin". The main content area has a message: "Please select identity to edit password." Below this is a dropdown menu with "System Setting" selected. There are three password input fields: "Current password:", "New password:", and "Confirm new password:". At the bottom are "Submit" and "Reset" buttons.

System Setting

Update Project

History

User


Chapter 2 How to Use Webview

2.1 Overview

cMT X Series HMI can be monitored and controlled using an internet browser (Windows Edge, Chrome, or Firefox). Up to 4 users can log in simultaneously.


2.2 Enabling Webview

Log in Easyweb 2.0, open Webview Setting page and toggle on [Enable]. In this page, whether a password is required for logging in Webview can be set.

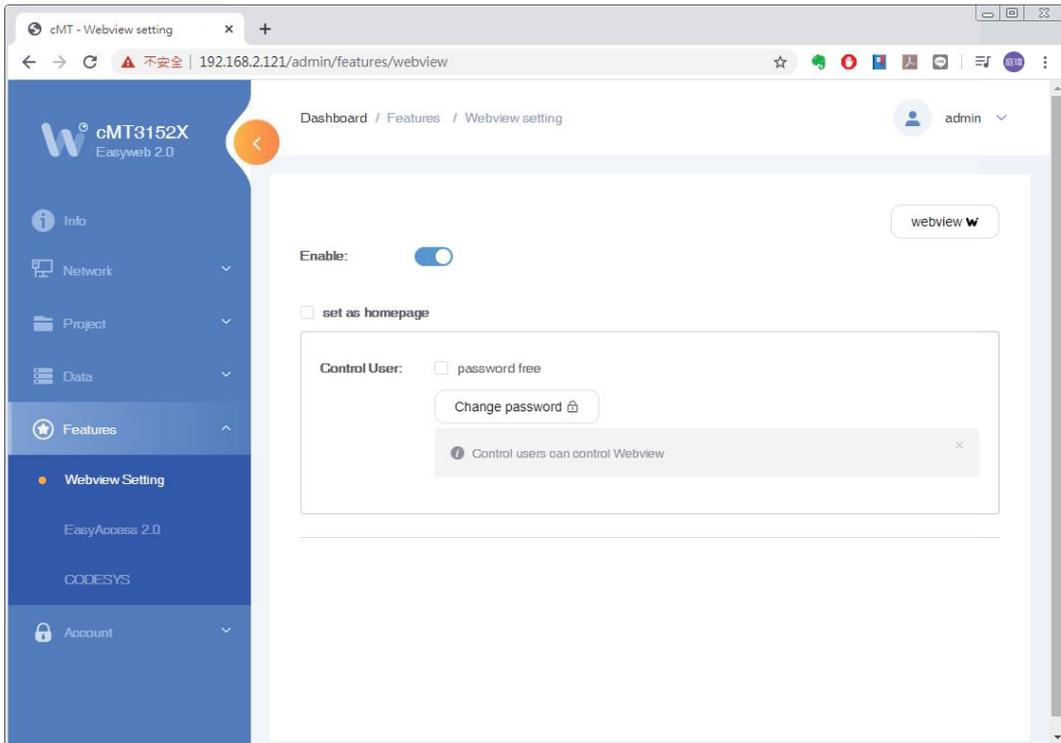


2.3 Log In Webview using an Internet Browser

Step 1. Open internet browser and enter HMI's Webview address (e.g.: 192.168.2.121 /app/dashboard). In Webview settings, if "Set as homepage" option is selected, then simply enter the IP address (e.g.192.168.2.121). Webview interface opens after entering the password.

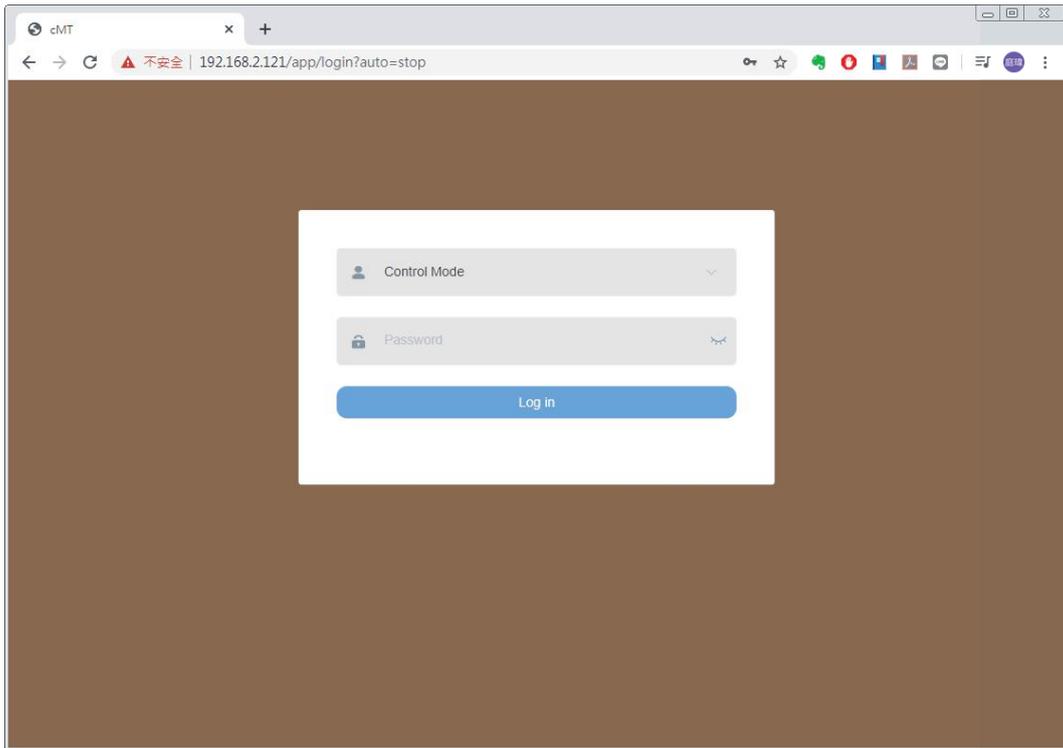

Step 2. The HMI screen is displayed in the browser window. Certain HMI screen resolutions may exceed the browser window size. When this happens, to change the view area, drag the white frame that represents browser window in the lower-right corner and move within the gray area that represents HMI screen.

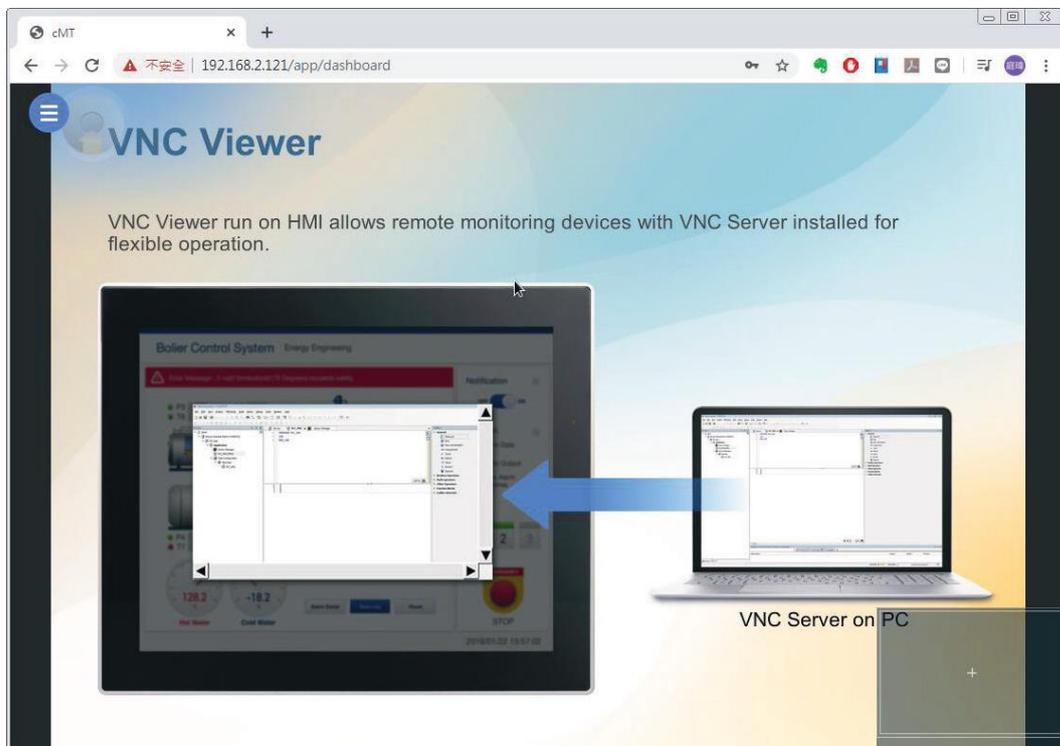

Step 3. The toolbar that opens by clicking the three-line icon in the upper-left corner of the window is shown below. From left to right, the toolbar is separated into three groups of items.

In the first group, the HMI screen can be resized to fit in the browser window, or displayed with HMI's actual screen resolution.

In the second group, the position of the icon that opens the toolbar and the dragging panel that moves the view area can be changed.

In the third group are the system settings icon and the logout icon.




Note

- When “Set as homepage” is selected in Webview, the Webview interface can be opened by directly entering HMI IP address. When login password is forgotten, please enter https://HMI_IP/admin to return to the default system settings page. This prevents the situation where Webview functions cannot be used once password is forgotten.

2.4 When Webview Doesn't Open

When a login attempt fails and the page below shows, try the following ways to troubleshoot.

1. Check whether Webview is enabled for the HMI.
2. Check whether the browser supports Webview, and please use recommended browsers such as Windows Edge, Chrome, or Firefox.
3. Maximum number of users may be exceeded (4 users at a time).

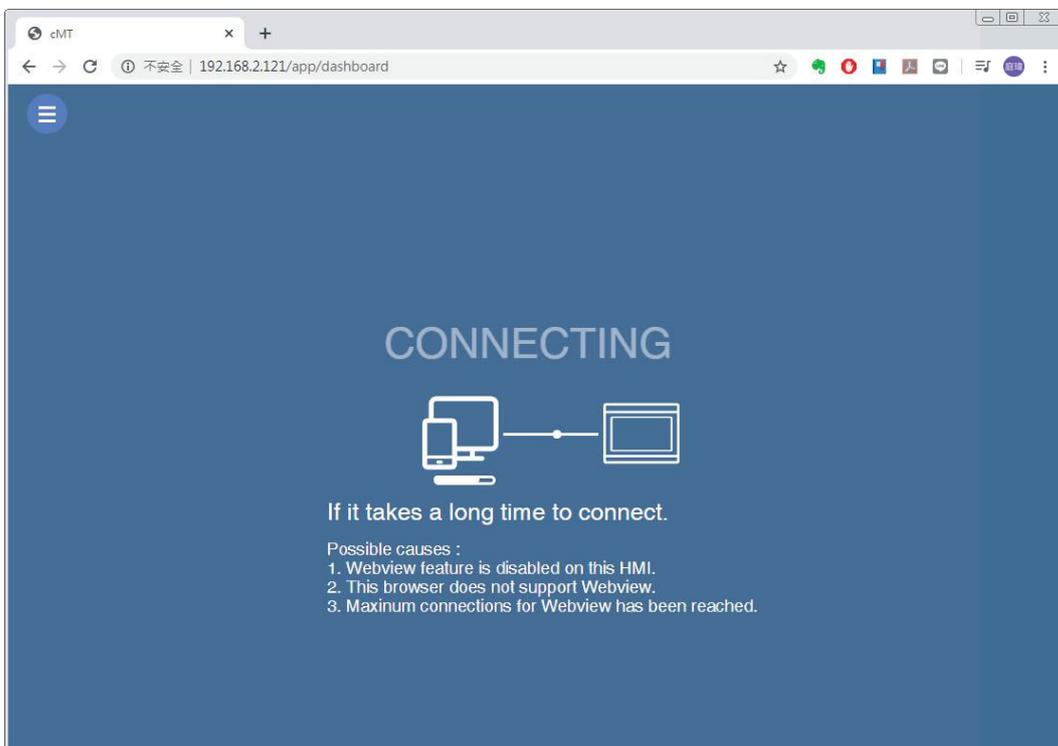

Windows is a trademark or a registered trademark of Microsoft Corporation in the United States and/or other countries.

CODESYS is a trademark of 3S-Smart Software Solutions GmbH.

Other company names, product names, or trademarks in this document are the trademarks or registered trademarks of their respective companies.

This document is subject to change without prior notice.