





# COMBIVERT F5/F6

INSTRUCTIONS FOR USE | INSTALLATION F5/F6 HOUSING P





PREFACE KEB

## **Preface**

The described hard- and software are developments of the KEB Automation KG. The enclosed documents correspond to conditions valid at printing. Misprint, mistakes and technical changes reserved.

#### Signal words and symbols

Certain operations can cause hazards during the installation, operation or thereafter. There are safety informations in the documentation in front of these operations. Security signs are located on the device or machine. A warning contains signal words which are explained in the following table:

#### **A** DANGER

Dangerous situation, which will cause death or serious injury in case of non-observance of this safety instruction.

#### **WARNING**

Dangerous situation, which may cause death or serious injury in case of non-observance of this safety instruction.

#### **A** CAUTION

Dangerous situation, which may cause minor injury in case of non-observance of this safety instruction.

#### **NOTICE**

Situation, which can cause damage to property in case of non-observance.

#### **RESTRICTION**

Is used when certain conditions must meet the validity of statements or the result is limited to a certain validity range.



Is used when the result will be better, more economic or trouble-free by following these procedures.

### More symbols

- ► This arrow starts an action step.
- / Enumerations are marked with dots or indents.
- => Cross reference to another chapter or another page.



Note to further documentation. www.keb.de/service/downloads





#### **PREFACE**

#### Laws and guidelines

KEB Automation KG confirms with the EC declaration of conformity and the CE mark on the device nameplate that it complies with the essential safety requirements.

The EC declaration of conformity can be downloaded on demand via our website. Further information is provided in chapter "Certification".

#### Warranty and liability

The warranty and liability on design, material or workmanship for the acquired device is given in the general sales conditions.



Here you will find our general sales conditions. www.keb.de/terms-and-conditions



Further agreements or specifications require a written confirmation.

#### Support

Through multiple applications not every imaginable case has been taken into account. If you require further information or if problems occur which are not treated detailed in the documentation, you can request the necessary information via the local KEB Automation KG agency.

The use of our units in the target products is outside of our control and therefore lies exclusively in the area of responsibility of the customer.

The information contained in the technical documentation, as well as any user-specific advice in spoken and written and through tests, are made to best of our knowledge and information about the intended use. However, they are regarded as being only informal and changes are expressly reserved, in particular due to technical changes. This also applies to any violation of industrial property rights of a third-party. Selection of our units in view of their suitability for the intended use must be done generally by the user.

Tests can only be done within the intended end use of the product (application) by the customer. They must be repeated, even if only parts of hardware, software or the unit adjustment are modified.

#### Copyright

The customer may use the instructions for use as well as further documents or parts from it for internal purposes. Copyrights are with KEB Automation KG and remain valid in its entirety.

This KEB product or parts thereof may contain third-party software, including free and/ or open source software. If applicable, the license terms of this software are contained in the instructions for use. The instructions for use are already available to you, can be downloaded free of charge from the KEB website or can be requested from the respective KEB contact person.

Other wordmarks or/and logos are trademarks (™) or registered trademarks (®) of their respective owners.



# **Table of Contents**

	Preface	3
	Signal words and symbols	3
	More symbols	3
	Laws and guidelines	4
	Warranty and liability	4
	Support	4
	Copyright	4
	Table of Contents	5
	List of Figures	9
	List of Tables	
	Glossary	
	Standards for drive converters/control cabinets	
	Product standards that apply directly to the drive converter	
	Basic standards to which drive converter standards refer directly	
	Standards that are used in the environment of the drive converter	14
1	Basic Safety Instructions	15
•		
	1.1 Target group	
	1.2 Transport, storage and proper use	
	1.3 Installation  1.4 Electrical connection	
	1.4.1 EMC-compatible installation	
	1.4.2 Voltage test	
	1.4.3 Insulation measurement	
	1.5 Start-up and operation	
	1.6 Maintenance	
	1.7 Repair	
	1.8 Disposal	
^	Due des 4 De e estado e	00
2	Product Description	
	2.1 Specified application	22
	2.1.1 Residual risks	
	2.2 Improper use	
	2.3 Product features	
	2.4 Part code	24
3	Technical Data	25
	3.1 Operating conditions	25
	3.1.1 Climatic environmental conditions	25
	3.1.2 Mechanical environmental conditions	26
	3.1.3 Chemical / mechanical active substances	26
	3.1.4 Electrical operating conditions	27



	3.1.4.1 Device classification	27
	3.1.4.2 Electromagnetic compatibility	27
	3.2 Block diagram of energy flow in the device	
	3.3 Technical data 400V class	29
	3.3.1 Single Drive	29
	3.3.2 Master/slave system	31
	3.3.3 Master/slave/slave system	33
	3.4 Technical data 690V class	
	3.4.1 Single Drive	
	3.4.2 Master/slave system	
	3.4.3 Master/slave/slave system	
	3.5 Dimensions and weights	
	3.5.1 Dimensions air cooler built-in version	
	3.5.2 Dimensions air-cooled inverter through-mount version	
	3.5.3 Dimensions liquid cooler push-through version	
	3.5.4 Dimensions liquid cooler built-in version	
	3.5.5 Dimensions liquid cooler built-in version with stainless steel tube	45
4	Mechanical Installation	46
	4.1 Control cabinet installation	46
	4.1.1 General instructions	46
	4.1.2 Mounting distances	46
	4.1.3 Mounting instructions for control cabinet installation	46
	4.1.4 Optional mounting aids	47
	4.2 Cooling system	48
	4.2.1 Air cooler	49
	4.2.2 Liquid cooling	50
	4.2.3 Connection of the liquid cooling to the cooling system	50
	4.3 Series connection cooling circuit	51
	4.3.1 General instructions	
	4.3.2 Connection diagram series connection cooling circuit	
	4.4 Parallel connection of the coolant circuit	
	4.4.1 General instructions	
	4.4.2 Connection scheme parallel connection of the cooling circuit	53
5	Operation of liquid-cooled devices	54
	5.1 General information	54
	5.1.1 Pressure in the liquid cooler	54
	5.1.2 Material of the heat sink	54
	5.1.3 Materials in the cooling cicuit	55
	5.1.4 Requirements on the coolant	56
	5.1.5 Requirements for open and half-open cooling systems	57
	5.1.6 Coolant temperature	57
	5.1.7 Moisture condensation	57



KEB

	5.1.8 Supply of temper coolant	58
	5.2 Diagrams of the cooling design	59
	5.2.1 Pressure drop aluminium extrusion casting heat sink	59
	5.2.2 Pressure drop aluminium heat sink with stainless steel tubes	60
	5.2.3 Series connection of liquid coolers	61
	5.2.4 Parallel connection of liquid coolers	62
_		
6	Electrical Installation	63
	6.1 General information	63
	6.1.1 Wiring	63
	6.1.2 Connection of the shield connection	64
	6.1.3 Connection of the protective earth	64
	6.2 Connection terminals power unit	65
	6.2.1 Permitted cable cross-sections and tightening torques of the terminals	65
	6.2.2 External fan power supply	66
	6.3 Mains connection	67
	6.3.1 Note about hard mains	67
	6.3.2 Recommended type of mains cable	67
	6.4 Motor connection	68
	6.4.1 General instructions	68
	6.4.2 Selection of the motor cable	68
	6.4.3 Recommended type of the motor cable	69
	6.4.4 Connection of the motor	69
	6.4.5 Calculation of the motor voltage	69
	6.4.6 Cable cross-sections	70
	6.4.7 Motor cable lengths	71
	6.5 DC connection	72
	6.5.1 General instructions	72
	6.6 Temperature detection T1, T2	73
	6.6.1 Use of the temperature input in KTY mode	74
	6.6.2 Use of the temperature input in PTC mode	74
	6.7 Connection of a braking resistor	75
	6.7.1 Monitoring braking transistor	76
	6.7.2 External braking resistor without temperature monitoring	76
	6.7.3 External braking resistor with overtemperature protection	77
	6.7.4 Sub-mounted braking resistors without overtemperature protection	77
	6.8 Temperature switch braking resistor, mains and motor choke	
	6.8.1 General instructions	77
	6.8.2 Parameterization of the control board	77
	6.9 Connection of the master/slave wiring	78
	6.9.1 Connection master/slave	78
	6.9.2 Connection master/slave/slave	80



7	Wiring Diagrams	82
	7.1 Device size 2830	
	7.1.1 Mains and control connection	82
	7.2 Device size 3235	83
	7.2.1 Mains and motor connection master/slave system	83
	7.2.2 Connection braking resistor master/slave system	84
	7.2.3 DC connection master/slave system	85
	7.2.4 Mains connection master/slave system	
	7.3 Device size 3639	87
	7.3.1 Mains and motor connection master/slave /slave system	87
	7.3.2 Connection braking resistor master/slave/slave system	88
	7.3.3 DC connection master/slave/slave system	89
	7.3.4 Mains connection master/slave/slave system	90
8	Protection of drive converters	91
	8.1 Use of circuit breakers	
9	Certification	92
	9.1 CE Marking	
	9.2 UL Marking	
	9.3 Further informations and documentation	
10	Characteristics	96
	10.1 Overload characteristic	
	10.2 Overload protection in the lower speed range	
	10.3 Power dissipation of the 400V class at rated operation	
	10.3.1 Power dissipation of different switching frequencies	
	10.4 Power dissipation of the 690V class at rated operation	98
	10.4.1 Power dissipation at 2kHz switching frequency	98
	10.4.2 Power dissipation at 4 kHz switching frequency	99
11	Accessories	100
	11.1 Filter and chokes	100
	11.2 Assembly aids	101
	11.3 Connections to the coolant	101
	11.4 Connecting cable master/slave system	
	11.5 Heat sink fan	101
12	Revision History	102





# **List of Figures**

Figure 1:	Block diagram of energy flow in the device	. 28
Figure 2:	Dimensions air cooler built-in version	.41
Figure 3:	Dimensions air-cooled inverter through-mount version	.42
Figure 4:	Dimensions liquid cooler push-through version	.43
Figure 5:	Dimensions liquid cooler built-in version	.44
Figure 6:	Dimensions liquid cooler built-in version with stainless steel tube	.45
Figure 7:	Mounting distances	.46
Figure 8:	Optional mounting aids	.47
Figure 9:	Ventilation	.49
Figure 10:	Connections to the coolant series connection	. 52
Figure 11:	Connections to the coolant parallel connection	. 53
Figure 12:	Pressure drop of the heat sink as a function of the volume flow	. 59
Figure 13:	Pressure drop of the heat sink as a function of the volume flow (stainless steel cooler)	. 60
Figure 14:	Volume flow and temperature difference for series connection	.61
Figure 15:	Volume flow and temperature difference for parallel connection	. 62
Figure 16:	Laying the cables	.64
Figure 17:	Connection terminals of the power circuit	. 65
Figure 18:	External fan power supply	.66
Figure 19:	Cross-section type of mains cable	. 67
Figure 20:	Cross-section type of the motor cable	. 69
Figure 21:	Connection of a KTY sensor	.74
Figure 22:	Wiring example in PTC mode	.74
Figure 23:	Intrinsically safe braking resistor without temperature monitoring	.76
Figure 24:	Connection master/slave	.78
Figure 25:	Master/slave connections	.79
Figure 26:	Cable clamps master/slave connections	. 79
Figure 27:	Connection master/slave/slave	. 80
Figure 28:	Master/slave/slave connections	. 81
Figure 29:	Cable clamps master/slave/slave connections	. 81
Figure 30:	Mains and control connection	.82
Figure 31:	Mains and motor connection master/slave system	.83
Figure 32:	Connection braking resistor master/slave system	. 84
Figure 33:	DC connection master/slave system	. 85
Figure 34:	Mains connection master/slave system	. 86
Figure 35:	Mains and motor connection master/slave /slave system	. 87
Figure 36:	Connection braking resistor master/slave/slave system	.88
Figure 37:	DC connection master/slave/slave system	. 89
Figure 38:	Mains connection master/slave/slave system	. 90
Figure 39:	Overload characteristic	.96
Figure 40:	Overload protection in the lower speed range	. 96
Figure 41:	Power dissipation of different switching frequencies 400V class	. 97
Figure 42:	Power dissipation at 2 kHz switching frequency 690V class	. 98
Figure 43:	Power dissipation at 4 kHz switching frequency 690V class	. 99



# LIST OF TABLES

# **List of Tables**

Table 1:	Part code	24
Table 2:	Climatic environmental conditions	25
Table 3:	Mechanical environmental conditions	26
Table 4:	Chemical / mechanical active substances	26
Table 5:	Device classification	27
Table 6:	Electromagnetic compatibility	27
Table 7:	Technical data of the 400V class - Single Drive	30
Table 8:	Technical data of the 400 V class master/slave	32
Table 9:	Technical data of the 400 V class master/slave / slave	34
Table 10:	Technical data of the 690V class - Single Drive	36
Table 11:	Technical data of the 690 V class master/slave	38
Table 12:	Technical data of the 690 V class master/slave / slave	40
Table 13:	Mounting instructions for control cabinet installation	46
Table 14:	Pressure in the liquid cooler	54
Table 15:	Heat sink and operating pressure	54
Table 16:	Electro-chemical voltage series / standard potentials against hydrogen	55
Table 17:	Requirements on the coolant	56
Table 18:	Requirements for open and half-open cooling systems	
Table 19:	Supply of temper coolant	58
Table 20:	Permissible cable cross-sections and tightening torques of the terminals	65
Table 21:	Connection of the motor	69
Table 22:	Example of motor voltage calculation	69
Table 23:	Cable cross-sections	70
Table 24:	Maximum permissible motor cable lengths	71
Table 25:	Temperature detection T1, T2	73
Table 26:	Function motor temperature display	73
Table 27:	Parameterization of the control board	77
Table 28:	Protection of drive converters	91
Table 29:	Use of circuit breakers	91
Table 30:	External filters and chokes	93
Table 31:	UL fuses	94
Table 32:	Cable protection switch	94
Table 33:	Filter and chokes	100
Table 34:	Assembly aids	101
Table 35:	Connections to the coolant	101
Table 36:	Connecting cable master/slave system	101
Table 37·	Heat sink fan	101



GLOSSARY KEB

# Glossary

0V	Earth-potential-free common point	Endat	Bidirectional encoder interface of the company Heidenhain
1ph 3ph	1-phase mains 3-phase mains	EtherCAT	Real-time Ethernet bus system of the
AC	AC current or voltage	Luicion	company Beckhoff
AFE	From 07/2019 AIC replaces the previous name AFE	Ethernet	Real-time bus system - defines pro- tocols, plugs, types of cables
AFE filter	From 07/2019 AIC filter replaces the	FE	Functional earth
	previous name AFE filter	FSoE	Functional Safety over Ethernet
AIC	Active Infeed Converter	FU	Drive converter
AIC filter	Filter for Active Infeed Converter	GND	Reference potential, ground
Application	The application is the intended use	GTR7	Braking transistor
	of the KEB product	HF filter	High frequency filter to the mains
ASCL	Asynchronous sensorless closed loop	Hiperface	Bidirectional encoder interface of the company Sick-Stegmann
Auto motor ident.	Automatically motor identification; calibration of resistance and induc-	HMI	Human machine interface (touch screen)
	tance	HSP5	Fast, serial protocol
AWG	American wire gauge	HTL	Incremental signal with an output
B2B	Business-to-business		voltage (up to 30V) -> TTL
BiSS	Open source real-time interface for	IEC	International standard
CAN	sensors and actuators (DIN 5008)	IP xx	Degree of protection (xx for level)
CAN CDF	Fieldbus system	KEB product	The KEB product is subject of this manual
CDM	Cyclic duration factor Complete drive module including	KTY	
	auxiliary equipment (control cabinet)	NII	Silicium temperature sensor (polarized)
COMBIVERT	KEB drive converters	Manufacturer	The manufacturer is KEB, unless
COMBIVERT COMBIVIS	KEB start-up and parameterizing	Manufacturer	otherwise specified (e.g. as ma-
COMBIVIS	KEB start-up and parameterizing software	Manufacturer	otherwise specified (e.g. as manufacturer of machines, engines,
	KEB start-up and parameterizing software The customer has purchased a KEB		otherwise specified (e.g. as ma- nufacturer of machines, engines, vehicles or adhesives)
COMBIVIS	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the	Manufacturer MCM	otherwise specified (e.g. as manufacturer of machines, engines,
COMBIVIS	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (cus-	MCM	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections
COMBIVIS	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB		otherwise specified (e.g. as ma- nufacturer of machines, engines, vehicles or adhesives) American unit for large wire cross
COMBIVIS	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (cus-	MCM	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the
COMBIVIS Customer	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer)	MCM Modulation	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives) American unit for large wire cross sections Means in drive technology that the power semiconductors are controlled
COMBIVIS Customer DC	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage	MCM Modulation MTTF	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure
COMBIVIS Customer  DC DI DIN	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization	MCM Modulation MTTF NN	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives) American unit for large wire cross sections Means in drive technology that the power semiconductors are controlled Mean service life to failure Sea level
COMBIVIS Customer  DC DI	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for	MCM Modulation MTTF NN OC OH OL	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives) American unit for large wire cross sections Means in drive technology that the power semiconductors are controlled Mean service life to failure Sea level Overcurrent
COMBIVIS Customer  DC DI DIN DS 402	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for drives	MCM Modulation MTTF NN OC OH	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure  Sea level  Overcurrent  Overheat  Overload  Output signal swithching device; - an
COMBIVIS Customer  DC DI DIN DS 402 EMC	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for drives Electromagnetic compatibility	MCM Modulation MTTF NN OC OH OL	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives) American unit for large wire cross sections Means in drive technology that the power semiconductors are controlled Mean service life to failure Sea level Overcurrent Overheat Overload Output signal swithching device; - an output signal that is checked in regu-
COMBIVIS Customer  DC DI DIN DS 402  EMC Emergency	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for drives Electromagnetic compatibility Shutdown of a drive in emergency	MCM Modulation MTTF NN OC OH OL	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure  Sea level  Overcurrent  Overheat  Overload  Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety
COMBIVIS Customer  DC DI DIN DS 402  EMC Emergency stop	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for drives Electromagnetic compatibility Shutdown of a drive in emergency case (not de-energized)	MCM Modulation MTTF NN OC OH OL OSSD	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure  Sea level  Overcurrent  Overheat  Overload  Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety technology)
COMBIVIS Customer  DC DI DIN DS 402  EMC Emergency stop Emergency switching off	KEB start-up and parameterizing software  The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer)  DC current or voltage  Demineralized water, also referred to as deionized (DI) water  German Institut for standardization  CiA DS 402 - CAN device profile for drives  Electromagnetic compatibility  Shutdown of a drive in emergency case (not de-energized)  Switching off the voltage supply in emergency case	MCM  Modulation  MTTF  NN  OC  OH  OL  OSSD	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure  Sea level  Overcurrent  Overheat  Overload  Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety technology)  Power drive system incl. motor and measuring probe
COMBIVIS Customer  DC DI DIN DS 402  EMC Emergency stop Emergency switching off EMS	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for drives Electromagnetic compatibility Shutdown of a drive in emergency case (not de-energized) Switching off the voltage supply in emergency case Energy Management System	MCM Modulation MTTF NN OC OH OL OSSD PDS PE	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure  Sea level  Overcurrent  Overheat  Overload  Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety technology)  Power drive system incl. motor and measuring probe  Protective earth
COMBIVIS Customer  DC DI DIN DS 402  EMC Emergency stop Emergency switching off EMS EN	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for drives Electromagnetic compatibility Shutdown of a drive in emergency case (not de-energized) Switching off the voltage supply in emergency case Energy Management System European standard	MCM Modulation MTTF NN OC OH OL OSSD  PDS PE PELV	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure  Sea level  Overcurrent  Overheat  Overload  Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety technology)  Power drive system incl. motor and measuring probe  Protective earth  Protective Extra Low Voltage
COMBIVIS Customer  DC DI DIN DS 402  EMC Emergency stop Emergency switching off EMS EN Encoder emu-	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for drives Electromagnetic compatibility Shutdown of a drive in emergency case (not de-energized) Switching off the voltage supply in emergency case Energy Management System	MCM Modulation MTTF NN OC OH OL OSSD PDS PE	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure  Sea level  Overcurrent  Overheat  Overload  Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety technology)  Power drive system incl. motor and measuring probe  Protective earth  Protective Extra Low Voltage  Term used in the safety technology
COMBIVIS Customer  DC DI DIN DS 402  EMC Emergency stop Emergency switching off EMS EN Encoder emulation	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for drives Electromagnetic compatibility Shutdown of a drive in emergency case (not de-energized) Switching off the voltage supply in emergency case Energy Management System European standard Software-generated encoder output	MCM Modulation MTTF NN OC OH OL OSSD  PDS PE PELV	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure  Sea level  Overcurrent  Overheat  Overload  Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety technology)  Power drive system incl. motor and measuring probe  Protective earth  Protective Extra Low Voltage  Term used in the safety technology (EN 61508-17) for the size of error
COMBIVIS Customer  DC DI DIN DS 402  EMC Emergency stop Emergency switching off EMS EN Encoder emu-	KEB start-up and parameterizing software The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer) DC current or voltage Demineralized water, also referred to as deionized (DI) water German Institut for standardization CiA DS 402 - CAN device profile for drives Electromagnetic compatibility Shutdown of a drive in emergency case (not de-energized) Switching off the voltage supply in emergency case Energy Management System European standard	MCM Modulation MTTF NN OC OH OL OSSD  PDS PE PELV	otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)  American unit for large wire cross sections  Means in drive technology that the power semiconductors are controlled Mean service life to failure  Sea level  Overcurrent  Overheat  Overload  Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety technology)  Power drive system incl. motor and measuring probe  Protective earth  Protective Extra Low Voltage  Term used in the safety technology



#### **GLOSSARY**

PFH Term used in the safety technology

(EN 61508-1...7) for the size of error

probability per hour

**PLC** Programmable logic controller PT100 Temperature sensor with R0=100 $\Omega$ PT1000 Temperature sensor with R0=1000 $\Omega$ PTC PTC-resistor for temperature detec-

tion

**PWM** Pulse width modulation

RJ45 Modular connector with 8 lines Synchronous sensorless closed loop SCL **SELV** Safety Extra Low Voltage (<60 V) The security integrity level is a SIL measure for quantifying the risk reduction. Term used in the safety

technology (EN 61508 -1...7)

Safety function "Safe stop 1" in ac-SS1

cordance with IEC 61800-5-2

SSI Synchronous serial interface for

encoder

STO Safety function "Safe Torque Off" in

accordance with IEC 61800-5-2

TTL Incremental signal with an output

voltage up to 5 V

**USB** Universal serial bus

VARAN Real-time Ethernet bus system





# Standards for drive converters/control cabinets

#### Product standards that apply directly to the drive converter

EN61800-2 Adjustable speed electrical power drive systems - Part 2: General requirements -

Rating specifications for low voltage adjustable frequency a.c. power drive

systems (VDE 0160-102, IEC 61800-2)

Speed-adjustable electrical drives. Part 3: EMC requirements and specific test EN61800-3

methods (VDE0160-103, IEC61800-3)

EN61800-5-1 Adjustable speed electrical power drive systems - Part 5-1: Safety requirements

- Electrical, thermal and energy (IEC 61800-5-1); German version EN 61800-5-1

EN61800-5-2 Adjustable speed electrical power drive systems - Part 5-2: Safety Requirements

- Functional (IEC 22G/264/CD)

UL61800-5-1 American version of the EN61800-5-1 with "National Deviations"

### Basic standards to which drive converter standards refer directly

EN 55011	Industrial, scientific and medical equipment - Radio frequency disturbance
	characteristics - Limits and methods of measurement (CISPR 11); German

version EN 55011

EN 55021 Interference to mobile radiocommunications in the presence of impulse noise -

Methods of judging degradation and measures to improve performance (IEC/

CISPR/D/230/FDIS); German version prEN 55021

Degrees of protection provided by enclosures (IP Code) (IEC 60529) EN 60529

EN 60664-1 Insulation coordination for equipment within low-voltage systems Part 1: Princi-

ples, requirements and tests (IEC 60664-1)

Classification of environmental conditions - Part 3-1: Classification of groups of EN 60721-3-1

environmental parameters and their severities - Section 1: Storage (IEC 60721-

3-1); German version EN 60721-3-1

EN60721-3-2 Classification of environmental conditions - Part 3: Classification of groups of

environmental parameters and their severities - Section 2: Transportation and

handling (IEC 104/670/CD)

EN 60721-3-3 Classification of environmental conditions - Part 3: Classification of groups of

> environmental parameters and their severities; section 3: Stationary use at weatherprotected locations; Amendment A2 (IEC 60721-3-3); German version

EN 60721-3-3

EN61000-2-1 Electromagnetic compatibility (EMC) - Part 2: Environment - Section 1: Descrip-

> tion of the environment - Electromagnetic environment for low-frequency conducted disturbances and signalling in public power supply systems

Electromagnetic compatibility (EMC) - Part 2-4: Environment; Compatibility EN61000-2-4

levels in industrial plants for low-frequency conducted disturbances (IEC 61000-

2-4); German version EN 61000-2-4

EN61000-4-2 Electromagnetic compatibility (EMC) - Part 4-2: Testing and measurement

techniques - Electrostatic discharge immunity test (IEC 61000-4-2); German

version EN 61000-4-2

EN61000-4-3 Electromagnetic compatibility (EMC) - Part 4-3: Testing and measurement

techniques - Radiated, radio-frequency, electromagnetic field immunity test (IEC

61000-4-3); German version EN 61000-4-3

EN61000-4-4 Electromagnetic compatibility (EMC) - Part 4-4: Testing and measurement

techniques - Electrical fast transient/burst immunity test (IEC 61000-4-4);

German version EN 61000-4-4



#### STANDARDS FOR DRIVE CONVERTERS/CONTROL CABINETS

EN 61000-4-5	Electromagnetic compatibility (EMC) - Part 4-5: Testing and measurement

techniques - Surge immunity test (IEC 61000-4-5); German version EN 61000-4-5

EN61000-4-6 Electromagnetic compatibility (EMC) - Part 4-6: Testing and measurement

techniques - Immunity to conducted disturbances, induced by radio-frequency

fields (IEC 61000-4-6); German version EN 61000-4-6

EN 61000-4-34 Electromagnetic compatibility (EMC) - Part 4-34: Testing and measurement

techniques - Voltage dips, short interruptions and voltage variations immunity tests for equipment with mains current more than 16 A per phase (IEC 61000-4-

34); German version EN 61000-4-34

EN 61508-1...7 Functional safety of electrical/electronic/programmable electronic safety-related

systems - Part 1...7 (VDE 0803-1...7, IEC 61508-1...7)

EN 62061 Safety of machinery - functional safety of electrical, electronic and program-

mable electronic safety-related systems (VDE 0113-50, IEC 62061)

EN ISO 13849-1 Safety of machinery - safety-related parts of control systems - Part 1: General

principles for design (ISO 13849-1); German version EN ISO 13849-1

#### Standards that are used in the environment of the drive converter

DGUV regulation 3 Electrical installations and equipment

DIN 46228-1 Wire-end ferrules; Tube without plastic sleeve
DIN 46228-4 Wire-end ferrules; Tube with plastic sleeve

DINIEC 60364-5-54 Low-voltage electrical installations - Part 5-54: Selection and erection of

electrical equipment - Earthing arrangements, protective conductors and protec-

tive bonding conductors (IEC 64/1610/CD)

DIN VDE 0100-729 Low-voltage electrical installations - Part 7-729: Requirements for special

installations or locations - Operating or maintenance gangways (IEC 60364-7-

729:2007, modified); German implementation HD 60364-7-729:2009

DNVGL-CG-0339 Environmental test specification for electrical, electronic and programmable

equipment and systems

EN 1037 Safety of machinery - Prevention of unexpected start-up; German version EN 1037

EN 12502-1...5 Protection of metallic materials against corrosion - Part 1...5

EN 60204-1 Safety of machinery - electrical equipment of machines Part 1: General require-

ments (VDE 0113-1, IEC 44/709/CDV)

EN 60439-1 Low-voltage switchgear and controlgear assemblies - Part 1: Type-tested and

partially type-tested assemblies (IEC 60439-1); German version EN 60439-1

EN 60947-7-1 Low-voltage switchgear and controlgear - Part 7-1: Ancillary equipment -

Terminal blocks for copper conductors (IEC 60947-7-1:2009); German version

EN 60947-7-1:2009

EN 60947-8 Low-voltage switchgear and controlgear - Part 8: Control units for built-in

thermal protection (PTC) for rotating electrical machines (IEC 60947-8:2003 +

A1:2006 + A2:2011)

EN 61373 Railway applications - Rolling stock equipment - Shock and vibration tests (IEC

61373); German version EN 61373

EN 61439-1 Low-voltage switchgear and controlgear assemblies - Part 1: General rules (IEC

121B/40/CDV); German version FprEN 61439-1

VGB R 455 P Water treatment and use of materials in cooling systems
ISO 4017 Fasteners - Hexagon head screws - Product grades A and B

ISO 4762 Hexagon socket head cap screws

ISO 7090 Plain washers, chamfered - Normal series - Product grade A

ISO 7092 Plain washers - Small series - Product grade A

ISO 7045 Pan head screws with type H or type Z cross recess - Product grade A



# 1 Basic Safety Instructions

The COMBIVERT is designed and constructed in accordance with state-of-the-art technology and the recognised safety rules and regulations However, the use of such devices may cause functional hazards for life and limb of the user or third parties, or damages to the system and other material property.

The following safety instructions have been created by the manufacturer for the area of electric drive technology. They can be supplemented by local, country- or application-specific safety instructions. This list is not exhaustive. Non-observance of the safety instructions by the customer, user or other third party leads to the loss of all resulting claims against the manufacturer.

#### NOTICE

#### Hazards and risks through ignorance.



- ▶ Read the instructions for use!
- ▶ Observe the safety and warning instructions!
- ▶ If anything is unclear, please contact KEB Automation KG!

#### 1.1 Target group

This instruction manual is determined exclusively for electrical personnel. Electrical personnel for the purpose of this instruction manual must have the following qualifications:

- Knowledge and understanding of the safety instructions.
- Skills for installation and assembly.
- · Start-up and operation of the product.
- Understanding of the function in the used machine.
- Detection of hazards and risks of the electrical drive technology.
- Knowledge of DIN IEC 60364-5-54.
- Knowledge of national safety regulations (e.g. DGUV regulation 3).

#### 1.2 Transport, storage and proper use

The transport is carried out by qualified persons in accordance with the environmental conditions specified in this manual. Drive converter shall be protected against excessive strains.



#### Transport of drive converters with an edge length >75 cm

The transport by forklift without suitable tools can cause a deflection of the heat sink. This leads to premature aging or destruction of internal components.

- ► Transport of drive converters on suitable pallets.
- ▶ Do not stack drive converters or burden them with other heavy objects.





#### Drive converters contain electrostatic sensitive components.

- Avoid contact.
- Wear ESD-protective clothing.

#### Do not store drive converters

- in the environment of aggressive and/or conductive liquids or gases.
- · with direct sunlight.
- outside the specified environmental conditions.

#### 1.3 Installation

### **A** DANGER

#### Do not operate in an explosive environment!



► The COMBIVERT is not intended for the use in potentially explosive environment.

### **A** CAUTION

#### Maximum design edges and high weight!



#### Contusions and bruises!

- ► Never stand under suspended loads.
- Wear safety shoes.
- ▶ Secure drive converter accordingly when using lifting gear.
- To prevent damages to the device:
- Make sure that no components are bent and/or isolation distances are changed.
- The device must not be put into operation in case of mechanical defects. Non-compliance with the applicable standards.
- Do not allow moisture or mist to penetrate the unit.
- Avoid dust permeating the device. Allow for sufficient heat dissipation if installed in a dust-proof housing.
- Note installation position and minimum distances to surrounding elements. Do not cover the ventilation openings.
- Mount the drive inverter according to the specified degree of protection.
- Make sure that no small parts fall into the COMBIVERT during assembly and wiring (drilling chips, screws etc.). This also applies to mechanical components, which can lose small parts during operation.
- Check the reliable fit of the device connections in order to avoid contact resistances and sparking.
- Do not walk-on drive converter.
- The safety instructions are to be kept!



#### 1.4 Electrical connection

#### **A DANGER**

#### Voltage at the terminals and in the device!

#### Danger to life due to electric shock!

- ▶ Never work on the open device or never touch exposed parts.
- ► For any work on the unit switch off the supply voltage, secure it against switching on and check absence of voltage by measuring at the input terminals.
- ► Wait until all drives has been stopped in order that no regenerative energy can be generated.
- ▶ Await capacitor discharge time (5 minutes). Check absence of voltage by measuring at the DC terminals.
- ► If personal protection is required, install suitable protective devices for drive converters.
- ▶ Never bridge upstream protective devices (also not for test purposes).
- Connect the protective earth conductor always to drive converter and motor.
- ► Install all required covers and protective devices for operation.
- ► The control cabinet shall be kept closed during operation.
- ▶ Residual current: This product may cause a dc current in the protective earth conductor. When a residual current protective device (RCD) or a residual current monitoring device (RCM) is used for the protection against direct or indirect contact, only a RCD or RCM type B is permitted on the power supply side of this product.
- ▶ Drive converters with a leakage current > 3.5 mA AC current (10 mA DC current) are intended for a stationary connection. Protective earth conductors must be designed in accordance with the local regulations for equipment with high leakage currents according to EN 61800-5-1, EN 60204-1 or DIN IEC 60364-5-54.



If personnel protection is required during installation of the system, suitable protective devices must be used for drive converters.

www.keb.de/fileadmin/media/Manuals/knowledge/04\_techinfo/00\_gene-ral/ti\_rcd\_0400\_0002\_gbr.pdf



Installations which include drive converter shall be equipped with additional control and protective devices in accordance with the relevant applicable safety requirements, e.g. act respecting technical equipment, accident prevention rules etc. They must always be complied with, also for drive converter bearing a CE marking.









For a trouble-free and safe operation, please pay attention to the following instructions:

- The electrical installation shall be carried out in accordance with the relevant requirements.
- Cable cross-sections and fuses must be dimensioned by the user according to the specified minimum/maximum values for the application.
- The wiring must be made with flexible copper cable for a temperature > 75°C.
- Connection of the drive converter is only permissible on symmetrical networks with a maximum line voltage (L1, L2, L3) with respect to earth (N/PE) of max. 300 V. An isolating transformer must be used for supply networks which exceed this value! In case of non-compliance the control is not longer considered to be a PELV circuit.
- With existing or newly wired circuits the person installing the units or machines must ensure that the PELV requirements are met.
- For drive converters that are not isolated from the supply circuit (in accordance with *EN 60721-3-2*) all control lines must be included in other protective measures (e.g. double insulation or shielded, earthed and insulated).
- When using components without isolated inputs/outputs, it is necessary that equipotential bonding exists between the components to be connected (e.g. by the equipotential line). Disregard can cause destruction of the components by equalizing
  currents.

#### 1.4.1 EMC-compatible installation

Observance of the limit values required by EMC law is the responsibility of the customer.



Notes on EMC-compatible installation can be found here. www.keb.de/fileadmin/media/Manuals/emv/0000neb0000.pdf



#### 1.4.2 Voltage test

Testing with AC voltage (in accordance with *EN 60204-1* chapter 18.4) may not be executed, since there is danger for the power semiconductors in the drive inverter.



Due to the radio interference suppression capacitors, the test generator will switch off immediately with a current fault.



According to *EN 60204-1* it is permissible to disconnect already tested components. Drive converters of the KEB Automation KG are delivered ex works voltage tested to 100% according to product standard.

#### 1.4.3 Insulation measurement

An insulation measurement (in accordance with *EN 60204-1* chapter 18.3) with DC 500 V is permissible, if all power unit connections (grid-connected potential) and all control connections are bridged with PE. The insulation resistance of the respective device can be found in the technical data.



#### 1.5 Start-up and operation

The drive converter must not be started until it is determined that the installation complies with the machine directive; Account is to be taken of *EN* 60204-1.

#### **WARNING**

#### Software protection and programming!

#### Hazards caused by unintentional behavior of the drive!



- ► Check especially during initial start-up or replacement of the drive converter if parameterization is compatible to application.
- ➤ Securing a unit solely with software-supported functions is not sufficient. It is imperative to install external protective measures (e.g. limit switch) that are independent of the drive converter.
- ► Secure motors against automatic restart.

### **A** CAUTION

#### High temperatures at heat sink and coolant!

#### Burning of the skin!



- Cover hot surfaces safe-to-touch.
- ▶ If necessary, attach warning signs on the system.
- ▶ Before touching, check the surface and coolant lines.
- ▶ Before working let the unit cool down.
- During operation, all covers and doors shall be kept closed.
- · Use only approved accessories for this device.
- Never touch terminals, busbars or cable ends.



If a drive converter with electrolytic capacitors in a DC link (see technical data) has not been in operation for more than one year, observe the following instructions.



www.keb.de/fileadmin/media/Manuals/knowledge/04\_techinfo/00\_general/ti format capacitors 0400 0001 gbr.pdf

#### **NOTICE**

# Continuous operation (S1) with load > 60 % or from a rated motor power of 55 kW!

#### Premature ageing of the electrolytic capacitors!

▶ Mains choke with  $U_k = 4\%$  absolutely necessary.



#### Switching at the output

Switching between motor and drive converter is prohibited for single drives during operation as this may trigger the protection gear of the device. Function, speed search must be activated if switching can not be avoided. Speed search may only be triggered after closing the motor contactor (e.g. by switching the control release).

Connecting and disconnecting is permissible with multiple motor drives if at least 1 motor is running during the switch-over process. The drive converter must be dimensioned to the occurring starting currents.

The ,speed search' function must be activated if the motor is still running during a restart of the drive converter (mains on) (e.g. due to large rotating masses).

#### Switching an the input

For applications that require cyclic switching off and on of the drive converter, maintain an off-time of at least 5 min after the last switch on. If you require shorter cycle times please contact KEB Automation KG.

#### Short-circuit resistance

The drive converters are conditional short-circuit proof. After resetting the internal protection devices, the function as directed is guaranteed.

#### **Exceptions:**

- If an earth-leakage fault or short-circuit often occurs at the output, this can lead to a defect in the unit.
- If a short-circuit occurs during regenerative operation (2nd or 4th quadrant, regeneration into the DC link), this can lead to a defect in the unit.

#### 1.6 Maintenance

The following maintenance work has to be carried out when required, but at least once per year by authorized and trained personnel. Check unit for loose screws and plugs and tighten if necessary.

- ► Check system for loose screws and plugs and tighten if necessary.
- ► Clean drive converter from dirt and dust deposits. Pay attention especially to cooling fins and protective grid of the fans.
- ▶ Examine and clean extracted air filter and cooling air filter of the control cabinet.
- ► Check the function of the fans of the drive converter. The fan must be replaced in case of audible vibrations or squeak.
- ▶ In the case of liquid-cooled drive converters a visual test of the cooling circuit for leaks and corrosion must be carried out. The cooling circuit must be completely empty if a unit shall be switched off for a longer period. The cooling circuit must be blown out additionally with compressed air at temperatures below 0°C.

KEB

#### 1.7 Repair

In case of malfunction, unusual noises or smells inform a person in charge!

#### **A** DANGER

#### Unauthorized exchange, repair and modifications!

#### **Unpredictable malfunctions!**



- ► The function of the drive converter is dependent on its parameterization. Never replace without knowledge of the application.
- ► Modification or repair is permitted only by KEB Automation KG authorized personnel.
- ► Only use original manufacturer parts.
- ▶ Infringement will annul the liability for resulting consequences.

In case of failure, please contact the machine manufacturer. Only the machine manufacturer knows the parameterisation of the used drive converter and can provide an appropriate replacement or induce the maintenance.

#### 1.8 Disposal

Electronic devices of the KEB Automation KG are exclusively professional devices for further industrial processing (so-called B2B devices).

Manufacturers of B2B devices are obliged to take back and recycle devices manufactured after 14.08.2018. These devices may not be disposed at the collection centres of public sector disposal organisations.



If no deviating agreement has been made between the customer and KEB or no deviating mandatory legal regulation exists, KEB products marked in this way can be returned. Company and keyword to the return point can be taken from the list below. Shipping costs are paid by the customer. Thereupon the devices will be professionally recycled and disposed.

The entry numbers are listed country-specific in the following table. The corresponding KEB return addresses can be found on our website.

Withdrawal by	WEEE-RegNo.		Keyword
Austria			
KEB Automation GmbH	ERA:	51976	Stichwort "Rücknahme WEEE"
France			
RÉCYLUM - Recycle point	ADEME:	FR021806	Mots clés "KEB DEEE"
Germany			
KEB Automation KG	EAR:	DE12653519	Stichwort "Rücknahme WEEE"
Italy			
COBAT	AEE: (IT)	19030000011216	Parola chiave "Ritiro RAEE"

The packaging must be feed to paper and cardboard recycling.





# 2 Product Description

The F5/F6 series are drive converters optimized for operation at synchronous and asynchronous motors. The COMBIVERT can be equipped with a control board for the use in safety-related applications. Furthermore, it can be operated at different fieldbus systems. The control board has a system-overlapping operating concept.

The COMBIVERT meets the requirements of the Low-Voltage Directive. The harmonized standards of the series *EN 61800-5-1* for drive converters were used.

The COMBIVERT is a product of limited availability in accordance with *EN 61800-3*. This product may cause radio interference in residential areas. In this case the operator may need to take corresponding measures.

Depending on the version, the machine directive, EMC directive, Low Voltage Directive and other directives and regulations must be observed.

#### 2.1 Specified application

The COMBIVERT serves exclusively for the control and regulation of three-phase motors. It is designed for the installation in electrical systems or machines.

The technical data as well as information concerning the supply conditions shall be taken from the nameplate and from the instructions for use and shall be strictly observed.

The used semiconductors and components of KEB Automation KG are developed and dimensioned for the use in industrial products.

#### Restrictions

If the KEB COMBIVERT F5 is used in machines, which work under exceptional conditions or if essential functions, life-supporting measures or an extraordinary safety step must be fulfilled, the necessary reliability and security must be ensured by the machine builder.

#### 2.1.1 Residual risks

Despite intended use, the drive converter can assume unpredictable operating conditions in error case, wrong parameterization, due to faulty connection or improper intervention or repairs. This can be:

- Wrong direction of rotation
- Motor speed too high
- · Motor runs into limitation
- Motor may still carry live current when at rest
- Automatic restart

#### 2.2 Improper use

The operation of other electric consumers is prohibited and can lead to the destruction of the devices. The operation of our products outside the indicated limit values of the technical data leads to the loss of any liability claims.



#### **PRODUCT DESCRIPTION**



#### 2.3 Product features

These instructions for use describe the power circuits of the following units:

Unit type: Drive converter
Series: COMBIVERT F5/F6

Power range: 200...315 kW as Single Drive 400...560 kW as Master/Slave system

630...900 kW as Master/Slave/Slave system

Housing: F

The COMBIVERT F5/F6 is characterized by the following features:

- Operation of three-phase asynchronous motors and three-phase synchronous motors
- · Operating modes open-loop or closed-loop with and without speed feedback
- · Fieldbus interface F5 is realized by operator
- Fieldbus interface F6 supports the following systems directly: EtherCAT, VARAN or CAN
- System-overlapping operating concept
- · Wide operating temperature range
- · Low switching losses due to IGBT power unit
- Low noise development due to high switching frequencies
- · Different heat sink concepts
  - · Air cooler as built-in version
  - · Air cooler as push-through version
  - · Liquid cooler as built-in version
  - · Liquid cooler as push-through version
  - Liquid cooler with stainless steel tubes as built-in version
- · Easily replaceable fans
- Depending on the operating mode, the torque limits and s-curves are adjustable (to protect the gear box)
- General protective functions of the COMBIVERT series against overcurrent, overvoltage and overtemperature
- · Analog and digital inputs and outputs
- · Potential-free relay output
- · Brake control and supply
- Motor protection by I<sup>2</sup>t
- · KTY, PT100 and PTC input
- · Diagnostic interface



#### **PRODUCT DESCRIPTION**

## 2.4 Part code

x x x x x x x -x x	xx	
	Heat sink design	A: Air cooler with internal fan power supply  D: Air cooler with external fan power supply  V: Liquid cooling system built-in version 1)  W: Liquid cooling system push-through version 1)  Z: Liquid cooling system with stainless steel tubes  Built-in version 1)  At special/customer unit consecutive numbering
	Encoder interface	0: Without encoder interface (F5)  M: Multi encoder (F6)  At special/customer unit consecutive numbering
	Switching frequency, Current controller limit, Overcurrent	0: 2kHz/125%/150% 1: 4kHz/125%/150% 4: 2kHz/150%/180% 2: 8kHz/125%/150% At special/customer unit consecutive numbering
	Voltage/ Connection	9: 3ph 400 VAC B: 3ph 690 VAC D: 690 V DC without precharging V: 400 V DC without precharging At special/customer unit consecutive numbering
	Housing	P
	Variants	O: Without braking transistor  1: With braking transistor  A: Such as 0, but control board with safety relay  B: Such as 1, but control board with safety relay
	Control type	A: V/f software F5+ without STO  E: SCL software F5+ without STO  H: ASCL software F5+ without STO  K: V/f software F5+ with STO / F6 with EtherCAT <sup>2)</sup> P: SCL software F5+ with STO  L: ASCL software F5+ with STO
	Series	F5: COMBIVERT F5 F6: COMBIVERT F6
	Inverter size	2839
Table 1: Part code	9	

<sup>&</sup>lt;sup>1)</sup> After changing the type code, the different liquid coolers are listed separately. The old designation is H.

EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.





# 3 Technical Data

Unless otherwise indicated, all electrical data in the following chapter refer to a 3-phase AC voltage.

# 3.1 Operating conditions

#### 3.1.1 Climatic environmental conditions

Storage		Standard	Class	Description
Ambient temperature		EN 60721-3-1	1K4	-2555°C
Relative humidity		EN 60721-3-1	1K3	595% (without condensation)
Storage height		_	_	Max. 3000 m above sea level
Transport		Standard	Class	Description
Ambient temperatur	е	EN 60721-3-2	2K3	-2570°C
Relative humidity		EN 60721-3-2	2K3	95% at 40 °C (without condensation)
Operation		Standard	Class	Description
Ambient temperatur	е	EN 60721-3-3	3K3	540 °C (extended to -1045 °C)
Coolant inlet tem-	Air	_	_	540°C (-1045°C)
perature	Liquid	_	_	540 °C
Relative humidity		EN 60721-3-3	3K3	585% (without condensation)
		EN 60529	IP20	Protection against foreign bodies > ø12.5 mm
Type of protection				No protection against water
Type of protection		LIV 00329	11 20	Non-conductive pollution, occasional condensation when PDS is not active.
				Max. 2000 m above sea level
Site altitude		_	-	With site altitudes over 1000 m a derating of 1% per 100 m must be taken into con- sideration.
				From 2000 m, the control board has only basic insulation to the mains. Additional measures must be taken for the wiring of the control unit.
Table 2: Climatic environmental conditions				



# **TECHNICAL DATA**

#### 3.1.2 Mechanical environmental conditions

Storage	Standard	Class	Description
Vibration limits	EN 60721-3-1	1M2	Vibration amplitude 1.5 mm (29 Hz)
Vibration iimits	EN 60721-3-1	I IVIZ	Acceleration amplitude 5 m/s² (9200 Hz)
Shock limit values	EN 60721-3-1	1M2	40 m/s²; 22 ms
Transport	Standard	Class	Description
			Vibration amplitude 3.5 mm (29 Hz)
Vibration limits	EN 60721-3-2	2M1	Acceleration amplitude 10 m/s² (9200 Hz)
			Acceleration amplitude 15 m/s² (200500 Hz)
Shock limit values	EN 60721-3-2	2M1	100 m/s <sup>2</sup> ; 11 ms
Operation	Standard	Class	Description
	EN 60721-3-3	3M4	Vibration amplitude 3.0 mm (29 Hz)
   Vibration limits	EN 60721-3-3	31014	Acceleration amplitude 10 m/s² (9200 Hz)
VIDIALION IIIIIIIS	EN 61800-5-1		Vibration amplitude 0.075 mm (1057 Hz)
	EN 61600-5-1	_	Acceleration amplitude 10 m/s² (57150 Hz)
Shock limit values	EN 60721-3-3	3M4	100 m/s²; 11 ms
Table 3: Mechanical env	ironmental condition	ons	

#### 3.1.3 Chemical / mechanical active substances

Storage		Standard	Class	Description
Contamination	Gases	EN 60721-3-1	1C2	_
Contamination	Solids	EN 00721-3-1	1S2	_
Transport		Standard	Class	Description
Contamination	Gases	EN 60721-3-2	2C2	-
Contamination	Solids	EN 00721-3-2	2S2	_
Operation		Standard	Class	Description
Contamination	Gases	EN 60721-3-3	3C2	-
Contamination	Solids	EN 00/21-3-3	3S2	_
Table 4: Che	emical / mech	nanical active subs	stances	





# 3.1.4 Electrical operating conditions

#### 3.1.4.1 Device classification

Requirement	Standard	Class	Description
Overveltage estagens	EN 61800-5-1	111	-
Overvoltage category	EN 60664-1	III	-
Pollution degree	EN 60664-1	2	Non-conductive pollution, occasional condensation when PDS is not active
Table 5: Device classificati	ion		

# 3.1.4.2 Electromagnetic compatibility


The specified values only apply to devices with an external filter.

EMC emitted interference	Standard	Class	Description
Cable-based interferences	EN 61800-3	C2	-
Radiated interferences	EN 61800-3	C2	-
Interference immunity	Standard	Level	Description
Static discharges	EN 61000-4-2	8kV	AD (air discharge)
Statio discrizinges	EN 01000 1 2	4kV	CD (contact discharge)
Burst - Ports for process measurement control lines and signal interfaces	EN 61000-4-4	2kV	_
Burst - Power ports	EN 61000-4-4	4 kV	_
Surge - Power ports	EN 61000-4-5	1kV	Phase-phase
Surge - Fower ports	LN 01000-4-3	2kV	Phase-ground
Cable-fed disturbances, induced by high-frequency fields	EN 61000-4-6	10 V	0.1580 MHz
		10 V/m	80 MHz1 GHz
Electromagnetic fields	EN 61000-4-3	3 V/m	1.42 GHz
		1 V/m	22.7 GHz
Voltage variation /	EN 61000-2-1		-15%+10%
voltage drop	EN 61000-4-34	_	90%
Frequency changes	EN 61000-2-4	_	≤ 2 %
Voltage deviations	EN 61000-2-4	_	±10%
Voltage unsymmetries	EN 61000-2-4	_	≤ 3 %
Table 6: Electromagnetic c	ompatibility		



#### **BLOCK DIAGRAM OF ENERGY FLOW IN THE DEVICE**

# 3.2 Block diagram of energy flow in the device

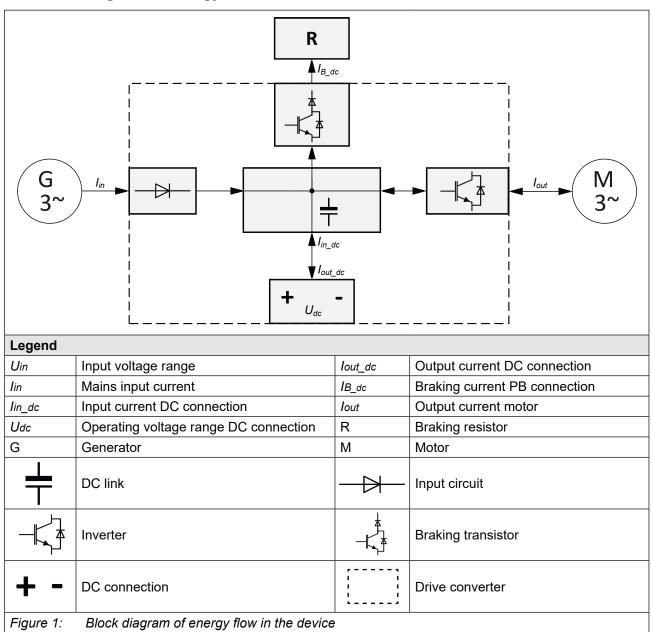



# 3.3 Technical data 400V class

# 3.3.1 Single Drive

Device size				28			29		3	80
Housing							Р			
Module number							1			
Rated power										
Rated motor power		Pmot / kW		200			250		3.	15
Rated apparent output power		Sout / kVA		256			319		39	95
Drive converter (input)						•				
Rated input voltage		Un / V			400 (UL: 480)					
Input voltage range		Uin / V			;	305	.528	±0%	)	
Mains phases			3							
Mains frequency		f∧/Hz				50	/ 60	±2		
Rated input current		Iin / A		385			483		59	98
Rated input current UL		Iin_UL / A		336			417		5 <sup>-</sup>	17
Permitted mains forms			TN, TT,				T 1), Z	∆ mai	ns <sup>2)</sup>	
Permissible mains fuse gG/gL	3)			=> Protection of				ive c	onverte	ers
Drive converter (output)						-				
Output voltage	4)	Uout / V				(	) <i>U</i>	in		
Output frequency	5)	fout / Hz				C	59	9		
Min. output frequency at continuous full load		fout_min / Hz					3			
Output phases							3			
Rated output current		Iout / A		370 460					570	
Rated output current UL		lout_UL / A	320 398					493		
Standstill current at 4 kHz	6)	lout_ST / A		259			322		39	99
Max. short time current limit 30s	7)	<i>lol</i> / %					125			
Overcurrent	12)	loc/%		150		15	50/18	80	1	50
Min. switching frequency (rated switching frequen	<b>)</b> -	fs_min / kHz					2			
cy)						-				
Max. switching frequency		fs_max / kHz				3				4
Overload characteristic					=:	> Ch	aract	eristic	cs	
Power dissipation										1
Switching frequency		fs / kHz	2	4	8	2	4	8	2	4
Total power dissipation	8)	<i>P</i> <sub>D</sub> / kW	3.5	4.1	5.4	4.3	4.9	6.8	5.3	6.2
Cable cross-section										
Motor cable cross-section						-		s-sec		
Max. motor cable length shielded					=> /	Motor	cabi	le len	gths	
DC link data						r				
DC link capacity		Cint / µF	1	16200	)			198	300	
Max. external DC link capacity	9)	Cext_max / µF					1980	0		
Precharging current	8)	Ipre / A	98							
Power OFF DC		UPoff_dc / V	200							
Undervoltage level DC		UUP_dc / V	240							
Overvoltage level DC		UOP_dc / V	840							
Operating voltage range DC	13)	U_dc / V	390780					40		
Rated input current DC		lin_dc / A	400 000					_ 14)		
Rated input current UL DC		lin_UL_dc / A						_ 14)		
Rated output current DC	17)	lout_dc / A	469 580 -					_		
Rated output current UL DC	17)	lout_UL_dc / A		403			502		-	
						cor	ntınue	ed on	the ne	xt page



Device size				28			29		3	0
Housing							Р			
Module number							1			
Braking option										
Min. braking resistor	10)	R_min / Ω	2,1							
Max. braking current	10)	I <sub>B_max</sub> / A					380			
Switching level braking transistor		U <sub>B_dc</sub> / V					780			
Monitoring braking transistor (K1/K2)	11)	Umon_dc / V					24			
,		Imon_dc / A	2							
Operating conditions air cooler					.,					
Switching frequency		<i>f</i> s / kHz			2				_	_
Max. heat sink temperature (OH)	16)	t_max / °C			9	0			_	_
External fan power supply		Uext_dc / V				4			_	_
External lan power supply		lext_dc / A	2.5	, 4	4 <sup>15)</sup>	2.5	5 4	<b>4</b> <sup>15)</sup>	_	_
Operating conditions liquid cooler										
Switching frequency		<i>f</i> s / kHz	2	4	8	2	4	8	2	4
Max. heat sink temperature (OH)	16)	t_max / °C	90	73	60	90	73	60	90	73
∆T Flow/return flow		$\Delta T / K$					36			
Flow temperature typical		<i>t</i> in_typ / °C					25			
Flow temperature maximum		<i>t</i> in_max / °C					40			
Liquid cooler content		V/I					8.0			
Volume flow		Q / I/min		/	Dioar	ome c	of the	coolir	ng desig	ın
Pressure drop		<i>∆<sub>pv</sub></i> / bar			Diagra	<i></i>	n une	COOIII	ig desig	
Max. permissible operating pressure		<i>p_<sub>max</sub> /</i> bar					10			
Other data										
Insulation resistance @ Udc = 500 V	1) 13)	$R$ iso / $M\Omega$	1.69							
Max. weight air cooler		<i>m_<sub>max</sub></i> / kg	97.5							
Max. weight liquid cooler	<i>m_max</i> / kg 96									
Table 7: Technical data of the 400V	class - S	Single Drive								

- 1) Restrictions when using HF filters.
- 2) Phase conductor grounded mains are only permissible without HF filters.
- 3) Fusing according to UL => Protection of drive converters.
- 4) The voltage at the motor is dependent on the series-connected units and on the control method.
- 5) The output frequency is to be limited in such way that 1/10 of the switching frequency is not exceeded. Devices with higher maximum output frequency are subject to export restrictions and are only available upon request.
- 6) Max. current before the OL2 function triggers.
- 7) With the regulated operating modes 5% are to be subtracted as control reserve.
- 8) Applies to rated input voltage 400 V, 25 °C ambient temperature.
- 9) Maximum additional chargeable capacity per module.
- 10) Data apply to a switching level for the braking transistor of 780 V DC.
- 11) => Wiring Diagrams. UL, C-UL E120782 UL508, CSA C22.2 No.14; UL1604 (class I, Division 2, Group A, B, C, D); 277V AC 8A, General use, 24 V DC 6A, General use, B300, R300 250 V AC / max. 2A, 24 V DC / max. 2A (Pilot Duty).
- 12) 180% only at rated switching frequency.
- 13) The internal fans are switched off below the operating voltage range.
- 14) Only possible as DC version without precharging.
- 15) The use of stronger heat sink fans for adaption to the ambient conditions or at higher overload (180 %) is possible after consultation with KEB.
- 16) The specifications apply to devices without derating of the switching frequency.
- 17) The specifications only apply if there is parallely no power output via the motor connection terminals U / V / W.

#### NOTICE

An input choke is absolutely necessary.



The technical data are for 2/4-pole standard motors. With other pole numbers the drive converter must be dimensioned onto the rated motor current. Contact KEB for special or medium frequency motors.



# 3.3.2 Master/slave system

Device size			32	33	34	35		
Housing					P			
Module number					2			
Rated power								
Rated motor power		Pmot / kW	400	450	500	550		
Output rated power		Sout / kVA	492	554	616	693		
Drive converter (input)								
Input rated voltage		Un/V		400 (UL: 480)				
Input voltage range		Uin / V		305528 ±0%				
Phases				;	3			
Mains frequency		f∧ / Hz		50 / (	60 ±2			
Input rated current		Iin / A	746	746 840 935				
Input rated current UL		Iin_UL / A	646					
Permitted mains forms			TN	I, TT, IT <sup>1</sup>	), ∆ main	S <sup>2)</sup>		
Permissible main fuse gG/gL	3)		=> Prote	ection of	drive co	nverters		
Drive converter (output)								
Output voltage	4)	Uout / V		0	. Uin			
Output frequency	5)	fout / Hz		0	599			
Min. output frequency at continuous full load		fout_min / Hz			3			
Output phases				, ;	3	,		
Output rated current		Iout / A	710	800	890	1000		
Output rated current UL		Iout_UL / A	615	692	770	867		
Standstill current at 4 kHz	6)	lout_ST / A	497	560	623	700		
Max. short time current 30s	7)	IOL_max / %			25			
Overcurrent		loc/%			50			
Min. switching frequency (rated switching frequency)		fs_min / kHz			2			
Max. switching frequency		fs_max / kHz		3	L	4		
Overload characteristic			=	=> Chara	acteristic	S		
Power dissipation						1		
Switching frequency		fs / kHz		2 4 8		2 4		
Total power dissipation	8)	<i>P</i> <sub>D</sub> / kW	6,8 7,8 10,4	7,6 8,8 12	8,5 9,6	9,5 11		
Cable cross-section			T					
Motor cable cross-section					oss-sect			
Max. motor line length shielded			=>	Motor ca	able leng	ths		
DC link data								
DC link capacity	13)	Cint / µF			800			
Max. external DC link capacity	9)	Cext_max / µF			800			
Precharging current	8) 13)	Ipre / A			18			
Power OFF DC		UPoff_dc / V			00			
Undervoltage level DC		UUP_dc / V						
Overvoltage level DC		UOP_dc / V	840 390780					
Operating voltage range DC	12)	<i>U_dc</i> / V	007			4004		
Input rated current DC		lin_dc / A	895	1009	1123	1261		
Rated input current UL DC	40)	Iin_UL_dc / A	775	872	971	1093		
Rated output current DC	16)	lout_dc / A	895	1009	1123	1261		
Rated output current UL DC	16)	lout_UL_dc / A		872	971	1093		
			CC	ontinued	on the n	ext page		



Device size				32	3	3	3	4	3	5	
Housing						F	•				
Module number	2										
Braking option											
Min. braking resistor	10) 13)	$R_{min} / \Omega$	2,1								
Max. braking current	10) 13)	IB_max_dc / A				38	30				
Switching level braking transistor		U <sub>B_dc</sub> / V				78	30				
   Monitoring braking transistor (K1/K2)	11) 13)	Umon_dc / V				2					
, ,		Imon_dc / A				2	2				
Operating conditions air cooler											
Switching frequency		<i>f</i> s / kHz	2	4	2	4	2	2	2	2	
Max. heat sink temperature (OH)	15)	t_max / °C				9					
External fan power supply		Uext_dc / V				2					
External rail power supply	13)	lext_dc / A	2,5	4 14)	2,5	4 14)	2,5	4 14)		1	
Operating conditions liquid cooler											
Switching frequency		<i>f</i> s / kHz	2	4 8	2 4	8 4	2	4	2	4	
Max. heat sink temperature (OH)	15)	t_max / °C	90	73 60	90 7		90	73	90	73	
ΔT Flow/return flow series connection		ΔT / K				6					
ΔT Flow/return flow parallel connection		ΔT / K				3	7				
Flow temperature typical		tin_typ / °C				2	5				
Flow temperature maximum		<i>t</i> in_max / °C				4	0				
Liquid cooler content	13)	V/I				0,	,8				
Volume flow		Q / I/min		=> D	iagram	e of th	he cod	olina d	esian		
Pressure drop		<i>Δ<sub>pv</sub></i> / bar			agran	13 01 11		ming u	csigii		
Max. permissible operating pressure		<i>p_<sub>max</sub></i> / bar				1	0				
Other data											
Insulation resistance @ Udc = 500 V	1) 13)	$R$ iso / $M\Omega$	1,69								
Max. weight air cooler	13)	<i>m_<sub>max</sub></i> / kg	97,5								
Max. weight liquid cooler	13) <i>m_max</i> / kg 96										
Table 8: Technical data of the 400 V	class ma	ster/slave									

- 1) Restrictions when using HF filters.
- 2) Phase conductor grounded mains are only permissible without HF filters.
- 3) Fusing according to UL => Protection of drive converters.
- 4) The voltage at the motor is dependent on the series-connected units and on the control method.
- 5) The output frequency is to be limited in such way that 1/10 of the switching frequency is not exceeded. Devices with higher maximum output frequency are subject to export restrictions and are only available upon request.
- 6) Max. current before the OL2 function triggers.
- 7) With the regulated operating modes 5% are to be subtracted as control reserve.
- 8) Applies to rated input voltage 400 V, 25 °C ambient temperature.
- 9) Maximum additional chargeable capacity per module.
- 10) Data apply to a switching level for the braking transistor of 780 VDC.
- 11) => Wiring Diagrams. UL, C-UL E120782 UL508, CSA C22.2 No.14; UL1604 (class I, Division 2, Group A, B, C, D); 277 VAC 8A, General use, 24 VDC 6A, General use, B300, R300 250 VAC / max. 2A, 24 VDC / max. 2A (Pilot Duty).
- 12) The internal fans are switched off below the operating voltage range.
- 13) These data are valid per module.
- 14) The use of stronger heat sink fans for adaption to the ambient conditions or at higher overload (180 %) is possible after consultation with KEB.
- 15) The specifications apply to devices without derating of the switching frequency.
- 16) The specifications only apply if there is parallely no power output via the motor connection terminals U / V / W.

#### NOTICE

An input choke is absolutely necessary.



The technical data are for 2/4-pole standard motors. With other pole numbers the drive converter must be dimensioned onto the rated motor current. Contact KEB for special or medium frequency motors.



# 3.3.3 Master/slave/slave system

Device size				36			37		3	8
Housing							Р			
Module number							3			
Rated power										
Rated motor power		Pmot / kW		630			710		80	00
Rated apparent output power		Sout / kVA		797			921		10	05
Drive converter (input)						,				
Rated input voltage		Un/V				400 (	(UL: 4	480)		
Input voltage range		Uin / V				305	<u> </u>		)	
Mains phases							3			
Mains frequency		f <sub>N</sub> / Hz				50	/ 60 :	+2		
Rated input current		lin / A	1	1208			1397	 	15	23
Rated input current UL		Iin_UL / A		1045			1209			<u></u> 18
Permitted mains forms		1111_OE / / X			TN	TT, I		mai		10
Permissible mains fuse gG/gL	3)								onverte	rs
Drive converter (output)				- 1	70100	2011	or arr	70 00	JIIV CITO	, ,
Output voltage	4)	Uout / V					) <i>Uii</i>			
Output frequency	5)	fout / Hz					599			
Min. output frequency at continuous full load	3)	fout_min / Hz				- 0	3			
Output phases		Tout_min / 1 12					3			
Rated output current		Iout / A	ļ ,	1150			<u></u> 1330		1.1	50
Rated output current UL			_	996			1151			55
Standstill current at 4 kHz	6)	lout_UL / A					931			
	6)	lout_ST / A		805			125		10	15
Max. short time current limit 30s	7)	IOL_max / %		-						
Overcurrent	Λ.	loc/%					150			
Min. switching frequency (rated switching frequency	)	fs_min / kHz					2			
Max. switching frequency		fs_max / kHz			3					ł
Overload characteristic					=>	> Cha	aracte	eristic	CS	
Power dissipation		6 / 1 1 1		•						_
Switching frequency		fs / kHz	2	4	8	2	4	8	2	4
Total power dissipation	8)	P <sub>D</sub> / kW	10.5	12.4	16.8	11.9	14.3	19.5	13.5	15.8
Cable cross-section										
Motor cable cross-section									tions	
Max. motor cable length shielded					=> /\	1otor	cable	e len	gths	
DC link data			1							
DC link capacity	13)	Cint / µF				1	9800	)		
Max. external DC link capacity	9)	Cext_max / µF								
Precharging current	8) 13)	Ipre / A	98							
Power OFF DC		UPoff_dc / V								
Undervoltage level DC		<i>U</i> UP_dc / V	240							
Overvoltage level DC		UOP_dc / V	840							
Operating voltage range DC	12)	U_dc / V	390780							
Rated input current DC		lin_dc / A	1451 1678 182					24		
Rated input current UL DC		lin_UL_dc / A	1255 1451 158					82		
Rated output current DC	16)	lout_dc / A	1	1451			1678		18	24
Rated output current UL DC	16)	lout_UL_dc / A	. 1	1255			1451		15	82
						con	tinue	d on	the ne	xt page



Device size				36			37		;	38	
Housing							Р				
Module number	3										
Braking option											
Min. braking resistor	10) 13)	$R_{min} / \Omega$	2.1								
Max. braking current	10) 13)	I <sub>B_max_dc</sub> / A				3	380				
Switching level braking transistor		U <sub>B_dc</sub> / V				7	780				
Monitoring braking transistor (K1/K2)	11) 13)	Umon_dc / V					24				
, ,		Imon_dc / A					2				
Operating conditions air cooler											
Switching frequency		<i>f</i> s / kHz				2					
Max. heat sink temperature (OH)	14)	t_max / °C			9	0				_	
External fan power supply		Uext_dc / V				4				_	
External fair power supply	13)	lext_dc / A	2.5		4 14)	2.5	4	<b>1</b> <sup>14)</sup>			
Operating conditions liquid cooler											
Switching frequency		<i>f</i> s / kHz	2	4	8	2	4	8	2	4	
Max. heat sink temperature (OH)	14)	t_max / °C	90	73	60	90	73	60	90	73	
ΔT Flow/return flow series connection		ΔT / K				9	12	2			
ΔT Flow/return flow parallel connection		ΔT / K				3	37				
Flow temperature typical		tin_typ / °C					25				
Flow temperature maximum		<i>t</i> in_max / °C					40				
Liquid cooler content	13)	V/I				(	8.0				
Volume flow		Q / I/min			Dioar	ame of	tho	coolir	ng desi	an	
Pressure drop		<i>Δ<sub>pv</sub></i> / bar			Diagra	31115 01	uic	COOIII	ig uesi	yrı ———	
Max. permissible operating pressure		<i>p_<sub>max</sub></i> / bar					10				
Other data											
Insulation resistance @ Udc = 500 V	1) 13)	Riso / MΩ				1	.69				
Max. weight air cooler	13)	<i>m_<sub>max</sub></i> / kg	97.5								
Max. weight liquid cooler 13) $m_{max}$ / kg 96											
Table 9: Technical data of the 400 V	class ma	aster/slave/	slave								

- 1) Restrictions when using HF filters.
- 2) Phase conductor grounded mains are only permissible without HF filters.
- 3) Fusing according to UL => Protection of drive converters.
- 4) The voltage at the motor is dependent on the series-connected units and on the control method.
- 5) The output frequency is to be limited in such way that 1/10 of the switching frequency is not exceeded. Devices with higher maximum output frequency are subject to export restrictions and are only available upon request.
- 6) Max. current before the OL2 function triggers.
- 7) With the regulated operating modes 5% are to be subtracted as control reserve.
- 8) Applies to rated input voltage 400 V, 25 °C ambient temperature.
- 9) Maximum additional chargeable capacity per module.
- 10) Data apply to a switching level for the braking transistor of 780 VDC.
- 11) => Wiring Diagrams. UL, C-UL E120782 UL508, CSA C22.2 No.14; UL1604 (class I, Division 2, Group A, B, C, D); 277 VAC 8A, General use, 24 VDC 6A, General use, B300, R300 250 VAC / max. 2A, 24 V DC / max. 2A (Pilot Duty).
- 12) The internal fans are switched off below the operating voltage range.
- 13) These data are valid per module.
- 14) The use of stronger heat sink fans for adaption to the ambient conditions or at higher overload (180 %) is possible after consultation with KEB.
- 15) The specifications apply to devices without derating of the switching frequency.
- 16) The specifications only apply if there is parallely no power output via the motor connection terminals U / V / W.

#### NOTICE

An input choke is absolutely necessary.



The technical data are for 2/4-pole standard motors. With other pole numbers the drive converter must be dimensioned onto the rated motor current. Contact KEB for special or medium frequency motors.



# 3.4 Technical data 690V class

# 3.4.1 Single Drive

Device size			28	3	2	9	3	0
Housing					F	•		
Module number				1			2	1
Rated power								
Rated motor power		Pmot / kW	20	0	25	50	3	15
Rated apparent output power		Sout / kVA	26	9	33	35	4	12
Drive converter (input)								
Input rated voltage		Un/V	690					
Input voltage range		Uin / V		4	5076	60 ± 0 %	, )	
Mains Phases					3	3		
Mains frequency		f <sub>N</sub> / Hz			50 / 6	0 ±2		
Rated input current		lin / A	232 288				3	55
Permitted mains forms			TN, TT, IT ¹), ∆ mains ²)					
Permissible mains fuse gG/gL	3)		=>	Protec	tion of	drive c	onverte	rs
Drive converter (output)								
Output voltage	4)	Uout / V			0	<b>U</b> in		
Output frequency	5)	fout / Hz			0	599		
Min. output frequency at continuous full load		fout_min / Hz			3	3		
Output phases					3	3		
Rated output current		Iout_UL / A	22	5	28	30	34	45
Standstill current at 4 kHz	6)	lout_ST / A	15	8	19	96	24	45
Max. short time current limit 30s	7)	IOL_max / %			12	25		
Overcurrent		loc/%			15	50		
Min. switching frequency (rated switching frequency	<b>'</b> )	fs_min / kHz			2	2		
Max. switching frequency		<i>f</i> s_max / kHz		4	-		2	2
Overload characteristic				=>	Chara	cteristic	cs	
Power dissipation								
Switching frequency		fs / kHz	2	4	2	4		2
Total power dissipation	8)	P <sub>D</sub> / kW	3.4	_ 15)	4.3	_ 15)	5	.4
Cable cross-section								
Motor cable cross-section				=> C	able cro	oss-sec	tions	
Max. motor cable length shielded				=> <i>N</i>	lotor ca	able len	gths	
DC link data								
DC link capacity		Cint / µF			88	00		
Max. external DC link capacity	9)	Cext_max / µF			88	00		
Precharging current	8)	Ipre / A	168 168 <sup>13)</sup> 1				168	
Power OFF DC		<i>U</i> Poff_dc / ∨	300					
Undervoltage level DC		$U$ UP_dc / $\vee$	360					
Overvoltage level DC		UOP_dc / V	1200					
Operating voltage range DC	12)	U_dc / V	6701100					
Rated input current DC		lin_dc / A	284 363 435					35
Rated output current DC	16)	lout_dc / A	28	4	36			35
					contin	nued on	the ne	xt page



Device size			2	8	2	9	3	0		
Housing						<u> </u>				
Module number				1			2	1		
Braking option										
Min. braking resistor	10) 13)	R_min / Ω								
Max. braking current	10) 13)	I <sub>B_max</sub> / A			2	55				
Switching level braking transistor		U <sub>B_dc</sub> / V			11	40				
Manitaring broking translator (K1/K2)	11) 13)	Umon_dc / V			2	.4				
Monitoring braking transistor (K1/K2)	11) 13)	Imon_dc / A			2	2				
Operating conditions air cooler										
Switching frequency		<i>f</i> s / kHz			2			_		
Max. heat sink temperature (OH)	14)	t_max / °C			90					
External fan power supply	13)	Uext_dc / V			24					
External fair power supply		lext_dc / A								
Operating conditions liquid cooler										
Switching frequency		<i>f</i> s / kHz	2	4	2	4	_	2		
Max. heat sink temperature (OH)	14)	t_max / °C	90	_ 15)	90	_ 15)	_	90		
∆T Flow/return flow		ΔT / K			3.	6				
Flow temperature typical		tin_typ / °C			2	:5				
Flow temperature maximum		tin_max / °C			4	.0				
Liquid cooler content		V/I			0	.8				
Volume flow		Q / I/min	_	Diagra	ma of t	ha analir	a doois			
Pressure drop		Δ <sub>pv</sub> / bar	_	Diagra	IIIS OI L	he coolin	ig desig	111		
Max. permissible operating pressure		<i>p_max</i> / bar			1	0				
Other data										
Insulation resistance @ Udc = 500 V	1) 13)	Riso / MΩ	1,69							
Max. weight air cooler		m_max / kg	97.5							
Max. weight liquid cooler		<i>m_<sub>max</sub></i> / kg	kg 96							
Table 10: Technical data of the 690V	class - S	Single Drive								

- 1) Restrictions when using HF filters.
- 2) Phase conductor grounded mains are only permissible without HF filters.
- 3) Fusing according to UL => Protection of drive converters.
- 4) The voltage at the motor is dependent on the series-connected units and on the control method.
- 5) The output frequency is to be limited in such way that 1/10 of the switching frequency is not exceeded. Devices with higher maximum output frequency are subject to export restrictions and are only available upon request.
- 6) Max. current before the OL2 function triggers.
- 7) With the regulated operating modes 5% are to be subtracted as control reserve.
- 8) Applies to rated input voltage 690 V, 25 °C ambient temperature.
- 9) Maximum additional chargeable capacity per module.
- 10) Data apply to a switching level for the braking transistor of 1140 VDC.
- 11) => Wiring Diagrams. UL, C-UL E120782 UL508, CSA C22.2 No.14; UL1604 (class I, Division 2, Group A, B, C, D); 277 VAC 8A, General use, 24 VDC 6A, General use, B300, R300 250 VAC / max. 2A, 24 V DC / max. 2A (Pilot Duty).
- 12) The internal fans are switched off below the operating voltage range.
- 13) The data are valid per module.
- 14) The specifications apply to devices without derating of the switching frequency.
- 15) This version only upon request.
- 16) The specifications only apply if there is parallely no power output via the motor connection terminals U/V/W.

#### NOTICE

An input choke is absolutely necessary.



The technical data are for 2/4-pole standard motors. With other pole numbers the drive converter must be dimensioned onto the rated motor current. Contact KEB for special or medium frequency motors.





# 3.4.2 Master/slave system

Device size			32	33	34	35
Housing			F			
Module number			,		2	
Rated power						
Rated motor power		Pmot / kW	400	450	500	560
Rated apparent output power		Sout / kVA	514	598	657	741
Drive converter (input)			,			
Rated iput voltage		Un/V		69	90	
Input voltage range		Uin / V		45076	30 ±0 %	
Mains phases				- 3	3	
Mains frequency		f <sub>N</sub> / Hz		50 / 6	60 ±2	
Rated input current		Iin / A	443	515	567	639
Permitted mains forms			TN	I, TT, IT <sup>1</sup>	), Δ main	s <sup>2)</sup>
Permissible mains fuse gG / gL	3)				drive cor	
Drive converter (output)						
Output voltage	4)	Uout / V		0	. <b>U</b> in	
Output frequency	5)	fout / Hz		0	599	
Min. output frequency at continuous full load		fout_min / Hz				
Output phases		_			 3	
Rated output current		lout_UL / A	430	500	550	620
Standstill current at 4 kHz	6)	lout_ST / A	301	343	385	427
Max. short time current limit 30s	7)	IOL_max / %		12	25	
Overcurrent		loc/%		15	50	
Min. switching frequency (rated switching frequency)		fs_min / kHz		2	2	
Max. switching frequency		fs_max / kHz		4		2
Overload characteristic				=> Chara	cteristics	3
Power dissipation						
Switching frequency		fs / kHz	2 4	2 4	2 4	2
Total power dissipation	8)	Po/kW	6.5 - <sup>15)</sup>	7.7 - 15)	8.5 - <sup>15)</sup>	9.6
Cable cross-section			<b>,</b>		· · · · ·	
Motor cable cross-section			=>	Cable cr	oss-secti	ons
Max. motor cable length shielded			=>	Motor ca	able leng	ths
DC link data						
DC link capacity	13)	Cint / µF		88	00	
Max. external DC link capacity	9)	Cext_max / µF	8800			
Precharging current	8) 13)	Ipre / A	168			
Power OFF DC		UPoff_dc / V	300			
Undervoltage level DC		UUP_dc / V	360			
Overvoltage level DC		UOP_dc / V	1200			
Operating voltage range DC	12)	U_dc / V		670	.1100	
Rated input current DC		lin_dc / A	542	649	715	806
Rated output current DC	16)	lout_dc / A	542	649	715	806
			CC	ontinued	on the ne	ext page



Device size			32	2	3	3	3	4	35
Housing						F	•		
Module number			2						
Braking option									
Min. braking resistor	10) 13)	R_min / Ω				4	.7		
Max. braking current	10) 13)	I <sub>B_max</sub> / A				25	55		
Switching level braking transistor		U <sub>B_dc</sub> / ∨				11	40		
Monitoring braking transistor (K1/K2)	11) 13)	Umon_dc / V					4		
		Imon_dc / A				2	2		
Operating conditions air cooler									
Switching frequency		<i>f</i> s / kHz					2		
Max. heat sink temperature (OH)	14)	t_max / °C				9	0		
External fan power supply		Uext_dc / V	24						
External fair power supply	13)								
Operating conditions liquid cooler									
Switching frequency		<i>f</i> s / kHz	2	4	2	4	2	4	2
Max. heat sink temperature (OH)	14)	t_max / °C	90	_ 15)	90	_ 15)	90	_ 15)	90
∆T Flow/return flow series connection		ΔT / K				6	.10		
∆T Flow/return flow parallel connection		ΔT/K				3.	7		
Flow temperature typical		tin_typ / °C				2	5		
Flow temperature maximum		tin_max / °C				4	0		
Liquid cooler content	13)	V/I				0	.8		
Volume flow		Q / I/min		-> Di	oaron	oo of t	ho 000	olina da	ocian
Pressure drop		Δ <sub>pv</sub> / bar	=> Diagrams of the cooling design						
Max. permissible operating pressure		p_max / bar	10						
Other data									
Insulation resistance @ Udc = 500 V	1) 13)	Riso / MΩ	1,69						
Max. weight air cooler	13)	<i>m_</i> max / kg	97.5						
Max. weight liquid cooler	13)	m_max / kg	96						
Table 11: Technical data of the 690 V class master/slave									

- 1) Restrictions when using HF filters.
- 2) Phase conductor grounded mains are only permissible without HF filters.
- 3) Fusing according to UL => Protection of drive converters.
- 4) The voltage at the motor is dependent on the series-connected units and on the control method.
- 5) The output frequency is to be limited in such way that 1/10 of the switching frequency is not exceeded. Devices with higher maximum output frequency are subject to export restrictions and are only available upon request.
- 6) Max. current before the OL2 function triggers.
- 7) With the regulated operating modes 5% are to be subtracted as control reserve.
- 8) Applies to rated input voltage 690 V, 25 °C ambient temperature.
- 9) Maximum additional chargeable capacity per module.
- 10) Data apply to a switching level for the braking transistor of 1140 VDC.
- 11) => Wiring Diagrams. UL, C-UL E120782 UL508, CSA C22.2 No.14; UL1604 (class I, Division 2, Group A, B, C, D); 277 VAC 8A, General use, 24 VDC 6A, General use, B300, R300 250 VAC / max. 2A, 24 VDC / max. 2A (Pilot Duty).
- 12) The internal fans are switched off below the operating voltage range.
- 13) These data are valid per module.
- 14) The specifications apply to devices without derating of the switching frequency.
- 15) This version only upon request.
- 16) The specifications only apply if there is parallely no power output via the motor connection terminals U / V / W.

### NOTICE

An input choke is absolutely necessary.



The technical data are for 2/4-pole standard motors. With other pole numbers the drive converter must be dimensioned onto the rated motor current. Contact KEB for special or medium frequency motors.



# 3.4.3 Master/slave/slave system

Device size			36	37	38	39
Housing				F		
Module number			3			
Rated power						
Rated motor power		P <sub>mot</sub> / kW	630	710	800	900
Rated apparent output power		Sout / kVA	849	980	1076	1213
Drive converter (input)						
Rated Input voltage		Un/V		69	90	
Input voltage range		Uin / V		45076	60 ±0 %	
Mains phases				3	3	
Mains frequency		<i>f</i> ∧/ Hz		50 / 6	30 ±2	
Rated input current		lin / A	731	845	927	1045
Permitted mains forms			TN	I, TT, IT <sup>1</sup>	, Δ main	S <sup>2)</sup>
Permissible mains fuse gG/gL	3)		=> Prot	ection of	drive co.	nverters
Drive converter (output)						
Output voltage	4)	Uout / V		0	. <b>U</b> in	
Output frequency	5)	fout / Hz		0	599	
Min. output frequency at continuous full load		fout_min / Hz		3	3	
Output phases				3	3	
Rated output current		Iout_UL / A	710	820	900	1015
Standstill current at 4 kHz	6)	lout_ST / A	490	567	615	710
Max. short time current limit 30s	7)	IOL_max / %		12	25	•
Overcurrent		loc/%		15	50	
Min. switching frequency (rated switching frequency)		fs_min / kHz		2	2	
Max. switching frequency		fs_max / kHz		4	2	2
Overload characteristic			:	=> Chara	cteristics	S
Power dissipation						
Switching frequency		fs / kHz	2 4	2 4	2	2
Total power dissipation	8)	P <sub>D</sub> / kW	10.8 - 15)	12.7 - 15)	13.9	15.8
Cable cross-section						
Motor cable cross-section			=>	Cable cro	oss-secti	ions
Max. motor cable length shielded			=> Motor cable lengths			
DC link data						
DC link capacity	13)	Cint / µF		88	00	
Max. external DC link capacity	9)	Cext_max / µF	<del>i</del>			
Precharging current	8) 13)	Ipre / A	168			
Power OFF DC		<i>U</i> Poff_dc / V	300			
Undervoltage level DC		<i>U</i> UP_dc / V	360			
Overvoltage level DC		UOP_dc / V	1200			
Operating voltage range DC	12)	U_dc / V	6701100			
Rated input current DC		lin_dc / A	895	1034	1135	1280
Rated output current DC	16)	lout_dc / A	895	1034	1135	1280
			C	ontinued	on the n	ext page



Device size			36	6	3	7	38	39
Housing				•		F	<b>)</b>	
Module number			3					
Braking option								
Min. braking resistor	10) 13)	$R_{min} / \Omega$				4	.7	
Max. braking current	10) 13)	I <sub>B_max</sub> / A				2	55	
Switching level braking transistor		U <sub>B_dc</sub> / ∨				11	40	
Monitoring braking transistor (K1/K2)	11)	Umon_dc / V					4	
. , ,	13)	Imon_dc / A				2	2	
Operating conditions air cooler								
Switching frequency		<i>f</i> s / kHz				2		
Max. heat sink temperature (OH)	14)	t_max / °C			9	0		
External fan power supply		Uext_dc / V			2	24		_
External lan power suppry	13) $l_{ext\_dc} / A$ 4							
Operating conditions liquid cooler								
Switching frequency		<i>f</i> s / kHz	2	4	2	4	2	2
Max. heat sink temperature (OH)	14)	t_max / °C	90	_ 15)	90	_ 15)	90	90
∆T Flow/return flow series connection		$\Delta T / K$				9	.12	
∆T Flow/return flow parallel connection		ΔT / K				3.	7	
Flow temperature typical		tin_typ / °C				2	5	
Flow temperature maximum		tin_max / °C				4	0	
Liquid cooler content	13)	V/I				0	,8	
Volume flow		Q / I/min		-> Di	aarar	nc of t	ha cooling	n design
Pressure drop		<i>∆<sub>pv</sub></i> / bar	=> Diagrams of the cooling design					
Max. permissible operating pressure		<i>p_<sub>max</sub></i> / bar	10					
Other data								
Insulation resistance @ Udc = 500 V	1) 13)	Riso / MΩ	1,69					
Max. weight air cooler	13)	<i>m_<sub>max</sub></i> / kg	97.5					
Max. weight liquid cooler	13)	<i>m_<sub>max</sub></i> / kg	96					
Table 12: Technical data of the 690 V	class ma	aster/slave/	slave					

- 1) Restrictions when using HF filters.
- 2) Phase conductor grounded mains are only permissible without HF filters.
- 3) Fusing according to UL => Protection of drive converters.
- 4) The voltage at the motor is dependent on the series-connected units and on the control method.
- 5) The output frequency is to be limited in such way that 1/10 of the switching frequency is not exceeded. Devices with higher maximum output frequency are subject to export restrictions and are only available upon request.
- 6) Max. current before the OL2 function triggers.
- 7) With the regulated operating modes 5% are to be subtracted as control reserve.
- 8) Applies to rated input voltage 690 V, 25 °C ambient temperature.
- 9) Maximum additional chargeable capacity per module.
- 10) Data apply to a switching level for the braking transistor of 1140 VDC.
- 11) => Wiring Diagrams. UL, C-UL E120782 UL508, CSA C22.2 No.14; UL1604 (class I, Division 2, Group A, B, C, D); 277 VAC 8A, General use, 24 VDC 6A, General use, B300, R300 250 VAC / max. 2A, 24 VDC / max. 2A (Pilot Duty).
- 12) The internal fans are switched off below the operating voltage range.
- 13) These data are valid per module.
- 14) The specifications apply to devices without derating of the switching frequency.
- 15) This version only upon request.
- 16) The specifications only apply if there is parallely no power output via the motor connection terminals U/V/W.

### NOTICE

An input choke is absolutely necessary.




The technical data are for 2/4-pole standard motors. With other pole numbers the drive converter must be dimensioned onto the rated motor current. Contact KEB for special or medium frequency motors.



# 3.5 Dimensions and weights


# 3.5.1 Dimensions air cooler built-in version

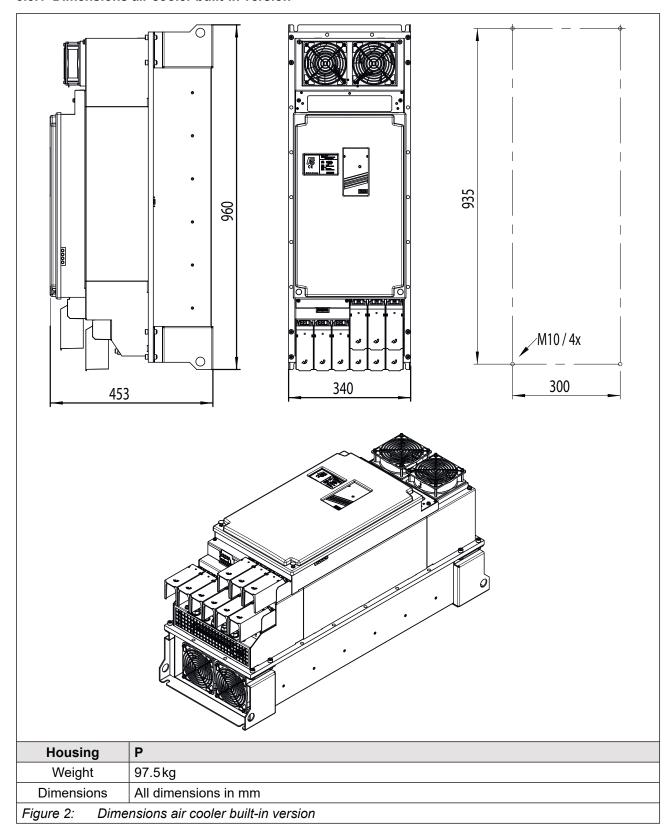



# **DIMENSIONS AND WEIGHTS**


# 3.5.2 Dimensions air-cooled inverter through-mount version

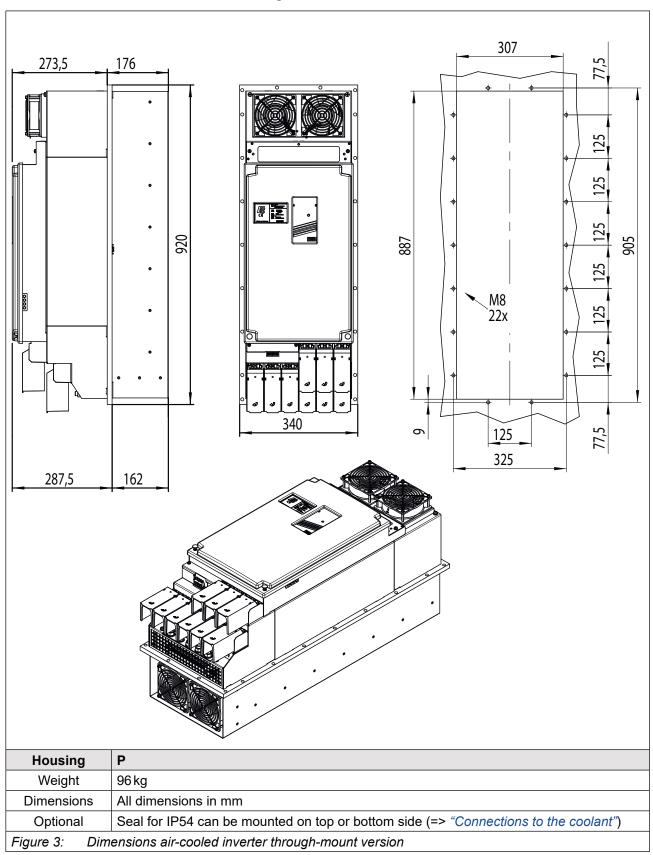





# 3.5.3 Dimensions liquid cooler push-through version

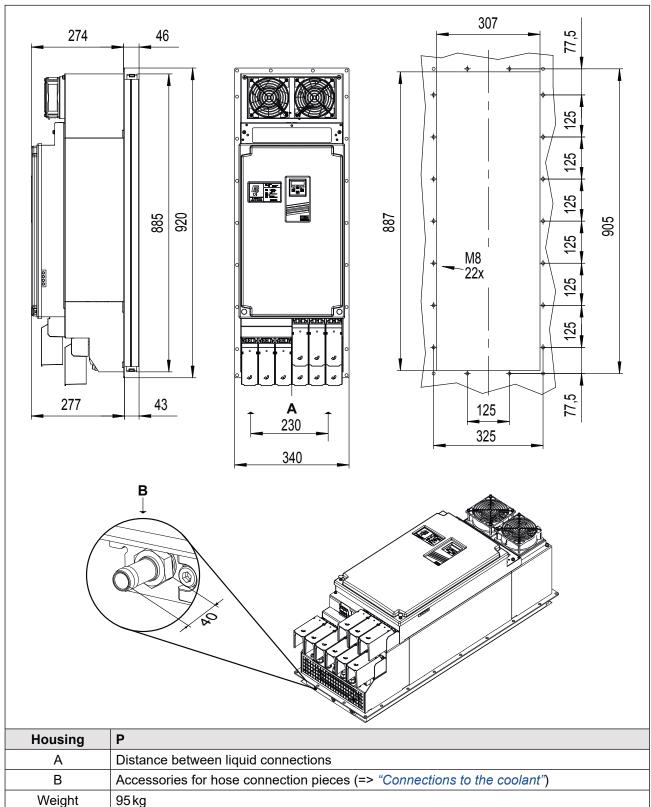


Housing	P					
Α	Distance between liquid connections					
В	Accessories for hose connection pieces (=> "Connections to the coolant")					
Weight	95 kg					
Dimensions	All dimensions in mm					
Optional	Seal for IP54 can be mounted on top or bottom side (=> "Connections to the coolant")					
Figure 4: Din	Figure 4: Dimensions liquid cooler push-through version					




# **DIMENSIONS AND WEIGHTS**

# 3.5.4 Dimensions liquid cooler built-in version

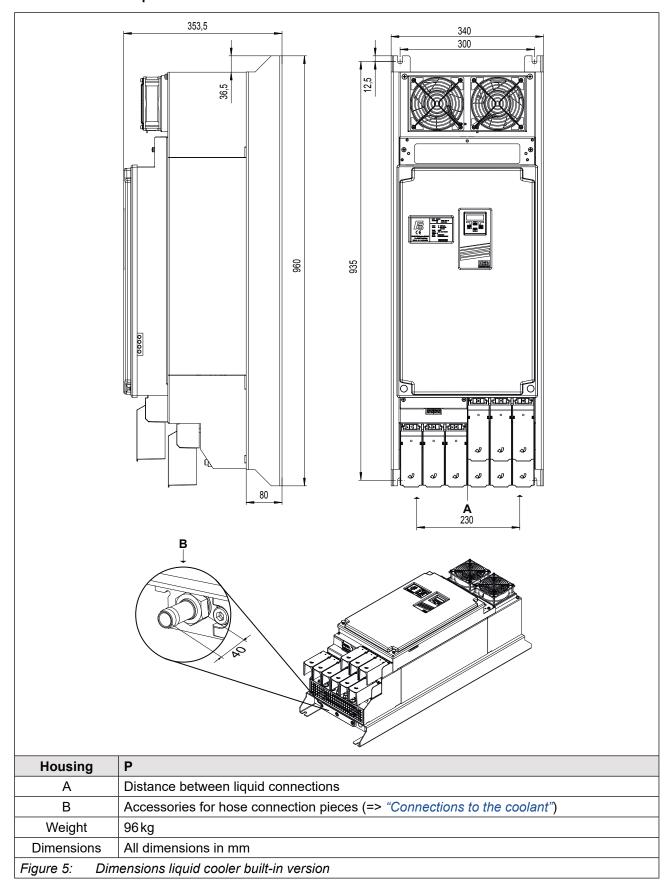



# 3.5.5 Dimensions liquid cooler built-in version with stainless steel tube

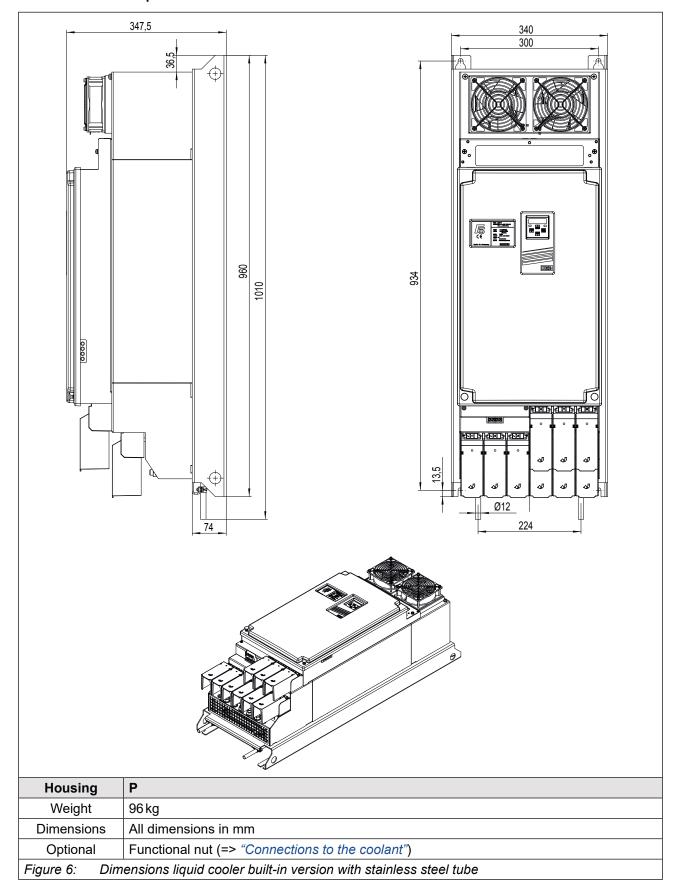




# 4 Mechanical Installation

### 4.1 Control cabinet installation

#### 4.1.1 General instructions

To ensure the connection between master / slave systems, the distances between the modules may not be exceeded => "Mounting distances".

### 4.1.2 Mounting distances

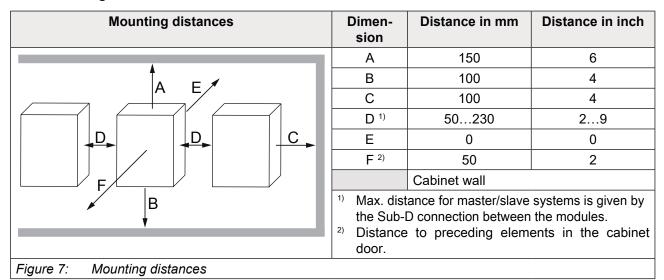



### Installation of the drive converter

For reliable operation, the drive converter must be mounted without clearance on a smooth, closed, bare metal mounting plate.

### 4.1.3 Mounting instructions for control cabinet installation

KEB recommends to use the following mounting materials with the appropriate quality for mounting the drive converters.

Required material	Tightening torque			
Screw M8 - 8.8	25 Nm 220 lb inch			
Screw M10 - 8.8	50 Nm 442 lb inch			
Washer 12 - 200 HV —				
Table 13: Mounting instructions for control cabinet installation				



### 4.1.4 Optional mounting aids



Two mounting aids are available as an accessory. They are attached at the drive converter and by way this enables the transport by lifting devices.

Depending on the heat sink models, a mounting bracket or two eye bolts are available as assembly aids.

Heat sink	Liquid cooler	Air cooler
Mounting bracket	<b>V</b>	×
Eye bolts	<b>V</b>	<b>V</b>

The mounting bracket is directly mounted at the frame, the eye bolts are screwed into the rear wall on the face side.

Alternatively, in the air-cooled version, the eye bolts can also be screwed into the heat sink on the face side.

Further information about accessories => "Assembly aids".





# 4.2 Cooling system

The KEB COMBIVERT in P housing is available with air and liquid cooling system. The system manufacturer must ensure the dissipation of the power loss.

# **NOTICE**

- ► When connecting the cooling circuit, it is essential to follow the instructions in chapter => "Operation of liquid-cooled devices".
- ▶ Even brief interruptions of the cooling circuit can destroy the device.

# **A** CAUTION

### High temperatures at heat sink and coolant!

### Burning of the skin!




- ► Cover hot surfaces in a touch-safe manner.
- ▶ Allow the device to cool down before carrying out any work.
- ▶ If necessary, attach warning signs to the system.
- ▶ Check the surface and coolant lines before touching them.



### 4.2.1 Air cooler

- The drive converter must be mounted vertically in the control cabinet.
- The connection terminals must be located on the bottom side.
- Sufficient ventilation of the device must be ensured by the system manufacturer.

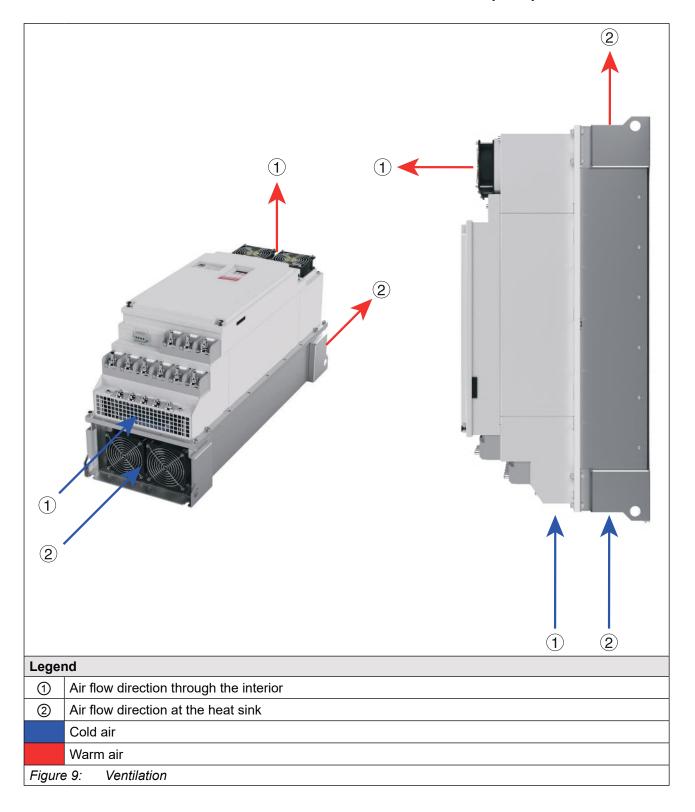



#### 4.2.2 Liquid cooling

- The liquid coolers are designed for the connection to an available cooling system.
- The dissipation of the power loss must be ensured by the machine builder.
- In order to avoid moisture condensation, the minimum inlet temperature may not decrease the ambient temperature.
- No aggressive coolant shall be used.
- Measures against contamination and calcination must be done externally.

# 4.2.3 Connection of the liquid cooling to the cooling system

- The connection to the cooling system can occur as closed or open cooling circuit.
- The connection to a closed cycle cooling circuit is recommended, because the danger of contamination of coolant is significantly lower.
- Preferably also a monitoring of the pH value of the coolant should be installed.
- Pay attention to a corresponding cable cross section at required equipotential bonding in order to avoid electro-chemical procedures.
- Other elements in the cooling circuit such as pumps, shut-off valves, ventilation etc. must be added according to the cooling system and the local conditions.
- Pay attention to flux direction and check tightness!

#### Extrusion casting heat sink

- Screw in the connecting duct according to the mounting instructions (=> "Connections to the coolant").
- The connection to the coolant must be carried out with flexible, pressure-resistant hoses and secured with clamps.

#### Aluminium heat sink with pressed stainless steel tubes

• Connection to the cooling circuit can be made with the aid of function nuts (=> "Connections to the coolant") and the use of elastic, pressure-resistant hoses.



### Volume flow meter and temperature monitoring

The use of volume flow meters as well as temperature monitoring is recommended.

# **NOTICE**

- A discontinuous mode is not recommended, this can lead to a reduction of the service life.
- The max. pressure in the cooling system may not exceed 10 bar.
- The cooling flow must always be started before starting the COMBIVERT.







# 4.3 Series connection cooling circuit

#### 4.3.1 General instructions

- Does the drive converter system work at rated operation the execution of the coolant circuit can be carried out in a series circuit.
- It should be noted that the temperature is analog measured in the slave devices and an error signal is given digitally to the master.
- The coolant return flow should always be attached at the master in order to display real temperatures.
- The volume flow to be selected depends on the size of the device, the output current at rated operation and the resulting power loss for the drive converter system.
- The correlation between total power dissipation, volume flow and temperature difference are shown in the diagram "Series connection of liquid coolers" and must be within the recommended operational range.

# **NOTICE**


- The maximum temperature difference between flow and return flow must not be exceeded.
- If the volume flow (above 301/min) is selected too large, increases the risk of erosion in the liquid cooler.
- Series connection of liquid-cooled devices with stainless steel tubes is not permitted, since the total system pressure can increase above 10 bar.
- => "Pressure drop aluminium heat sink with stainless steel tubes".
- The cooling flow must always be started before starting the COMBIVERT.




### 4.3.2 Connection diagram series connection cooling circuit



This connection scheme is only an installation proposal and does not replace professional planning and execution!

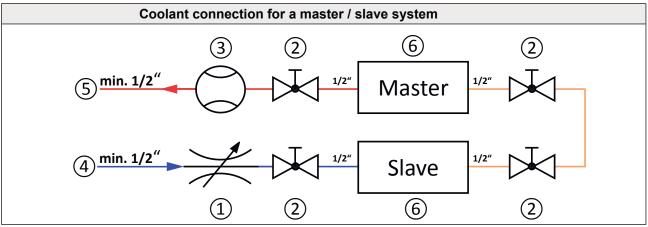

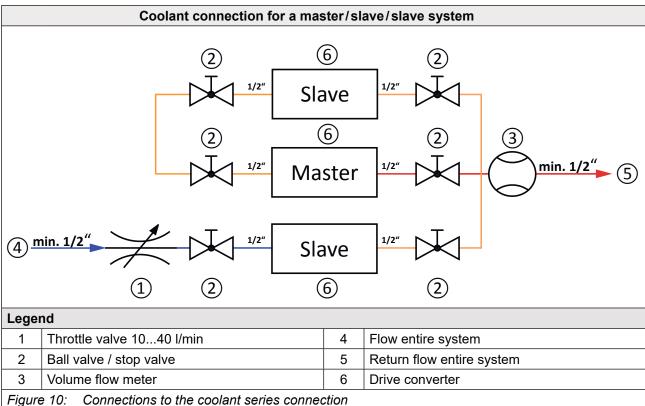

**NOTICE** 

Only parallel connection of the coolant circuit is permissible for aluminium heat sinks with stainless steel tubes.



#### 4.4 Parallel connection of the coolant circuit

#### 4.4.1 General instructions

- The connection of the coolant circuit as a parallel version is also possible in rated operation. Mandatory for special applications.
- The total volume flow to be selected depends on the size of the device, the output current at rated operation and the resulting power dissipation for the drive converter system.
- The correlation between total power dissipation, volume flow and temperature difference are shown in the diagram "Parallel connection of liquid coolers" and must be within the recommended operational range.


# **NOTICE**

- The maximum temperature difference (ΔT) between flow and return flow may not exceed 7K.
- If the volume flow (above 301/min per module) is selected too large, increases the risk of erosion in the liquid cooler.
- The cooling flow must always be started before starting the KEB COMBIVERT.
- The use of a volume flow meter and a temperature monitoring is mandatory required.

### 4.4.2 Connection scheme parallel connection of the cooling circuit



This connection scheme is only an installation proposal and does not replace professional planning and execution!

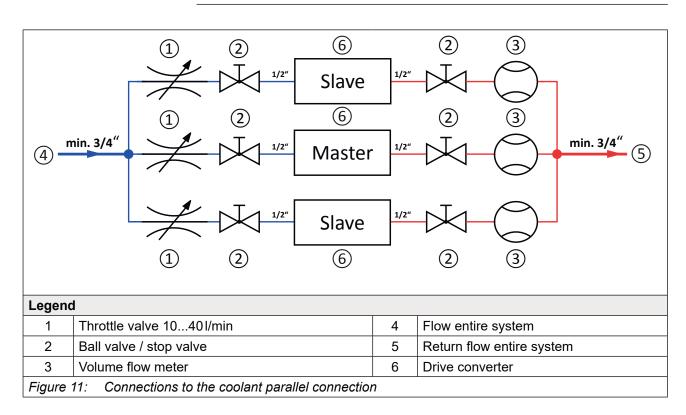



# 5 Operation of liquid-cooled devices

### 5.1 General information

In continuous operation liquid-cooled drive converters are operated with lower temperature than air-cooled devices. This has positive effects on lifetime-relevant components such as fan and DC link circuit capacitors and power modules (IGBT). Also the temperature dependent switching losses are positively effected. The use of liquid-cooled COMBIVERT drive converters is offered in the drive technology, because there are process-caused coolants available with some applications.

#### 5.1.1 Pressure in the liquid cooler

Concept of pressure	Value	Description
System test pressure	20 bar	Hydrostatic pressure used to test the integrity and tightness of the heat sink.
Operating pressure	=> "Diagrams of the cooling design"	Internal pressure that occurs at a certain point in time as a function of the volume flow in the heat sink.
Max. permissible operating pressure	10 bar	Highest temporary pressure, including pressure surge, which the heat sink will resist.
Table 14: Pressure in the liq	uid cooler	

#### 5.1.2 Material of the heat sink

Design system	Material (voltage)	Connection				
Extrusion casting heat sink	Aluminium (-1.67V)	2xhose connection G1/2 with mounting nut				
Aluminium heat sink with pressed pipes	Stainless steel (-1.04V)	Outer pipe diameter Ø12mm for 2xfunction nuts (optional)				
Table 15: Heat sink and operating pressure						

The aluminium liquid coolers are sealed with sealing rings and posses a surface protection (anodized) even in the ducts.

**NOTICE** 

In order to avoid a deformation of the heat sink and the damages thereby, the indicated max. operating pressure may not be exceeded briefly also by pressure peaks.





#### 5.1.3 Materials in the cooling cicuit

- For all metallic elements in contact with the coolant (electrolyte) in the cooling circuit, select a material which generates a low voltage difference to the heat sink (see electrochemical voltage series). This prevents contact corrosion and/or pitting corrosion.
- Other materials must be examined in each case before employment.
- The specific case of application must be checked by the customer in tuning of the complete cooling circuit and must be classified according to the used materials.
- With hoses and seals take care that halogen-free materials are used.



- For liquid coolers with stainless steel tube, we recommend the use of stainless steel or nickel plated brass cable glands.
- For liquid coolers as extrusion casting heat sink, we recommend the use of aluminium or ZnNi coated steel tubes.

# **NOTICE**

A liability for occuring damages by wrongly used materials and from this resulting corrosion is not taken over!

Electro-chem	nical voltage serie	s / standard potent	ials against h	ydrogen	
Material	generated Ion	Standard poten- tial	Material	generated lon	Standard poten- tial
Lithium	Li <sup>+</sup>	-3.04 V	Cobald	Co <sup>2+</sup>	-0.28V
Potassium	K <sup>+</sup>	-2.93 V	Nickel	Ni <sup>2+</sup>	-0.25 V
Calcium	Ca <sup>2+</sup>	-2.87 V	Tin	Sn <sup>2+</sup>	-0.14 V
Sodium	Na⁺	-2.71 V	Lead	Pb <sup>3+</sup>	-0.13V
Magnesium	Mg <sup>2+</sup>	-2.38 V	Iron	Fe³+	-0.037 V
Titan	Ti <sup>2+</sup>	-1.75 V	Hydrogen	2H⁺	0.00 V
Aluminium	Al <sup>3+</sup>	-1.67 V	Copper	Cu <sup>2+</sup>	0.34 V
Manganese	Mn <sup>2+</sup>	-1.05 V	Carbon	C <sup>2+</sup>	0.74 V
Zinc	Zn <sup>2+</sup>	-0.76 V	Silver	Ag⁺	0.80 V
Chrome	Cr <sup>3+</sup>	-0.71 V	Platinum	Pt <sup>2+</sup>	1.20 V
Iron	Fe <sup>2+</sup>	-0.44 V	Gold	Au <sup>3+</sup>	1.42 V
Cadmium	Cd <sup>2+</sup>	-0.40 V	Gold	Au⁺	1.69 V
Table 16: Electro-chemical voltage series / standard potentials against hydrogen					



# 5.1.4 Requirements on the coolant

The requirements on the coolant are depending on the ambient conditions, as well as from the used cooling system. General requirements on the coolant:

Requirements	Description
Suspended particles	The size and the proportion of suspended particles in the cooling water should not exceed the following values: <100 µm <10 mg per liter.
pH-value	Aluminum is particularly corroded by lixiviums and salts. The optimal pH value for aluminum should be in the range of 7.5 8.0.
Abrasive substances	Abrasive substances as used in abrasive (quartz sand), clogging the cooling circuit.
Copper cuttings	Copper cuttings can attach the aluminum and this leads to a galvanic corrosion. Copper should not be used together with aluminum due to electro-chemical voltage difference.
Hard water	The cooling water may not cause scale deposits or loose excretions. The total hardness should be between 720 °dH, the carbon hardness at 310 °dH.
Soft water	Soft water (<7°dH) corrodes the material.
Frost protection	An appropriate antifreeze must be used for applications when the heat sink or the coolant is exposed temperatures below zero. Use only products of one manufacturer for a better compatibility with other additives. We recommend the antifreeze AntifrogenN from the company Clariant with a maximum volume fraction of 52 %.
Corrosion protection	Additives can be used as corrosion protection. In combination with frost protection the corrosion protection must have a concentration of 2025 Vol %, in order to avoid a change of the additives.
Table 17: Requireme	ents on the coolant





#### 5.1.5 Requirements for open and half-open cooling systems

Requirement	Measure			
Impurities	Mechanical impurities in half-open cooling systems can be counteracted when appropriate water filters are used.			
Salt concentration	The salt content can increase through evaporation at half-open systems.  Thus the water is more corrosive. Adding of fresh water and removing of process water works against.			
Algae and myxobacteria	Algae and myxobacteria can arise caused by increased water temperature and contact with atmospheric oxygen. The algae and myxobacteria clog the filters and obstruct the coolant-flow. Biocide containing additives can avoid this. Especially at longer OFF periods of the cooling circuit preventive maintenance is necessary.			
Organic materials	The contamination with organic materials must be kept as small as possible, because separate slime can be caused by this			
Table 18: Requirements for open and half-open cooling systems				

# **NOTICE**

Damages at the unit which are caused by clogged, corroded heat sinks or other obvious operating errors, leads to the loss of the warranty claims.

#### 5.1.6 Coolant temperature

- The flow temperature may not exceed 40 °C.
- The maximum overheat temperature is 60 °C, 73 °C or 90 °C depending on the power unit and overload capacity.
- The coolant temperature is specified in the technical data.
- Higher flow temperatures only after consultation with KEB.



The flow temperature should be chosen depending on the volume flow, so that at rated operating the heatsink temperature is always 10 K below the overheat temperature level. As a result, a sporadic shutdown is avoided.

#### 5.1.7 Moisture condensation

High air humidity and high temperatures can lead to moisture condensation. Moisture condensation is considered to be a threat to the drive converter. The drive converter can be destroyed by any short-circuits that may occur.

NOTICE

The user must guarantee that any moisture condensation is avoided!



# 5.1.8 Supply of temper coolant

- Supply of temper coolant is possible by using heatings in the cooling circuit for the control of the coolant temperature.
- The following dew point table shows the coolant inlet temperature as a function of ambient temperature and air humidity.

10	20	30	40	50	60	70	80	90	100
-45	-40	-36	-34	-32	-30	-29	-27	-26	-25
-42	-36	-32	-29	-27	-25	-24	-22	-21	-20
-37	-31	-27	-24	-22	-20	-18	-16	-15	-15
-34	-26	-22	-19	-17	-15	-13	-11	-11	-10
-29	-22	-18	-15	-13	-11	-8	-7	-6	-5
-26	-19	-14	-11	-8	-6	-4	-3	-2	0
-23	-15	-11	-7	-5	-2	0	2	3	5
-19	-11	-7	-3	0	1	4	6	8	9
-18	-7	-3	1	4	7	9	11	13	15
-12	-4	1	5	9	12	14	16	18	20
-8	0	5	10	13	16	19	21	23	25
-6	3	10	14	18	21	24	26	28	30
-2	8	14	18	22	25	28	31	33	35
1	11	18	22	27	31	33	36	38	40
4	15	22	27	32	36	38	41	43	45
8	19	28	32	36	40	43	45	48	50
Coolant inlet temperature in °C									
	-45 -42 -37 -34 -29 -26 -23 -19 -18 -12 -8 -6 -2 1 4	10     20       -45     -40       -42     -36       -37     -31       -34     -26       -29     -22       -26     -19       -23     -15       -19     -11       -18     -7       -12     -4       -8     0       -6     3       -2     8       1     11       4     15       8     19	10         20         30           -45         -40         -36           -42         -36         -32           -37         -31         -27           -34         -26         -22           -29         -22         -18           -26         -19         -14           -23         -15         -11           -19         -11         -7           -18         -7         -3           -12         -4         1           -8         0         5           -6         3         10           -2         8         14           1         11         18           4         15         22           8         19         28	10         20         30         40           -45         -40         -36         -34           -42         -36         -32         -29           -37         -31         -27         -24           -34         -26         -22         -19           -29         -22         -18         -15           -26         -19         -14         -11           -23         -15         -11         -7           -19         -11         -7         -3           -18         -7         -3         1           -12         -4         1         5           -8         0         5         10           -6         3         10         14           -2         8         14         18           1         11         18         22           4         15         22         27           8         19         28         32           Coolant in	10         20         30         40         50           -45         -40         -36         -34         -32           -42         -36         -32         -29         -27           -37         -31         -27         -24         -22           -34         -26         -22         -19         -17           -29         -22         -18         -15         -13           -26         -19         -14         -11         -8           -23         -15         -11         -7         -5           -19         -11         -7         -3         0           -18         -7         -3         1         4           -12         -4         1         5         9           -8         0         5         10         13           -6         3         10         14         18           -2         8         14         18         22           1         11         18         22         27           4         15         22         27         32           8         19         28         32         36 <th>10         20         30         40         50         60           -45         -40         -36         -34         -32         -30           -42         -36         -32         -29         -27         -25           -37         -31         -27         -24         -22         -20           -34         -26         -22         -19         -17         -15           -29         -22         -18         -15         -13         -11           -29         -22         -18         -15         -13         -11           -29         -22         -18         -15         -13         -11           -29         -22         -18         -15         -13         -11           -29         -22         -18         -15         -13         -11           -26         -19         -14         -11         -8         -6           -23         -15         -11         -7         -5         -2           -19         -11         -7         -3         0         1           -18         -7         -3         1         4         7           -8         <t< th=""><th>10         20         30         40         50         60         70           -45         -40         -36         -34         -32         -30         -29           -42         -36         -32         -29         -27         -25         -24           -37         -31         -27         -24         -22         -20         -18           -34         -26         -22         -19         -17         -15         -13           -29         -22         -18         -15         -13         -11         -8           -29         -22         -18         -15         -13         -11         -8           -29         -22         -18         -15         -13         -11         -8           -29         -22         -18         -15         -13         -11         -8           -20         -19         -14         -11         -8         -6         -4           -23         -15         -11         -7         -5         -2         0           -19         -11         -7         -3         0         1         4           -18         -7         -3         &lt;</th><th>10         20         30         40         50         60         70         80           -45         -40         -36         -34         -32         -30         -29         -27           -42         -36         -32         -29         -27         -25         -24         -22           -37         -31         -27         -24         -22         -20         -18         -16           -34         -26         -22         -19         -17         -15         -13         -11           -29         -22         -18         -15         -13         -11         -8         -7           -26         -19         -14         -11         -8         -6         -4         -3           -23         -15         -11         -7         -5         -2         0         2           -19         -11         -7         -3         0         1         4         6           -18         -7         -3         1         4         7         9         11           -12         -4         1         5         9         12         14         16           -8         <t< th=""><th>10         20         30         40         50         60         70         80         90           -45         -40         -36         -34         -32         -30         -29         -27         -26           -42         -36         -32         -29         -27         -25         -24         -22         -21           -37         -31         -27         -24         -22         -20         -18         -16         -15           -34         -26         -22         -19         -17         -15         -13         -11         -11         -11           -29         -22         -18         -15         -13         -11         -8         -7         -6           -34         -26         -22         -19         -17         -15         -13         -11         -11         -11         -11         -7         -6         -2         -2         0         2         3         -2         -2         0         2         3         -2         -2         0         2         3         -11         -11         -7         -3         0         1         4         6         8         8         -18</th></t<></th></t<></th>	10         20         30         40         50         60           -45         -40         -36         -34         -32         -30           -42         -36         -32         -29         -27         -25           -37         -31         -27         -24         -22         -20           -34         -26         -22         -19         -17         -15           -29         -22         -18         -15         -13         -11           -29         -22         -18         -15         -13         -11           -29         -22         -18         -15         -13         -11           -29         -22         -18         -15         -13         -11           -29         -22         -18         -15         -13         -11           -26         -19         -14         -11         -8         -6           -23         -15         -11         -7         -5         -2           -19         -11         -7         -3         0         1           -18         -7         -3         1         4         7           -8 <t< th=""><th>10         20         30         40         50         60         70           -45         -40         -36         -34         -32         -30         -29           -42         -36         -32         -29         -27         -25         -24           -37         -31         -27         -24         -22         -20         -18           -34         -26         -22         -19         -17         -15         -13           -29         -22         -18         -15         -13         -11         -8           -29         -22         -18         -15         -13         -11         -8           -29         -22         -18         -15         -13         -11         -8           -29         -22         -18         -15         -13         -11         -8           -20         -19         -14         -11         -8         -6         -4           -23         -15         -11         -7         -5         -2         0           -19         -11         -7         -3         0         1         4           -18         -7         -3         &lt;</th><th>10         20         30         40         50         60         70         80           -45         -40         -36         -34         -32         -30         -29         -27           -42         -36         -32         -29         -27         -25         -24         -22           -37         -31         -27         -24         -22         -20         -18         -16           -34         -26         -22         -19         -17         -15         -13         -11           -29         -22         -18         -15         -13         -11         -8         -7           -26         -19         -14         -11         -8         -6         -4         -3           -23         -15         -11         -7         -5         -2         0         2           -19         -11         -7         -3         0         1         4         6           -18         -7         -3         1         4         7         9         11           -12         -4         1         5         9         12         14         16           -8         <t< th=""><th>10         20         30         40         50         60         70         80         90           -45         -40         -36         -34         -32         -30         -29         -27         -26           -42         -36         -32         -29         -27         -25         -24         -22         -21           -37         -31         -27         -24         -22         -20         -18         -16         -15           -34         -26         -22         -19         -17         -15         -13         -11         -11         -11           -29         -22         -18         -15         -13         -11         -8         -7         -6           -34         -26         -22         -19         -17         -15         -13         -11         -11         -11         -11         -7         -6         -2         -2         0         2         3         -2         -2         0         2         3         -2         -2         0         2         3         -11         -11         -7         -3         0         1         4         6         8         8         -18</th></t<></th></t<>	10         20         30         40         50         60         70           -45         -40         -36         -34         -32         -30         -29           -42         -36         -32         -29         -27         -25         -24           -37         -31         -27         -24         -22         -20         -18           -34         -26         -22         -19         -17         -15         -13           -29         -22         -18         -15         -13         -11         -8           -29         -22         -18         -15         -13         -11         -8           -29         -22         -18         -15         -13         -11         -8           -29         -22         -18         -15         -13         -11         -8           -20         -19         -14         -11         -8         -6         -4           -23         -15         -11         -7         -5         -2         0           -19         -11         -7         -3         0         1         4           -18         -7         -3         <	10         20         30         40         50         60         70         80           -45         -40         -36         -34         -32         -30         -29         -27           -42         -36         -32         -29         -27         -25         -24         -22           -37         -31         -27         -24         -22         -20         -18         -16           -34         -26         -22         -19         -17         -15         -13         -11           -29         -22         -18         -15         -13         -11         -8         -7           -26         -19         -14         -11         -8         -6         -4         -3           -23         -15         -11         -7         -5         -2         0         2           -19         -11         -7         -3         0         1         4         6           -18         -7         -3         1         4         7         9         11           -12         -4         1         5         9         12         14         16           -8 <t< th=""><th>10         20         30         40         50         60         70         80         90           -45         -40         -36         -34         -32         -30         -29         -27         -26           -42         -36         -32         -29         -27         -25         -24         -22         -21           -37         -31         -27         -24         -22         -20         -18         -16         -15           -34         -26         -22         -19         -17         -15         -13         -11         -11         -11           -29         -22         -18         -15         -13         -11         -8         -7         -6           -34         -26         -22         -19         -17         -15         -13         -11         -11         -11         -11         -7         -6         -2         -2         0         2         3         -2         -2         0         2         3         -2         -2         0         2         3         -11         -11         -7         -3         0         1         4         6         8         8         -18</th></t<>	10         20         30         40         50         60         70         80         90           -45         -40         -36         -34         -32         -30         -29         -27         -26           -42         -36         -32         -29         -27         -25         -24         -22         -21           -37         -31         -27         -24         -22         -20         -18         -16         -15           -34         -26         -22         -19         -17         -15         -13         -11         -11         -11           -29         -22         -18         -15         -13         -11         -8         -7         -6           -34         -26         -22         -19         -17         -15         -13         -11         -11         -11         -11         -7         -6         -2         -2         0         2         3         -2         -2         0         2         3         -2         -2         0         2         3         -11         -11         -7         -3         0         1         4         6         8         8         -18


Table 19: Supply of temper coolant



# 5.2 Diagrams of the cooling design

#### 5.2.1 Pressure drop aluminium extrusion casting heat sink

- The curve characteristic described below is valid for 25 °C flow temperature and Antifrogen N 52 %.
- If there are higher flow temperatures, the pressure drop in the system decreases.
- This also applies to cooling medium such as water or another glycol mixture.
- A glycol mixture from Clariant in a ratio of 52 % or 33 % is recommended.

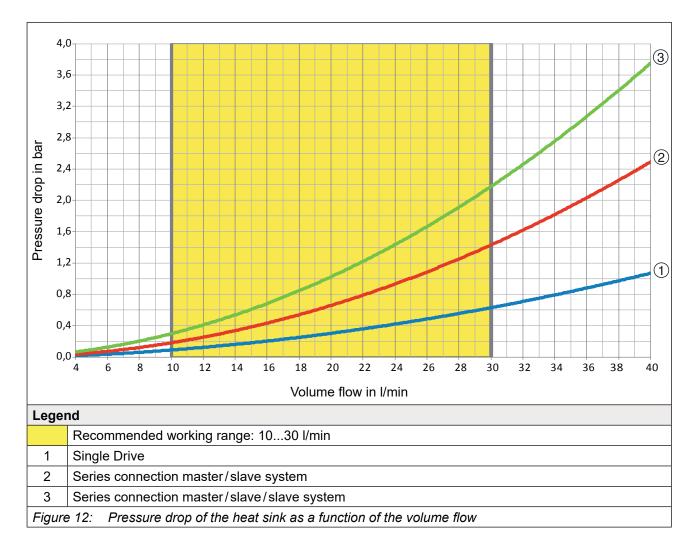




The selection of the connection diagram (series or parallel connection) of the cooling circuit depends on the total power dissipation of the drive converter system.



### 5.2.2 Pressure drop aluminium heat sink with stainless steel tubes

- The curve characteristic described below is valid for 25 °C flow temperature and Antifrogen N 52 %.
- If there are higher flow temperatures, the pressure drop in the system decreases.
- This also applies to cooling medium such as water or another glycol mixture.
- A glycol mixture from Clariant in a ratio of 52 % or 33 % is recommended.

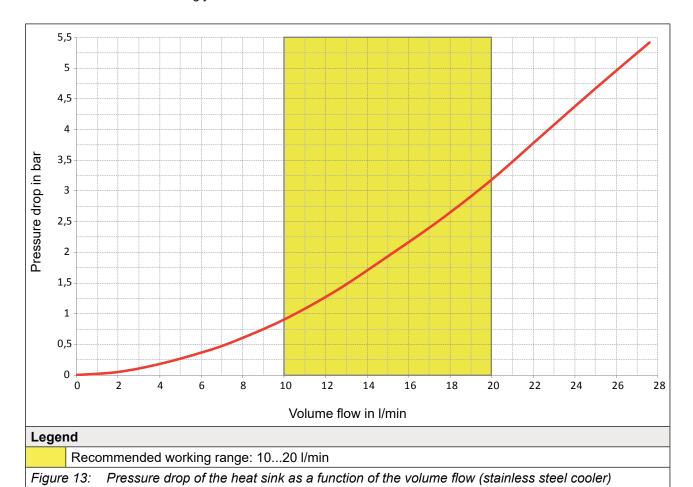


**NOTICE** 

Only parallel connection of the coolant circuit is permissible for aluminium heat sinks with stainless steel tubes.



### 5.2.3 Series connection of liquid coolers

- Volume flow as a function of total power dissipation and temperature difference.
- The diagram below applies to the series connection of liquid coolers.

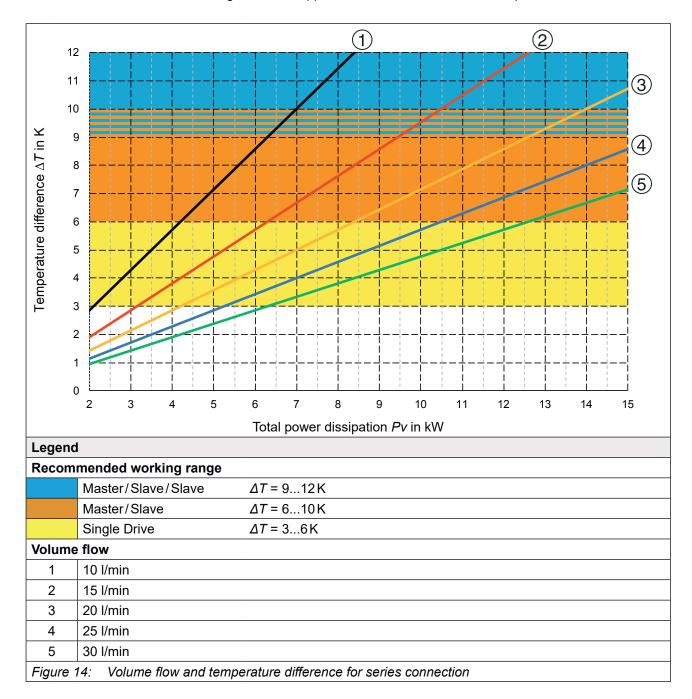

# **NOTICE**


Series connection of liquid-cooled devices with stainless steel tubes is not permitted, since the total system pressure can increase above 10 bar.

=> "Pressure drop aluminium heat sink with stainless steel tubes".



### 5.2.4 Parallel connection of liquid coolers

- Volume flow as a function of total power dissipation and temperature difference.
- The diagram below applies to the parallel connection of liquid coolers.

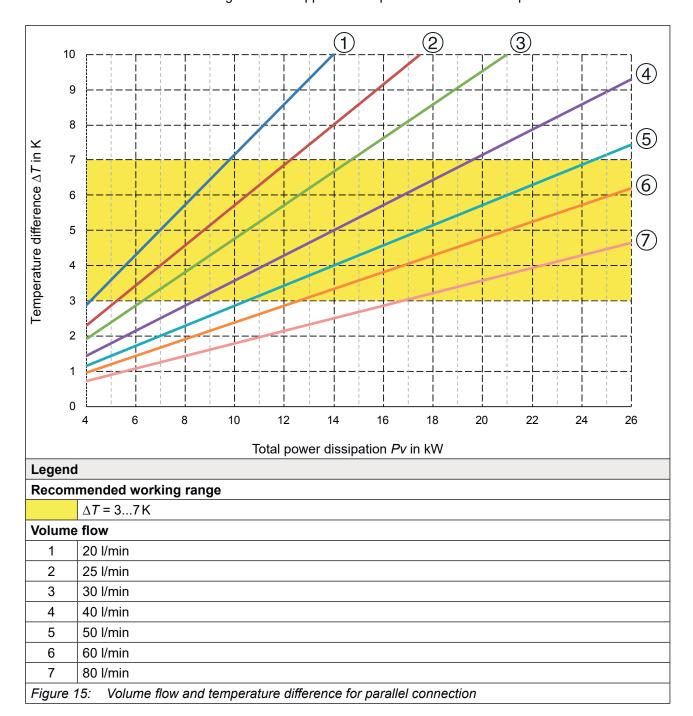



- The points 1...7 are each based on the total volume flow of the drive converter system.
- The total volume flow should be divided by the number of modules. The
  determined value for the volume flow is set for each module by means of
  throttle valves.



# **6 Electrical Installation**

#### 6.1 General information

This chapter contains the information which must be observed when selecting the wires, the protective measures and wiring in the control cabinet.

### NOTICE


Current laws and local regulations must always be observed when planning and carrying out the installation. KEB assumes no liability for installations where laws, local and / or other regulations have not been complied with. If the recommendations given by KEB are not observed, you might experience problems when using the drive converter which are not covered by the warranty.

The specified "Cable cross-sections" are recommendations for dimensioning and serve as guide values for multicore copper cables. They are valid for a maximum ambient temperature of 40 °C and for open installation. This must be considered accordingly in case of deviating ambient conditions and local regulations.

### **6.1.1 Wiring**

- Lay noise-affected or noise sensitive cables as far apart from each other as possible (minimum 200 mm).
- If the distance cannot be maintained, additional shielding measures must be provided.
- Cables must be routed as closely as possible to earthed housing parts, mounting plates or cabinet frames. This reduces noise emissions and noise injections.
- Crossings of cables of different classes are to be tolerated, parallel laying should be avoided.
- If another laying is not possible, cross the cables at right angles, especially if the signals are sensitive and interference emitted.
- Cores of signal and data lines that are not used must be earthed at both ends.
- Avoid long lines and interference sources in order to prevent additional coupling points.
- Ground unused lines on one side in the control cabinet.
- Establish ground connections with the largest possible cross-section to other control cabinets, system components and decentralized devices.
- Avoid larger conductor loops.



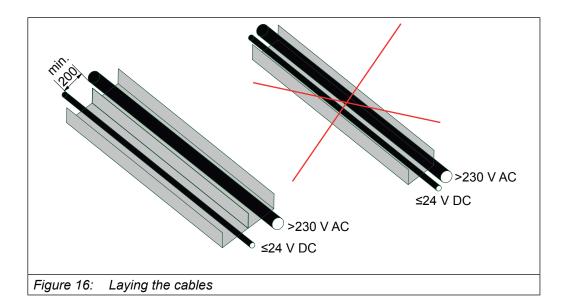

### 6.1.2 Connection of the shield connection

- Cable shields must not be used for power supply.
- A cable shield must not assume the function of an N or PE conductor.
- · Always lay cable shields over a large surface.
- Do not extend the cable shield by unshielded wire connections to the earthing point. This reduces the shielding effect by up to 90 %.
- Lay the cable shield over a large surface directly after the entry point of the control
  cabinet.

#### 6.1.3 Connection of the protective earth

- The drive converter or the control cabinet in which the drive converter is installed must be connected to protective earth at the installation site.
- Use a protective earth conductor that corresponds at least half the cross-section of the cables used to supply the power terminals.
- An earthing stud is provided at the drive converter for connecting the motor protective earth.
- The resistance of the protective earth should be 0.1  $\Omega$  or less.
- According to EN 61800-5-1, the minimum cross-section of the protective earth conductor must comply with the local safety regulations for protective earth conductors for equipment with high leakage current.


# **WARNING**

#### Indirect contact

Only with a correctly connected protective earth conductor the device fulfills the requirements for protection against indirect contact.



# 6.2 Connection terminals power unit

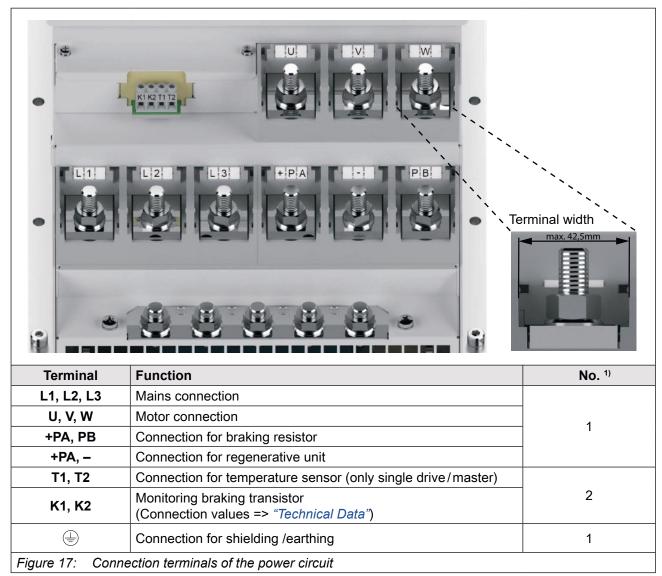

The assignment of the numbers refers to the table =>"Permitted cable cross-sections and tightening torques of the terminals".


### 6.2.1 Permitted cable cross-sections and tightening torques of the terminals

Cable cross-section					Maximum tightening torque		
	m	m²	AWG/MCM		Nm	lb inch	
No.	min	max	min	max	INIII	ID IIICII	
11)	M12 stud for ring crimp connector max. 2 ring crimp connectors => "Cable cross-sections"  35						
2	0.2	4	24 AWG	10 AWG	0.6	5.3	
Table 20: Permissible cable cross-sections and tightening torques of the terminals							

Input studs/nuts shall be connected with UL listed ring connectors (ZMVV).



# 6.2.2 External fan power supply

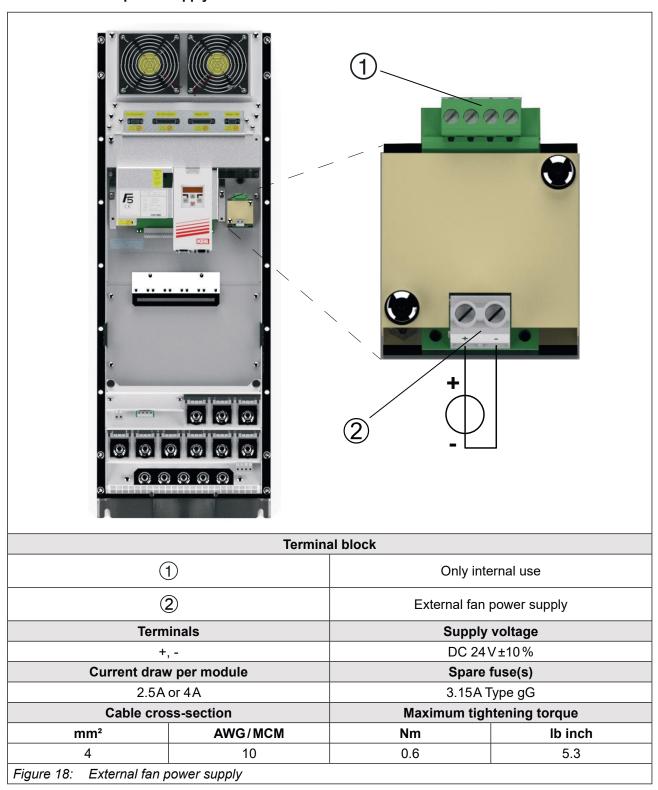



#### 6.3 Mains connection

NOTICE

Exchanging mains and motor connection leads to immediate destruction of the unit.


#### 6.3.1 Note about hard mains

The service life of drive converters with DC link depends on the DC voltage level, the ambient temperature and the current load of the electrolytic capacitors in the DC link. The use of mains chokes can significantly increase the service life of the capacitors, especially under permanent drive load (continuous duty) or when connecting to "hard" power systems.

The term "hard" power system means that the nodal point power ( $S_{net}$ ) of the mains is very high (>> 200) compared to the output rated power of the drive converter ( $S_{out}$ ).

$$k = \frac{S_{net}}{S_{out}} >> 200$$

#### 6.3.2 Recommended type of mains cable

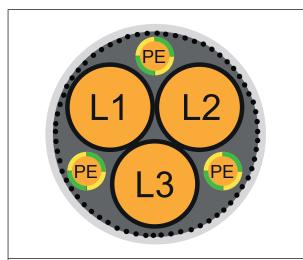

Symmetrical shielded cables are recommended for high motor power.

- Type of cable: 2XSLCYK-J.
- The protective earth conductor is tripartited and uniformly placed between the phase lines.
- Compliance with the requirements according to EN 12502-1...5.

Figure 19: Cross-section type of mains cable



#### 6.4 Motor connection

#### 6.4.1 General instructions

- The motor cables must be designed to the maximum continuous current.
- They are valid for 0...100 Hz (up to 300 Hz the cable losses increase by approx. 25 % due to the skin effect).
- The IGBT modules cause high-frequency interferences, the longer the motor cable length the higher the discharge to the earth potential.
- The consequence is an increase of conducted interferences on the mains side.
- If the motor cables are too long, damping of the mains filters is no longer sufficient and the permissible interference limits are exceeded.
- At the output of the drive converter, pulses of approximately 1.35-fold of the mains voltage and very short rise times are generated independently of the output frequency.
- This is the case for all drive converters with modern IGBT inverter technology.
- The voltage of the pulses can almost double at the motor connections depending on the characteristics of the motor cable.
- This can lead to additional load of the motor and the motor cable insulation.
- Modern speed-controlled drives with their fast rising voltage pulses and high switching frequencies can cause current pulses through the motor bearings which can gradually damage the bearing raceways.

# **NOTICE**

### Protect motor against voltage peaks!



- ► The connecting-up instructions of the motor manufacturer are generally valid.
- ▶ Drive converter switch at the output with a high rate of voltage rise. Voltage peaks that endanger the insulation system at the motor can occur especially in case of long motor cables (> 15 m). A motor choke, a dv/dt filter or sine-wave filter can be used to protect the motor.

#### 6.4.2 Selection of the motor cable


Correct selection and laying of the motor cable is very important for high motor ratings:

- Smaller load of the motor bearings by bearing currents.
- · Improved EMC characteristics.
- · Lower symmetrical operating capacities.
- Less losses by transient currents.
- Due to the high currents, shielded motor cables can be connected in parallel between drive converter and motor.
- All three phases must passing through each shielded motor cable.
- The required cross-section is described in section => "Cable cross-sections".
- To keep asymmetry as small as possible, all motor cables should have the same length.
- The shielding must be placed always with large surface on both sides (mounting plate and motor housing).





#### 6.4.3 Recommended type of the motor cable

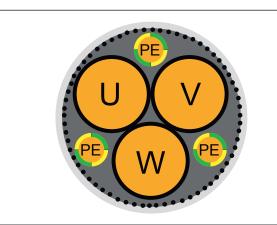

Symmetrical shielded cables are recommended for high motor power.

- Type of cable: 2XSLCYK-J.
- The protective earth conductor is tripartited and uniformly placed between the phase lines.
- Compliance with the requirements according to *EN 12502-1...5*.

Figure 20: Cross-section type of the motor cable

#### 6.4.4 Connection of the motor

As a standard the connection of the motor must be carried out in accordance with the following table:

230/400	V motor	400/690 V motor			
230 V	400 V	400 V	690 V		
Delta	Star	Delta	Star		
Table 21: Connection of the motor					



The connecting-up instructions of the motor manufacturer are generally valid!

### 6.4.5 Calculation of the motor voltage

The motor voltage for dimensioning of the drive is depending on the used components. The mains voltage reduces according to the following table:

Component Reduction / %		Example:		
Mains choke Uk	4			
Drive converter open- loop	4	Closed-loop drive converter with mains and motor choke on		
Drive converter closed- loop	8	a non-rigid supply system: 400 V mains voltage - 15% = 340 V motor voltage		
Motor choke Uk	1			
Non-rigid supply system	2			
Table 22: Example of motor voltage calculation				



### 6.4.6 Cable cross-sections

The motor cable cross-section depends

- on the form of the output current (e.g. non-sinusoidal)
- on the real effective value of the motor current.
- on the cable length.
- on the type of used cable.
- on ambient conditions such as bundling and temperature.

Rated cross-section in mm <sup>2</sup>	Rated current 1) in A	
50	168	
70	207	
95	250	
120	292	
150	335	
185	382	
240	453	
Table 23: Cable cross-sections		

Valid for multicore cables. The factors for ambient temperature, parallel cable laying, current carrying capacity and laying factor are not taken into consideration for the technical data of the current.



KEB

#### 6.4.7 Motor cable lengths

# **NOTICE**

The permissible cable length is reduced if the minimum cross-section of the motor connection is distributed across several cables.

- The maximum cable lengths are specified for the recommended type of cable.
- The permissible cable lengths depend on the number of cables per phase.
- Longer cables may only be provided after consultation with KEB.
- The specified cable lengths represent the actual distance between drive converter and motor.



In case of parallel connection of motor cables, the cable capacitance is doubling, which leads to higher leakage currents between drive converter and motor. These should always be kept as small as possible.

The resulting motor cable length for parallel operation of motors, or parallel installation with multiple cables arises from the following formula:

Resulting motor cable length =  $\sum$  single cable lengths x  $\sqrt{Number}$  of motor cables

Maximum permissible motor cable lengths					
Number of cables	Ring crimp	Cable lengths in m			
per phase	connector	Without sine-wave filter / motor choke	With sine-wave filter		
1	M10	100	500		
2	M12	35	177		
Table 24: Maximum permissible motor cable lengths					



### 6.5 DC connection

#### 6.5.1 General instructions

- The DC connection terminals of the device can be used for power supply or power consumption.
- Appropriate external DC fuses must be designed by the system manufacturer.
- If external devices shall be connected to master / slave systems, the DC links must be connected with DC fuses. => "Wiring Diagrams".
- DC operating voltage range [*Udc*] for 400 / 690 V mains voltages. => "Technical Data".
- The maximum permanent current carrying capacity of the DC terminals is 580 A.
- DC fuses can be found in chapter => "Protection of drive converters".
- Chapter => "Technical Data" contains information on the DC input current for each device size at rated operation.
- The available current for external devices depends on the size of the device and the motor power output.

**NOTICE** 

The maximum input power per module is 395 kVA. Exceeding this limit will destroy the device.



#### 6.6 Temperature detection T1, T2

Parameter In.17 displays in high byte the installed temperature input of the drive converter. The KEB COMBIVERT F5/F6 is delivered as standard with switchable PTC/KTY evaluation. The desired function is adjusted with Pn.72 (dr33 at F6) and operates in accordance with the following table:

In.17	Function of T1, T2	Pn.72 (dr33)	Resistance	Display ru.46 (F6 => ru28)	Error/Warn-ing 1)
			< 215 Ω	Detection error 253	Х
			498 Ω	1°C	_ 2)
	KTY84	0	1 kΩ	100°C	X 2)
			1.722kΩ	200°C	X 2)
			> 1811 Ω	Detection error 254	Х
5xh			< 750 Ω	T1-T2 closed	_
			0.751.65 kΩ	T4 TO also ad	
	PTC		(reset resistance)	T1-T2 closed	_
	(according to EN 60947-8)	1	1.654kΩ	T4 T0	
	LN 00947-0)		(tripping resistance)	T1-T2 open	X
			> 4 kΩ	T1-T2 open	Х
6xh	PT100	_	upon request		

The column is valid at factory setting. The function must be programmed accordingly with parameters Pn.12, Pn.13, Pn.62 and Pn.72 for F5 in operating mode GENERAL.

<sup>2)</sup> Disconnection is depending on the adjusted temperature in Pn.62 (F6 => pn11/14).



The behaviour of the drive converter in case of error/warning is defined with parameters Pn.12 (CP.28), Pn.13 (F6 =>pn12/13).

Dependent on the application the temperature input can be used for the following functions:

Function motor temperature display	Mode (F5 => Pn.72; F6 => dr33)
Motor temperature display and monitoring	KTY84
Motor temperature monitoring	PTC
Temperature control for liquid-cooled motors 1)	KTY84
General fault sensing	PTC
Table 26: Function motor temperature display	


If the temperature input is used for other functions, the motor temperature control at liquid-cooled drive converters can be done indirectly via the liquid cooling circuit of the drive converter.

## **NOTICE**

- Do not lay KTY or PTC cable of the motor (also shielded) together with control cable!
- KTY or PTC cable only permissible with double shielding within the motor cable!



#### 6.6.1 Use of the temperature input in KTY mode

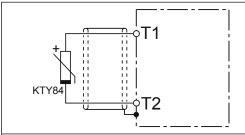

KTY sensors are poled semiconductors and must be operated in forward direction! Connect anode to T1! Non-observance leads incorrect measurement in the upper temperature range. Protection of the motor winding is no longer guaranteed.

Figure 21: Connection of a KTY sensor

NOTICE


KTY sensors may not be combined with other devices. Otherwise wrong measurements would be the consequence.



Examples for the construction and programming of a temperature control with KTY84 evaluation can be taken from the F5 application manual.

#### 6.6.2 Use of the temperature input in PTC mode

If the temperature input is operated in PTC mode, all possibilities are available for the user within the specified resistance range. This can be:

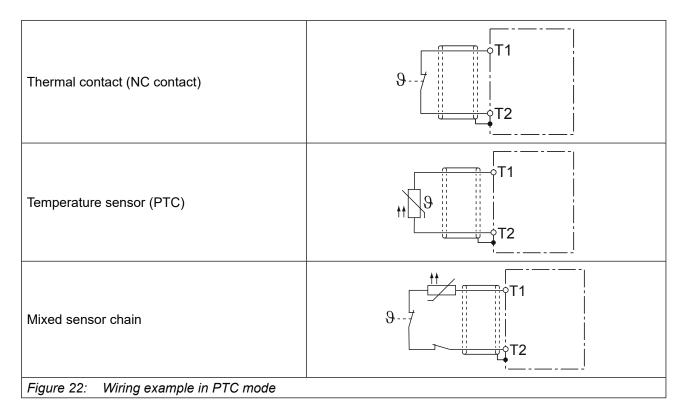

The function can be switched off with Pn.12="7" (CP.28) if no evaluation of the input is desired (standard in operating mode GENERAL). Alternatively a bridge can be installed between T1 and T2.



1-87700210

KEB

#### **ELECTRICAL INSTALLATION**

#### 6.7 Connection of a braking resistor

# **A** CAUTION

Braking resistors dissipate the produced energy of the motor into heat during generatoric operation.

Burns and fire risk due to high surface temperatures.



- ▶ Pay attention to appropriate protection against contact and fire.
- ► The mains voltage must always be switched off in case of a defective braking transistor (fire risk).
- ► If direct contact cannot be avoided due to structural reasons, affix the warning "Hot surfaces".



## **A** DANGER

#### Regenerative operation



#### Risk of death due to electric shock!

The drive converter remains in operation in spite of switched off power supply in regenerative operation.



- ➤ An error must be released by external wiring which switches the modulation off in the drive converter. This can occur e.g. at terminals T1/T2 or via digital input.
- ▶ The drive converter must be programmed accordingly in each case.



The use of a KEB regenerative unit is reasonable for applications which produce a lot of regenerative energy. Regeneration of excess energy into the mains.



#### 6.7.1 Monitoring braking transistor

#### General

- The function "monitoring braking transistor" is standard for housing P with braking option.
- It must be wired according to the wiring diagrams.
- This circuit offers a direct protection in case of a defective braking transistor.
- If the braking transistor is defective, a relay opens the terminals K1/K2.
- Terminals K1/K2 are integrated into the holding circuit of the coupling relay for the input contactor, so the mains voltage is switched off in error case.
- Regenerative operation is also secured by the internal fault disconnection.
- Chapter => "Wiring Diagrams" contains examples of how to wire the integrated relay via terminals K1/K2.


#### 6.7.2 External braking resistor without temperature monitoring

External braking resistors are available for air-cooled and liquid-cooled devices.

**NOTICE** 

Only "intrinsically safe" braking resistors are permissible for operation without temperature monitoring.

An intrinsically safe braking resistor will melt internally like a fuse in case of overload due to overheating. There is no short circuit or earth fault. As a result, the drive converter changes to "Error! Overvoltage" with the next deceleration process (when the braking resistor is required).

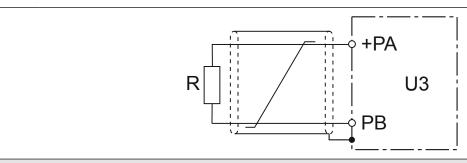

# Legend

U3

R	Braking resistor
+PA	Connection for braking resistor
PB	Connection for braking resistor -

Drive converter

Figure 23: Intrinsically safe braking resistor without temperature monitoring



Technical data and design of intrinsically safe braking resistors.

www.keb.de/fileadmin/media/Manuals/dr/ma\_dr\_safe-braking-resistors-20106652\_de.pdf



KEB

#### 6.7.3 External braking resistor with overtemperature protection

Chapter => "Wiring Diagrams" contains examples how to connect external braking resistors with overtemperature protection.



Technical data and design of non-intrinsically safe braking resistors.





#### 6.7.4 Sub-mounted braking resistors without overtemperature protection

- Sub-mounted braking resistors are only available for liquid-cooled devices.
- Terminal PB is not available for this device version.

## **NOTICE**

Sub-mounted braking resistors are not suitable to convert large amounts of regenerative energy into heat. They are intended to intercept regenerative peaks.

#### 6.8 Temperature switch braking resistor, mains and motor choke

#### 6.8.1 General instructions

The following must be observed when wiring the temperature switches of the braking resistor, mains and motor choke:

- All cables must be laid separately from each other.
- If the various temperature switches are connected in series, EMC interference from the motor side can be coupled back to the input. => "Wiring".
- Chapter => "Wiring Diagrams" contains examples of how the temperature switches are connected to the control board.
- The used digital inputs must be parameterized to external error.

#### 6.8.2 Parameterization of the control board

Device series	Parameter	Description	Function	Default value
	di.02	digital input selection	set inputs	112 I2+I2+I3 <sup>1)</sup>
F5	di.11	I1 function external error 8192	external error 8192	
гэ	di.12	I2 function external error 8192		
	di.13	I3 function external error 8192		
F6	di.00	digital inputs logic	set inputs	7 I2+I2+I3 <sup>1)</sup>
го	pn.30	prog. error	source set inputs	7  2+ 2+ 3
Table 27: Parameterization of the control board				

Depending on the number of the used inputs.




## 6.9 Connection of the master/slave wiring

#### 6.9.1 Connection master/slave


- Make sure that the SUB-D connection is connected correctly.
- Tighten SUB-D connectors.

# **NOTICE**

Do not ground SUB-D cable between master and slave!

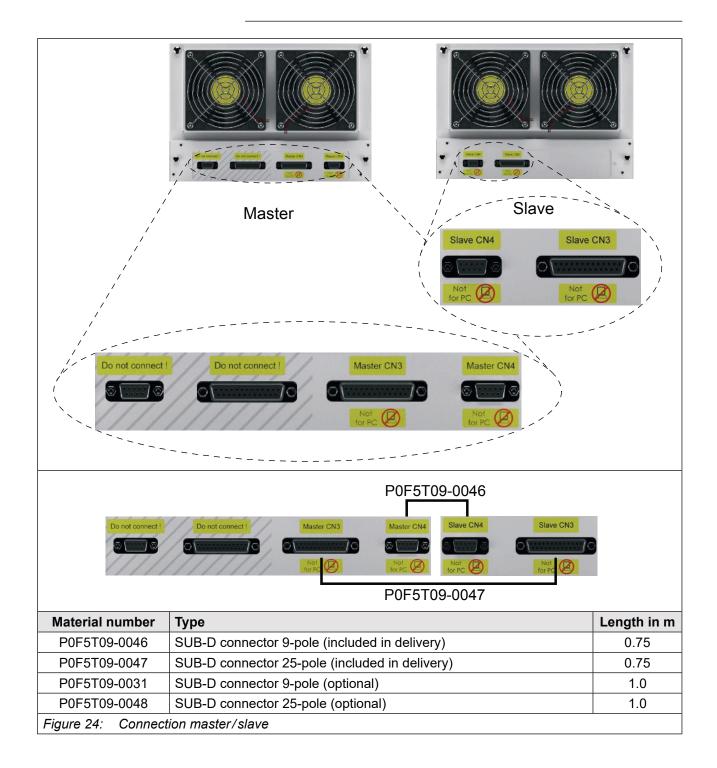



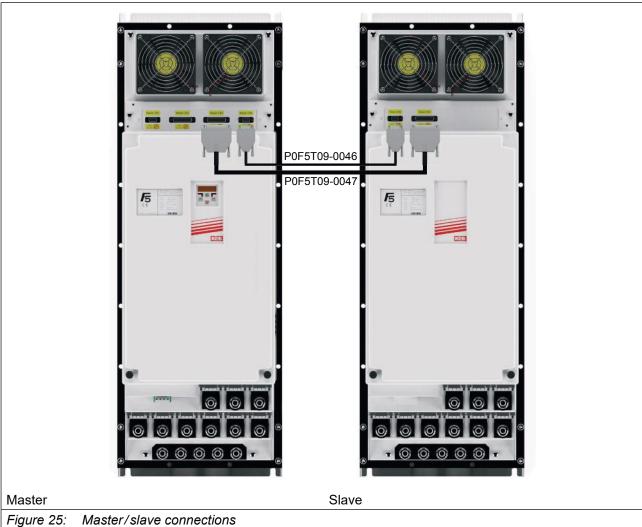



The connection cables can be attached to the supplied cable clamps using cable ties.


Figure 26: Cable clamps master/slave connections



#### 6.9.2 Connection master/slave/slave

**NOTICE** 

Do not ground SUB-D cable between master and slave!

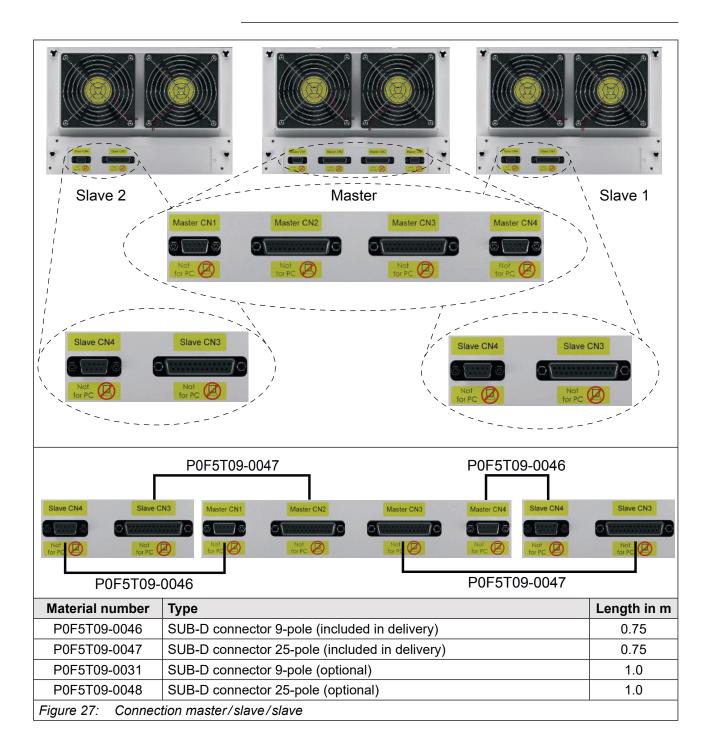



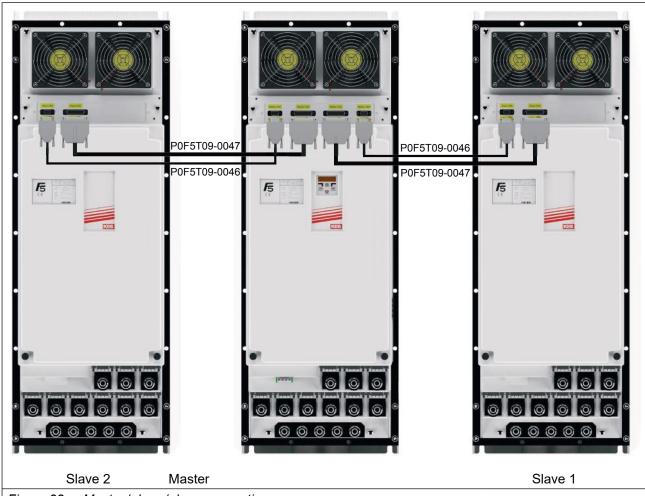


Figure 28: Master/slave/slave connections



The connection cables can be attached to the supplied cable clamps using cable ties.


Figure 29: Cable clamps master/slave/slave connections



# 7 Wiring Diagrams

## 7.1 Device size 28...30

#### 7.1.1 Mains and control connection

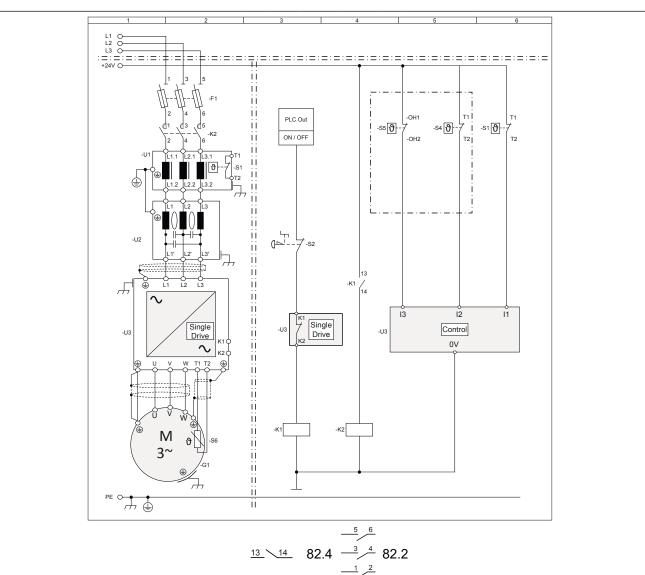

		13 14	82.4	$\frac{-3}{2}$ $\frac{4}{2}$ 8	32.2	2
Legend						
□1	Maine fuco			Q1		_

_090	209014					
F1	Mains fuse	S1	Temperature switch mains choke			
K1	Coupling relay	S2	Emergency stop button / switch			
K2	Main contactor	S6	Temperature switch motor			
U1	Mains choke	G1	Motor			
U2	HF filter	Optional				
U3	COMBIVERT single drive	S4	Temperature switch motor choke			
DO1	PLC digital output	S5	Temperature switch braking resistor			
Figure 3	Figure 30: Mains and control connection					








# 7.2 Device size 32...35


## 7.2.1 Mains and motor connection master/slave system

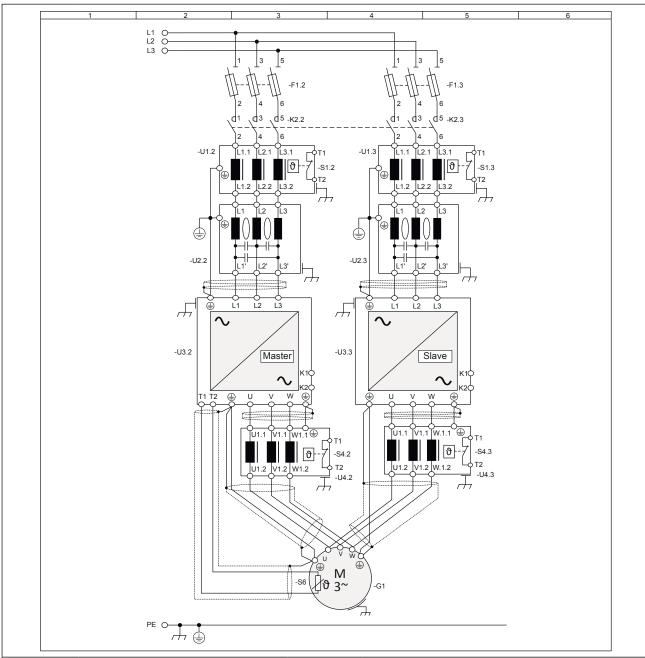

Legend						
F1.2/F1.3	Mains fuse	U4.2/U4.3	Symmetry chokes motor			
K2.2/K2.3	Mains contactor	G1	Motor			
U1.2/U1.3	Mains choke	S1.2/S1.3	Temperature switch mains choke			
U2.2/U2.3	HF filter	S4.2/S4.3	Temperature switch motor choke			
U3.2	COMBIVERT master	S6	Motor temperature switch			
U3.3	COMBIVERT slave					
Figure 31:	e 31: Mains and motor connection master/slave system					




## 7.2.2 Connection braking resistor master/slave system

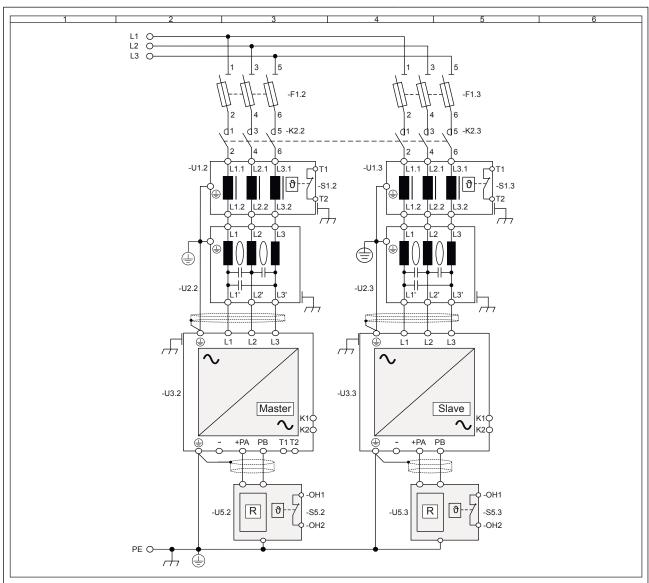

Legend						
F1.2/F1.3	Mains fuse	U3.3	COMBIVERT slave			
K2.2/K2.3	Mains contactor	S1.2/S1.3	Temperature switch mains choke			
U1.2/U1.3	Mains choke	U5.2/U5.3	Braking resistor			
U2.2/U2.3	HF filter	S5.2/S5.3	Temperature switch braking resistor			
U3.2	COMBIVERT master					
Figure 32:	Connection braking resistor master/slave system					



## 7.2.3 DC connection master/slave system

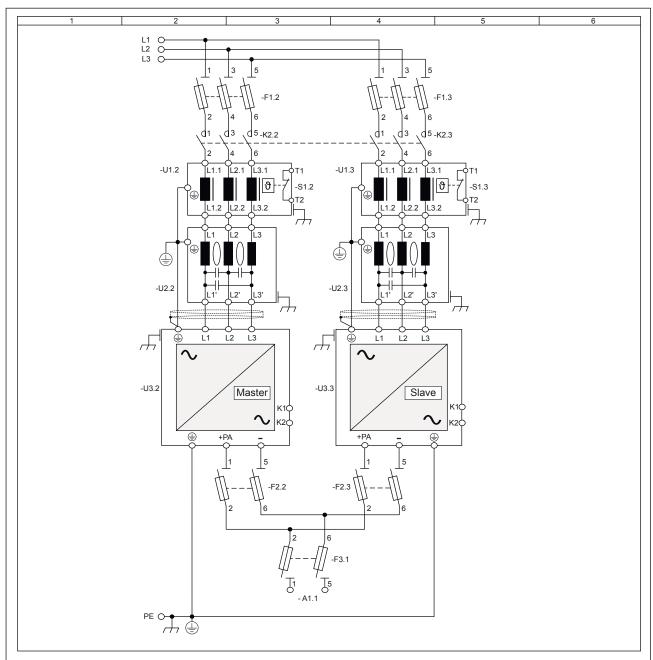

Legend							
F1.2/F1.3	Mains fuse	U2.2/U2.3	HF filter				
F2.2/F2.3	DC fuses	A1.1	Connection external device				
F3.1	DC fuse external device	U3.2	COMBIVERT master				
K2.2/K2.3	Mains contactor	U3.3	COMBIVERT slave				
U1.2/U1.3	Mains choke	S1.2/S1.3	Temperature switch mains choke				
Figure 33:	DC connection master/slave syste	em					



#### 7.2.4 Mains connection master/slave system

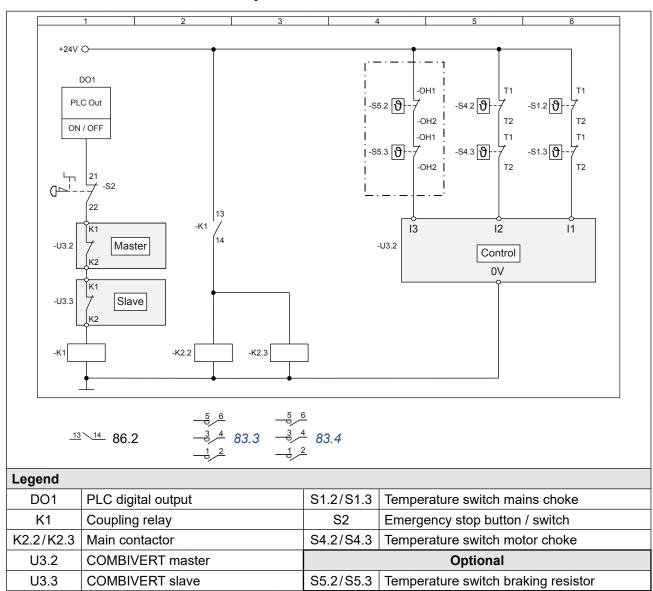



Figure 34:

Mains connection master/slave system



## 7.3 Device size 36...39


#### 7.3.1 Mains and motor connection master/slave /slave system

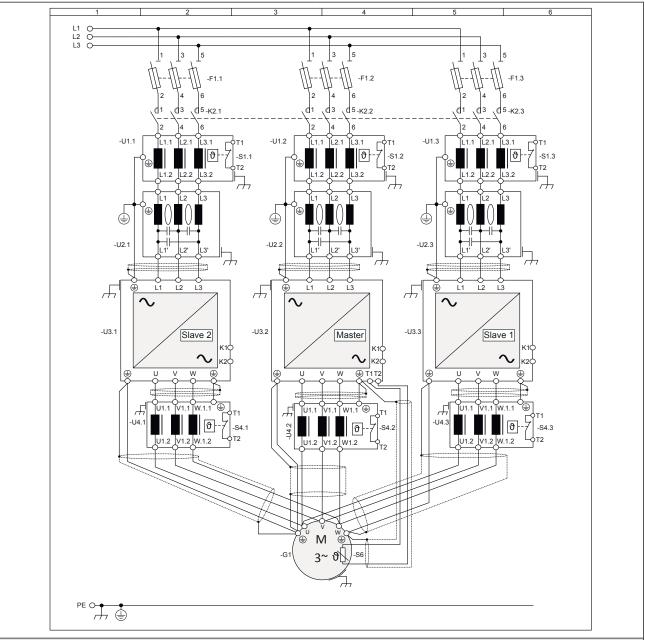

Legend							
F1.1/F1.2/F1.3	Mains fuse	U3.3	COMBIVERT slave 1				
K2.1/K2.2/K2.3	Mains contactor	U4.1/U4.2/U4.3	Symmetry chokes motor				
U1.1/U1.2/U1.3	Mains choke	G1	Motor				
U2.1/U2.2/U2.3	HF filter	S1.1/S1.2/S1.3	Temperature switch mains chokes				
U3.1	COMBIVERT slave 2	S4.1/S4.2/S4.3	Temperature switch motor chokes				
U3.2	COMBIVERT master	S6	Motor temperature switch				
Figure 35: Mains	s and motor connection master/sla	ve /slave system					




#### 7.3.2 Connection braking resistor master/slave/slave system

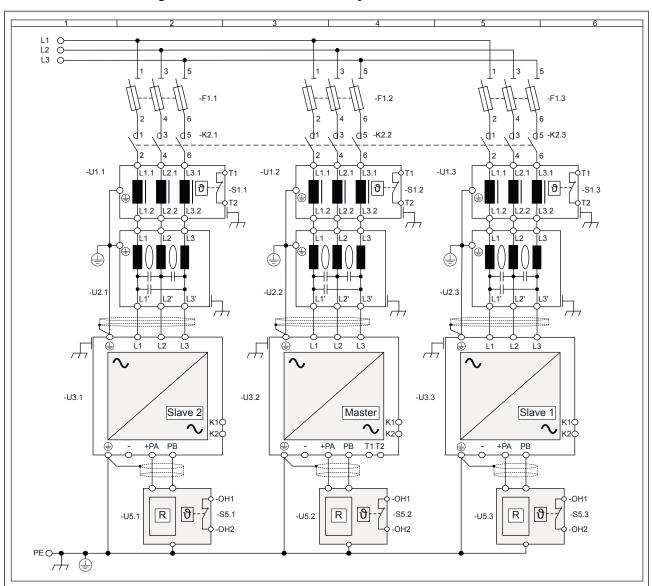

Legend							
F1.1/F1.2/F1.3	Mains fuse	U3.2	COMBIVERT master				
K2.1/K2.2/K2.3	Mains contactor	U3.3	COMBIVERT slave 1				
U1.1/U1.2/U1.3	Mains choke	U5.1/U5.2/U5.3	Braking resistor				
U2.1/U2.2/U2.3	HF filter	S5.1/S5.2/S5.3	Temperature switch braking resistor				
U3.1	COMBIVERT slave 2	S1.1/S1.2/S1.3	Temperature switch mains choke				
Figure 36: Connection braking resistor master/slave/slave system							

#### 7.3.3 DC connection master/slave/slave system


www.nicsanat.com 021-87700210

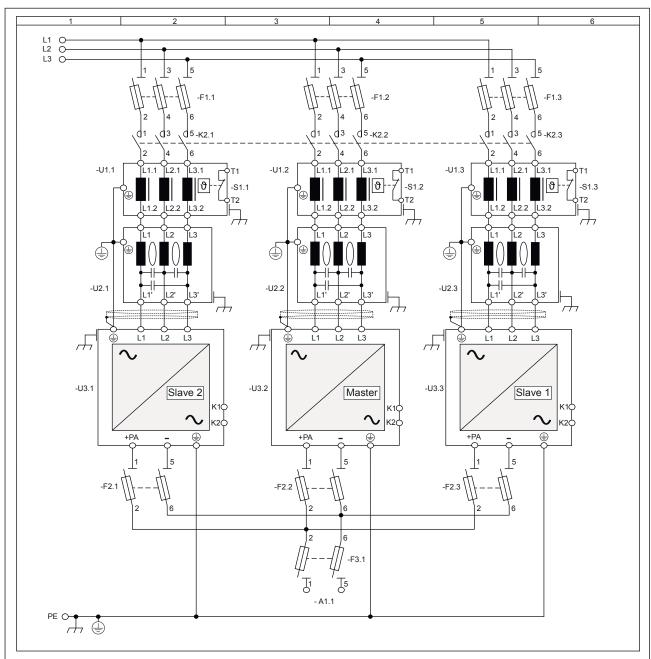

Legend								
F1.1/F1.2/F1.3	Mains fuse	U2.1/U2.2/U2.3	HF filter					
F2.1/F2.2/F2.3	DC fuses	A1.1	Connection external device					
F3.1	DC fuse external device	U3.2	COMBIVERT master					
K2.1/K2.2/K2.3	Mains contactor	U3.3	COMBIVERT slave 1					
U1.1/U1.2/U1.3 Mains choke U3.1 COMBIVERT slave 2								
Figure 37: DC o	connection master/slave/slave syst	 em						



#### 7.3.4 Mains connection master/slave/slave system

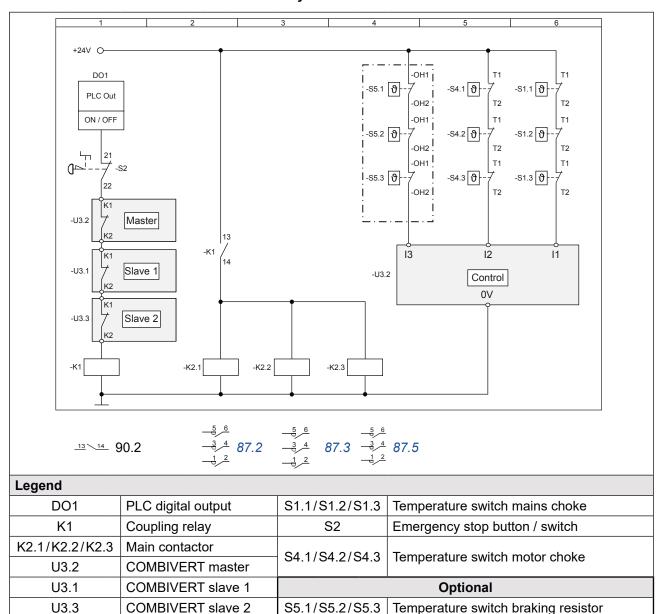

Mains connection master/slave/slave system

90

Figure 38:



# 8 Protection of drive converters

Use the following fuses in the mains cable: (rated current maximum 100kA SCCR)

Туре	400 V	480 V	600 V	690 V		
,,	CE	UL	USA*	CE		
Size	gG	RK5/J	J	gG		
28	500	400	350	400		
29	630	500	400	500		
30	630	600	450	500		
32	500	400	350	400		
33	500	450	350	400		
34	630	500	400	500		
35	630	400	450	500		
36	500	500	350	400		
37	630	600	350	400		
38	630	600	400	500		
39	_	_	450	500		
Table 28: Pro	tection of drive co	ection of drive converters				

<sup>\*</sup> Version without UL approval.

All indications are permitted maximum values and apply to each module.

#### 8.1 Use of circuit breakers

Drive converter F5/F6 Input voltage in V		UL 489 MCCB in A	Siemens Cat. No.
28 480 / 3ph		400	3VL400/JG-frame
29	29 480 / 3ph		3VL400X/LG-frame
30	30 480 / 3ph		3VL400X/LG-frame
32	32 480 / 3ph		2x 3VL400/JG-frame
33	33 480 / 3ph		2x 3VL400X/LG-frame
34 480 / 3ph		2 x 600	2x 3VL400X/LG-frame
35 480 / 3ph		2 x 600	2x 3VL400X/LG-frame
36 480 / 3ph		3 x 500	3x 3VL400X/LG-frame
37	480 / 3ph	3 x 600	3x 3VL400X/LG-frame
38 480 / 3ph		3 x 600	3x 3VL400X/LG-frame
Table 29: Use of circuit brea	kers		



# 9 Certification

## 9.1 CE Marking

CE marked drive converters and servo drives were developed and manufactured to comply with the regulations of the Low-Voltage Directive and EMC Directive. The harmonized standards of the series *EN 61800-5-1* and *EN 61800-3* were used.



For more information about the CE declarations of conformity.

=> "Further informations and documentation".

#### 9.2 UL Marking



Acceptance according to UL is marked at KEB drive converters with the adjacent logo on the nameplate.

To be conform according to UL for the use on the North American and Canadian Market the following instructions must be observed (original text of the UL):

- Control Board Rating (max. 30 Vdc, 1A)
- "Maximum Surrounding Air Temperature 45°C"
- Degree of Overload Protection provided internally by the Drive, in percent of full load current.
- Devices are intended for use in pollution degree 2 environment
- Wiring Terminals marked to indicate proper connections for the power supply, load and control circuit.
- "Use 75°C Copper Conductors Only"
- Terminals Torque Value for Field Wiring Terminals, the value to be according to the R/C or Unlisted Terminal Block used.
- Input/Output connections "Input/output Studs/Nuts shall be connected with UL Listed Ring Connectors (ZMVV/ZMVV7) rated 600 V and suitable ampere rating (min. 125 % of Input/Output Currents). The tightening torque value of the Nuts needs to be 310 lb-in. (35 Nm)"
- Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the Manufacturer Instructions, National Electrical Code and any additional local codes.
- These devices do not incorporate an internal solid state motor overload protection and are intended to be used with motors having thermal protectors in or on the motors.





In order to comply with CSA C22.2 No. 14-2010 (cUL) following external Filters and Mains Chokes manufactured by KEB Automation KG need to be installed:

Voltage class	Inverter size / Mod.	Filter				N	Mains choke	Alt. Choke
	28/1	1	Х	28E4T60-1001	1	х	28Z1B04-1000	28Z1B05-1002
	29/1	1	Х	30E4T60-1001	1	х	29Z1B04-1000	29Z1B05-1002
	29/2	2	Х	26E4T60-1001	2	х	25Z1B04-1000	25Z1B05-1002
	30/1	1	Х	30E4T60-1001	1	х	30Z1B04-1000	30Z1B05-1002
	30/2	2	Х	26E4T60-1001	2	х	27Z1B04-1000	27Z1B05-1002
	32/2	2	Х	28E4T60-1001	2	х	28Z1B04-1000	28Z1B05-1002
	32/3	3	Х	26E4T60-1001	3	х	25Z1B04-1000	25Z1B05-1002
400/490\/	33/2	2	Х	28E4T60-1001	2	х	28Z1B04-1000	28Z1B05-1002
400/480V	33/3	3	Х	26E4T60-1001	2	3	27Z1B04-1000	27Z1B05-1002
	34/2	2	Х	30E4T60-1001	2	х	29Z1B04-1000	29Z1B05-1002
	34/3	3	Х	26E4T60-1001	2	3	27Z1B04-1000	27Z1B05-1002
	35/2	2	Х	30E4T60-1001	2	х	30Z1B04-1000	30Z1B05-1002
	35/3	3	Х	28E4T60-1001	3	х	28Z1B04-1000	28Z1B05-1002
	36/3	3	Х	28E4T60-1001	3	х	28Z1B04-1000	28Z1B05-1002
	37/3	3	Х	30E4T60-1001	3	х	29Z1B04-1000	29Z1B05-1002
	38/3	3	Х	30E4T60-1001	3	х	30Z1B04-1000	30Z1B05-1002
Table 30: External filters and chokes								

Detailed wiring Instructions for the external Filters and Mains Chokes as specified are present in the Installation Instructions of the products.

Short Circuit rating and Branch Circuit Protection:

#### All 480 V Models:

Suitable For Use On A Circuit Capable Of Delivering Not More Than 100 kA rms Symmetrical Amperes, 480 Volts Maximum when Protected by Class J or RK5 Fuses, rated \_\_\_\_ Amperes

or when Protected by A Circuit Breaker Having an Interrupting rating Not Less than 100 kA rms Symmetrical Amperes, 480 V maximum, rated \_\_\_\_ Amperes



Table I Branch Circuit Protection of inverter series F5/F6 – P – housing:

a) Class J or RK5 Fuses as specified below:

Inverter F5/F6	Input Voltage [V]	UL 248 Fuse type J or RK5 [A]	
28	480 / 3ph	3x400	
29	480 / 3ph	3x500	
29	480 / 3ph	2 x 3x300	
30	480 / 3ph	3x600	
30	480 / 3ph	2 x 3x350	
32	480 / 3ph	2 x 3x400	
32	480 / 3ph	3 x 3x300	
33	480 / 3ph	2 x 3x450	
33	480 / 3ph	3 x 3x350	
34	480 / 3ph	2 x 3x500	
34	480 / 3ph	3 x 3x400	
35	480 / 3ph	2 x 3x600	
35	480 / 3ph	3 x 3x400	
36	480 / 3ph	3 x 3x500	
37	480 / 3ph	3 x 3x600	
38	480 / 3ph	3 x 3x600	
Table 31: UL fuses			

# b) Inverse Time Circuit Breaker as specified below:

Inverter	Input Voltage [V]	UL 489 MCCB [A]	Siemens Cat. No.	
28	480 / 3ph	400	3VL400/JG-frame	
29	480 / 3ph	600	3VL400X/LG-frame	
29	480 / 3ph	2 x 400	2x 3VL400/JG-frame	
30	480 / 3ph	600	3VL400X/LG-frame	
30	480 / 3ph	2 x 400	2x 3VL400/JG-frame	
32	480 / 3ph	2 x 400	2x 3VL400/JG-frame	
32	480 / 3ph	3 x 400	3x 3VL400/JG-frame	
33	480 / 3ph	2 x 600	2x 3VL400X/LG-frame	
33	480 / 3ph	3 x 400	3x 3VL400/JG-frame	
34	480 / 3ph	2 x 600	2x 3VL400X/LG-frame	
34	480 / 3ph	3 x 400	3x 3VL400/JG-frame	
35	480 / 3ph	2 x 600	2x 3VL400X/LG-frame	
35	480 / 3ph	3 x 400	3x 3VL400/JG-frame	
36	480 / 3ph	3 x 500	3x 3VL400X/LG-frame	
37	480 / 3ph	3 x 600	3x 3VL400X/LG-frame	
38	480 / 3ph	3 x 600	3x 3VL400X/LG-frame	
Table 32: Cable protection switch				



## 9.3 Further informations and documentation

You find supplementary manuals and instructions for the download under www.keb.de/de/service/downloads

#### General instructions

- EMC and safety instructions
- · Manuals for further control boards

Instruction and information for construction and development

- · Input fuses in accordance with UL
- Programming manual for control and power unit
- Motor configurator to select the appropriate drive converter and to create downloads for parameterizing the drive converter

#### Approvals and approbations

- Declaration of conformity CE
- TÜV certificate
- · FS certification


#### Others

- COMBIVIS, the software for comfortable parameterization of drive converters via PC (available per download)
- EPLAN drawings



# 10 Characteristics


#### 10.1 Overload characteristic

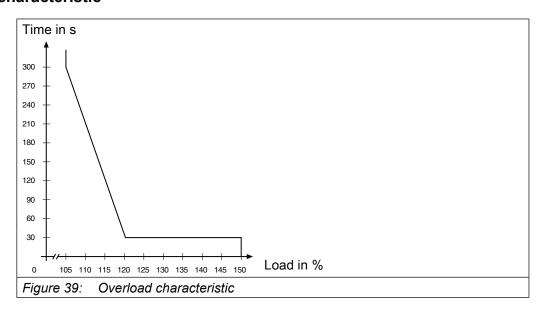

On exceeding a load of 105% the overload integrator starts. When falling below the integrator counts backwards. If the integrator achieves the overload characteristic that corresponds to the drive converter, error E.OL is triggered.

#### 10.2 Overload protection in the lower speed range

Applies only to operating modes MULTI and SERVO.

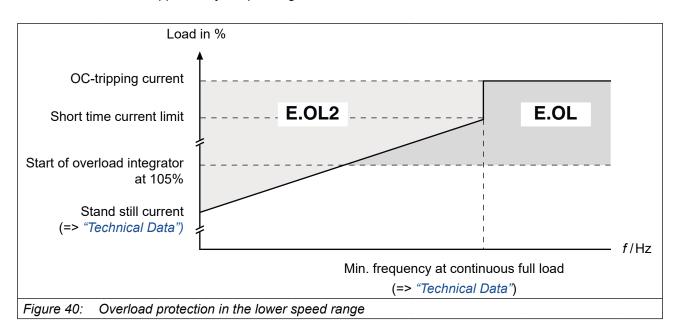

A PT1 element (t=280 ms) starts if the permissible current is exceeded. After its sequence of operation the error E.OL2 is triggered.



**CHARACTERISTICS** 




#### 10.3 Power dissipation of the 400V class at rated operation

The following diagram shows the total power dissipation as a function of the output current per module at

- · different switching frequencies.
- 50 Hz output frequency.
- 25 °C ambient temperature.

#### 10.3.1 Power dissipation of different switching frequencies

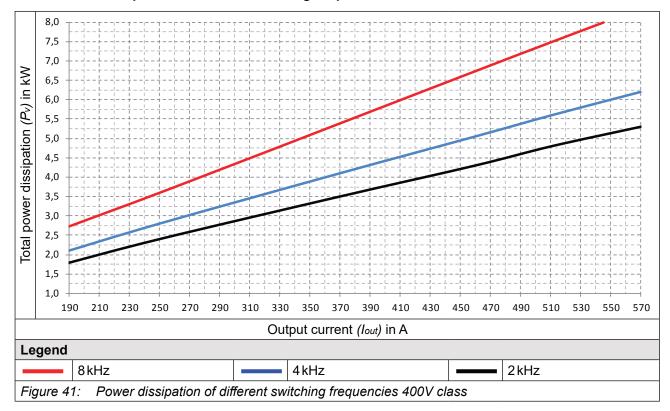



Determination of power dissipation with parallel connected modules:

- ▶ Divide the output current by the number of modules.
- ▶ Determine the power dissipation from the upper diagram with the determined output current for a module.
- ▶ Multiply the power dissipation with the number of modules.




#### **CHARACTERISTICS**

# 10.4 Power dissipation of the 690V class at rated operation

The following diagram shows the total power dissipation as a function of the output current per module at

- 50 Hz output frequency.
- 25 °C ambient temperature.


#### 10.4.1 Power dissipation at 2 kHz switching frequency

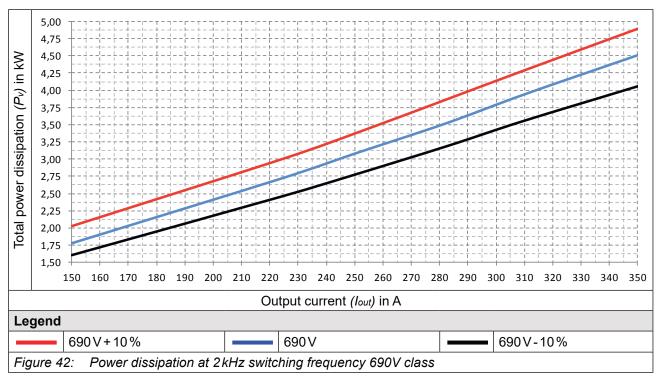



CHARACTERISTICS

## 10.4.2 Power dissipation at 4 kHz switching frequency

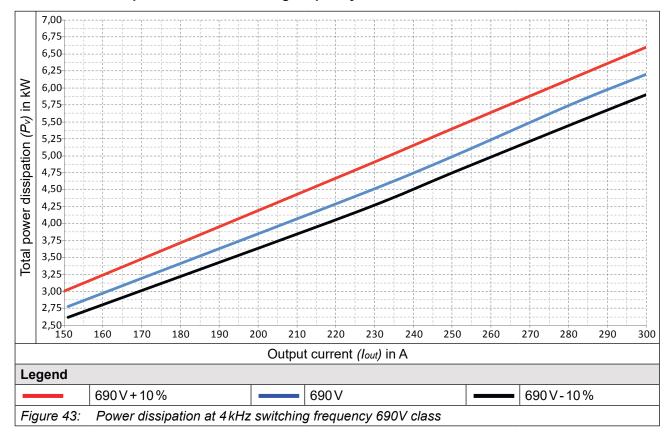



# **ACCESSORIES**

# 11 Accessories

# 11.1 Filter and chokes

Class	Device size		Filter		Mains choke	Setting		Motor choke	Setting		
	28		28E4T60-1001		28Z1B04-1000			29Z1A04-1001			
	29	1x	30E4T60-1001	1x	29Z1B04-1000		1x	2921A04-1001			
	30		30E4T60-1001		30Z1B04-1000			31Z1A04-1000			
	32		28E4T60-1001		28Z1B04-1000			29Z1A04-1001			
400 V	33	2x	28E4T60-1001	2x	28Z1B04-1000		2x	2921A04-1001			
400 V	34		30E4T60-1001		29Z1B04-1000		ZX	31Z1A04-1000			
	35		30E4T60-1001		30Z1B04-1000			31Z1A04-1000			
	36		28E4T60-1001		28Z1B04-1000			00744044004			
	37	3x	30E4T60-1001		29Z1B04-1000		3x	29Z1A04-1001			
	38		30E4T60-1001		30Z1B04-1000			31Z1A04-1000			
	28						28Z1B06-1000				
	29	1x	30E5T60-8001	1x	29Z1B06-1000	29Z1B06-1000 1x 29Z1A0	29Z1A04-1001				
	30				30Z1B06-1000						
	32			2x	28Z1B06-1000		2x	29Z1A04-1001			
	33	2x	30E5T60-8001		29Z1B06-1000						
690 V	34	2x	3023100-0001		30Z1B06-1000						
	35				30Z1B06-1000						
	36				29Z1B06-1000						
	37	3x	30E5T60-8001	3x	30Z1B06-1000		3x	2071404 1001			
	38		3023100-6001	JX.	30Z1B06-1000		JΧ	29Z1A04-1001			
	39				30Z1B06-1000						
Legend											
Required				Reco	mmended						
Table 33: Filter and chokes											

100



ACCESSORIES KE

# 11.2 Assembly aids

Mounting bracket	1		
	'	00F5ZTB-0001	
Ring bolts Mounting kit	1	00F5ZTB-0002	

## 11.3 Connections to the coolant

Connection variant	Required number	Part number
Accessory kit hose connection G1/2 with mounting nuts	1	0000650-G14K
Function nut for a pipe diameter of 12mm	2	0000651-FM12
Heat sink seal bottom/upper side IP54	1	P0F5T45-0019
Table 35: Connections to the coolant		

# 11.4 Connecting cable master/slave system

Connecting cable	Required	d number	Part number	
Connecting cable	MS 1)	MSS 2)	Part number	
SUB-D plug 9-pole 0.75 (contained in scope of supply)	1	2	P0F5T09-0046	
SUB-D plug 25-pole 0.75 (contained in scope of supply)	1	2	P0F5T09-0047	
SUB-D plug 9-pole 1.0 (optional)	1	2	P0F5T09-0031	
SUB-D plug 25-pole 1.0 (optional)	1	2	P0F5T09-0048	
Table 36: Connecting cable master/slave system				

Master/slave system

## 11.5 Heat sink fan

Spare part kit	Required number	Part number
Heat sink fan for external supply (24 V/2.5A)	1	P0F5989-1206
Table 37: Heat sink fan		

<sup>2)</sup> Master/slave/slave system



# **REVISION HISTORY**

# 12 Revision History

Revision	Date	Description	
2A	2011-04	First published version	
2B	2011-11	Technical datas, dimensions, connection of the power circuit, braking resistor and annex C are overworked	
2C	2012-01	Master/ slave wiring changed	
2D	2012-04	Cooling water directive und water connection revised	
2E	2012-04	Use of the temperature input in KTY mode revised	
2F	2012-06	Braking resistor adapted to standard series; Shielding for temperature sensors; Master / slave wiring	
2G	2013-01	EMC and safety instructions changed	
2H	2014-09	Transport instructions inserted	
21	2014-09	UL values added to technical data	
2J	2015-03	Revision of the technical data; Fuse values inserted; Coolant diagrams adapted	
00	2018-10	change to document number; complete revision of the content	
01	2020-05	Mounting of the housing in the control cabinet defined; Editorial changes	





Austria | KEB Automation GmbH Ritzstraße 8 4614 Marchtrenk Austria Tel: +43 7243 53586-0 Fax: +43 7243 53586-21 E-Mail: info@keb.at Internet: www.keb.at

Benelux | KEB Automation KG
Dreef 4 - box 4 1703 Dilbeek Belgium
Tel: +32 2 447 8580
E-Mail: info.benelux@keb.de Internet: www.keb.de

Brazil KEB South America - Regional Manager
Rua Dr. Omar Pacheco Souza Riberio, 70
CEP 13569-430 Portal do Sol, São Carlos Brazil
Tel: +55 16 31161294 E-Mail: roberto.arias@keb.de

Czech Republic | KEB Automation GmbH Videnska 188/119d 61900 Brno Czech Republic Tel: +420 544 212 008 E-Mail: info@keb.cz | Internet: www.keb.cz

France | Société Française KEB SASU

Z.I. de la Croix St. Nicolas 14, rue Gustave Eiffel

94510 La Queue en Brie France

Tel: +33 149620101 Fax: +33 145767495

E-Mail: info@keb.fr Internet: www.keb.fr

#### **Germany | Geared Motors**

KEB Antriebstechnik GmbH
Wildbacher Straße 5 08289 Schneeberg Germany
Telefon +49 3772 67-0 Telefax +49 3772 67-281
Internet: www.keb-drive.de E-Mail: info@keb-drive.de

Italy | KEB Italia S.r.I. Unipersonale
Via Newton, 2 20019 Settimo Milanese (Milano) Italia
Tel: +39 02 3353531 Fax: +39 02 33500790
E-Mail: info@keb.it Internet: www.keb.it

 Japan | KEB Japan Ltd.

 15 - 16, 2 - Chome, Takanawa Minato-ku Tokyo 108 - 0074 Japan

 Tel: +81 33 445-8515 Fax: +81 33 445-8215

 E-Mail: info@keb.jp Internet: www.keb.jp

P. R. China KEB Power Transmission Technology (Shanghai) Co. Ltd.
No. 435 QianPu Road Chedun Town Songjiang District
201611 Shanghai P.R. China
Tel: +86 21 37746688 Fax: +86 21 37746600
E-Mail: info@keb.cn Internet: www.keb.cn

Poland | KEB Automation KG

Tel: +48 60407727

E-Mail: roman.trinczek@keb.de Internet: www.keb.de

Republic of Korea | KEB Automation KG

Room 1709, 415 Missy 2000 725 Su Seo Dong

Gangnam Gu 135-757 Seoul Republic of Korea

Tel: +82 2 6253 6771 Fax: +82 2 6253 6770 E-Mail: vb.korea@keb.de

Russian Federation | KEB RUS Ltd.
Lesnaya str, house 30 Dzerzhinsky MO
140091 Moscow region Russian Federation
Tel: +7 495 6320217 Fax: +7 495 6320217
E-Mail: info@keb.ru Internet: www.keb.ru

Spain | KEB Automation KG c / Mitjer, Nave 8 - Pol. Ind. LA MASIA 08798 Sant Cugat Sesgarrigues (Barcelona) Spain Tel: +34 93 8970268 Fax: +34 93 8992035 E-Mail: vb.espana@keb.de

SwitzerlandKEB Automation AGWitzbergstrasse 248330 Pfaeffikon/ZHSwitzerlandTel: +41 43 2886060Fax: +41 43 2886088E-Mail: info@keb.chInternet: www.keb.ch

United Kingdom | KEB (UK) Ltd.
5 Morris Close | Park Farm Indusrial Estate
Wellingborough, Northants, NN8 6 XF | United Kingdom
Tel: +44 1933 402220 | Fax: +44 1933 400724
E-Mail: info@keb.co.uk | Internet: www.keb.co.uk

United States | KEB America, Inc 5100 Valley Industrial Blvd. South Shakopee, MN 55379 United States Tel: +1 952 2241400 Fax: +1 952 2241499 E-Mail: info@kebamerica.com Internet: www.kebamerica.com



#### **MORE KEB PARTNERS WORLDWIDE:**





Automation with Drive

www.keb.co.uk