





Manual

Industrial Controls Soft Starters 3RW44

Edition

03/2017

siemens.com/industrial-controls

SIEMENS

Industrial Controls

Soft starters and solid-state switching devices 3RW44 soft starters

Manual



Important notes	1
Introduction	2
Configuration instructions	3
Installation, connection and feeder configuration	4
Display, controls and device interfaces	5
Commissioning	6
Device functions	7
Diagnostics and messages	8
PROFIBUS DP communication module	9
Typical circuit diagrams	10
General technical data	11



Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

▲ DANGER

indicates that death or severe personal injury will result if proper precautions are not taken.

MARNING

indicates that death or severe personal injury may result if proper precautions are not taken.

ACAUTION

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

AWARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.



Table of contents

1	importan	t notes	8
	1.1	Security information	11
2	Introduct	ion	12
	2.1 2.1.1 2.1.2	Basic physical principles of the three-phase asynchronous motor and operating principle of the soft starter Three-phase asynchronous motor Principle of operation of the 3RW44 electronic soft starter	12
	2.2	Application and use	17
	2.3	Marginal conditions for storage and operation	19
3	Configura	ation instructions	20
	3.1 3.1.1 3.1.2	ConfigurationRS 232 serial PC interface and Soft Starter ES parameterizing and operating software Simulation Tool for Soft Starters (STS)	e 20
	3.2 3.2.1 3.2.2 3.2.3	Startup class Application examples for normal starting (CLASS 10) Application examples for heavy starting (CLASS 20) Application examples for very heavy starting (CLASS 30)	22 23
	3.3	ON time and switching frequency	25
	3.4	Installation altitude and ambient temperature	26
	3.5	Factory settings	27
	3.6	Article number system for SIRIUS 3RW44 soft starters	28
4	Installatio	on, connection and feeder configuration	29
	4.1 4.1.1 4.1.2 4.1.3 4.1.4	Installing the soft starter Unpacking Mounting position Installation requirements Mounting dimensions and clearances	29 29 30
	4.2 4.2.1 4.2.2 4.2.3 4.2.4	Design of the feeder	32 33 35
	4.3	Protection of the soft starter against short-circuits (type of assignment 2)	40
	4.4	Capacitors for improving the power factor	41
	4.5	Generator operation with three-phase asynchronous motor	42
	4.6 4.6.1	Electrical connection	



	4.6.2 4.6.3	Main circuit connection	
5		controls and device interfaces	
5	5.1	Display and controls	
	5.2	Device interfaces	
	5.2.1	Local device interface	
	5.2.2	PROFIBUS/PROFINET interface (optional)	47
	5.3	External display and control module (optional)	47
6	Commiss	sioning	48
	6.1	Menu structure, navigation, changing parameters	48
	6.1.1	Menu structure and navigation	48
	6.1.2	Changing parameters: for example motor data	49
	6.2	Switching on for the first time	50
	6.2.1	Recommended procedure for commissioning 3RW44	50
	6.2.2	Quick start menu, when switching on for the first time	
	6.2.3	Problems that can occur	
	6.2.4	Quick Start menu	56
	6.3	User-specific commissioning	58
	6.3.1	Settings main menu item	59
	6.4	Making settings in the selected parameter set	60
	6.4.1	Selecting the parameter set	
	6.4.2	Entering the motor data	
	6.4.3	Specifying the startup mode	
	6.4.4	Specifying the coasting method	
	6.4.5	Setting slow speed parameters	
	6.4.6	Specifying current limit values	
	6.4.7 6.4.8	Parameterizing the inputs	
	6.4.9	Parameterizing the outputs	
	6.4.10	Selecting froter protection settings	
	6.4.11	Specifying the behavior of the protective functions	
	6.4.12	Specifying the names on the device display	
	6.4.13	Activating the fieldbus interface (PROFIBUS DP/PROFINET IO)	
	6.4.14	Saving options	
	6.5	Other device functions	107
	6.5.1	Measured values display	
	6.5.2	Status display	109
	6.5.3	Motor control (assigning control priority)	110
	6.5.4	Statistics	
	6.5.5	Safety (specifying the user level, parameterization protection)	118
7	Device fu	ınctions	119
	7.1	Various parameter sets	119
	7.1.1	Various parameter sets	119
	7.2	Startup modes	119
	7.2.1	Voltage ramp	
	7.2.2	Torque control	121



	7.2.3	Breakaway pulse in combination with the voltage ramp or torque control startup mode	
	7.2.4	Current limitation in combination with the voltage ramp or torque control startup mode	125
	7.2.5	Direct startup mode	127
	7.2.6	Motor heating startup mode	127
	7.3	Coasting methods	128
	7.3.1	Coasting down	
	7.3.2	Torque control and pump stop	
	7.3.3	DC braking/combined braking	
	7.4	Slow speed function	134
	7.5	Current limits for load monitoring	135
	7.6	Motor protection functions	136
	7.7	Intrinsic device protection	139
	7.7.1	Intrinsic device protection	
8	Diagnostics	s and messages	140
	8.1	Diagnostics and messages	140
	8.1.1	Status messages	
	8.1.2	Warnings and group faults	
	8.1.3	Device fault	
9		S DP communication module	
	9.1	Introduction	140
	9.1.1	Definitions	
	9.2	Data transfer	
	9.2.1	Options for data transfer	
	9.2.2	Communication principle	153
	9.3	Installing the PROFIBUS DP communication module	153
	9.3.1	Inserting the PROFIBUS DP communication module (fieldbus interface)	
	9.4	Activating the PROFIBUS DP communication module (fieldbus interface) and setting	
		the station address	156
	9.4.1	Introduction	156
	9.4.2	Activating the PROFIBUS DP communication module via the display, setting the	
		station address and saving the settings	157
	9.4.3	Activating the PROFIBUS DP communication module (fieldbus interface) and setting the station address via the device interface using the "Soft Starter ES Premium" or the	
		"Soft Starter ES Smart + SP1" software	160
	9.5	Configuring soft starters	162
	9.5.1	Introduction	
	9.5.2	Configuring with the GSD file	
	9.5.3	Configuring with the Soft Starter ES Professional software	
	9.5.4	Diagnostics package	
	9.5.5	Soft Starter ES parameterization software	
	9.6	PROFIBUS DP commissioning using the GSD file in STEP 7 (example)	
	9.6.1	Introduction	
	9.6.2	Configuration using the Device Master Data (GSD) in STEP 7	
	9.6.3	Integration into the user program	
	9.6.4	Switching on	



9.6.5	Flow diagram: PROFIBUS DP starting the soft starter	169
9.7	Process data and process images	170
9.8	Diagnosis via LED display	171
9.9	Diagnosis with STEP 7	172
9.9.1	Reading out the diagnostic data	172
9.9.2	Options for reading diagnostic data	172
9.9.3	Structure of the slave diagnostics	
9.9.4	Station status 1 to 3	
9.9.5	Master PROFIBUS address	
9.9.6	Manufacturer ID	
9.9.7	ID-related diagnostics	
9.9.8	Module status	
9.9.9	Channel-related diagnostics	
9.10	Data formats and data sets	
9.10.1	Properties	
9.11	Identification number (ID No.), error codes	
9.11.1	Identification number (ID No.)	
9.11.2	Error codes for negative data set acknowledgement	184
9.12	Data sets (BS)	
9.12.1	Data set 68 - Reading/writing the process image of the outputs	
9.12.2	Data set 69 - Reading the process image of the inputs	
9.12.3	Data set 72 - Logbook - Reading device errors	
9.12.4	Data set 73 - Logbook - Reading the trips	
9.12.5 9.12.6	Data set 75 - Logbook - Reading events	
9.12.0	Data set 82 - Reading the basic settings of data set 131	
9.12.8	Data set 83 - Reading the basic settings of data set 133	
9.12.9	Data set 92 - Reading device diagnostics	
9.12.10	Data set 93 - Writing a command	
9.12.11	Data set 94 - Reading measured values	202
9.12.12	Data set 95 - Reading statistical data	203
9.12.13	Data set 96 - Reading the maximum pointer	
9.12.14	Data set 100 - Reading the device identification	
9.12.15	Data sets 131, 141, 151 - Technology parameters 2: Reading/writing sets 1, 2, 3	
9.12.16	Data sets 132, 142, 152 - Technology parameters 3:	
9.12.17	Reading/writing sets 1, 2, 3	
9.12.17	Data set 160 - Reading/writing communication parameters	
9.12.10	Data set 165 - Reading/writing comments	
• •	uit diagrams	
10.1	Connection examples for main and control circuits	
10.1.1	3RW44 in a standard circuit with control via keys	
10.1.2	3RW44 in a standard circuit with line contactor and control via PLC	218
10.1.3	3RW44 in a standard circuit and DC braking stopping function for device types 3RW44 22 to 3RW44 25	210
10.1.4	3RW44 in a standard circuit and DC braking stopping function for device types 3RW44	∠ 13
	26 to 3RW44 66	220
10.1.5	3RW44 in an inside-delta circuit	

10



	10.1.6	3RW44 in a standard circuit and control like a contactor	223
	10.1.7	3RW44 in a standard circuit with soft start/stop and additional slow speed function in both directions of rotation with one parameter set	224
	10.1.8	Control via @PROFIBUS with switchover to manual local operation (e.g. on the	224
	10.1.0	control cabinet)	226
	10.1.9	3RW44 in a standard circuit and reversing operation via main contactors with one	220
	10.1.0	parameter set without soft stopping	227
	10.1.10	Reversing operation with soft stopping	
	10.1.10	Soft starter for pole-changing motor with separate windings and 2 parameter sets	
	10.1.11	Soft starter for Dahlander motors with 2 parameter sets	
	10.1.12	Parallel starting of 3 motors	
	10.1.14	Soft starter for serial starting with 3 parameter sets	
	10.1.15	Soft starter for serial starting with 3 parameter sets (deactivate soft stop and 3RW44	200
		motor protection)	237
	10.1.16	Soft starter for activation of a motor with a magnetic fixing brake	
	10.1.17	Safe disconnection according to IEC 62061 (SIL) and/or ISO 13849-1 (PL)	
	10.1.18	Soft starter with direct-on-line starting (DOL) as emergency start	
	10.1.19	Soft starter with star-delta starter as emergency start (3RW44 in a standard circuit)	
	10.1.20	Soft starter and frequency converter on one motor	
11	General te	echnical data	
	11.1	Menu structure	243
	11.2	Transport and storage conditions	252
	11.3	Technical data	252
	11.3.1	Selection and ordering data	
	11.3.1	Technical data of the power unit	
	11.3.2	Technical data of the power difference and the control section	
	11.3.4	Conductor cross-sections	
	11.3.5	Electromagnetic compatibility	
	11.3.6	Feeder component layout (standard circuit)	
	11.3.7	Feeder component layout (inside-delta circuit)	
	11.3.8	Accessories	
	11.3.9	Spare parts	
	11.4	Tripping characteristics	281
	11.4.1	Motor protection tripping characteristics: 3RW44 with symmetry	
	11.4.2	Motor protection tripping characteristics: 3RW44 with asymmetry	
	11.5	Dimension drawings	
	11.5.1	Dimension drawings	
Α			
r %	hales		200



Important notes

Purpose of this manual

This manual contains fundamental information and practical tips for using SIRIUS 3RW44 soft starters. The SIRIUS 3RW44 soft starter is an electronic motor control device that enables optimized starting and stopping of three-phase asynchronous motors. This manual describes all the functions of the SIRIUS 3RW44 soft starter.

Target group

This manual is intended for any user involved in

- Commissioning
- · Servicing and maintenance
- Planning and configuring systems

Basic knowledge required

A general knowledge of the field of electrical engineering is required to understand this manual.

Validity

This manual is valid for SIRIUS 3RW44 soft starters. It contains a description of the components that are valid at the time of publication of this manual. SIEMENS reserves the right to include updated information about new components or new versions of components in a Product Information.

Definitions

Where the short form 3RW44 is used in the text, it refers to the SIRIUS 3RW44 soft starter.

Standards and approvals

The SIRIUS 3RW44 soft starter is based on IEC/EN 60947-4-2.



Disclaimer of liability

The manufacturer of the system or machine is responsible for ensuring the correct overall functioning. SIEMENS AG, its regional offices, and associated companies (hereinafter referred to as "SIEMENS") cannot guarantee all the properties of a system or machine not designed by SIEMENS.

Nor can Siemens assume liability for recommendations given or implied by the following description. No new guarantee, warranty, or liability claims beyond the scope of the SIEMENS general terms and conditions of supply are to be derived or inferred from the following description.

Access aids

To facilitate and speed up access to special information, the manual contains the following aids:

- At the beginning of the manual you will find a table of contents.
- The individual chapters contain subheadings that provide an overview of the contents of the section.
- At the end of the manual, there is an extensive index to enable you to quickly access the required information.

Up-to-the-minute information at all times

Your regional contacts for communication-capable low-voltage controls will be pleased to assist you with any queries you have regarding the motor starters. A list of contacts and the latest version of the manual are available on the Internet (http://www.siemens.com/softstarter).

For all technical queries, please contact:

Technical Assistance:	Telephone: +49 (0) 911-895-5900 (8°° - 17°° CET) Fax: +49 (0) 911-895-5907
	E-mail (mailto:technical-assistance@siemens.com)
	Internet (https://support.industry.siemens.com/my/ww/en/requests)
Technical Support:	Telephone: +49 (0) 180 50 50 222

Correction sheet

A correction sheet is included at the end of this manual. Please use it to record your suggestions for improvements, additions, and corrections, and return the sheet to us. This will help us to improve the next edition of the manual.



1.1 Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines, and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions only form one element of such a concept.

Customer is responsible to prevent unauthorized access to its plants, systems, machines and networks. Systems, machines and components should only be connected to the enterprise network or the internet if and to the extent necessary and with appropriate security measures (e.g. use of firewalls and network segmentation) in place.

Additionally, Siemens' guidance on appropriate security measures should be taken into account. For more information about industrial security, please visit: http://www.siemens.com/industrialsecurity.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends to apply product updates as soon as available and to always use the latest product versions. Use of product versions that are no longer supported, and failure to apply latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

http://www.siemens.com/industrialsecurity.



Introduction

2.1 Basic physical principles of the three-phase asynchronous motor and operating principle of the soft starter

2.1.1 Three-phase asynchronous motor

Application areas of the three-phase asynchronous motor

Three-phase asynchronous motors are used in a wide range of applications in commerce, industry and trade owing to their simple, rugged design and their low-maintenance operation.

Problem

If a three-phase asynchronous motor is started directly, its typical current and torque characteristics can cause disturbances in the supply system and the load machine.

Starting current

Three-phase asynchronous motors have a high direct starting current I (startup). Depending on the motor version it can amount to between three times and fifteen times the rated operational current. Seven to eight times the rated motor current can be taken as a typical value.



Disadvantage

This results in the following disadvantage:

 Higher load on the electrical supply system. This means that the supply system must be dimensioned for this higher output during the motor startup.

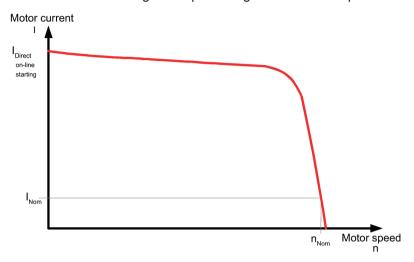


Figure 2-1 Typical starting current characteristic of a three-phase asynchronous motor

Locked-rotor torque

The starting torque and the breakdown torque can usually be assumed to be between two and four times the rated torque. For the load machine this means that the starting and acceleration forces in relation to rated operation give rise to a higher mechanical load on the machine and the conveyed material.



Disadvantages

This results in the following disadvantages

- · A higher load is placed on the machine's mechanical components
- Higher costs for replacing worn parts and maintaining the application

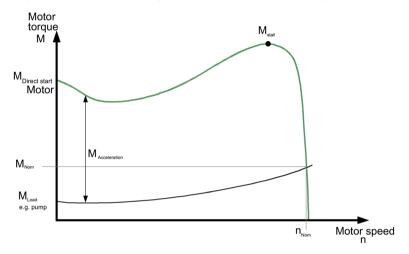


Figure 2-2 Typical starting torque characteristic of a three-phase asynchronous motor

Solution

The SIRIUS 3RW44 electronic soft starter allows the current and torque characteristics during startup to be optimally adapted to the requirements of each application.

2.1.2 Principle of operation of the 3RW44 electronic soft starter

The 3RW44 soft starter features two antiparallel thyristors in each of the phases. There is one thyristor for the positive and one thyristor for the negative half-wave.

The rms value of the motor voltage is increased (from an adjustable starting voltage or starting torque) to the rated motor voltage within a definable starting time by means of the leading-edge phase. This is achieved using various control methods.

The motor current changes in proportion to the voltage applied to the motor. The starting current is thus reduced by the factor of the voltage applied to the motor.

The torque changes in squared proportion to the voltage applied to the motor. The starting torque is thus reduced in squared proportion to the voltage applied to the motor.



Example

SIEMENS 1LG4253AA motor (55 kW)

Rated data at 400 V

P_e: 55 kW l_e: 100 A

I_{direct starting}: approx. 700 A

Me: 355 Nm

Example:

 $M_e = 9,55 \times 55 \text{ kW} \times \frac{1000}{1480 \text{ min}^{-1}}$

n_e: 1480 rpm

M_{direct starting}: approx. 700 Nm

Set starting voltage: 50 % (½ of line voltage)

=> I_{starting} ½ of direct-on-line starting switch-on current (approx. 350 A)

=> M_{starting} ½ of direct-on-line starting torque (approx. 175 Nm)

The diagrams below show the starting current and torque characteristics for a three-phase asynchronous motor in combination with a soft starter:

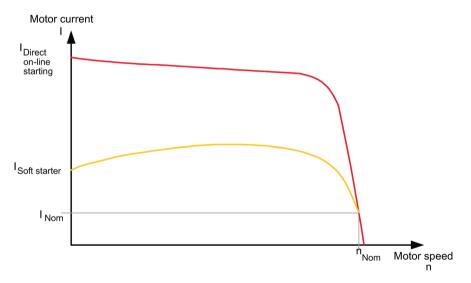


Figure 2-3 Reduced current characteristic of a three-phase asynchronous motor during startup with a SIRIUS 3RW44 soft starter



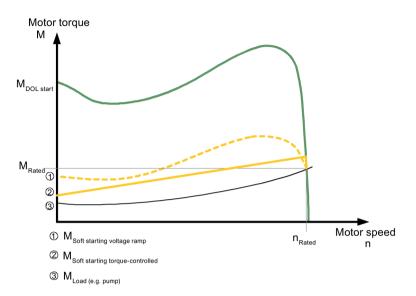


Figure 2-4 Reduced torque characteristic of a three-phase asynchronous motor during startup with a SIRIUS 3RW44 soft starter

Startup

This means that, since the motor voltage is controlled by the electronic soft starter during the startup process, the consumed starting current and the starting torque generated in the motor are also controlled.

The same principle is applied during the stopping process. This way the torque generated in the motor is slowly reduced, thus enabling a smooth ramp-down of the application.

The frequency remains constant during this process and corresponds to the line frequency, in contrast to frequency-controlled startup and stopping of a frequency converter.

Once the motor has started up correctly, the thyristors are fully utilized, meaning that the complete line voltage is applied to the motor terminals. As the motor voltage does not have to be controlled during operation, the thyristors are bridged by integrated bypass contacts. This minimizes the waste heat generated during continuous operation (which is caused by the thyristor's power loss). Therefore the area around the switching devices heats up less.



The diagram below shows the method of operation of the 3RW44 soft starter:

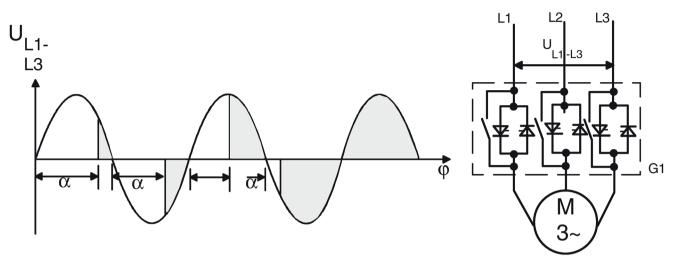


Figure 2-5 Phase angle control and schematic diagram of a soft starter with internal bypass contacts

2.2 Application and use

Applications and selection criteria

3RW44 soft starters can be used as an alternative to star-delta (wye-delta) starters and frequency converters.

Their main benefits are their ability to perform soft starting, soft stops, and uninterrupted changeover without current peaks that put a strain on the system, as well as their compact dimensions.

Many drives that could previously only be operated with frequency converters can be changed over to soft starter operation using the 3RW44 soft starter, provided no speed control, no particularly high starting torque, or startup with close to rated current, is required.



Applications

Typical applications include:

- Conveyor belts
- Roller conveyors
- Compressor
- Ventilators, fans
- Pump
- Hydraulic pumps
- Stirrers
- Centrifuges
- Milling machines
- Mills
- Crushers
- Circular saws/bandsaws
- ...

Advantages

Conveyor belts, conveyor systems:

- Smooth starting
- Smooth braking

Rotary pumps, piston pumps:

- No pressure surges
- Increased service life of the pipe system

Agitators, mixers:

Reduced starting current

Fans:

Reduced stress on gearbox and V belt



2.3 Marginal conditions for storage and operation

Permissible ambient temperature for	
- Storage	-25 °C +80 °C
- Operation	0 °C +60 °C, from 40 °C with derating
	(refer to chapter Technical data (Page 253))
Permissible relative humidity	10 95 %
Permissible maximum installation altitude	5000 m, from 1000 m with derating

NOTICE	
--------	--

Risk of property damage.

Make sure no liquids, dust, or conductive objects can get inside the soft starter.

Configuration instructions

3.1 Configuration

The 3RW44 electronic soft starters are designed for normal starting. In case of heavy starting or increased starting frequency, a larger unit may have to be selected.

For long starting times it is recommended to have a PTC sensor in the motor. This also applies to soft stop, pump stop and DC braking coasting methods because, during the coast-down time in these modes, an additional current loading applies in contrast to coasting down.

The motor feeder between the soft starter and motor must not contain any capacitive elements (such as compensation systems). Active filters must not be operated in combination with soft starters.

All elements of the main circuit (such as fuses and switching devices) should be dimensioned for direct-on-line starting, following the local short-circuit conditions, and must be ordered separately.

The harmonic component load for starting currents must be taken into consideration for the selection of motor starter protectors (selection of trip unit).

3.1.1 RS 232 serial PC interface and Soft Starter ES parameterizing and operating software

The electronic 3RW44 soft starters have a PC interface for communicating with the Soft Starter ES smart software and an operating and monitoring module (display).

3.1.2 Simulation Tool for Soft Starters (STS)

With this software, you can simulate and select all Siemens soft starters, taking into account various parameters such as line conditions, motor and load data, and special application requirements, etc.

The Simulation Tool for Soft Starters (STS) can be downloaded from the Internet (https://support.industry.siemens.com/cs/ww/en/view/101494917).



3.2 Startup class

To achieve the optimum soft starter design, it is important to know and take into account the starting time (startup class) of the application. Long starting times mean a higher thermal load on the thyristors of the soft starter. 3RW44 soft starters are designed for continuous operation under normal starting conditions (CLASS 10), an ambient temperature of 40 °C, and a fixed switching frequency. You will also find these values in chapter Technical data of the power unit (Page 259). If deviations from this data occurs, the starters may need to be overdimensioned.

Selection criteria

Note

You must select the size of your SIRIUS 3RW44 soft starters according to the rated motor current (rated current_{soft starter} ≥ rated motor current).

Note

For the correct dimensioning of soft starters for motors with high starting current ratios (typically $I/I_e \ge 8$), we recommend our Simulation Tool for Soft Starters (STS) or Siemens Technical Assistance: Phone: +49 911 895-5900, e-mail: technical-assistance@siemens.com



3.2.1 Application examples for normal starting (CLASS 10)

Normal starting CLASS 10 (up to 20 s with 350 % In motor)

The soft starter rating can be selected to be as high as the rating of the motor implemented.

Application	Conveyor belts	Roller conveyors	Compressor	Small fans	Pump	Hydraulic pumps
Starting parame	ters	•	·	•		
Voltage ramp and current limiting						
• Starting voltage %	70	60	50	30	30	30
Starting time s	10	10	10	10	10	10
Current limiting value	Deactivated	Deactivated	4 x I _M	4 x I _M	Deactivated	Deactivated
Torque ramp						
Starting torque	60	50	40	20	10	10
End torque	150	150	150	150	150	150
Starting time	10	10	10	10	10	10
Breakaway pulse	Deactivated (0 ms)	Deactivated (0 ms)	Deactivated (0 ms)	Deactivated (0 ms)	Deactivated (0 ms)	Deactivated (0 ms)
Coasting method	Soft stop	Soft stop	Coasting down	Coasting down	Pump stop	Coasting down



3.2.2 Application examples for heavy starting (CLASS 20)

Heavy starting CLASS 20 (up to 40 s with 350 % $I_{\text{n motor}}$)

The soft starter has to be selected one power class higher than that of the implemented motor.

Application	Stirrers	Centrifuges	Milling machines
Starting parameters			
Voltage ramp and current limiting			
Starting voltage %	30	30	30
Starting time s	30	30	30
Current limiting value	4 x I _M	4 x I _M	4 x I _M
Torque ramp			
Starting torque	30	30	30
End torque	150	150	150
Starting time	30	30	30
Breakaway pulse	Deactivated (0 ms)	Deactivated (0 ms)	Deactivated (0 ms)
Coasting method	Coasting down	Coasting down	Coasting down or DC braking



3.2.3 Application examples for very heavy starting (CLASS 30)

Heavy starting CLASS 30 (up to 60 s with 350 % In motor)

The soft starter has to be selected two power classes higher than that of the implemented motor.

Application	Large fans	Mills	Crushers	Circular saws/bandsaws				
Starting parameters	Starting parameters							
Voltage ramp and current limiting								
Starting voltage %	30	50	50	30				
Starting time s	60	60	60	60				
Current limiting value	4 x I _M	4 x I _M	4 x I _M	4 x I _M				
Torque ramp								
Starting torque	20	50	50	20				
End torque	150	150	150	150				
Starting time	60	60	60	60				
Breakaway pulse	Deactivated (0 ms)	80 %; 300 ms	80 %; 300 ms	Deactivated (0 ms)				
Coasting method	Coasting down	Coasting down	Coasting down	Coasting down				

Note

The settings and device dimensions indicated in these tables are examples only; they are merely provided for information purposes and are not binding. Set values depend on the application in question and must be optimized during commissioning.



3.3 ON time and switching frequency

Based on the rated motor current and the startup class, the 3RW44 soft starters are dimensioned for a maximum permissible switching frequency in combination with a relative ON time. See also Chapter Technical data of the power unit (Page 259). A larger soft starter may have to be selected if these values are exceeded.

ON time motor OT

The relative ON time in % is the ratio between the load duration and the cycle duration for loads that are frequently switched on and off.

The ON time OT can be calculated using the following formula:

$$OT = \frac{t_s + t_b}{t_s + t_b + t_p}$$

Explanation of the formula:

OT = ON time [%]

t_s = starting time [s]

t_b = operating time [s]

 $t_p = idle time [s]$

The following diagram illustrates this process.

 


Figure 3-1 ON time motor OT

Switching frequency

The maximum permissible switching frequency must not be exceeded because the devices could be damaged due to thermal overloading.



3.4 Installation altitude and ambient temperature

The permissible installation altitude must not exceed 5000 m above sea level (above 5000 m on request).

If the installation altitude exceeds 1000 m, the rated operational current must be reduced for thermal reasons.

If the installation altitude exceeds 2000 m, the rated voltage must also be reduced owing to the limited dielectric strength. A maximum permissible rated voltage of ≤ 460 V applies at installation altitudes between 2000 m and 5000 m above sea level.

The following diagram shows the reduction in the rated device current as a function of the installation altitude:

The rated operational current I_e must be reduced at altitudes higher than 1000 m above sea level.

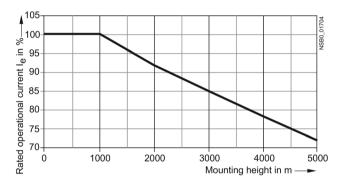


Figure 3-2 Reduction as a function of the installation altitude

Ambient temperature

3RW44 soft starters are designed for operation with rated current at an ambient temperature of 40 °C. If this temperature is exceeded, e.g. owing to an impermissible temperature rise in the control cabinet, other loads, or a general increase in the ambient temperature, the resulting deterioration in the soft starter's performance must be taken into account when the device is dimensioned (refer to chapter Technical data of the power unit (Page 259)).



3.5 Factory settings

Reset to the factory settings (default)

- if parameter settings are incorrect
- if continued use is to be made of already parameterized SIRIUS 3RW44 soft starters in other systems.

Note

Otherwise, drives could break away in certain circumstances due to existing parameter assignments.

Soft starters already parameterized by users can be reset to the factory settings without the need for additional tools.

For details of how to reset a soft starter to the factory settings, see "Restoring the delivery condition (factory settings)" in chapter Saving options (Page 102).



3.6 Article number system for SIRIUS 3RW44 soft starters

3RW4*	4*	22	-	6	B*	C*	4	4
ı	=	Ш		IV	٧	VI	VII	VIII

^{*} Fields are not configurable

<u> </u>	* Fields are not configurable						
1	Identifier of the basic unit						
	AC semiconductor motor control device (soft starter)						
П	Device version: 4 High-End soft starter						
Ш	II Rated operational power P _e (at U _e 400 V)						
Rated operational current I _e (for utilization category AC-53a) (at 40°C ambient temper							ature)
		Pe	l e		Pe	l e	
	22	15 kW	29 A		45	160 kW	313 A
	23	18.5 kW	36 A		46	200 kW	356 A
	24	22 kW	47 A		47	250 kW	432 A
	25	30 kW	57 A		53	315 kW	551 A
	26	37 kW	77 A		54	355 kW	615 A
	27	45 kW	93 A		55	400 kW	693 A
	34	55 kW	113 A		56	450 kW	780 A
	35	75 kW	134 A		57	500 kW	880 A
	36	90 kW	162 A		58	560 kW	970 A
	43	110 kW	203 A		65	630 kW	1076 A
44		132 kW	250 A		66	710 kW	1214 A

IV	Type of connection				
	1	Standard screwed connection (main/auxiliary conductor connection) (for units ≤ 3RW4427)			
	2	Main conductors: busbar connection/auxiliary conductors: Spring-loaded terminal (for units > 3RW4427)			
	3 Main conductors: screwed connection/auxiliary conductors: Spring-loaded termin (for units ≤ 3RW4427)				
	6 Main conductors: busbar connection/auxiliary conductors: Screw terminal (for units > 3RW4427)				
٧	Special function				
	В	With bypass			
VI	Number of controlled phases				
	C All 3 phases controlled				
VII	Rated control supply voltage U _s :				
	3	115 V AC			
	4	230 V AC			
VIII	Rated control supply voltage U _e :				
	4	200 to 460 V			
	5	400 to 600 V			
	6	400 to 690 V			



Installation, connection and feeder configuration

4

4.1 Installing the soft starter

4.1.1 Unpacking

NOTICE

Do not lift the device by the cover when unpacking it as this could lead to damage.

4.1.2 Mounting position

The soft starter is mounted vertically on vertical, level surfaces.

 


Figure 4-1 Mounting position



4.1.3 Installation requirements

Degree of protection IP00

3RW44 soft starters conform to IP00 degree of protection.

The devices must be installed in control cabinets with IP54 degree of protection (pollution degree 2), taking account of the ambient conditions.

Make sure no liquids, dust or conductive objects can get inside the soft starter. The soft starter produces waste heat (power loss) while it is operating (refer to chapter General technical data (Page 243)).

NOTICE

Overheating of the switching device

Provide adequate cooling at the place of installation to prevent the switching device from overheating.

Note

Coated circuit boards

All 3RW44 soft starters with a production date G/150206 onwards are equipped as standard with coated printed circuit boards to improve protection of the device against tough ambient conditions such as dust, moisture or other harmful influences.



4.1.4 Mounting dimensions and clearances

The minimum clearances to other devices must be complied with to ensure unobstructed cooling as well as the free supply and discharge of air to and from the heat sink.

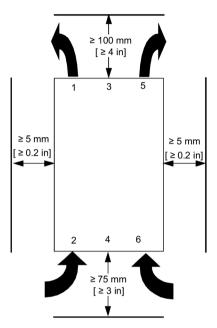


Figure 4-2 Clearance to other devices

NOTICE

Allow sufficient clearances for the cooling air to circulate freely. The device is ventilated from bottom to top.



4.2 Design of the feeder

4.2.1 General information



Automatic restart

Can result in death, serious injury, or property damage.

The automatic reset mode must not be used in applications where there is a risk of serious injury to persons or substantial damage to property if the motor starts up again unexpectedly.

The start command (e.g. issued by the PLC) must be reset prior to issuing a reset command, because the motor attempts to restart again automatically if a start command is still active following this reset command. This particularly applies if the motor protection has tripped. For safety reasons, you are advised to integrate the group fault output (terminals 95 and 96) in the controller.

General information

A motor feeder comprises at least a disconnector, a contact element, and a motor.

Line protection against short-circuits must be implemented, together with overload protection for the line and motor.

Disconnector

The isolating function with line protection against overload and short-circuits can be achieved with a motor starter protector or a fuse disconnector, for instance.

(For details of fuse and circuit breaker assignment, refer to chapter Feeder component layout (standard circuit) (Page 270) and chapter Feeder component layout (inside-delta circuit) (Page 275).



Contact element

The 3RW44 soft starter performs the functions of the contact element and motor protection.



Hazardous voltage.

Danger to life or risk of serious injury.

If line voltage is present at the input terminals of the soft starter, hazardous voltage may still be present at the soft starter output even if a start command has not been issued. This voltage must be isolated by means of a disconnector (open isolating distance, e.g. with an open switch disconnector) whenever work is carried out on the feeder.

4.2.2 Soft starters in standard circuits

The SIRIUS 3RW44 soft starter is connected into the motor feeder between the disconnector or motor starter protector and the motor.

The 3RW44 soft starter automatically detects the type of connection of the soft starter, meaning that this does not have to be explicitly set on the device. The detected connection type can be read on the starter in the "Status display/Type of connection" menu item. In this case, the display reads "Star/delta". If the circuitry is faulty or the motor is not connected, the display shows "Unknown".



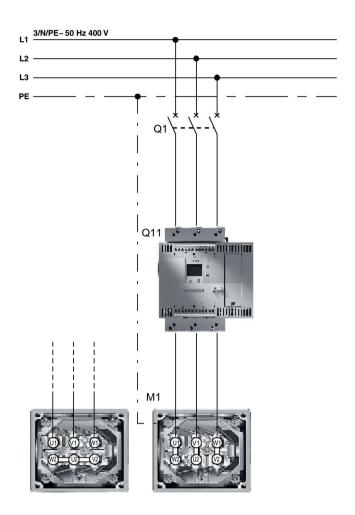


Figure 4-3 Block diagram of 3RW44 soft starters in standard circuits

NOTICE

Error message due to delayed switching of the contactor

If a main or line contactor is connected between the soft starter and the motor or in the return line between the motor and the soft starter, steps must be taken to ensure that this contactor is connected within 100 ms of activation of the start command for the 3RW44.

If the contactor is not connected within 100 ms of activation of the start command for the 3RW44, the soft starter no longer recognizes the current circuit variant (standard circuit or inside-delta circuit). A "Missing load phase 1-3" error message is generated.



4.2.3 Soft starters in inside-delta circuits

Requirements

A motor whose windings can be connected in a delta circuit where a line voltage prevails.

Example

Line voltage: 400 V
Rated motor current: 40.5 A
Current via soft starter in inside-delta circuit: approx. 24 A
Selected soft starter in inside-delta circuit: 3RW44 22

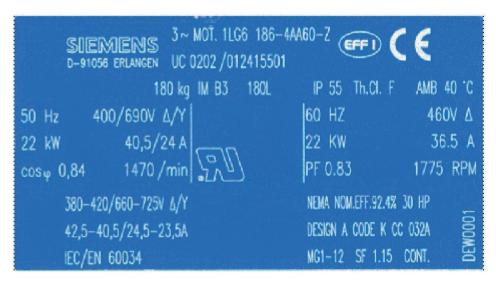


Figure 4-4 Nameplate of a 22 kW motor

The SIRIUS 3RW44 soft starter can be dimensioned to match the current flowing in the motor section (58 % of the conductor current) by connecting it to the delta winding of the motor. This requires at least 6 motor lines.



The 3RW44 soft starter automatically detects how it is connected, meaning that the connection type does not have to be explicitly set on the device. The detected connection type can be read on the starter in the "Status display/Type of connection" menu item. In this case, the display reads "Inside-delta circuit". If the circuitry is faulty or the motor is not connected, the display shows "Unknown".

NOTICE

The rated motor current given on the nameplate must always be set in the quick start menu or in the motor adjustment menu item. This setting is independent of the soft starter's type of connection.


Value to be set in the above example for a line voltage of 400 V, e.g. 40.5 A.


NOTICE

The DC braking and combined braking device functions are no longer available for insidedelta circuits.

To ensure proper functioning of the soft starter, the electrical connection of the main voltage (line and motor side) must be made according to the given circuit examples (see chapter Connection examples for main and control circuits (Page 216)).



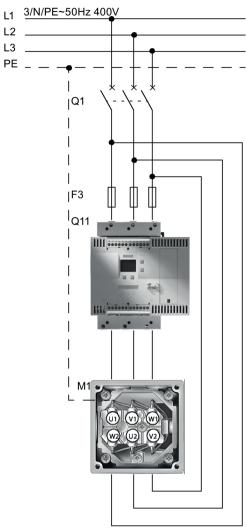

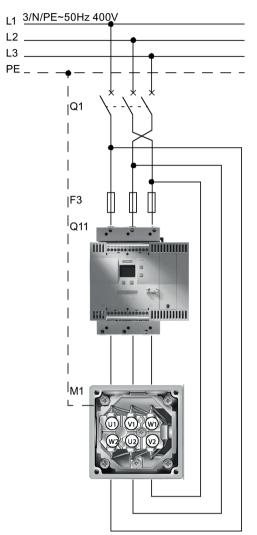

Motor rotation in line phase direction

Motor rotation contrary to the line phase direction

Figure 4-5 Block diagram of 3RW44 soft starters in inside-delta circuits

NOTICE

Error message due to delayed switching of the contactor

If a main or line contactor is connected between the soft starter and the motor or in the return line between the motor and the soft starter, steps must be taken to ensure that this contactor is connected within 100 ms of activation of the start command for the 3RW44.

If the contactor is not connected within 100 ms of activation of the start command for the 3RW44, the soft starter no longer recognizes the current circuit variant (standard circuit or inside-delta circuit). A "Missing load phase 1-3" error message is generated.



4.2.4 Soft starter with contactor disconnector (main contactor)

If electrical isolation is specified, you can install a motor contactor between the soft starter and the motor starter protector or you can use a fault output relay. (For contactor assignments, refer to chapter Technical data (Page 253).

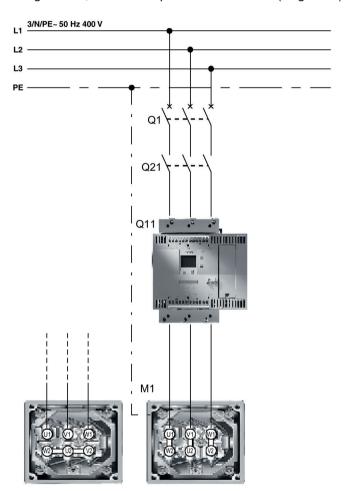


Figure 4-6 Block diagram of a feeder with an optional main contactor / contactor disconnector

NOTICE

Error message due to delayed switching of the contactor

If a main or line contactor is connected between the soft starter and the motor or in the return line between the motor and the soft starter, steps must be taken to ensure that this contactor is connected within 100 ms of activation of the start command for the 3RW44.

If the contactor is not connected within 100 ms of activation of the start command for the 3RW44, the soft starter no longer recognizes the current circuit variant (standard circuit or inside-delta circuit). A "Missing load phase 1-3" error message is generated.



NOTICE

In the case of 3RW44 product version *E08* (FWV 1.9.0) the simultaneous and/or premature switch-off of the main contactor and removal of the ON command at the soft starter may lead to direct-on-line starting behavior of the motor when restarting. Include a tripping delay of 1 s for the main contactor or control the main contactor via an output with parameterized "ON time" function as described in chapter 3RW44 in a standard circuit with line contactor and control via PLC (Page 218).



4.3 Protection of the soft starter against short-circuits (type of assignment 2)

The soft starter has internal protection to prevent overloading of the thyristors. This internal thyristor protection function is not sufficient in the event of a defect in the motor windings or a short-circuit in the motor's power supply cable, for example. Special semiconductor fuses, e.g. SITOR fuses from SIEMENS, must be used for this purpose.

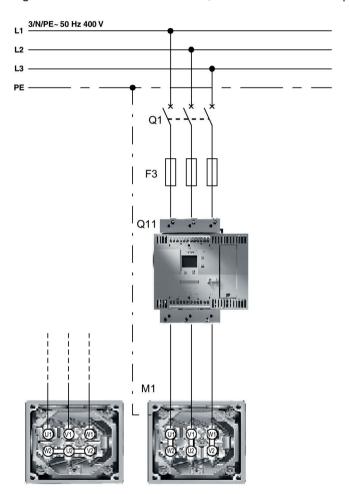


Figure 4-7 Block diagram of a feeder with semiconductor fuses



Note

There are two possibilities of protecting against a short-circuit:

Protecting against short-circuits in accordance with type of coordination 1:

the device may be defective after a short-circuit and must be replaced. Chapter Feeder component layout (standard circuit) (Page 270) contains details of fuses/circuit breakers for short-circuit protection in accordance with type of coordination 1.

Protecting against short-circuits in accordance with type of coordination 2:

the device is not damaged by a short-circuit. Type of coordination 2 is recommended for high plant availability. The soft starter has internal protection to prevent overloading of the thyristors during normal operation. This internal thyristor protection function is not sufficient, however, in the event of a defect in the motor windings or a short-circuit in the motor's power supply cable, for example. Special semiconductor fuses, e.g. SITOR fuses from SIEMENS, must be used for this purpose.

NOTICE

Risk of property damage

Type of coordination 1 in accordance with IEC 60947-4-1: The device is defective following a short-circuit failure and therefore unsuitable for further use (personnel and equipment must not be put at risk). Type of coordination 2 in accordance with IEC 60947-4-1: The device is suitable for further use following a short-circuit failure (personnel and equipment must not be put at risk). The type of coordination only refers to soft starters in conjunction with the stipulated protective device (motor starter protector/fuse), not to additional components in the feeder.

4.4 Capacitors for improving the power factor

NOTICE

Capacitors must not be connected to the output terminals of the soft starter. If so, the soft starter will be damaged.

Active filters, e.g. for power factor correction, must not be operated parallel to the motor control device.

If capacitors are to be used to correct the power factor, they must be connected on the device's line side. If a contactor disconnector or main contactor are used together with the electronic soft starter, the capacitors must be disconnected from the soft starter when the contactor is open.



4.5 Generator operation with three-phase asynchronous motor

The 3RW44 soft starters are suitable for generator operation.

NOTICE

Depending on the operating speed, connect the generator to the system while in the subsynchronous (motor) range and slowly move the machine into the supersynchronous range. Connecting the generator directly in the supersynchronous range may cause soft starter faults.

4.6 Electrical connection

4.6.1 Control and auxiliary circuit connection

The SIRIUS 3RW44 soft starter is supplied with two different connection systems:

- Screw connections
- Spring-loaded connections

Two control voltage versions are available:

- 115 V AC
- 230 V AC

4.6.2 Main circuit connection

All soft starters have busbar connections for the main circuit connection.

Size 3RW44 2.

An additional box terminal for direct cable connection is supplied as standard with size 3RW44 2.



Sizes 3RW44 3. and 3RW44 4.

For size 3RW44 3. and 3RW44 4. devices, it is possible to retrofit box terminals as optional accessories (see chapter Accessories (Page 277)).

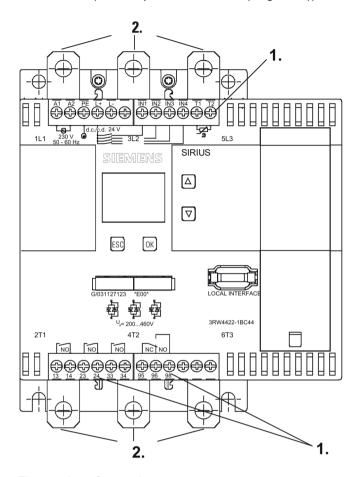


Figure 4-8 Connections

1.	A1, A2, PE, L+, L-, IN1, IN2, IN3, IN4, T1, T2, 13, 14, 23, 24, 33, 34, 95, 96, 98:
	Control/auxiliary circuit
2.	L1/L2/L3
	Main circuit infeed
3.	T1/T2/T3
	Main circuit outgoing feeder load

Figure 3-8: Connections

NOTICE It is not permitted to connect the 3-phase line infeed to terminals T1/T2/T3.



4.6.3 Conductor cross-sections

A1, A2, PE, L+, L-, IN1, IN2, IN3, IN4, T1, T2, 13, 14, 23, 24, 33, 34, 95, 96, 98						
	3RW441	3RW442				
	3RW446	3RW443				
	0.81.2 Nm 7 to 10.3 lb.in	-				
Ø 56 mm/PZ2						
10	1 x 0.54.0 mm ² 2 x 0.52.5 mm ²	2 x 0.251.5 mm ²				
10	2 x 0.51.5 mm ² 1 x 0.52.5 mm ²	2 x 0.251.5 mm ²				
10	-	2 x 0.251.5 mm ²				
AWG	2 x 2014	2 x 2416				



14 10 10 74 70 70								
3RW44 2		L1, L2, L3;		3RW44 4		3RW44 5 / 3RW44 6		
min 22	46 Nm 3653 lb.in	M8x25	1014 Nm 89124 lb.in	M10x30	1424 Nm	M12x40	I .	
	2 x 1070 mm ² 2 x AWG 71/0		2 x 25120 mm ² 2 x AWG 4250 kcmil		2 x 70240 mm ² 2 x AWG 2/0500 kcmil		2 x 70240 mm ² 2 x AWG 2/0500 kcmil	
	2 x 1050 mm ² 2 x AWG 71/0		2 x 1695 mm ² 2 x AWG 63/0		2 x 50240 mm ² 2 x AWG 2/0500 kcmil		2 x 50240 mm ² 2 x AWG 2/0500 kcmil	
	min. 2 x 3 x 0.8 max. 10 x 15.5 0.8	₽	b ≤ 17 mm	₽	b ≤ 25 mm	<u> </u>	b ≤ 60 mm	
17	2 x 2.516 mm ²							
17	2 x 2.535 mm ² 1 x 2.550 mm ²							
17	2 x 1050 mm ² 1 x 1070 mm ² 2 x AWG 101/0 1 x AWG 102/0							




Display, controls and device interfaces

5.1 Display and controls

Graphic display

There is a graphic display on the front of the device from which the functions and states of the soft starter can be read in plain text and with the help of symbols when control voltage is applied.

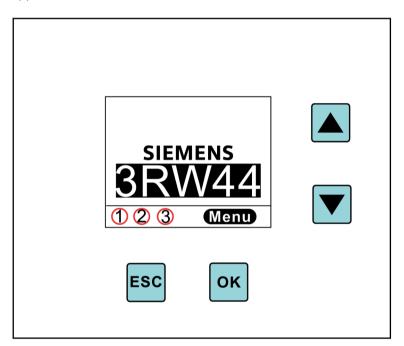

	ator panel that currently and is thus issuing the for the motor.	② Indicates the	user level setting	③ Indicates the current motor status		
;	Display with keys	£	Customer read only	⊠•	No motor	
	Serial interface	-	Customer write	7	Startup	
=	Control inputs			-	Motor is running	
***	PLC via PROFIBUS/ PROFINET			_	Run down	
믺	PC via bus				Motor ready to start	
?	No control device					



Operator controls

There are four keys for operating and adjusting the soft starter:



The current function, depending on the menu item, is shown as text on the display above this key (e.g. select menu, change value or save settings).





The current function, depending on the menu item, is shown as text on the display above this key (e.g. select menu, change value or save settings).



The ESC key is used to quit the current menu item and to jump back to the higher-level menu item.

5.2 Device interfaces

5.2.1 Local device interface

A local device interface on the front side of the starter is provided as standard. This interface can be used to connect either an optional external operating and display module, or the "Soft Starter ES" operating, monitoring and parameterizing software (see chapter Accessories (Page 277)) using a PC and a connecting cable.

5.2.2 PROFIBUS/PROFINET interface (optional)

The SIRIUS 3RW44 soft starter can be equipped with an optional PROFIBUS module (only available for products delivered after 04/2006) or with an optional PROFINET module (only available for products delivered after 06/2013). The soft starter can be connected to PROFIBUS/PROFINET, operated and parameterized via the interface. The "Soft Starter ES" operating, monitoring and parameterizing software (see chapter Accessories (Page 277)) can also be connected to this interface using a PC and a connecting cable.

Simultaneous operation of a 3RW44 with a PROFIBUS/PROFINET interface is not possible in networks where one line conductor is grounded.

5.3 External display and control module (optional)

When de-energized, the external display and control module can be connected to the local device interface via a special connecting cable.

After switching on, the SIRIUS 3RW44 soft starter automatically recognizes that the external display and control module has been connected. The 3RW44 display will be inverted and the display and control module's display will be shown normally.

The control keys of the 3RW44 will be inactive, meaning that normal handling is only possible via the external display and control module.

Refer to chapter General technical data (Page 243) for ordering data.



Commissioning


6

6.1 Menu structure, navigation, changing parameters

The 3RW44 functions (parameterization, diagnostics and motor control) can be executed using the four control keys. The menu has various sub-levels, which must be handled in different ways but are self-explanatory.

6.1.1 Menu structure and navigation


Menu structure

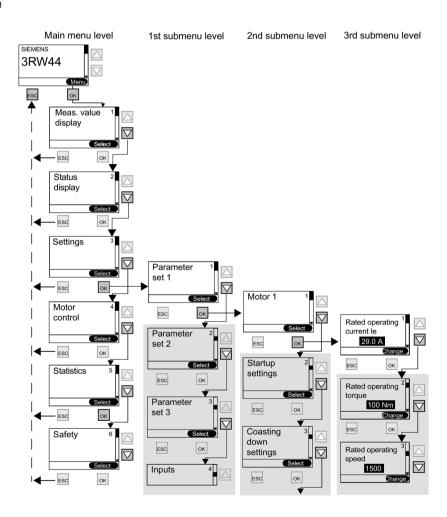



6.1.2 Changing parameters: for example motor data

Changing values, e.g. adjusting motor data

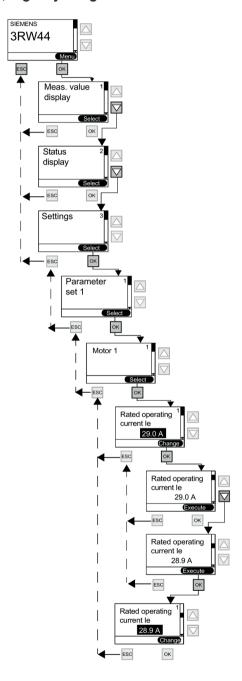



6.2 Switching on for the first time



Before switching the device on for the first time, verify that the main/control side is wired properly. Make sure that the line and control voltages comply with the device-specific requirements (refer to chapter Technical data (Page 253)).

6.2.1 Recommended procedure for commissioning 3RW44

Suggested setting	Startup parameters				Stopping parameters			
	Startup mode: voltage ramp and current limiting (U+ current limiting)				Coasting method	Parameters		
	Starting voltage %	Starting time s	Current limiting value	Breakaway pulse		Coast- down time s	Stopping torque %	
Application								
Conveyor belts	70	10	Deactivated	Deactivated (0 ms)	Torque control	10	10	
Roller conveyors	60	10	Deactivated	Deactivated (0 ms)	Torque control	10	10	
Compressor	50	10	4 x le	Deactivated (0 ms)	Coasting down	Х	Х	
Small fans	30	10	4 x l _e	Deactivated (0 ms)	Coasting down	Х	Х	
Pump	30	10	4 x l _e	Deactivated (0 ms)	Pump stop	10	10	
Hydraulic pumps	30	10	4 x le	Deactivated (0 ms)	Coasting down	Х	Х	
Stirrers	30	30	4 x l _e	Deactivated (0 ms)	Coasting down	Х	Х	
Centrifuges	30	30	4 x l _e	Deactivated (0 ms)	Coasting down	Х	Х	
Milling machines	30	30	4 x l _e	Deactivated (0 ms)	Coasting down	Х	X	
Large fans	30	60	4 x l _e	Deactivated (0 ms)	Coasting down	Х	Х	
Mills	50	60	4 x l _e	80 %/300 ms	Coasting down	Х	Х	
Crushers	50	60	4 x l _e	80 %/300 ms	Coasting down	Х	Х	
Circular saws/band saws	30	60	4 x I _e	Deactivated (0 ms)	Coasting down	Х	Х	


Note

This table provides example settings. They are intended for information purposes only and are not binding. Set values depend on the application in question and must be optimized during commissioning.




6.2.2 Quick start menu, when switching on for the first time

Quick commissioning of the soft starter

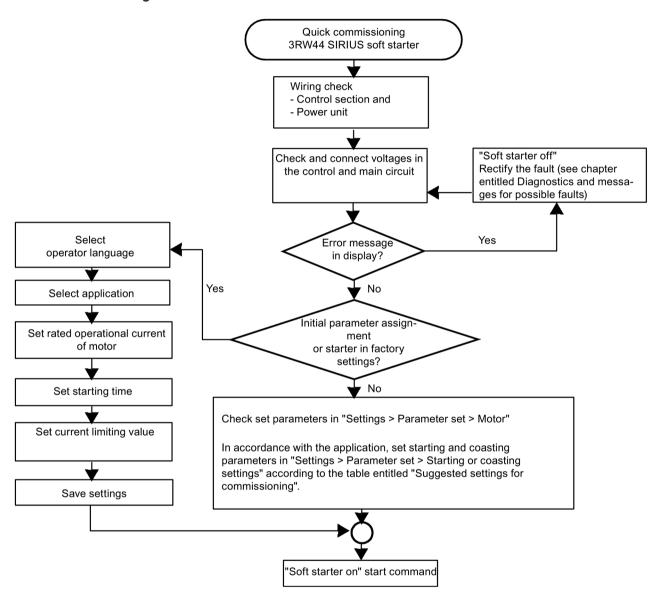




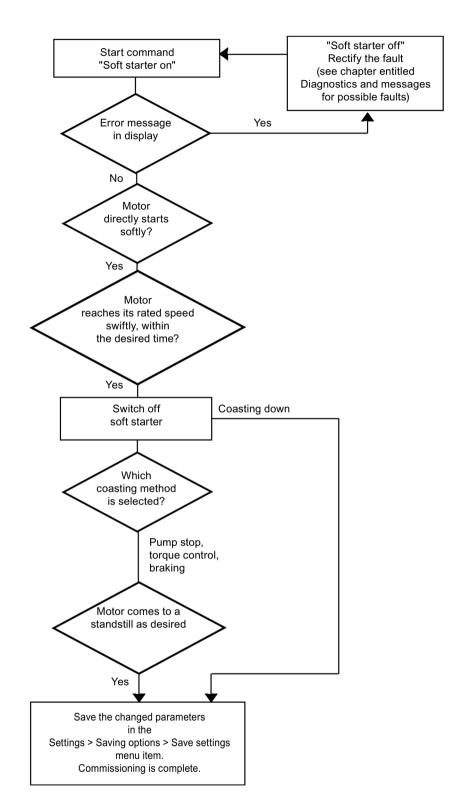




6.2.3 Problems that can occur

The motor does not directly start smoothly

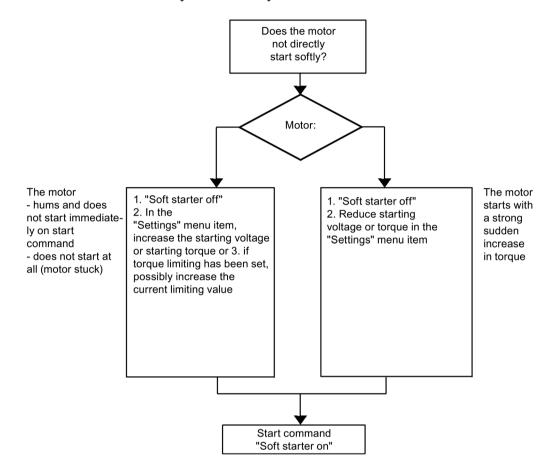



The motor does not swiftly reach its nominal rotational speed in the desired time

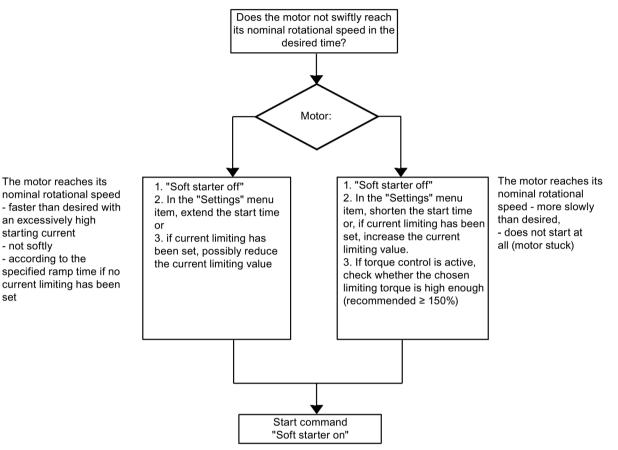

The motor reaches its

an excessively high


starting current

- according to the

- not softly



The motor does not reach zero speed as desired

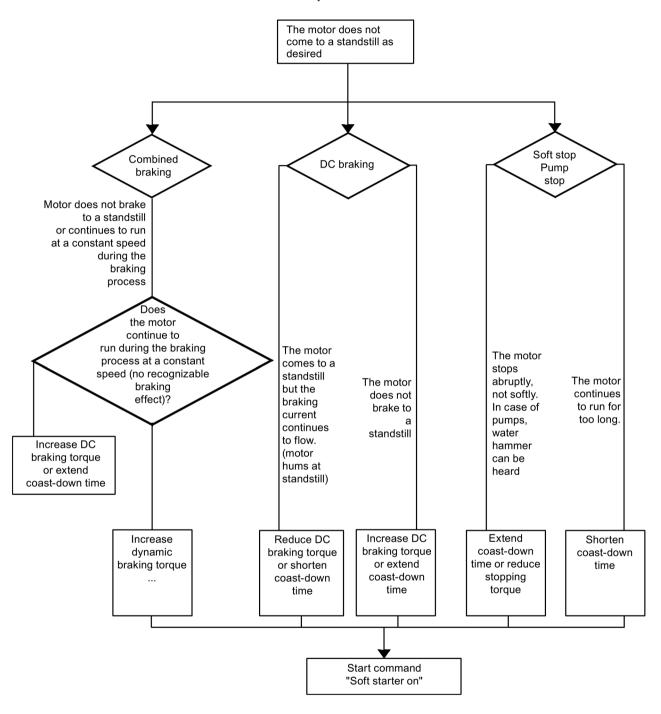



6.2.4 Quick Start menu

Note

After applying the control supply voltage for the first time, you will automatically be in the quick start menu, which you must go through once to commission the soft starter for the first time.

In the quick start menu, you need to enter the information needed to preset the most important parameters of the soft starter for your application. Starting parameters for typical types of applications are stored in the device parameters.

To achieve optimum motor starting, these parameters may need to be optimized on the basis of the connected load using the "Settings" menu item, as described in chapter Specifying the startup mode (Page 63).


If your particular load is not listed, select any load and optimize the defined parameters, if necessary, using the "Settings" menu item as described in chapter Specifying the startup mode (Page 63). The values of the basic factory settings of the parameters, and the predefined assignment of the control inputs and outputs, are listed in chapter Technical data (Page 253).

Note

If you confirm the last item "Save settings - execute?" by entering "Yes" in the quick start menu, you can only return to this menu by resetting the device to its basic factory settings (refer to "Restoring the factory settings" in chapter Saving options (Page 102)). This overwrites all settings made up to that point.



Quick Start menu

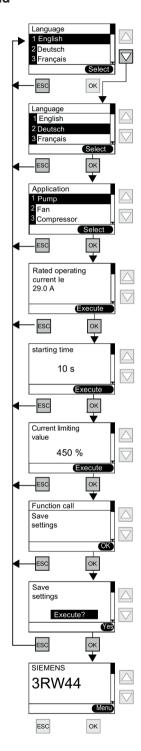



6.3 User-specific commissioning

If values are required that differ from the defined parameters in the Quick Start menu or in the factory settings of the 3RW44, please proceed as follows:

Under the "Settings" menu item, select (refer to chapter Settings main menu item (Page 59)).

- 1. Selecting the parameter set
- 2. Set motor data
- 3. Set startup mode and parameters
- 4. Set coasting method and parameters
- 5. Set inputs and outputs
- 6. Check motor protection settings
- 7. Saving settings


NOTICE

The setting is buffered in a Flash EPROM memory as soon as you change a setting in the menu and execute it using the "OK" button. It is then active in the soft starter as from this moment onwards. When the control supply voltage is switched off, this value will be canceled and the previous value restored. To permanently save the settings made in the soft starter, you must save the data as described in chapter Settings main menu item (Page 59) and chapter Saving options (Page 102).



6.3.1 Settings main menu item

Settings main menu item

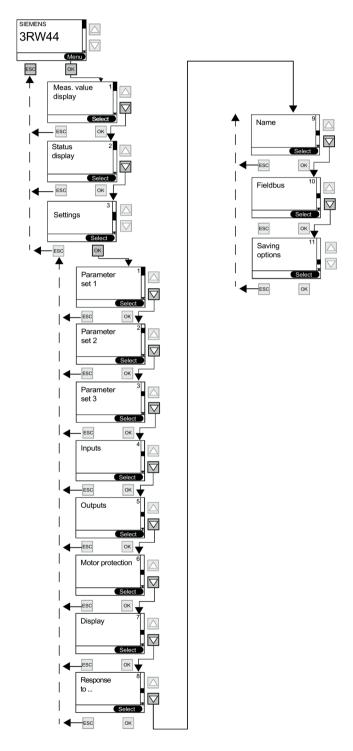




6.4 Making settings in the selected parameter set

6.4.1 Selecting the parameter set


Selecting the parameter set

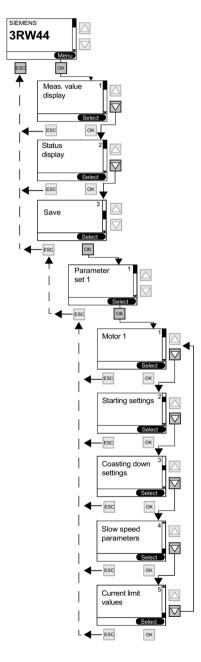



6.4.2 Entering the motor data

Entering the motor data and nameplate

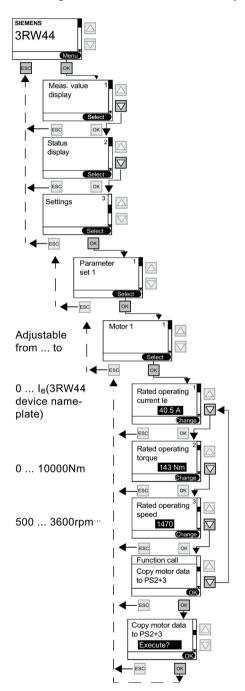





Rated operational current le

Note

Always set the rated operating current of the motor stated on the motor nameplate based on the prevailing line voltage. This setting is independent of the type of connection of the soft starter (soft starter in standard or inside-delta circuit). Value to be set in the above example for a line voltage of 400 V, e.g. 40.5 A.

The motor current of the connected drive should be set to ensure proper functioning of the soft starter during starting and stopping, as well as with regard to motor protection.

Rated torque

If the motor's rated torque is not indicated on the nameplate, it can be calculated using the following formula:

$$M = 9.55 \times P \times \frac{1000}{n}$$

Example

$$9.55 \times 22 \text{ kW} \times \frac{1000}{1470 \text{ min}^{-1}} = 143 \text{ Nm}$$

If no value is specified, the value of the basic factory setting is active (0 Nm).

When the start command is given and the motor is connected, the soft starter automatically calculates the required value once.


Note

If a motor with rated data (current, speed, torque) that differs from the values already entered is connected to the soft starter (e.g. for testing purposes), this rated data must be adapted to the new motor. If 0 Nm is entered as the rated torque, the value is automatically calculated once by the soft starter.




6.4.3 Specifying the startup mode

Specifying the startup mode

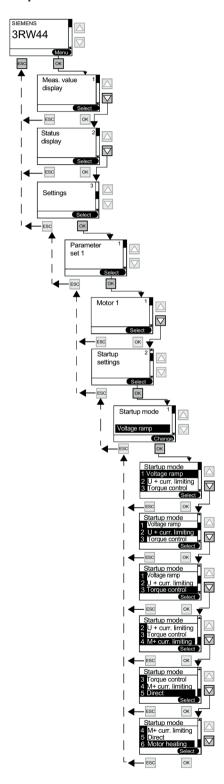




"Voltage ramp" startup mode

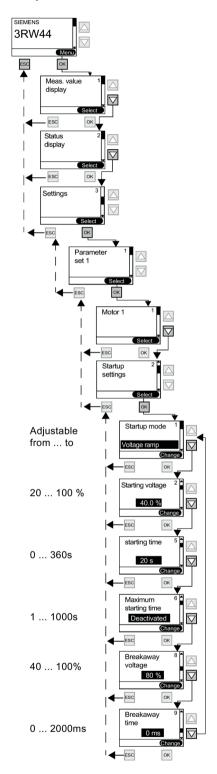




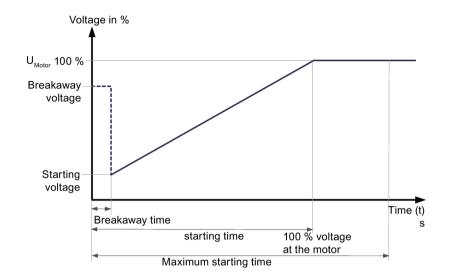





"Voltage ramp with current limiting" startup mode

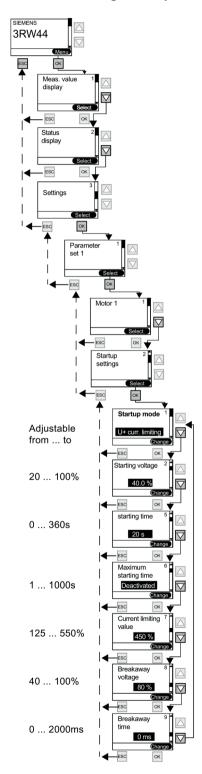




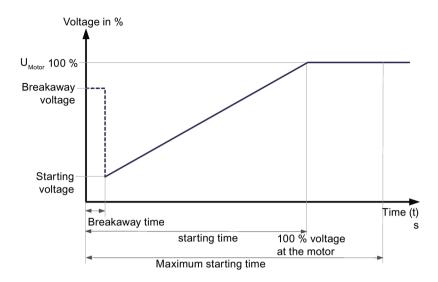

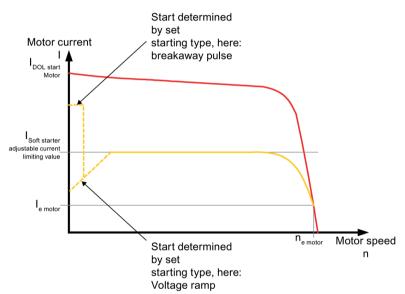




"Torque control" startup mode

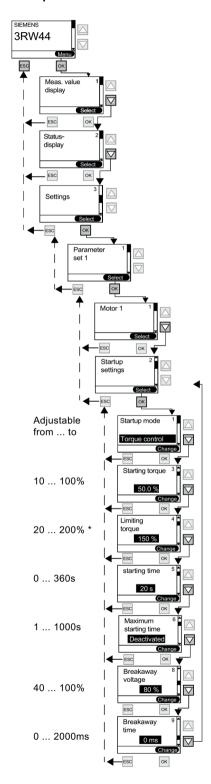



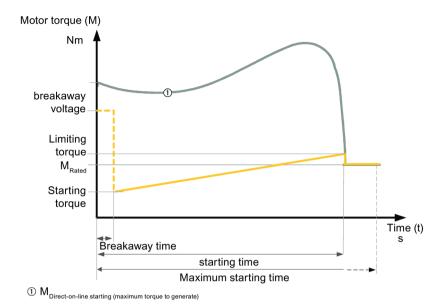


Limiting torque

NOTICE


* The parameter value should be set to approx. 150 % to start the motor. It should be high enough to ensure that the motor does not become stuck during run-up. This ensures that enough acceleration torque is generated throughout the motor run-up phase.




"Torque control with current limiting" startup mode

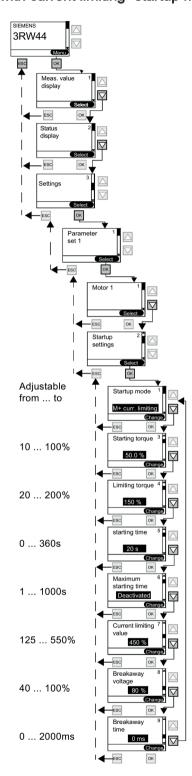



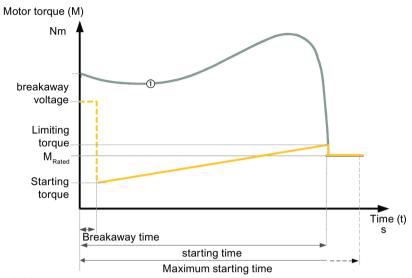


 $\textcircled{1} \ \ \textbf{M}_{\text{Direct-on-line starting (maximum torque to generate)}}$

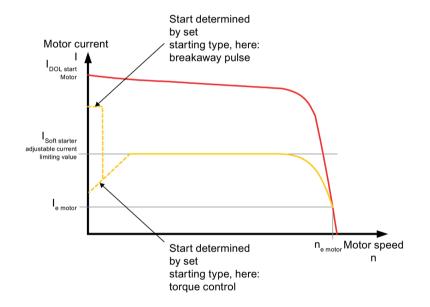





"Direct on-line starting" mode

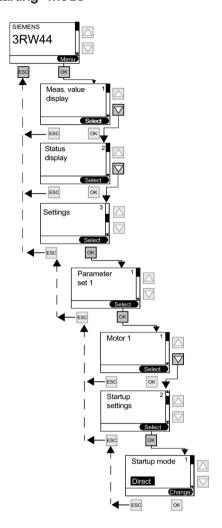




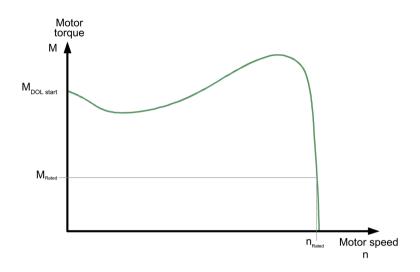

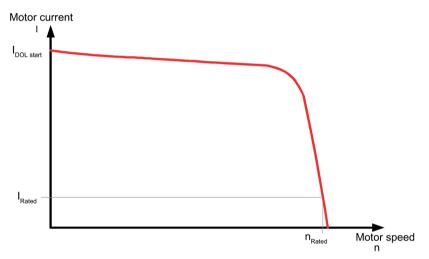



"Motor heating" startup mode

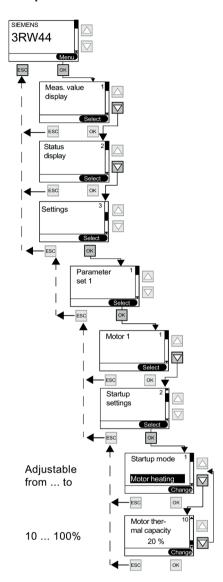

Motor thermal capacity




May lead to damage to property.

The "Motor heating" startup mode is not a continuous operating mode. The motor must be equipped with a temperature sensor (Thermoclick/PTC) to ensure motor protection. The motor model with integrated electronic motor overload protection is not suitable for this kind of operation.




6.4.4 Specifying the coasting method

Specifying the coasting method

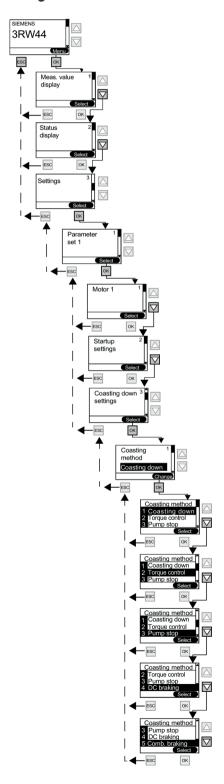




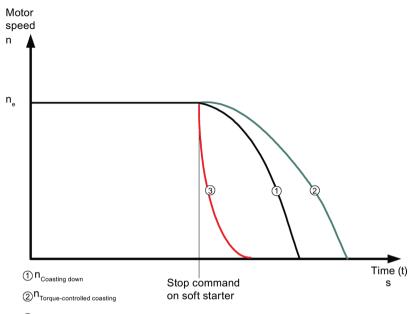




"Coasting down" coasting method

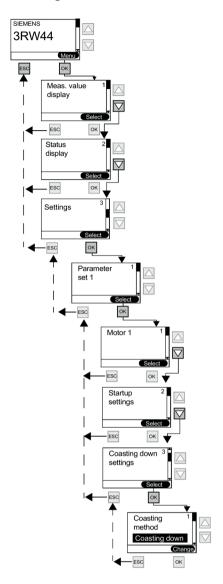




"Torque control" coasting method (soft stop)

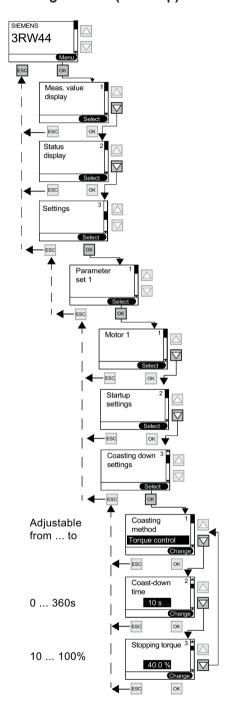




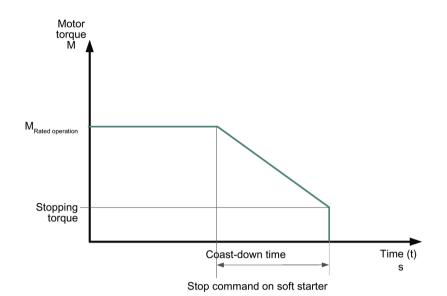




"Pump stop" coasting method

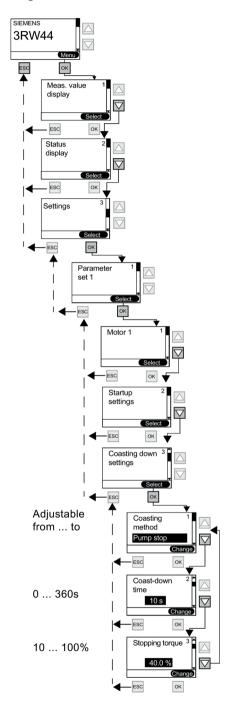




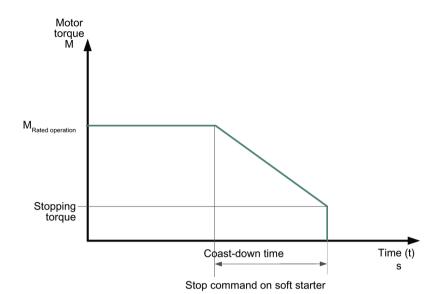




"DC braking" coasting method

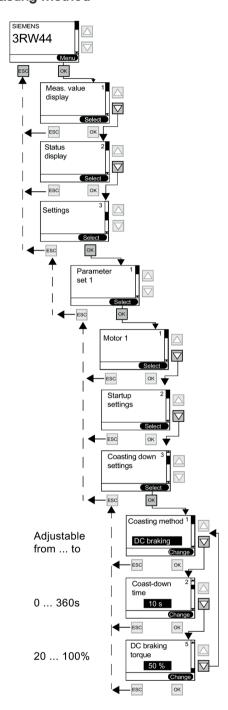



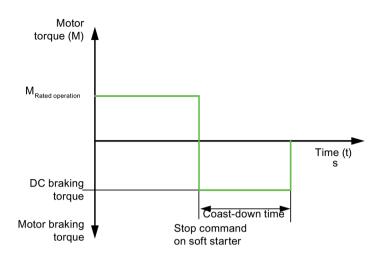

NOTICE


The DC braking/combined braking stopping function is not possible in inside-delta circuits.

Note


If the "DC braking" function is selected, the "DC braking contactor" function must be assigned to one output of the soft starter. This output must be used to control an external braking contactor.



"Combined braking" coasting method

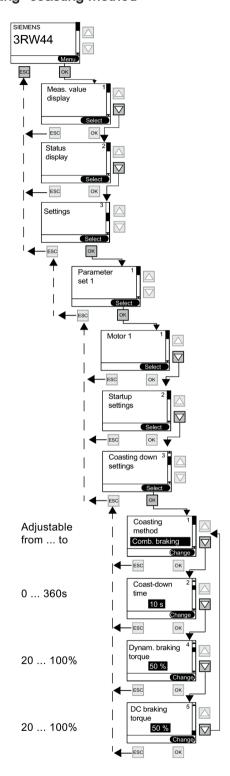



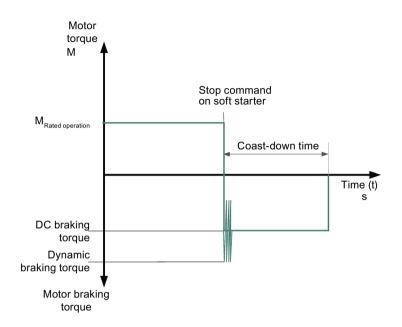


NOTICE

The DC braking/combined braking stopping function is not possible in inside-delta circuits.



6.4.5 Setting slow speed parameters

Setting slow speed parameters

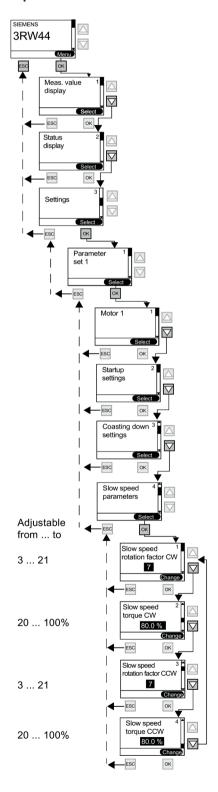



Slow speed parameters

Note

For operation of the motor with the specified slow speed parameters, the "Slow speed" function must be assigned to one control input, and the "Motor CW PS1/2/3" or "Motor CCW PS1/2/3" function must at the same time be assigned to the other. See also Chapter 3RW44 in a standard circuit with soft start/stop and additional slow speed function in both directions of rotation with one parameter set (Page 224).


Directions of rotation:

- Right (CW): rotation in line phase direction
- Left (CCW): rotation opposite to the line phase direction



6.4.6 Specifying current limit values


Specifying current limit values

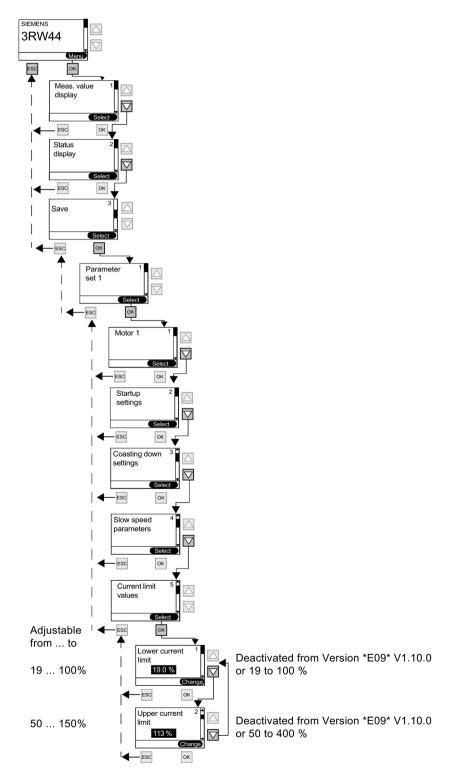



6.4.7 Parameterizing the inputs

Parameterizing the inputs

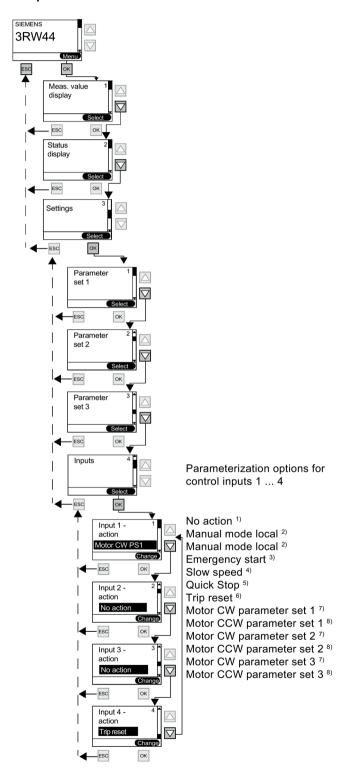



Note

An input action can only be modified when the relevant input is not active.

NOTICE

If the same action is assigned to two different inputs, both of the inputs must also be controlled to carry out the selected function (e.g. to obtain logical "AND" linking for a start command, assign the "Motor CW PS1" function to both inputs 1 and 2. A start command is accepted only if both inputs are active).

NOTICE

If the soft starter is switched off via a motor protection or inherent device protection tripping, the action cannot be acknowledged using the "Trip Reset" function until the displayed cooling time has expired.



Explanation of the possible parameters:

- 1) No action: Input has no function.
- ²⁾ **Manual mode local:** During operation with PROFIBUS/PROFINET, control of the soft starter can be transferred to the inputs by activating input control. The control function via PROFIBUS/PROFINET is deactivated during this time.
- ³⁾ **Emergency start:** Error: current unbalance exceeded, thermal motor model overload, temperature sensor open circuit, temperature sensor short circuit, temperature sensor overload, maximum starting time exceeded, I_e exceeded/undershot, ground fault detected, inadmissible I_e class setting: In the case of these faults, the motor can be started via the emergency start function despite a pending group fault. An emergency start action is assigned to one input, and, for example, "Motor CW > parameter set 1" to another. The emergency start is active as long as the input is activated. It can also be activated during operation.
- ⁴⁾ **Slow speed:** The motor starts with the values set in the "Slow speed parameters" menu item when the "Slow speed" input and the "Motor CW/CCW parameter set 1/2/3" inputs are activated at the same time.
- ⁵⁾ **Quick stop:** If the input is activated, normal tripping with the currently set stopping function is executed (no group fault appears). The quick stop is executed independently of the control priority.
- 6) **Trip reset:** Pending faults can be acknowledged after rectification.
- ⁷⁾ **Motor CW parameter set 1/2/3:** The motor starts (with rotation in line phase direction) and stops with the values stored in the respective parameter set.
- ⁸⁾ **Motor CCW parameter set 1/2/3:** This function is active only when the "Slow speed" parameter is active at the same time. The motor starts with the values stored in the "Slow speed parameters" menu item (with rotation opposite to the line phase direction).


Note

The "Trip Reset" input is edge-controlled. The level change from 0 to 24 V DC is evaluated at the input. All other input functions are evaluated at the already pending 24 V DC level.




6.4.8 Parameterizing the outputs

Parameterizing the outputs

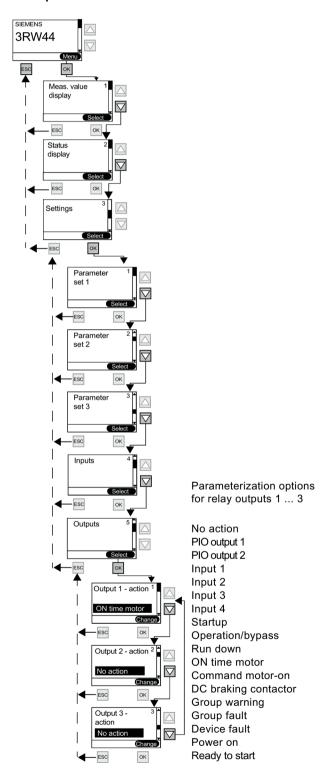



State diagram of the outputs

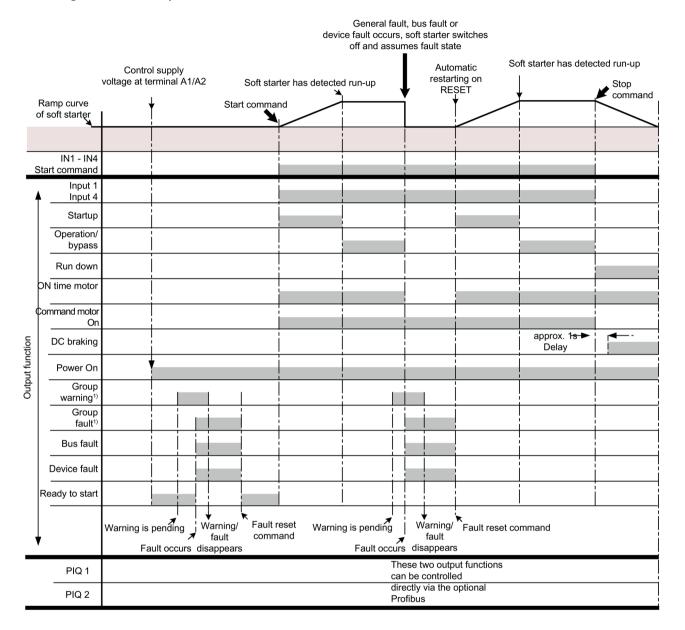

Note

¹⁾ For possible group warnings/group faults, see chapter Warnings and group faults (Page 141).


Note

For switching delay times of the output functions, see chapter Technical data of the control section (Page 264).



6.4.9 Selecting motor protection settings

Selecting motor protection settings

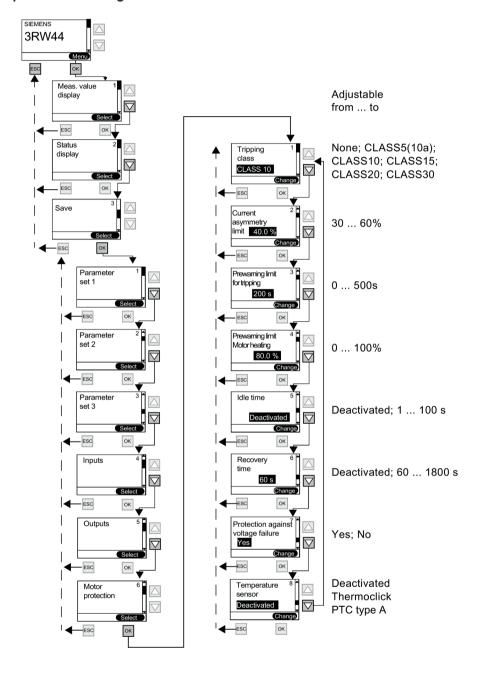



NOTICE

In the case of heavy starting and set values of tripping class ≥ CLASS 20, we recommend setting the "Prewarning limit tripping reserve" parameter value to 0 s (deactivated) and increasing the "Prewarning limit motor heating" parameter to 95 %. Otherwise, a motor protection warning will be issued when starting.

NOTICE

If a CLASS setting other than 5(10a) or 10 is selected, it may be necessary to check and adjust the set values for the rated operating current I_e of the motor (chapter Entering the motor data (Page 61)) in all 3 parameter sets, since otherwise the "Impermissible I_e /CLASS settings" error message may be issued.

For the maximum permissible set value for the rated operating current I_e of the motor based on the CLASS settings, refer to chapter Technical data of the power unit (Page 259).

NOTICE


Use of the 3RW44 to operate motors in hazardous areas:

The 3RW44 does not have ATEX certification. When an ATEX-certified overload relay is used (e.g. 3RB2 from Siemens) that affects an additional switching element (e.g. contactor), the 3RW44 can be installed in series with this overload relay, meaning that the ATEX requirements are met.

NOTICE

The internal motor overload protection of the SIRIUS 3RW44 soft starter must be deactivated for this kind of installation! (Set value in the "Motor protection/Tripping class" menu item: "None" and Motor protection/Temperature sensor: "Deactivated")




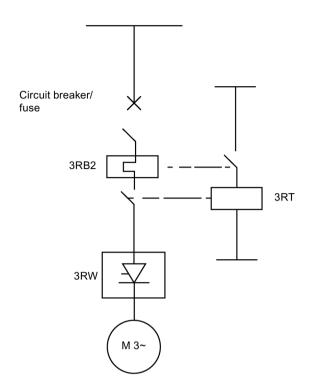



6.4.10 Selecting display settings


Selecting display settings

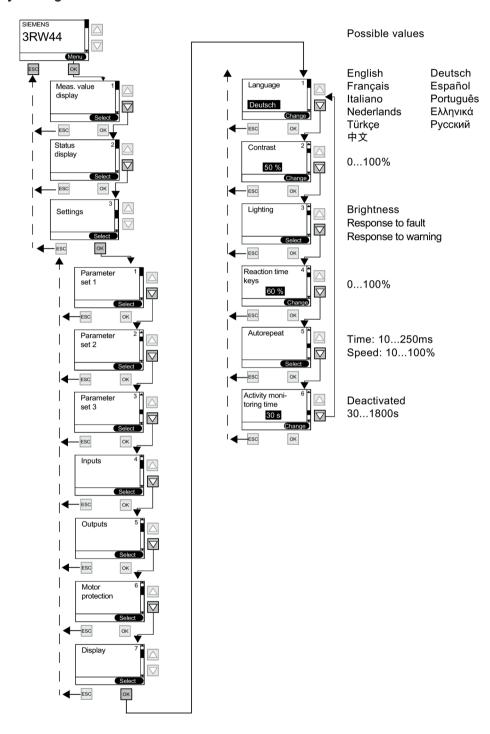



6.4.11 Specifying the behavior of the protective functions

Specifying the behavior of the protective functions

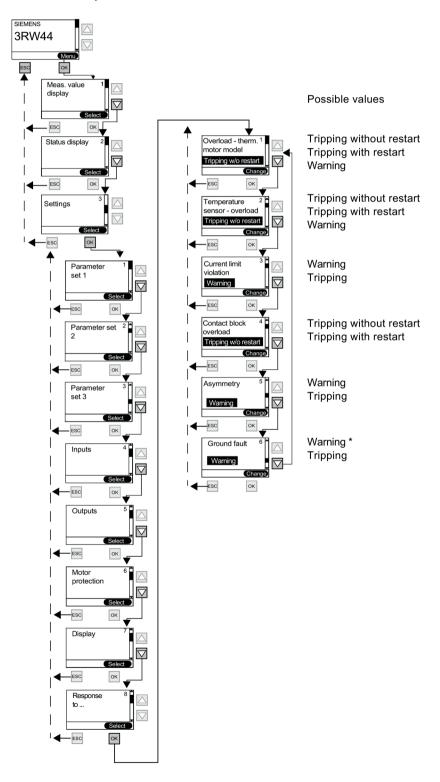




Note

* The ground fault function is only active after completion of run-up, not during startup.



6.4.12 Specifying the names on the device display

Specifying the names on the device display

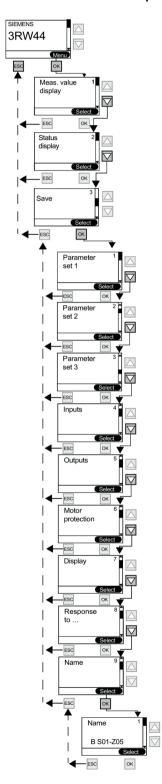




6.4.13 Activating the fieldbus interface (PROFIBUS DP/PROFINET IO)

For activation of the fieldbus interface, see chapter Activating the PROFIBUS DP communication module (fieldbus interface) and setting the station address (Page 156).

PROFIBUS DP is shown in the example:

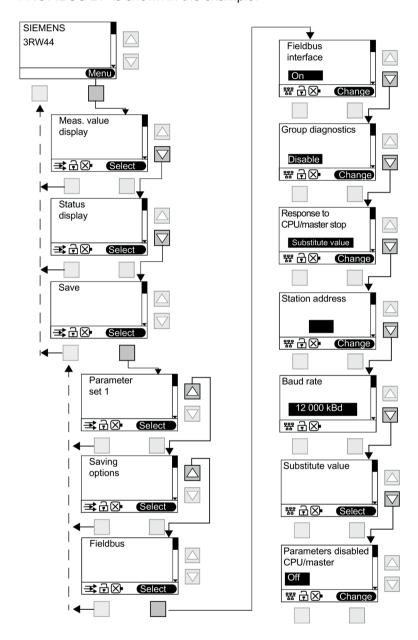


Note

If the "Parameters disabled CPU/Master" parameter is set to "Off" (factory setting), the parameters set on the soft starter will be overwritten with the values stored in the GSD file or in the OM when the bus is started. If this is not desired, the parameter must be set to "On".



6.4.14 Saving options

Specifying the saving options

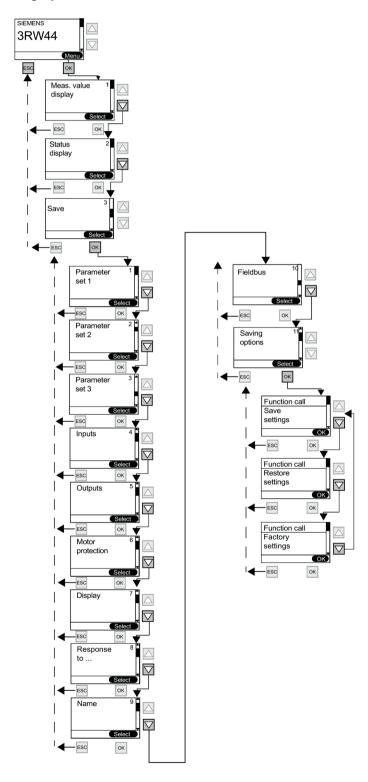




NOTICE

As long as the connected drive is controlled by the soft starter, no parameter changes carried out at the same time can be saved by means of the "Saving options" menu item. This is only possible after the motor has been shut off by the soft starter.




Saving settings

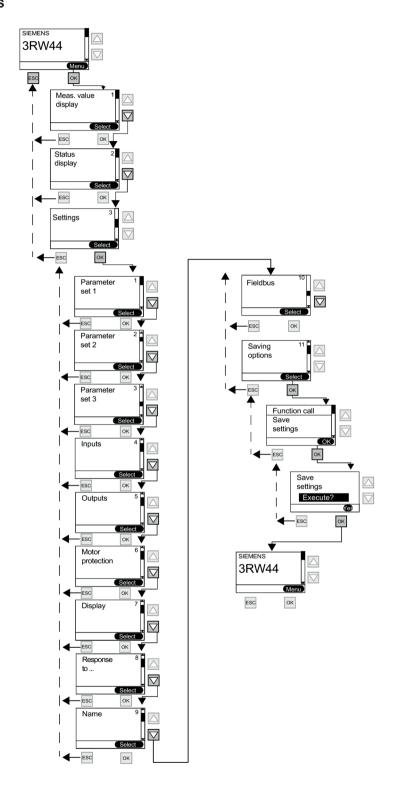



Restoring settings


Selected settings that have not been saved will be discarded and the previously saved settings will be restored.

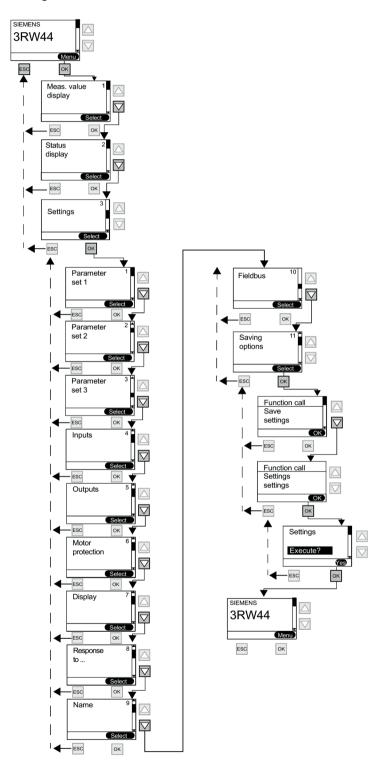



Restoring the factory settings


All settings made or saved so far will be discarded and the device will be reset to the basic factory settings (master reset). The quick start menu must be executed once again.

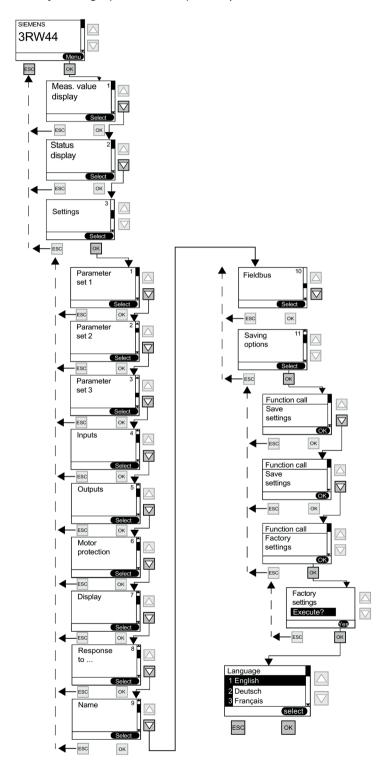



6.5 Other device functions

6.5.1 Measured values display

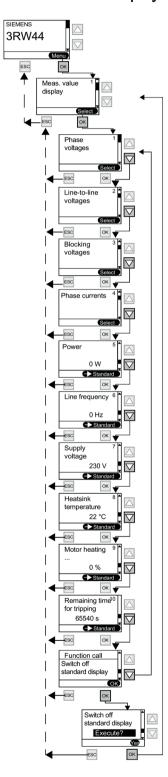



Note

When using the 3RW44 soft starter in an IT system with ground fault monitoring: 3RW44, product version < *E06* and the PROFIBUS DP communication module must not be used in this network configuration. 3RW44 soft starters from product version *E07* onwards can be used in combination with the PROFIBUS DP communication module. However, the phase voltage values (UL-N) and phase-to-phase voltage values (UL-L) may be displayed incorrectly on the measured value display of the 3RW44.

Note

PROFINET communication modules can only be used with a product version of *E12* or later


Note

The "Phase currents" display always shows the currents in the supply cable. This means that, if the soft starter is operated in the "Inside-delta circuit" circuit type, the currents measured internally by the soft starter are extrapolated to the supply cable current (phase current) by a factor of 1.73 and are displayed.

Due to unbalance, the phase currents displayed in the inside-delta circuit may deviate from the currents that are actually running through the supply cables.



6.5.2 Status display

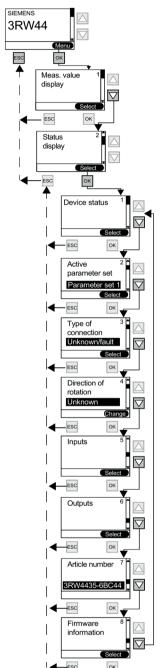

Explanation of the messages:

Unknown/fault: No connected motor detected. Star/delta: Soft starter connected in a standard circuit. Inside-delta: Soft starter connected in an inside-delta circuit.

Unknown: No line phase direction of the main voltage detected at terminals L1-L2-L3.

Right (CW): clockwise line phase direction of the main voltage detected at terminals L1-L2-L3.

Left (CCW): Counter-clockwise line phase direction of the main voltage detected at terminals L1-L2-L3.

Outputs 1 - 3: Function corresponds to parameterization

Output 4: Group fault

Output 5: Internal bypass contactor connected

Output 6: Device fan activated



6.5.3 Motor control (assigning control priority)

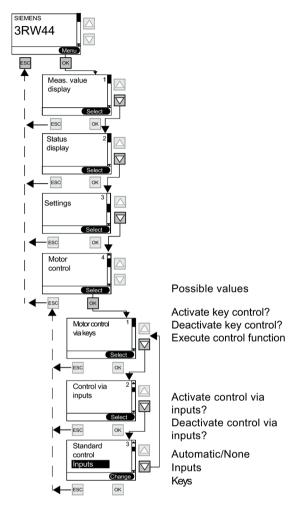


Figure 6-1 Motor control

NOTICE

The "Standard control" menu item specifies which control device should be given control priority when the control supply voltage is applied.

When the PROFIBUS/PROFINET communication module is activated, the setting is changed to "Automatic/None".



Control device priority


Only a higher-priority control device can assume and hand over the control priority (0 = lowest).

- - 0: Automatic operation (input control through PLC via PROFIBUS/PROFINET)
- - 1: PC via PROFIBUS/PROFINET (Soft Starter ES professional software required)
- - 2: Inputs
- - 3: Via display keys
- - 4: PC via serial interface (Soft Starter ES smart software required)



6.5.4 Statistics

Statistics

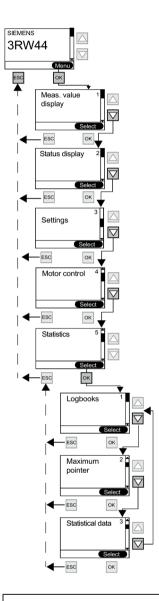


NOTICE

The "Statistics" menu item is available for devices with firmware product version *E04* or higher. The firmware product version is listed on the front of the device below the petrol-colored labeling field. The "Logbooks" sub-item can only be used in combination with "Soft Starter ES" parameterizing and diagnostics software. This menu item will be available in the device display from 04/2006.



Logbooks

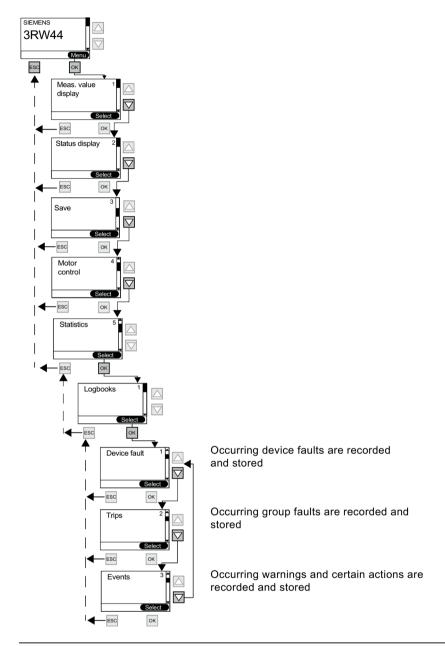

Note


The "Statistics" menu item is available for devices with firmware product version *E04* or higher. The firmware product version is listed on the front of the device below the petrol-colored labeling field. The "Logbooks" sub-item can only be used in combination with "Soft Starter ES" parameterizing and diagnostics software. This menu item will be available in the device display from 04/2006.

Note

Logbooks cannot be deleted while the motor is running.



Maximum pointer (minimum and maximum measured values are stored and displayed)

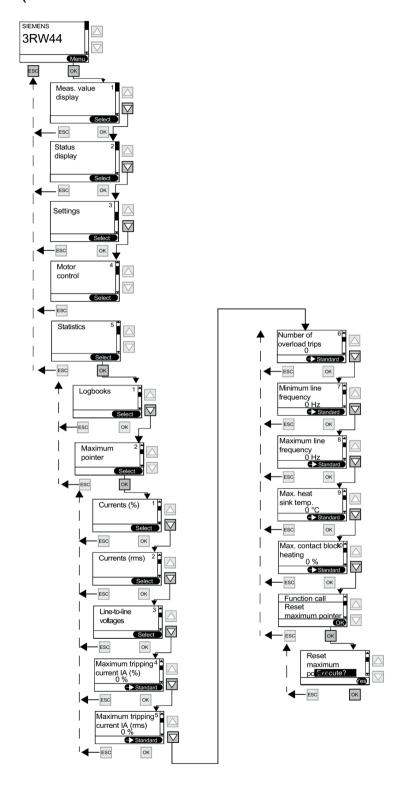




NOTICE

The "Statistics" menu item is available for devices with firmware product version *E04* or higher. The firmware product version is listed on the front of the device below the petrol-colored labeling field. The "Logbooks" sub-item can only be used in combination with "Soft Starter ES" parameterizing and diagnostics software.



Statistical data

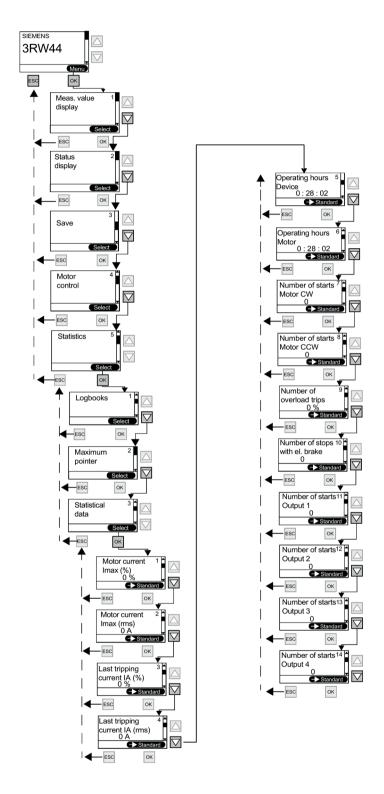



NOTICE

The "Statistics" menu item is available for devices with firmware product version *E04* or higher. The firmware product version is listed on the front of the device below the petrol-colored labeling field. The "Logbooks" sub-item can only be used in combination with "Soft Starter ES" parameterizing and diagnostics software.

Note

Number of starts motor CCW, only possible in combination with slow speed.

Note

Number of stops with el. brake: The value is incremented by 1 when braking has been chosen as the coasting method.

Note


The value is incremented by 1 each time the output is set.


Note

The operating hours counter is activated as soon as control voltage is applied to the soft starter. Maximum value displayed: 99999:59:59 hours



6.5.5 Safety (specifying the user level, parameterization protection)

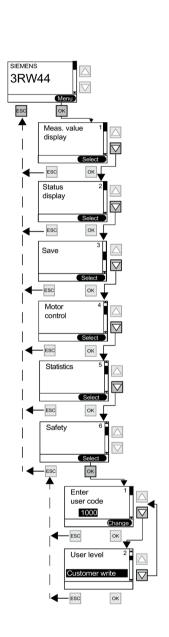

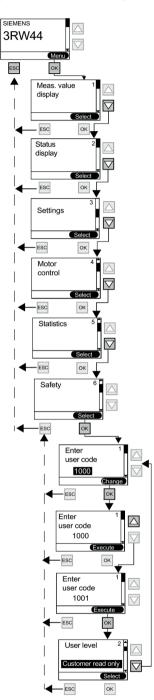



Device functions

7.1 Various parameter sets

7.1.1 Various parameter sets

The soft starter provides three individually adjustable parameter sets. One startup mode and one coasting method can be selectively determined for each parameter set.

Applications

- Starting Dahlander motors (variable-speed drive).
- Starting an application with different load conditions (e.g. empty or full conveyor belt).
- Separate starting of up to three drives with different run-up behavior (e.g. compressor and pump).

7.2 Startup modes

Different starting functions can be selected thanks to the large number of applications for which the SIRIUS 3RW44 soft starter can be used. The motor start can be optimally adapted to each particular application.

7.2.1 Voltage ramp

The simplest type of soft start with the SIRIUS 3RW44 soft starter is achieved using a voltage ramp. The motor's terminal voltage is raised during an adjustable starting time from a parameterizable starting voltage to the line voltage. This startup mode is preset in the quick start menu.

Starting voltage

The starting voltage determines the starting torque of the motor. A lower starting voltage results in a lower tightening torque and a lower starting current. The starting voltage should be selected such that the motor starts up immediately and smoothly once the start command goes to the soft starter.



Starting time

The length of the starting time determines the time during which the motor voltage is increased from the parameterized starting voltage to the supply voltage. This has an influence on the motor's acceleration moment, which drives the load during the ramp-up operation. A longer starting time has a smaller acceleration moment throughout the motor ramp-up. The latter is therefore longer and smoother. The length of the starting time should be selected so that the motor reaches its rated speed within this period. If the time selected is too short, in other words if the starting time ends before the motor has started up successfully, a very high starting current that equals the direct starting current at the same speed occurs at this instant. The soft starter can, in this case, switch itself off via the internal overload protection function and go into fault mode.

Maximum starting time

The "Maximum starting time" parameter can be used to determine the time after which the drive must have completed its run-up. If the drive is not operating under rated service conditions after the specified interval has expired, the startup procedure is interrupted and a fault message is generated.

Internal run-up recognition

The soft starter features internal run-up recognition. If the device recognizes a completed motor run-up, the internal bypass contacts close and the thyristors are bridged. If this run-up recognition is performed before the set starting time is completed, the ramp is canceled and the motor voltage is immediately increased to 100 % of the line voltage before the internal bypass contacts are closed.

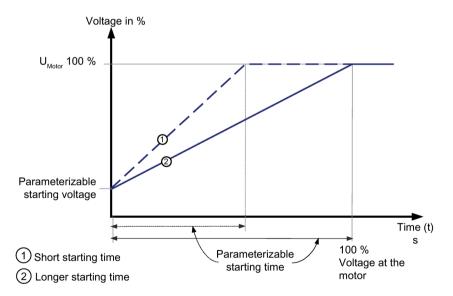


Figure 7-1 Function principle of the voltage ramp



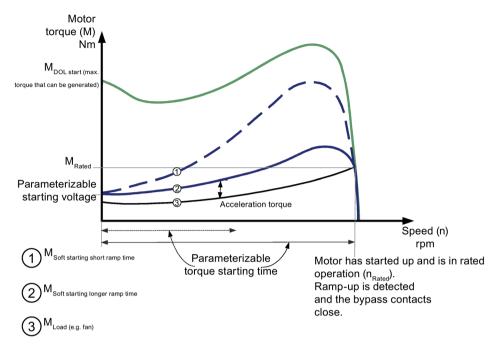


Figure 7-2 Principle of the voltage ramp for the torque characteristic

Typical applications for voltage ramps

The voltage ramp function principle is suitable for all types of application. If test runs with the application are carried out using motors that are smaller than those to be used in the actual system, we recommend using the "Voltage ramp" startup mode. For machines requiring a breakaway pulse (inverse load response, e.g. in mills or crushers), the breakaway pulse must be set as described in chapter Breakaway pulse in combination with the voltage ramp or torque control startup mode (Page 124). The "Voltage ramp+current limiting (U+current limiting)" startup mode is recommended for heavy starting.

7.2.2 Torque control

The motor speed and torque are calculated using the voltage and current rms values, as well as the associated phase information between the line voltage and the motor current $(= \cos \phi) = \text{sensorless control})$, and the motor voltage is controlled accordingly.

Torque control means that the torque generated in the motor is linearly increased from a parameterizable starting torque up to a parameterizable end torque within an adjustable starting time.

The advantage over the voltage ramp is the improved mechanical run-up behavior of the machine.

The soft starter controls the torque generated at the motor continuously and linearly according to the set parameters until the motor has completely run up.

For optimum torque control during the starting procedure, the motor data of the motor connected to the soft starter should be entered in the selected parameter set using the "Setting" menu item.



Starting torque

The starting torque determines the switch-on torque of the motor. A lower starting torque results in a lower locked-rotor torque and a lower starting current. The starting torque selected must be sufficiently high to ensure that the motor starts straight away and smoothly when the start command is issued to the soft starter.

Limiting torque

The limiting torque value specifies the maximum torque to be generated in the motor during startup. This value also functions as an adjustable torque limit, for example.

The parameter value should be set to approx. 150 % to start the motor. It should be high enough to ensure that the motor does not become stuck during run-up. This ensures that enough acceleration torque is generated throughout the motor run-up phase.

Starting time

The length of the starting time determines the time in which the starting torque is increased to the end torque.

A longer starting time results in a smaller acceleration torque over the motor run-up. This results in a longer and smoother motor run-up. The length of the starting time should be selected in such a way that the motor accelerates softly until it reaches its nominal speed.

If the starting time ends before the motor has completely run up, the torque is limited to the set limiting torque until the soft starter recognizes the run-up process and closes the internal bypass contacts.

Maximum starting time

The "Maximum starting time" parameter can be used to determine the time after which the drive must have completed its run-up. If the drive is not operating under rated service conditions after the specified interval has expired, the startup procedure is interrupted and a fault message is generated.



Internal run-up recognition

The soft starter features internal run-up recognition. If it detects a motor run-up within the set starting time, the ramp is canceled and the motor voltage is immediately increased to 100% of the line voltage. The internal bypass contacts close and the thyristors are bridged.

NOTICE

The torque generated in the motor and controlled by the soft starter can never be higher than the value of a similar direct on-line starting operation at the associated speed.

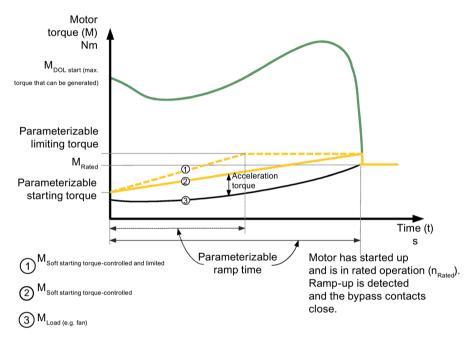


Figure 7-3 Function principle of torque control

Typical applications for torque control

Torque control is suitable for all applications, especially in cases where uniform and smooth startup is required. For machines requiring a breakaway pulse (inverse load response, e.g. in mills or crushers), the breakaway pulse must be set as described in chapter Breakaway pulse in combination with the voltage ramp or torque control startup mode (Page 124). The "Torque control+current limiting (M+current limiting)" startup mode is recommended for heavy starting (refer to chapter Current limitation in combination with the voltage ramp or torque control startup mode (Page 125)).



7.2.3 Breakaway pulse in combination with the voltage ramp or torque control startup mode

This function is required for load machines with inverse torque behavior. Typical applications are mills, crushers or drives with plain bearings. In such cases, it may be necessary to create a breakaway pulse at the beginning of the machine's start process. The breakaway pulse is set via the breakaway voltage and the breakaway time. Using the breakaway pulse, the high limiting friction of the load can be overcome and the machine can be set into motion.

The breakaway pulse is used in conjunction with the start type of the voltage ramp, the torque control, or the current limitation and overlays this during the set breakaway time.

Breakaway voltage

The breakaway voltage is used to set the breakaway torque to be generated. The breakaway torque can be up to 100% of the locked-rotor torque generated during direct-on-line starting. The pulse must be high enough to ensure that the motor starts rotating as soon as the start command is issued to the soft starter.

Breakaway time

The breakaway time determines the period during which the breakaway voltage is to be present. Once the breakaway time has expired, the soft starter ends its run-up procedure with the selected startup mode, e.g. the voltage ramp or torque control. The selected breakaway time should be at least long enough so that, after the set time has elapsed, the motor does not remain stationary again but rather directly continues to accelerate in the selected startup mode

If 0 ms is set as the breakaway time (default), the breakaway pulse function is deactivated.

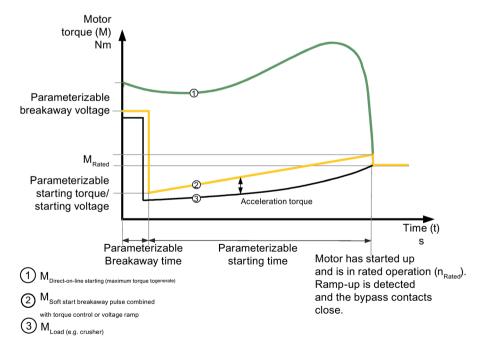


Figure 7-4 Function principle of torque control breakaway pulse



Typical applications for breakaway pulses

Typical applications for breakaway pulses are load machines with inverse torque behavior, e.g. crushers and mills.

Note

A breakaway pulse that is set too high may lead to the "Current measurement range exceeded" error message.

Remedy: use a larger starter dimension or a lower breakaway voltage.

Set the breakaway pulse only when it is really required (e.g. for mills and crushers).

A wrongly set breakaway pulse, e.g. for pumps, may lead to the "Incorrect start conditions" error message.

7.2.4 Current limitation in combination with the voltage ramp or torque control startup mode

The starter measures the phase current (motor current) continuously with the help of integrated current transformers.

A current limiting value can be set on the soft starter while the motor is starting up.

Current limiting can be activated when "voltage ramp + current limiting" or "torque control + current limiting" has been selected as the startup mode and a value has been entered in the applicable parameter.

During starting, the phase current is limited to the set value until this value is undershot. A set breakaway pulse is superimposed on the current limitation during the breakaway time.

Current limiting value

The current limiting value is set as a factor of the rated motor current to the maximum current required during startup. Once the selected current limiting value has been reached, the motor voltage is reduced or controlled by the soft starter to prevent the current from exceeding the set current limiting value. The set current limiting value must be high enough to ensure that the torque generated in the motor is sufficient to accelerate the motor to nominal speed. Three to four times the value of the motor's rated operational current (I_e) can be assumed as typical here.



Ramp-up detection

The soft starter features internal run-up recognition. If it detects a motor ramp-up, the motor voltage is immediately increased to 100% of the line voltage. The internal bypass contacts close and the thyristors are bridged.

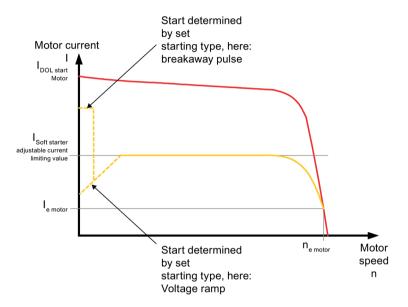


Figure 7-5 Current limiting with soft starter

Typical applications for current limiting

Current limiting is used for applications with a large centrifugal mass (mass inertia) and therefore long starting times, e.g. large fans, to reduce the load on the power supply system.



7.2.5 Direct startup mode

If the "Direct" startup mode is set, the motor voltage is increased immediately to the level of the supply voltage once the start command has been issued. This is equivalent to the start behavior with a contactor, i.e. no limitation of the starting current and the starting torque.

Note

Due to the motor's high starting current, the "current limit exceeded" fault can occur in the case of the "direct" startup mode. It may be necessary to select a larger soft starter.

Ramp-up detection

The soft starter features internal ramp-up detection. If a completed motor ramp-up is detected, the internal bypass contacts close and the thyristors are bridged.

7.2.6 Motor heating startup mode

If IP54 motors are used outdoors, condensation forms in the motor when it cools down (e.g. overnight or in the winter). This can result in leakage currents or short-circuits when the motor is switched on.

To heat the motor winding, a pulsating direct current is injected into it.

When the "motor heating" startup mode is selected, a heating power can be entered in the settings. This should be selected so that the motor is not damaged. The heating power setting range is from 10 - 100 %. This corresponds to a comparable motor current of about 5 - 30 % of the rated motor current.

Typical applications for motor heating

For example, used for drives outdoors to minimize condensation inside the motor.



May lead to damage to property.

The motor heating startup mode is not a continuous operating mode. The motor must be equipped with a temperature sensor (Thermoclick/PTC) to ensure motor protection. The motor model with integrated electronic motor overload protection is not suitable for this kind of operation.



7.3 Coasting methods

Different coasting methods can be selected thanks to the large number of applications for which the SIRIUS 3RW44 soft starter can be used. The motor stop can be optimally adapted to each particular application.

If a start command is issued during the stop process, the process is interrupted and the motor is started again with the set startup mode.

Note

If you select a controlled stop (soft stop or pump stop or braking) as the coasting method, the feeder (soft starter, cables, feeder protective devices, and motor) may need to be dimensioned for higher values because the current exceeds the rated motor current during the stop process.

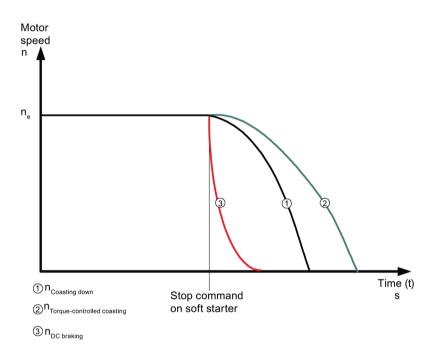


Figure 7-6 Coasting methods (general)



7.3.1 Coasting down

"Coasting down" means the power supplied to the motor via the soft starter is interrupted when the ON command is removed from the starter. The motor will coast down freely, driven only by the mass inertia (centrifugal mass) of the rotor and load. This is also referred to as a natural run-down. A large centrifugal mass means a longer stop time without load.

Typical applications for coasting down

Costing down is used for loads that place no special demands on the stopping behavior, e.g. large fans.

7.3.2 Torque control and pump stop

In the case of "torque-controlled stop" and "pump stop", coasting down or the natural rundown of the load is decelerated. This function is set if there is a need to prevent the load from being stopped abruptly. Applications involving small mass inertia values or high counter-torques are typical examples.

For optimum torque control during the stopping procedure, enter the motor data of the motor connected to the soft starter in the selected parameter set using the "Setting" menu item.

Coast-down time and stopping torque

The "Coast-down time" parameter on the soft starter allows you to specify how long power should still be supplied to the motor after the ON command is removed. Within this coast-down time, the torque produced in the motor is continuously and linearly reduced to the set stopping torque, and the application is smoothly stopped.



Pump stop

In pump applications, so-called water hammers can occur if the drive is stopped abruptly without using pump stop. Water hammers are caused by the sudden stall and the accompanying pressure deviations in the pump. They cause noise and mechanical impacts on the piping system, as well as on any flaps and valves installed there.

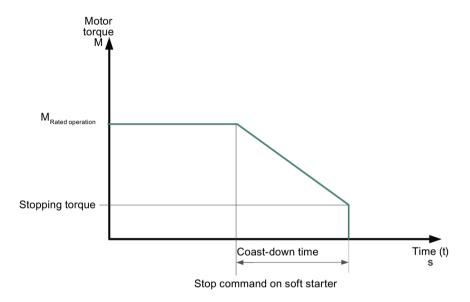


Figure 7-7 Soft stop/pump stop

Typical applications for soft stop/pump stop

Use soft stop/pump stop

- in pumps to prevent water hammer.
- in conveyor belts to prevent the conveyed materials from toppling.



Risk of property damage

For optimum motor protection, use the combination of electronic motor overload protection and evaluation of a temperature sensor installed in the motor.



7.3.3 DC braking/combined braking

In the case of DC braking or combined braking, coasting down or the natural run-down of the load is shortened.

The soft starter imposes a (pulsating) direct current in phases L1 and L3 on the motor stator. This current generates a permanent magnetic field in the stator. Since the rotor is still rotating due to its mass inertia, currents are induced in the short-circuited rotor winding that generate a DC braking torque.

Note

The DC braking/combined braking stopping function is not possible in inside-delta circuits.

Note

The pulsating direct current loads the system asymmetrically and the motor and the feeder must be designed for the higher current load during the stopping procedure. It may be necessary to overdimension the soft starter.

Note

Two braking variants are available:

Combined braking:

Use the combined braking function if applications with small mass inertias (centrifugal masses) are to be stopped ($J_{load} \leq J_{motor}$). The real coast-down time can vary during braking operations when the combined braking function is applied. Use the DC braking function if a uniformly long braking time is to be achieved.

DC braking:

Use the DC braking function if applications with small mass inertias (centrifugal masses) are to be stopped ($J_{load} \le 5 \text{ x } J_{motor}$). An external braking contactor is required for the DC braking function.



Risk of property damage.

For optimum motor protection, the combination of electronic motor overload protection and evaluation of a temperature sensor installed in the motor is recommended.

Combined braking coasting method

When the combined braking coasting method is chosen, the dynamic braking torque, DC braking torque and coast-down time can be set on the starter.

Dynamic braking torque

The dynamic braking torque determines the braking effect at the start of the braking process to reduce the speed of the motor. The braking process is then continued automatically using the DC braking function.



DC braking torque

The motor's brake force can be set with the amount of the DC braking torque. The dynamic braking torque must be increased if the motor is to accelerate again during DC braking.

Coast-down time

The coast-down time specifies the period during which the DC braking torque is to be generated on the motor. The chosen braking time should be long enough to bring the load to a standstill. To achieve an adequate braking effect down to standstill, the centrifugal mass (J) of the load should not exceed that of the motor. The length of the coast-down time should be chosen so that the motor comes to a standstill. Standstill detection does not take place in the soft starter and, if required, must be realized by means of external measures.

Note

The real coast-down time can vary during braking operations when the combined braking function is applied.

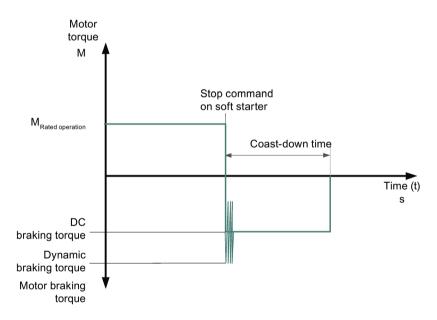


Figure 7-8 Combined braking

DC braking coasting method

When the DC braking function is selected, the coast-down time and DC braking torque can be set on the starter. In this braking variant, one output of the soft starter must be changed over to DC braking, through which an external braking contactor is controlled. You will find suggested circuits in chapter Typical circuit diagrams (Page 216).

The ideal parameters must be set on the machine under applicable load conditions.



DC braking torque

The motor's brake force can be set with the amount of the DC braking torque.

Coast-down time

The coast-down time specifies the period during which the DC braking torque is to be generated on the motor. The chosen braking time should be long enough to bring the load to a standstill.

To achieve an adequate braking effect down to standstill, the load's moment of inertia should not exceed a maximum of 5 times that of the motor. ($J_{load} \le 5 \times J_{motor}$).

Standstill detection does not take place in the soft starter and, if required, must be realized by means of external measures.

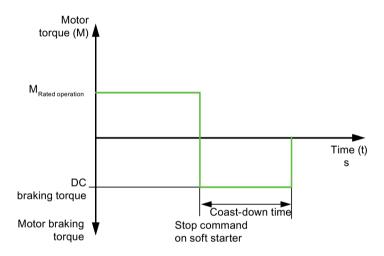


Figure 7-9 DC braking

Typical applications for DC braking

Use "DC braking" in lathes (e.g. for tool change) or circular saws.



7.4 Slow speed function

This function enables an induction motor to be operated temporarily in both directions at a lower speed than the rated speed.

The motor's rated speed n_{Motor} is determined by means of the line frequency (f) and the number of pole pairs (p) of the motor.

$$n_{Motor} = f \times \frac{60}{p}$$

A resulting slow speed frequency is stipulated for the motor by a specific thyristor control. However, it is necessary for this function that only a reduced torque can be generated in the motor. Due to possible heat rise of the motor, this function is not suitable for continuous operation.

The slow speed factor and the slow speed torque can be entered individually for both directions of rotation.

Slow speed factor

When the slow speed factor is set, the motor can be controlled with a lower speed (n_{slow speed}) than the rated speed either in or against the line phase direction.

$$n_{Slow speed} = \frac{n_{Rated}}{Slow speed factor}$$

Slow speed torque

The torque generated in the motor can be influenced with the slow speed torque. The maximum torque that can be generated depends on the selected slow speed. 100% slow speed torque can be equivalent to approximately 30% of the rated motor torque.

 


Figure 7-10 Slow speed function



Typical applications for the slow speed function

This function is suitable for applications with a low counter-torque, e.g. positioning of machine tools.

Note

In addition to the set parameters, motor-specific characteristics and the connected load influence the speed resulting from the slow speed function and the slow speed torque generated in the motor.

Note

For operation of the motor with the specified slow speed parameters, the "slow speed" function must be assigned to one control input, and the "Motor CW PS1/2/3" or "Motor CCW PS1/2/3" function must at the same time be assigned to the other. See also the circuit suggestion in chapter Typical circuit diagrams (Page 216).

Directions of rotation:

Right (CW): Rotation in line phase direction

Left (CCW): Rotation contrary to the line phase direction

Note

Due to the reduced motor speed and the related reduced self-cooling of the motor, this mode is not recommended for continuous operation.



Risk of property damage

For optimum motor protection, use the combination of electronic motor overload protection and evaluation of a temperature sensor installed in the motor.

7.5 Current limits for load monitoring

Low and high current limits can be set so that a message can be issued if they are exceeded or undershot.

Lower current limit

The lower current limit could be used, for example, to indicate tearing of a V belt and the associated no-load current of the motor or if the filter of the fan is clogged.

Upper current limit

The upper current limit can be used to determine increased power loss in the application, for example caused by bearing damage.



7.6 Motor protection functions

The motor overload protection function is implemented on the basis of the winding temperature. This indicates whether the motor is overloaded or is functioning in the normal operating range.

The winding temperature can either be calculated with the help of the integrated, electronic motor overload function or measured with a connected motor thermistor.

The two types of protection must be combined (= activated) to achieve full motor protection. This combination is recommended for optimum motor protection.

Motor overload protection

The current flow during motor operation is measured by measuring the current with transformers integrated in the soft starter. The temperature rise in the winding is calculated based on the rated operational current set for the motor.

A warning or trip is generated by the soft starter when the characteristic curve is reached, depending on the tripping class (CLASS setting) and protection parameters.

Tripping class (electronic overload protection)

The tripping class (CLASS) specifies the maximum time within which a protective device must trip from a cold state at 7.2 x the rated operational current (motor protection to IEC 60947). The tripping characteristics present this time as a function of the tripping current (refer to chapter Tripping characteristics (Page 281)).

You can set different CLASS characteristics according to the startup class.

Note

The rated data of the soft starters refers to normal starting (CLASS 10). The starters may need to be calculated with a size allowance for heavy-duty starting (> CLASS 10).

Current asymmetry limit value

Three-phase asynchronous motors respond to slight asymmetries in the line voltage with a higher asymmetrical current consumption. As a result, the temperature in the stator and rotor windings increases.

The asymmetry limit is a percentage value by which the motor current is allowed to deviate in each phase.

The maximum deviation from the mean value of the three phases is the reference value for evaluation.

Asymmetry is considered to exist if the deviation from the mean value is greater than 40 %.



Prewarning limit - remaining time for tripping

A message can be issued when the set prewarning limit time, referred to the calculated time up to tripping of the motor by the motor protection function, is reached.

Prewarning limit - motor heating

A message can be issued when the motor's set thermal prewarning limit is reached. Motor protection is activated at 100%.

Idle time

The idle time is a time defined for cooling of the motor model following an operational shutdown, i.e. not after overload trips.

After this time, the "thermal motor model" of the motor starter is set to 50 % when motor heat rise is still > 50 %, otherwise it is set to 0 %. Frequent starts (inching mode) are also possible as a result. These lead to tripping where motor protection in accordance with IEC 60947 is used, depending on the CLASS setting.

The following schematic diagram shows the cooling behavior with and without idle time.

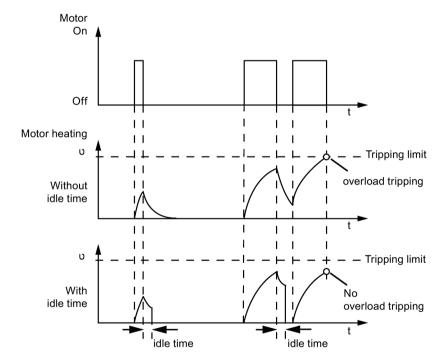


Figure 7-11 Idle time



The idle time can be set between 1 and 100 s.



Risk of property damage

Motor protection in accordance with IEC 60947 (CLASS 10A, 10, 15, 20, 30) is no longer provided if the idle time is changed (0 = deactivated). This means that there will be no system protection in such cases. Parallel protective measures are recommended.



Risk of property damage

The motor must be designed for such inching operation as otherwise permanent damage may arise due to overload.

Recovery time

A recovery time, during which the motor cools down and cannot be restarted, starts if the thermal motor model is tripped.

Protection against voltage failure

If protection against voltage failure is activated, and the control supply voltage fails during a trip, the current tripping state of the thermal motor model and the current recovery time are stored in the soft starter. When the control supply voltage is restored, the current tripping state of the thermal motor model prior to the power failure is likewise automatically restored.

Temperature sensor

This motor protection function measures the motor's stator winding temperature directly with the help of a sensor installed in the motor, in other words the motor must have a sensor wound into the stator winding.

You can choose between two different sensor types for the evaluation.

- 1. PTC thermistors Type A ("type A sensors")
- 2. Thermoclick sensors

The wiring and the sensors are checked for wire breakage and short-circuits.

Note

If the soft starter is switched off via a motor protection or inherent device protection tripping, the action cannot be acknowledged using the "Trip Reset" function until the displayed cooling time has expired.



7.7 Intrinsic device protection

7.7.1 Intrinsic device protection

The soft starter has integrated intrinsic device protection that prevents thermal overloading of the thyristors.

This is realized on the one hand by current measurement using transformers in the three phases and additionally by temperature measurement using thermal sensors on the thyristor heat sink.

A message is generated on the soft starter if a permanently set warning threshold is exceeded. If the internal permanently set switch-off value is exceeded, the soft starter will switch off automatically.

After tripping, a fixed 30 s recovery time must be observed before the starter can be started again.

If protection against voltage failure is activated, and the control supply voltage fails during a trip, the current tripping state of the thermal motor model and the current recovery time are stored in the soft starter. When the control supply voltage is restored, the current tripping state of the thermal intrinsic device protection prior to the power failure are likewise automatically restored.

SITOR semiconductor fuses must be connected upstream to protect the thyristors against short-circuits (e.g. in case of cable damage or an interturn fault in the motor). You will find applicable selection tables in chapter Feeder component layout (standard circuit) (Page 270) and in chapter Feeder component layout (inside-delta circuit) (Page 275).

Note

If the soft starter is switched off via a motor protection or inherent device protection tripping, the action cannot be acknowledged using the "Trip Reset" function until the displayed cooling time has expired.



Diagnostics and messages

8

8.1 Diagnostics and messages

8.1.1 Status messages

Message	Cause/solution			
Check voltage	The main voltage is not yet applied.			
Check the line phases	Option 1: Main voltage is applied, but the motor is not yet connected or is not yet connected correctly.			
	Option 2: The motor is connected correctly, but there is no phase voltage.			
Ready to start	Device is ready (main voltage is applied and motor is connected correctly).			
	The motor starts as soon as a start command is issued.			
Starting active	Motor is started with the selected startup mode.			
Motor running	Device is in bypass mode (bypass contactor). Start-up completed.			
Coast down active	Motor is stopped with the selected coasting method.			
Motor cooling time active (for devices with product version < *E06*)	After an overload trip of the thermal motor model, starting of the motor is not possible for a certain period of time (parameter: recovery time), to ensure that the motor can cool down.			
Switching element cooling time (for devices with product version < *E06*)	After the device's intrinsic protection mechanism has tripped because of an overload, the motor cannot be started for 30 s to allow the device to cool down.			
Emergency start active	The emergency start function is activated.			
Quick stop active	The quick stop function is activated.			



8.1.2 Warnings and group faults

- ① Warning
- ② Fault without restart
- 3 Fault with restart

Message	1	@	<u> </u>	Cause/solution
No supply voltage		х		Start command has been issued although the main voltage is not yet applied.
				Remedy: Switch on the supply voltage.
				2. If the message occurs in the bypass mode, it may have been generated erroneously by a too frequently generated "Prewarning limit - motor heating", "Remaining time for tripping" or "I _e limit exceeded/undershot" warning (can also be traced via the entries in the logbook/events).
				Remedy: See description of applicable messages
				Main voltage is removed simultaneously with the ON command, although run down (not "Coasting down") is parameterized.
				Remedy: Activate line contactor by means of output parameterized to ON time or parameterize "Coasting down".
Incorrect starting conditions		х		Fault occurs without motor starting.
(for devices with product version < *E04*)				Cause:
Phase angle control faults				 Motor has not been connected correctly.
(for devices with product version				 Inside-delta circuit is wrongly configured.
≥ *E04*)				There is a ground fault.
				Remedy: Check and correct wiring (see circuit suggestions for inside-delta circuit).
				2. Fault occurs during starting.
				Cause:
				Chosen starting voltage too high
				 Breakaway pulse (wrongly) set: Motor starting becomes unstable
				(set the breakaway pulse only when it is really required. In the case of pumps, for example, a breakaway pulse often leads to misfiring.) If there is an idle time < 5 s since the last start, the 3RW44 starts with a higher starting voltage. In combination with a set breakaway pulse, this can lead to "incorrect starting conditions".
				Remedy: Adjust parameters or extend idle time.



		0	0	
Message	①	2	3	Cause/solution
Phase failure L1		Х		Option 1: Phase L1 is missing or fails or drops while the motor is running. Tripped as a result of a dip in the permissible rated operational voltage > 15 % for > 100 ms during the startup process or > 200 ms in bypass mode.
				Remedy: Connect L1 or rectify the voltage dip.
				Option 2: The motor that is connected is too small and the fault occurs as soon as it is switched to bypass mode.
				Remedy: Set the correct rated operational current for the connected motor or set it to the minimum value (if the motor current is less than 10 % of the set I _e , the motor cannot be operated with this starter).
				Option 3 : Starter used in IT system with ground-fault monitoring: 3RW44, product version < *E06* and the PROFIBUS DP communication module must not be used in this network configuration.
				Remedy: Replace starter with 3RW44, product version ≥ *E07*. Here, use in combination with the PROFIBUS DP communication module is admissible. However, the phase voltage values (UL-N) and phase-to-phase voltage values (UL-L) may be displayed incorrectly on the measured value display of the 3RW44.
Phase failure L2 x		Option 1: Phase L2 is missing or fails or drops while the motor is running. Tripped as a result of a dip in the permissible rated operational voltage > 15 % for > 100 ms during the startup process or > 200 ms in bypass mode.		
				Remedy: Connect L2 or rectify the voltage dip.
				Option 2: A motor that is not powerful enough is connected and the fault occurs as soon as a switchover is made to bypass mode.
				Remedy: Set the correct rated operational current for the connected motor or set it to the minimum value (if the motor current is less than 10 % of the set le, the motor cannot be operated with this starter).
				Option 3: Starter used in IT system with ground-fault monitoring 3RW44, product version < *E06* and the PROFIBUS DP communication module must not be used in this network configuration.
				Remedy: Replace starter with 3RW44, product version ≥ *E07*. Here, use in combination with the PROFIBUS DP communication module is admissible. However, the phase voltage values (UL-N) and phase-to-phase voltage values (UL-L) may be displayed incorrectly on the measured value display of the 3RW44.



Message	1	2	3	Cause/solution
Phase failure L3		х		Option 1: Phase L3 is missing or fails/collapses when the motor is in operation. Tripped as a result of a dip in the permissible rated operational voltage > 15 % for > 100 ms during the startup process or > 200 ms in bypass mode.
				Remedy: Connect L3 or rectify the voltage dip.
				Option 2: A motor that is not powerful enough is connected and the fault occurs as soon as a switchover is made to bypass mode.
				Remedy: Set the correct rated operational current for the connected motor or set it to the minimum value (if the motor current is less than 10 % of the set I _e , the motor cannot be operated with this starter).
				Option 3: Starter used in IT system with ground-fault monitoring 3RW44, product version < *E06* and the PROFIBUS DP communication module must not be used in this network configuration.
				Remedy: Replace starter with 3RW44, product version ≥ *E07*. Here, use in combination with the PROFIBUS DP communication module is admissible. However, the phase voltage values (UL-N) and phase-to-phase voltage values (UL-L) may be displayed incorrectly on the measured value display of the 3RW44.
Missing load phase T1		х		Motor phase T1 is not connected.
				Remedy: Connect the motor properly.
Missing load phase T2		х		Motor phase T2 is not connected.
				Remedy: Connect the motor properly.
Missing load phase T3		Х		Motor phase T3 is not connected.
				Remedy: Connect the motor properly.
Supply voltage below 75 %		х		Control supply voltage is less than 75% of the required rated voltage for more than 100 ms (voltage failure, voltage dip, incorrect control supply voltage).
				Remedy: Check the control supply voltage.
Supply voltage below 85%		х		Control supply voltage is less than 85 % of the required rated voltage for more than 2 s (voltage failure, voltage dip).
				Remedy: Check the control supply voltage.
Supply voltage above 110%		х		Control supply voltage is more than 110 % of the required rated voltage for more than 2 s (voltage peaks, incorrect control supply voltage).
				Remedy: Check the control supply voltage.
Current unbalance exceeded	Х	Х		The phase currents are asymmetrical (unbalanced load). Message is output when the asymmetry is greater than the set limit (parameter: Current asymmetry limit value).
				Remedy: Check the load or modify the parameter value.
Thermal motor model overload	х	х	х	The thermal motor model has tripped. After an overload trip, restarting is inhibited until the recovery time has elapsed.
				Remedy in the event of unwanted tripping:
				Check whether the motor's rated operational current I _e is set correctly, or
				Change the CLASS setting, or
				Possibly reduce the switching frequency, or
	ı	I	ı	



Message	1	2	3	Cause/solution
Prewarning limit - motor heating	х			Motor heating is greater than the set parameter value: Prewarning limit - motor heating. The thermal motor model approaches an overload trip depending on the set value. For heavy starting and set values of tripping class ≥ CLASS 20, we recommend increasing the "Prewarning limit motor heating" parameter to 95 %.
Remaining time for tripping undershot	х			Time up to overload trip of the thermal motor model is shorter than the set "Prewarning limit - remaining time for tripping" parameter. In the case of heavy starting and set values of tripping class ≥ CLASS 20, we recommend setting the "Prewarning limit - remaining time for tripping" parameter value to 0 s (deactivated).
Line overvoltage (for devices with product version <*E04*) Line voltage too high (for devices with product version		x		Applied 3-phase line voltage is not suitable for the device or prolonged voltage peaks arise. Tripping is caused by exceeding of the permissible rated control supply voltage of >10 % >500 ms. As from product version *E02*, the internal threshold for tripping has been increased to >18 % >2000 ms.
≥ *E04*) Current measuring range overshot		х		1. A very high current has occurred (above the measuring range of the current transformers integrated in the soft starter). This can occur in the event of: direct-on-line starting, breakaway pulse or combined braking.
				 Remedy: In the case of the "Voltage ramp" start type, extend the set ramp time and reduce the breakaway voltage or the braking torque. The soft starter is possibly dimensioned too small for the motor. 2. If the message occurs during starting, it may have been generated erroneously by a too-frequently generated "Prewarning limit - motor heating", "Remaining time for tripping" or "I_e limit exceeded/undershot" warning (can also be traced via the entries in
				the logbook/events). Remedy: See description of applicable messages.
Trip - motor blocked (devices with product version <*E07* only)		х		A very high current suddenly arises in bypass mode, e.g. if the motor blocks (I > 4 x l _{eMotor} over 100 ms). Remedy: Check the motor.
Current range exceeded		х		More than 6 times the device's rated operational current flowed for a prolonged period. Remedy: Activate current limiting or check dimensioning (device and motor).
Power unit overheated		х	х	Overload trip of the thermal model for the power unit Remedy: Wait until the device has cooled down again, possibly set lower current limiting for starting, or reduce the switching frequency (too many consecutive starts). Check whether the motor is blocked or whether the ambient temperature in the soft starter's environment is too high (derating as from 40 °C; see chapter Technical data (Page 253)).
Power unit overtemperature	х			Temperature of the thermal model for the power unit is above the allowed continuous operating temperature. Remedy: Check the motor's operational current or check whether the ambient temperature in the soft starter's environment is too high (derating as from 40 °C; see chapter Technical data (Page 253)).



Message	1	2	3	Cause/solution	
Temperature sensor short-circuit	x	х	х	Temperature sensor at terminals T1/T2 has short-circuited.	
				Remedy: Check the temperature sensor.	
Temperature sensor wire break	x	х	х	Temperature sensor at terminals T1/T2 is defective, a cable is not connected or no sensor is connected. Remedy: Check the temperature sensor or if no sensor is connected: deactivate the temperature sensor.	
Temperature sensor overload	х	х	х	Temperature sensor at terminals T1/T2 has tripped. The motor is overheated.	
				Remedy: Wait until the motor has cooled down and check the motor if necessary.	
Maximum starting time exceeded		х		The set maximum starting time is shorter than the motor's actual rampup time.	
				Remedy: Extend the "max. starting time" parameter, increase the current limiting value or check the load connected to the motor to determine whether there is a mechanical defect.	
I _e limit value exceeded/undershot	х	х		Set current limit has been exceeded or undershot, e.g. due to a clogged fan filter or by the motor stalling.	
				Remedy: Check the cause of current limit violation on the motor/load or adjust the limits according to the existing load conditions.	
Ground fault detected	х	Х		One phase is connected to ground (only possible in bypass mode)	
				Remedy: Check connections and wiring.	
Manual mode local connection break	X			The connection to the PC has been interrupted (if control via PC) or no key has been pressed (if the motor is key-controlled) for a prolonged time (see Settings > Display > Activity monitoring time in chapter Selecting display settings (Page 97)). Control is handed over to the inputs if these have requested control priority. Remedy: Connect the PC again or increase the activity monitoring time	
				and press a key at regular intervals.	
Impermissible I _e /CLASS setting		x		The rated operational current I _e set for the motor (chapter Entering the motor data (Page 61)) in at least one of the three parameter sets exceeds the associated, maximum permissible setting current referred to the selected CLASS setting (chapter Selecting motor protection settings (Page 94)). In the case of devices with product version ≥ *E07*, the corresponding parameter set (PS) in which the incorrect value is to be found is displayed. For the maximum permissible settings, see chapter Technical data (Page 253). If the soft starter is connected in an inside-delta circuit, the motor feeder may have been incorrectly wired (chapter 3RW44 in an inside-delta circuit (Page 221)); as a result, the "Status display/Connection type" menu item (chapter Status display (Page 109)) contains "Unkn./Fault".	
				Remedy: Check the rated operational current set for the motor in all three parameter sets, select a lower CLASS setting, or calculate the soft starter with a size allowance. In the case of an inside-delta circuit, check that the wiring of the motor feeder corresponds to the specified circuit diagrams. As long as the motor is not activated, it is only a status message. However, the message becomes a fault without restart if a start command is issued.	



Message	1	@	3	Cause/solution
No external starting parameters received (devices with product version ≥ *E06*)		х		Occurs only during operation with PROFIBUS DP. Incorrect or impermissible parameter values have been sent by the PLC. Remedy: The Soft Starter ES software can be used to read the incorrect parameter and to change it to a permissible value.
PIO error (devices with product			х	PIO error (faulty process image of the outputs) appears
version ≥ *E06*)				If Motor CW and Motor CCW have been selected simultaneously (cause 1) or
				If Parameter set 4 has been selected via the PLC (cause 2).
				Remedy:
				Automatically reset if Motor CW and Motor CCW are deactivated again (in response to cause 1) or
				If a valid parameter set (PS 1 - 3) is set again (in response to cause 2).
Bypass element protective tripping (devices with product version ≥ *E07*)		х		A very high current occurs in bypass mode. The tripping operation depends on the duration of the current and strength of the current. Fault can only be reset after 30 s (for cooling down).
				Remedy: Check the motor and check soft starter dimensioning.



8.1.3 Device fault

Message	Cause/solution
Switching element defective (for devices with product version ≥ *E04*)	At least one bypass element has welded and/or at least one thyristor has fused. This message is generated when the control supply voltage is applied and current flow is being measured (via the soft starter) when no start command has been issued. ¹⁾
	Remedy: Contact your SIEMENS representative or Technical Assistance (see chapter Important notes (Page 9)).
Contact 1 failed	Thyristor in phase L1 failed (This message is issued when the start command is issued.) ¹⁾
	Remedy: Contact your SIEMENS representative or Technical Assistance.
Contact 2 failed	Thyristor in phase L2 failed (This message is issued when the start command is issued.) ¹⁾
	Remedy: Contact your SIEMENS representative or Technical Assistance.
Contact 3 failed	Thyristor in phase L3 failed (This message is issued when the start command is issued.) ¹⁾
	Remedy: Contact your SIEMENS representative or Technical Assistance.
Flash memory error	The device memory is faulty.
	Remedy: Contact your SIEMENS representative or Technical Assistance.
Device not named	Device not named, still has to receive naming data.
	Remedy: Contact your SIEMENS representative or Technical Assistance.
Incorrect name version	The naming and firmware versions do not match.
	Remedy: Contact your SIEMENS representative or Technical Assistance.
Bypass element defective	The bypass contactor is welded or defective.
	Remedy: Contact your SIEMENS representative or Technical Assistance.
Heatsink temperature sensor wire break	Option 1: The temperature sensor on the heatsink of the starter is not connected or defective.
	Option 2: 3RW4465 and 3RW4466 may have a defective fan on the front of the starter.
	Remedy: Only in the case of 3RW4465 and 3RW4466: After about 30 to 60 minutes cooling time, try to rectify the fault by switching the control supply voltage off and then on again. If this was successful, check whether the fan on the front of the soft starter is running when the start command is issued. If not, it may be necessary to replace the fan. (The fan on the front of the starter and also the fans on the bottom of the unit both be running simultaneously in fault-free operation). For all 3RW44 starters: If it was not possible to reset the fault message by switching the control supply
	voltage off and on again, contact your SIEMENS partner or Technical Assistance.
Heatsink sensor short-circuit	The temperature sensor on the heatsink of the starter is not connected or defective.
	Remedy: Contact your SIEMENS representative or Technical Assistance.

¹⁾ Possible ohmic value for a defective thyristor: <2 kOhm (L-T).



Note

In certain circumstances, some fault messages may be incorrect (e.g. phase failure L1 although L2 is missing).

Note

When using the 3RW44 soft starter in an IT system with ground fault monitoring: 3RW44, product version ≤ *E06* and the PROFIBUS DP communication module must not be used in this network configuration. 3RW44 soft starters from product version *E07* onwards can be used in combination with the PROFIBUS DP communication module. However, the phase voltage values (UL-N) and phase-to-phase voltage values (UL-L) may be displayed incorrectly on the measured value display of the 3RW44.

Note

PROFINET communication modules can only be used with a product version of *E12* or later.



PROFIBUS DP communication module

9

9.1 Introduction

Using the communication module (PROFIBUS or PROFINET), the 3RW44 soft starter and its all its functionality can be integrated in the automation level.

You will find the manual for the PROFINET communication module on the Internet (https://support.industry.siemens.com/cs/ww/en/view/85225796).



Requirements

- You have configured an infeed module with integrated S7 station, e.g. with CPU315-2 DP
- STEP 7 (V 5.1 or higher + hotfix 2) is fully installed on your PC or programming device.
- You are proficient in STEP 7.

NOTICE

The PROFIBUS DP communication module can only be operated on 3RW44 devices with product version "E12" or higher, implemented for devices from production date 130601 onwards.



NOTICE

IT systems with ground-fault monitoring:

3RW44, product version ≤ *E06* and the PROFIBUS DP communication module must not be used in this network configuration. 3RW44 soft starters from product version *E07* onwards can be used in combination with the communication module. However, the phase voltage values (UL-N) and phase-to-phase voltage values (UL-L) may be displayed incorrectly on the measured value display of the 3RW44.

NOTICE

For 3RW44 PROFIBUS DP communication module with product version < *E03*:

use of the 3RW44 with PROFIBUS on redundant controllers and Y-Link: The 3RW44 acts like a DPV0 slave on Y-link. Parameter assignment is only possible via the GSD file and only cyclic data is transmitted, no data sets or alarms.

For 3RW44 PROFIBUS DP communication module, product version *E04* or higher:

As from this version, DPV1 operation (read/write data sets and alarms) is also possible downstream from a Y-link.



Further documentation on the subject of PROFIBUS DP

SIRIUS PROFIBUS communication module for 3RW44 soft starter (https://support.industry.siemens.com/cs/ww/en/view/23071380) operating instructions with the article number 3ZX1012-0RW44-0KA0.

Further documentation on the subject of PROFINET IO

SIRIUS PROFINET communication module for 3RW44 soft starter (https://support.industry.siemens.com/cs/ww/en/view/85261694) operating instructions with the article number 3ZX1012-0RW40-0NA1.

9.1.1 Definitions

S7 slave

An S7 slave is a slave that is fully integrated into STEP 7. It is embedded via OM Soft Starter ES Professional. It supports the S7 model (diagnostic interrupts).

Writing data

Writing data means that data is transmitted to the soft starter.

Reading data

Reading data means that data is transmitted from the soft starter.

GSD

Device master data (GSD) contains DP slave descriptions in a standardized format. The use of device master data simplifies the configuration of the DP master and the DP slave. See Chapter Configuring with the GSD file (Page 162).



9.2 Data transfer

9.2.1 Options for data transfer

The following figure shows the data transfer options:

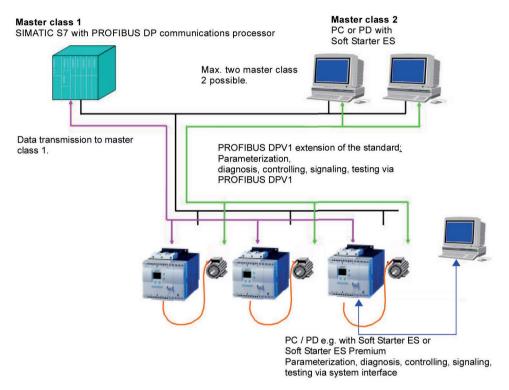


Figure 9-1 Options for data transfer



9.2.2 Communication principle

The following figure shows the communication principle and the way data is transmitted depending on the master and slave operating modes:

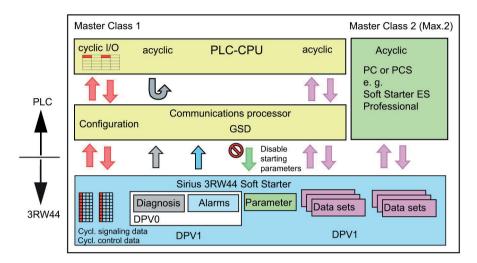


Figure 9-2 Communication principle

9.3 Installing the PROFIBUS DP communication module



Hazardous voltage!

Can cause electric shock and burns. Turn off and lock out all power supplying the system and device before working on the device.

Read the information in the SIRIUS PROFIBUS communication module for 3RW44 soft starter (https://support.industry.siemens.com/cs/ww/en/view/23071380) operating instructions with the article number 3ZX1012-0RW44-0KA0.



9.3.1 Inserting the PROFIBUS DP communication module (fieldbus interface)


NOTICE

Risk of property damage.

Before inserting the PROFIBUS DP communication module, disconnect the power to the 3RW44 soft starter.


Note

The PROFIBUS DP communication module can only be operated on 3RW44 devices with product version "E06" or higher, implemented on devices from production date 060501 onwards.

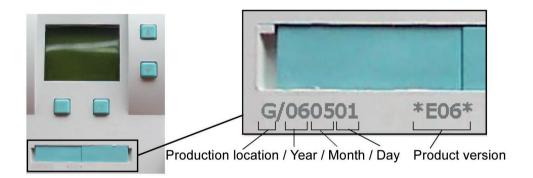



Proceed as follows:

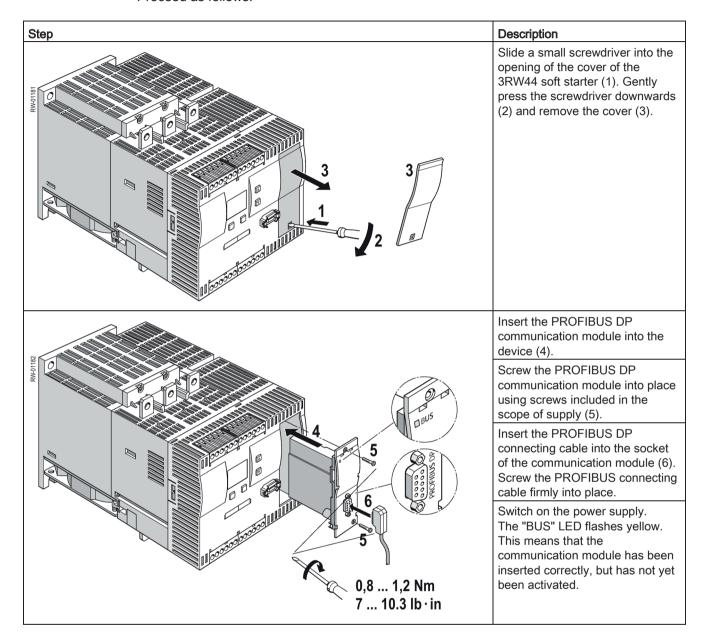



9.4 Activating the PROFIBUS DP communication module (fieldbus interface) and setting the station address

9.4.1 Introduction

Activate the PROFIBUS DP communication module ("Fieldbus" device function) and set the station address either via the display or the device interface using the "Soft Starter ES Premium" or "Soft Starter ES + SP1" software.

Note


After the communication module has been activated, the default control priority automatically switches from the inputs to the PROFIBUS DP communication module. If an input with the "Manual mode local" function is active, the control priority does not change (refer to chapter Parameterizing the inputs (Page 89)).

The soft starters are pre-set to station address 126 as the factory default.



9.4.2 Activating the PROFIBUS DP communication module via the display, setting the station address and saving the settings

- During first commissioning of the soft starter, you must run through the Quick Start menu (refer to chapter Switching on for the first time (Page 50)). See also SIRIUS 3RW442/443/444/445/446 soft starter operating instructions (https://support.industry.siemens.com/cs/ww/en/view/21189750) (article number: 3ZX1012-0RW44-0AA0).
- 2. Press the designated button on the device.

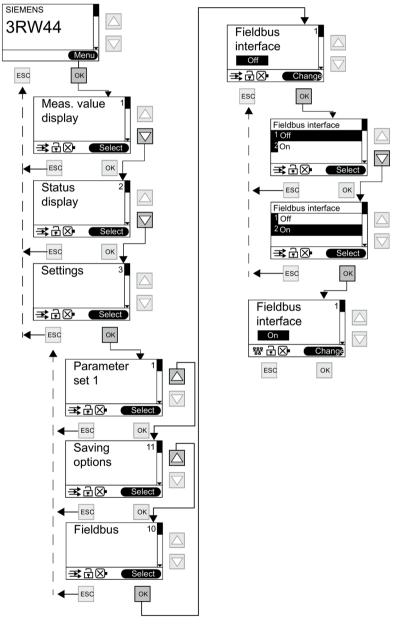


3. The "BUS" LED flashes red.



4. The PROFIBUS DP communication module has been successfully activated if the PROFIBUS icon appears on the display.

The next step is to assign the desired station address for the 3RW44 as a PROFIBUS slave.

In this example, the station address "23" has been selected.

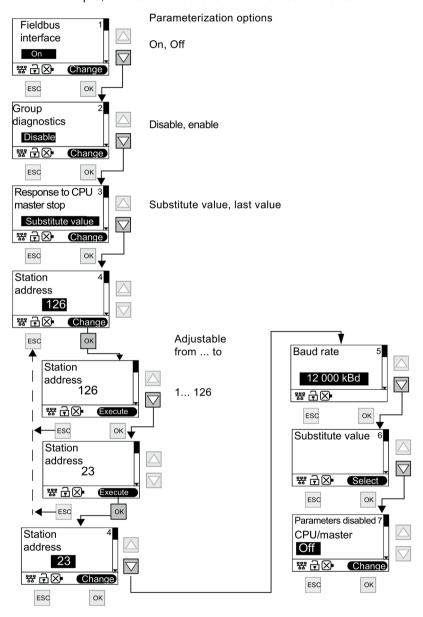

Note

If the "Parameters disabled CPU/Master" parameter is set to "Off" (factory setting), the parameters set on the soft starter will be overwritten with the values stored in the GSD file or in the OM when the bus is started. If this is not desired, the parameter must be set to "On".



Station address ₩ 🗆 🛇• Change ОК Fieldbus ₩ 🗗 🛇 ESC ок Saving options ₩ 🕳 🛇 ОК ESC Function call Save settings 器马叉 Execute ок -ESC Save settings Execute? ₩ 🗗 🛇

- ESC

SIEMENS 3RW44

₩ 🖟 🏵 ESC

ок

5. In order to permanently save the settings, proceed as follows:

Note


If the "Parameters disabled CPU/Master" parameter is set to "Off" (factory setting) in the "Fieldbus" menu, the parameters set on the soft starter will be overwritten with the values stored in the GSD file or in the OM when the bus is started. If this is not desired, the parameter must be set to "On".



9.4.3 Activating the PROFIBUS DP communication module (fieldbus interface) and setting the station address via the device interface using the "Soft Starter ES Premium" or the "Soft Starter ES Smart + SP1" software

Perform the following steps in order to activate the communication module:


- 1. Connect the 3RW44 soft starter via the interface cable to a PC on which the "Soft Starter ES Professional" or "Soft Starter ES Smart + Service Pack 1" software is installed.
- Start the "Soft Starter ES Professional" or "Soft Starter ES Smart + Service Pack 1" software.
- 3. Select "Switching device > Open online" in the menu.
- 4. Select the "Local device interface" option in the "Open online" dialog and select the desired COM port under "interface".
- 5. Click "OK".
- 6. Select "Device configuration" on the left side of the window.
- 7. Select the "Fieldbus interface" check box on the right side of the window.

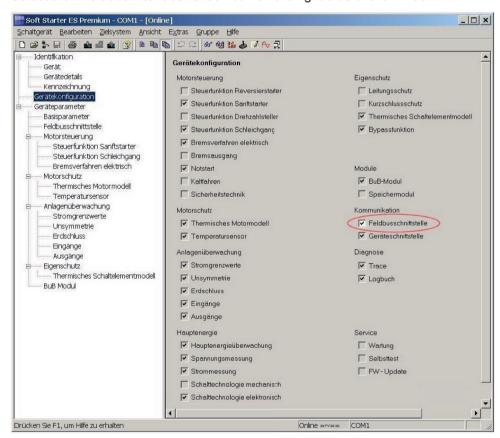

8. Select "Device parameters > Fieldbus" on the left side of the window.



9. Select the "Load to switching device" icon in the toolbar.

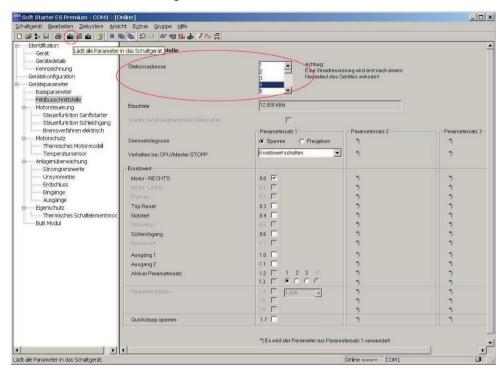

- 10. Acknowledge the changed station address with "OK".
- 11.Acknowledge activation of the PROFIBUS DP communication module with "OK". The PROFIBUS DP communication module is activated.
- 12.If the "BUS" LED on the communication module flashes red and the PROFIBUS icon 器 appears in the display, the communication module has been successfully activated.

Note

The soft starter only reads the station address automatically and saves it permanently when the soft starter's supply voltage is activated (see chapter Flow diagram: PROFIBUS DP starting the soft starter (Page 169)) or when the "Restart" command is issued.



9.5 Configuring soft starters

9.5.1 Introduction

This section refers to the configuring and parameterization of soft starters

- Configuring: systematic arrangement of individual soft starters (configuration).
- Parameterization: assigning parameters using the configuring software.
 You can find additional information on parameters in chapter Data formats and data sets (Page 180).

STEP 7

- The "Diagnose hardware" function is possible with STEP 7 V5.1, correction K5.1.2.0 or higher.
- Reading back the configuration is not supported by STEP 7 (Target system → Load to PG).
- Reading out diagnostics via the CPU 315-2 DP (with the "Diagnose hardware" function in STEP 7) is not possible up to Article No. 6ES7315–2AF02.

9.5.2 Configuring with the GSD file

Definition of the GSD

Device master data (GSD) contains DP slave descriptions in a standardized format. The use of device master data simplifies the configuration of the DP master and the DP slave.

Configuring with the GSD file

You configure the soft starter using the GSD file. The soft starter is integrated into your system as a standard slave by means of the GSD file.

You can download the GSD file from the Internet (http://www.siemens.com/softstarter).

The following GSD files are available:

- SIEM80DE.GSG (German)
- SIEM80DE.GSE (English)
- SIEM80DE.GSF (French)
- SIEM80DE.GSI (Italian)
- SIEM80DE.GSS (Spanish)



NOTICE

Your configuration tool must support GSD files - Rev.3, for example STEP 7 V5.1+Service Pack 2 and higher.

Note

Only the values for parameter set 1 (PS1) (and those that are independent of the parameter set anyway, for example motor protection) can be set with the GSD file.

The default values are used for PS2 and PS3.

9.5.3 Configuring with the Soft Starter ES Professional software

You can also configure SIRIUS 3RW44 soft starters using the Soft Starter ES Premium software.

There are two possibilities when using PROFIBUS DP:

- Stand-alone program on PC or programming device with PROFIBUS DP connection
- Integration with the object manager (OM) in STEP 7
 You can find detailed information about "Soft Starter ES" in the online help of the program.

9.5.4 Diagnostics package

Diagnostics package

A free diagnostics package is available for 3RW44 soft starters. It contains HMI diagnostics screens for a touch panel. The diagnostics package is available in English and German. You can download the diagnostics package

(https://support.industry.siemens.com/cs/ww/en/view/28557893) from the Internet:

9.5.5 Soft Starter ES parameterization software

Soft Starter ES is the central software for commissioning, operating, and diagnostics of the SIRIUS 3RW44 High Feature soft starter series. You can download the Soft Starter ES parameterization software (https://support.industry.siemens.com/cs/ww/en/view/28323168) from the Internet. This is a free, 14-day test version.



9.6 PROFIBUS DP commissioning using the GSD file in STEP 7 (example)

9.6.1 Introduction

The following example shows you how to commission the PROFIBUS DP communication module.

- Installation and activation of the PROFIBUS DP communication module (fieldbus interface)
- Configuration with STEP 7 using the GSD file
- Integration into the user program
- Switching on

Components needed

- 3RW44 soft starter
- 3RW49 00-0KC00 communication module

General requirements

- You have configured an infeed module with integrated S7 station,
- e. g. with CPU315-2 DP.
- You are proficient in STEP 7.
- The programming device is connected to the DP master.

Software requirements

Table 9-1 Software requirements for commissioning

Configuration software used	Version	Explanations
STEP 7	From version V5.1+SP2 onwards	You have integrated the GSD file of the soft starter into STEP 7.
Configuration software for the other DP master used		You have integrated the GSD file of the soft starter into the applicable configuration tool.



Requirements for commissioning

Table 9-2 Requirements for commissioning

Prior activity	For more information, see
Soft starter has been installed	Chapter Installation, connection and feeder configuration (Page 29).
2. PROFIBUS DP communication module has been installed	Chapter Installing the PROFIBUS DP communication module (Page 153).
3. The station address has been set on the soft starter	Chapter Activating the PROFIBUS DP communication module (fieldbus interface) and setting the station address via the device interface using the "Soft Starter ES Premium" or the "Soft Starter ES Smart + SP1" software (Page 160).
The soft starter has been configured (configured and parameterized)	Chapter Configuring soft starters (Page 162).
5. The supply voltage for the DP master is switched on	DP master manual
6. The DP master is switched to the RUN operating state	DP master manual

9.6.2 Configuration using the Device Master Data (GSD) in STEP 7

Table 9-3 Commissioning

Step	Description
1	Activate the PROFIBUS DP communication module as described in chapter Activating the PROFIBUS DP communication module (fieldbus interface) and setting the station address (Page 156).
2	Set the required station address as described in chapter Activating the PROFIBUS DP communication module (fieldbus interface) and setting the station address (Page 156).
3	Switch on the supply voltage for the DP master CPU 315-2 DP at the infeed module.
4	Observe the status LEDs of the DP master CPU 315-2 DP on the infeed module:
	5 V DC: Lights up
	SF DP: Off
	BUSF: Flashing
5	Start the SIMATIC Manager and create a new project with a DP master (e.g. CPU315-2 DP with DI 16 x DC 24 V and DO 16 x DC 24 V). Generate OB1 and OB82 for the project.



	Ι							
Step	Description							
6	In HW Config, call up the Extras > Install new GSD file menu command, and integrate the GSD file of the soft starter into the configuration tool of the DP master used. For the CPU315-2 used in the example, you can optionally install							
	the German GSD file SIEM80DE.GSG,							
	• the E	inglish GSD fil	e SIEM80DE.C	SSE,				
	• the F	rench GSD file	e SIEM80DE.G	SF,				
	• the S	panish GSD f	ile SIEM80DE.	GSS,				
	• the It	alian GSD file	SIEM80DE.GS	SI				
	in the ST	EP 7 SIMATI	C Manager.					
7	Generate	e the PROFIB	US DP subnet.					
8	Add the soft starter from the hardware catalog to the PROFIBUS under PROFIBUS DP > Additional field devices > Switching devices > Motor starters > Direct soft starters > SIRIUS 3RW44.							
9	Set the s	station address	s for the soft sta	arter to	3 (or h	igher).		
10	Drag a n 3RW44:	nodule from th	e selection list	of the	drop-do	wn menu to	slot 1 of the SIRIUS	
	Slot	Module/ DP ID	Order number	I addr.	O addr.	Comment		
	1	192	3RW4422-*BC**	23 ^{*)}	23 ^{*)}			
	*) Depen	ding on the str	ucture					
	Double-click to open the "Properties DP slave" dialog.							
11	Click on "Parameterize". Set the parameters, **), e.g.							
	Rated operational current							
	:							
	Click on OK. This completes the configuration.							
12	Save the	configuration						

Note

During parameterization with the GSD file, it is possible to select values that are dependent on each other, but are not permissible in combination. The respective parameter is reported as an "Incorrect parameter value" in data set 92.



The following table shows which parameters are mutually dependent and how they must be set:

Table 9-4 Interdependent parameter settings

Parameters		Settings
Rated operational current I _e	Depends on	Tripping class CLASS (refer to chapter Technical data of the power unit (Page 259))
Upper current limit	Greater than	Lower current limit, chapter Specifying current limit values (Page 88)
Maximum starting time	Greater than	Starting time, chapter Specifying the startup mode (Page 63)
Limiting torque	Greater than	Starting torque, chapter Specifying the startup mode (Page 63), torque control and torque control with current limiting.



9.6.3 Integration into the user program

Table 9-5 Integration into the user program

Step	Description							
1		eadin	•	he LAD/STL/CSF editor in OB1. nd controlling an output:				
		y the ce	ntral DIs (switch	es) to the decentralized motor starter (=PAA). r starter to the central DOs (LED).				
	L	EB AB	0	// PAA: read in switches 0-7 (DI 16 x 24 V DC)				
		AD	2	// y emitir al arrancador de motor // EB0.0 Motor - RIGHT // EB0.1 Motor - LEFT // EB0.2 0				
	L	EB	2	// Read in the motor starter PAE				
	Т	AB	0	// and output to D016xDC24V				
2	Save the project in SIMATIC Manager.							
3	Load the configuration to the DP master.							

9.6.4 Switching on

Table 9-6 Switching on

Step	Description
1	Switch on the voltage supply for the soft starter.
2	Observe the status LEDs on the DP master CPU315-2 DP:
	5 V DC: Lights up
	SF DP: Off
	BUSF: Off
3	Observe the status LEDs on the PROFIBUS module:
	LED BUS: Lights up green



9.6.5 Flow diagram: PROFIBUS DP starting the soft starter

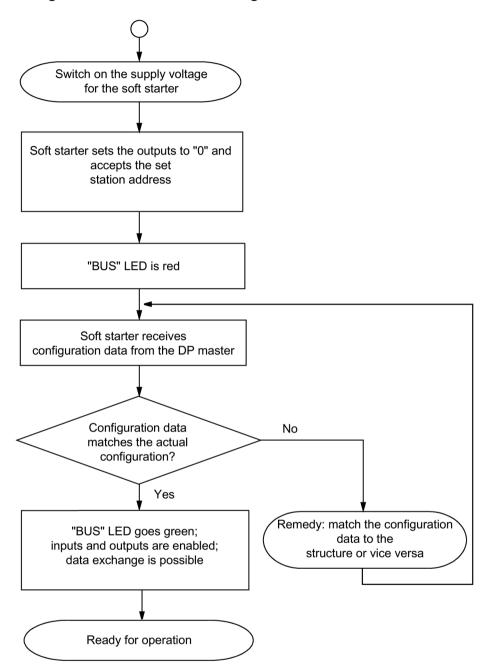


Figure 9-3 PROFIBUS DP starting of the soft starter



9.7 Process data and process images

Definition of process image

The process image is part of the system memory of the DP master. At the start of the cyclic program, the signal states of the inputs are transferred to the process image of the inputs. At the end of the cyclic program, the process image of the outputs is transferred to the DP slave as a signal status.

For soft starters with PROFIBUS DP, the following process image is available:

• Process image with 2 bytes of outputs/2 bytes of inputs (16 O/16 I)

Table 9-7 Process data and process images

Process data		Process image: (16 O, DO 0.0 to DO 1.7)
		(16 I, DI 0.0 to DI 1.7)
DO-0.	0	Motor CW
	1	Motor CCW
	2	Not used
	3	Trip reset
	4	Emergency start
	5	Available
	6	Slow speed
	7	Not used
DO-1.	0	Output 1
	1	Output 2
	2	Parameter set bit 0*)
	3	Parameter set bit 1*)
	4	Not used
	5	Not used
	6	Not used
	7	Disable quick stop
Inputs		
DI-0.	0	Ready (automatic)
	1	Motor ON
	2	Group fault
	3	Group warning
	4	Input 1
	5	Input 2
	6	Input 3
	7	Input 4



Process data		Process image: (16 O, DO 0.0 to DO 1.7) (16 I, DI 0.0 to DI 1.7)
DI-1.	0	Motor current I _{act-bit0}
	1	Motor current I _{act-bit1}
	3	Motor current I _{act-bit2}
	4	Motor current I _{act-bit3}
	5	Motor current lact-bit4
	6	Manual mode local
	7	Ramp operation

^{*)} See the table below

Process image error	Parameter set 3	Parameter set 2	Parameter set 1
	PS3	PS2	PS1
1	0	1	0
1	1	0	0

9.8 Diagnosis via LED display

Table 9-8 Diagnosis via LED display

	LED	Description
BUS	Red	Bus fault
	Red blinking	Parameterization error
	Red flickering	Basic factory settings restored (red flickering for 5 sec)
	Red-green toggling*)	Parameter error while starting S7
	Green	Device exchanging data
	Yellow	Device not initialized and bus error! (Send in device!)
	Yellow-green blinking	Device not initialized and parameter error! (Send in device!)
	Off	Device not exchanging data!
Specifications	Specifications	
Error:	BF = bus fault	
Frequency specifications:	Blinking:	0.5 Hz
	Flickering:	8 to 10 Hz
	*) Toggling:	2 to 10 Hz



9.9 Diagnosis with STEP 7

9.9.1 Reading out the diagnostic data

Length of the diagnostics message frame

The maximum message frame length is 32 bytes.

9.9.2 Options for reading diagnostic data

Table 9-9 Reading out the diagnostics information with STEP 7

Automation system with DP master	Blocks or registers in STEP 7	Application	See
SIMATIC S7/M7	SFC 13 "DP NRM_DG"	Reading slave diagnostic data (stored in the data area of the user program)	Chapter Structure of the slave diagnostics (Page 173); for SFC, see online help in STEP 7

Example of reading out S7 diagnostics using SFC 13 "DP NRM_DG"

This is an example of how to use the SFC 13 to read out the slave diagnostics for a DP slave in the STEP 7 user program.

Assumptions

The following assumptions apply for this STEP 7 user program:

- Diagnostics address is 1022 (3FEH).
- Slave diagnostic data must be stored in DB82: from address 0.0, length 32 bytes.
- The slave diagnostic data has a length of 32 bytes.



STEP 7 user program

STL	Explanation
CALL SFC 13	
REQ :=TRUE	Read request
LADDR :=W#16#3FE	Diagnostic address
RET_VAL :=MW0	RET_VAL of SFC 13
RECORD :=P#DB82.DBX 0.0 BYTE 32	Mailbox for diagnostic data in DB82
BUSY :=M2.0	Read process runs over several OB1
	cycles

9.9.3 Structure of the slave diagnostics

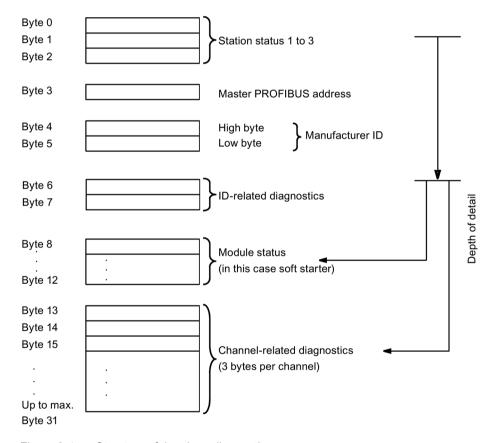


Figure 9-4 Structure of the slave diagnostics

Note

The length of the diagnostics message frame varies between 13 and 32 bytes. The length of the diagnostics message frame last received can be seen in STEP 7 from the RET_VAL parameter of SFC 13.



9.9.4 Station status 1 to 3

Definition

The station status 1 to 3 provides an overview of the status of a DP slave.

Table 9- 10 Structure of station status 1 (byte 0)

Bit	Meaning	Cause/remedy
0	1: The DP master cannot address the DP slave.	Correct station address set on the DP slave?
		Is the bus connector in place?
		Voltage at the DP slave?
		Is the RS 485 repeater set correctly?
		Reset triggered on the DP Slave?
1	1: The DP slave is not yet ready for the data transfer.	Wait, the DP slave is currently starting up.
2	1: The configuration data transferred from the DP master to the DP slave does not match the DP slave configuration.	Verify the station type or DP slave configuration in the configuration software.
3	External diagnostics information is pending (group diagnostics indication)	Evaluate the ID-specific and/or channel-specific diagnostic information, and the module status. As soon as all errors are remedied the bit 3 is reset. The bit will be set again when there is a new diagnostics message in the bytes of the aforementioned diagnostics.
4	1: The required function is not supported by the DP slave (for example, changing the station address by means of software).	Check the configuration.
5	1: The DP master cannot interpret the response of the DP slave.	Check the bus configuration.
6	1: The DP slave type does not match the software configuration.	Has the correct station type been entered in the configuration software?
7	1: The DP slave has been parameterized by another DP master (not by the DP master that has access to the DP slave at the moment).	The bit is always 1, for example, if you access the DP slave with the PG or another DP master. The "Master PROFIBUS address" diagnostic byte contains the station address of the DP master that assigned parameters to the DP slave.



Station status 2

Table 9- 11 Structure of station status 2 (byte 1)

Bit		Meaning	
0	1:	The DP slave must be parameterized again.	
1	1:	A diagnostic message is pending. The DP slave will not work until the fault is rectified (static diagnostic message).	
2	1:	The bit is always "1" when the DP slave with this station address is configured.	
3	1:	Response monitoring is enabled for this DP slave.	
4	1:	The DP slave has received the "FREEZE" control command. 1)	
5	1:	The DP slave has received the "SYNC" control command. 1)	
6	0:	Bit is always "0".	
7	1:	The DP slave is deactivated, i.e. it is decoupled from the current processing.	

¹⁾ The bit is only updated if another diagnostics message also changes.

Station status 3

Table 9- 12 Structure of station status 3 (byte 2)

Bit		Meaning
0 to 6	0:	Bits are always "0".
7	1:	There are more diagnostics messages pending than the DP slave is able to store.
		The DP master cannot enter all the diagnostics messages sent by the DP slave in its diagnostics buffer (channel-specific diagnostics).



9.9.5 Master PROFIBUS address

The master PROFIBUS address diagnostics byte contains the station address of the DP master:

- that has parameterized the DP slave and
- has read and write access to the DP slave.

The master PROFIBUS address is stored in byte 3 of the slave diagnostics.

9.9.6 Manufacturer ID

Definition

The manufacturer's ID contains a code specifying the DP slave type.

Table 9- 13 Structure of the manufacturer ID

Byte 4	Byte 5	Manufacturer ID for
80н	DE _H	Soft starter


9.9.7 ID-related diagnostics

Definition

Identifier-related diagnostic data indicates whether soft starters are faulty or not. Identifier-related diagnostics begins at byte 6 and is 2 bytes long.

ID-related diagnostics

Identifier-related diagnostics for soft starters is structured as follows:

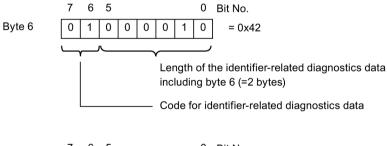

 


Figure 9-5 Configuration of identifier-related diagnostics



9.9.8 Module status

Definition

The module status represents the status of the configured modules (in this case: soft starters) and provides details of the identifier-related diagnostics. The module status starts after the identifier-related diagnostics and consists of 5 bytes.

Structure of the module status

The module status is structured as follows:

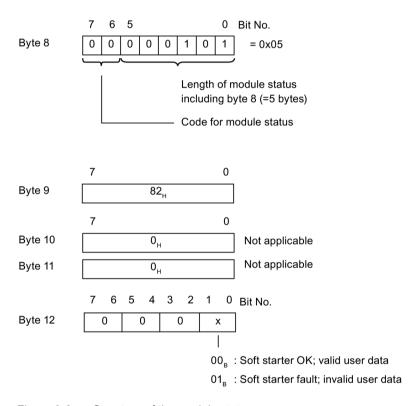


Figure 9-6 Structure of the module status



9.9.9 Channel-related diagnostics

Definition

Channel-related diagnostics provides information about channel faults in modules (in this case: soft starters) and provides details of the identifier-related diagnostics. Channel-related diagnostics begins after the module status. The maximum length is limited by the maximum total length of slave diagnostics amounting to 31 bytes. Channel-related diagnostics does not affect the module status.

Up to 9 channel-related diagnostics messages are possible (see also station status 3, bit 7).

Channel-related diagnostics

Channel-related diagnostics is configured as follows:

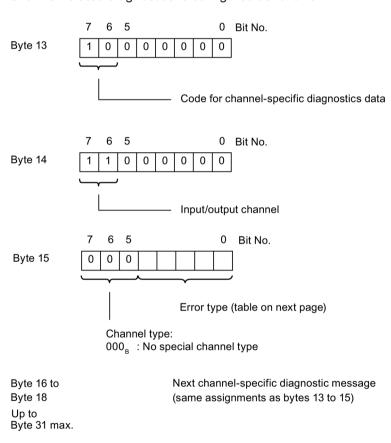


Figure 9-7 Configuration of the channel-related diagnostics



Note

Channel-related diagnostics is always updated up to the current diagnostics message in the diagnostics message frame. Subsequent, older diagnostics messages are not deleted.

Remedy: Evaluate the valid, current length of the diagnostics message frame:

• STEP 7 from the parameter RET_VAL of SFC 13.

Fault types

The diagnostics alarm is signaled on channel 0.

Table 9- 14 Fault types

Fault No.	Fault type	Meaning/cause	Delete alarm bit/acknowledgement
F1	00001: Short-circuit	Short-circuit of the temperature sensor	Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged with "trip reset".
F4	00100: Overload	 Overload of the temperature sensor Overload of the thermal motor model 	Alarm bit is updated continually.
F5	00101: Overtemperature	Overload of the contact block	Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged with "trip reset".
F6	00110: Wire break	Wire break of the temperature sensor	Alarm bit is updated continually.
F7	00111: Maximum limit value exceeded	I _e limit value overshot	
F8	01000: Minimum limit value undershot	I _e limit value undershot	
F9	01001: Error	 Internal error/device error Contact block defective 	Alarm bit can be deleted when the cause of the error has been eliminated by • Switching the supply voltage On and Off • "Restart" command if possible
F16	10000: Parameterization error	Invalid parameter value	Alarm bit is always deleted when acknowledged with "trip reset".
F17	10001: No sensor or load voltage	 Electronics supply voltage too low No contact block supply voltage No supply voltage 	Alarm bit is deleted when the cause of tripping has been eliminated or automatically acknowledged.



Fault No.	Fault type	Meaning/cause	Delete alarm bit/acknowledgement
F24	11000: Actuator tripping	 Tripping due to overload Tripping due to zero current Tripping due to asymmetry Tripping due to ground fault 	Alarm bit is always deleted when acknowledged with "trip reset". Additional acknowledgment in combination with another error.
F26	11010: External fault	Overload of the sensor supplyProcess image error	Alarm bit is always deleted when acknowledged with "trip reset".

9.10 Data formats and data sets

9.10.1 Properties

The soft starter evaluates a large amount of operating, diagnostic, and statistical data.

Control data

Data that is transferred to the soft starter, e.g. motor CCW switching command, trip reset, etc.

Data format: Bit

Messages

Data that is transferred from the soft starter and indicates the current operating status, e.g., Motor CCW, etc.

Data format: Bit

Diagnostics

Data that is transferred from the soft starter and indicates the current operating status, e.g., Overload fault, etc.

Data format: Bit



Current values

Current values are coded in different current formats, namely in

- 6-bit current format,
- 8-bit current format, and
- 9-bit current format:

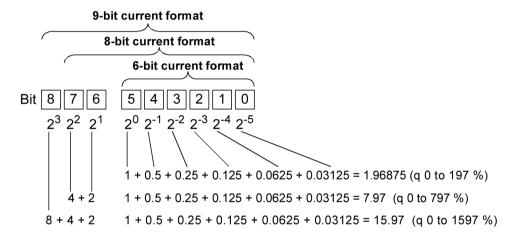


Figure 9-8 Current formats

Current values are

- Motor current I_{max} (6-bit current format)
- Phase currents I_{L1max}, I_{L2max}, I_{L3max} (8-bit current format)
- Last trigger current (9-bit current format)
- Maximum tripping current (9-bit current format)



Statistical data on device service life

Operating hours

The soft starter records 2 operating hour values:

Motor operating hours

Specifies for how long the motor was switched on

Operating hours of the device (soft starter)

This indicates how long the 115 V AC or 230 V AC voltage supply of the soft starter was switched on.

Both operating hour values are recorded in data set 95 - "Read statistics". They are entered in the "Operating hours" data field at 1-second intervals. The operating hours are recorded in the range from 0 to 232 seconds in 1-second increments.

Number of overload trips

The soft starter counts the number of overload trips in the range from 0 to 65535.

Number of starts motor CW/CCW

The soft starter counts the number of starts in the range from 0 to 232

Example: if current flows in the main circuit after the "Motor ON" command, the value is incremented by 1.

- Number of starts, outputs 1 to 4
- Motor current I_{max}

The soft starter measures the current in all 3 phases and displays the current of the highest loaded phase as a percentage [%] of the set current I_e.

Data format: 1 byte, 8-bit current format

Example: Set current le = 60 A

Displayed motor current 110 %

then corresponds to 60 A x 1.1 = 66 A

All 3 phase currents are available in data block 94

Last trip current

The soft starter measures the current in all 3 phases and displays the current that is flowing in the highest loaded phase when tripping occurs as a percentage [%] of the set current I_e and in amperes [A]

Data format: 2 byte, 9-bit current format

Example: Set current I_e = 60 A

Indicated motor current 455 % then corresponds to 60 A x 4.55 = 273 A



Statistics data of the maximum pointer

Maximum pointers are used for preventive diagnostics:

- The maximum measured value is stored in the device.
- The higher-level PLC can retrieve the measured value at any time.
- The higher-level PLC can reset the measured value at any time.

The following data is available as a maximum pointer:

- Number of overload trips.
- Phase current I_{L1max} to I_{L3max} and I_{L1min} to I_{L3min}. Maximum and minimum phase current as a percentage [%] of set current I_e and in amperes [A]
 - Data format: 1 byte each, 8-bit current format
 - Both the measured maximum and minimum phase currents in bypass operation are stored per phase.
- Minimum and maximum phase-to-phase voltages U_{Lx} U_{Ly} as RMS values in 0.1 V.
 Minimum and maximum line frequency in 0.5 Hz resolution.



9.11 Identification number (ID No.), error codes

9.11.1 Identification number (ID No.)

The identification number (ID No.) is used for unique identification of all the information available in the motor starter (parameters, control commands, diagnostics, commands, etc.). It is located in the left-hand column of the data set tables.

9.11.2 Error codes for negative data set acknowledgement

Description

If a data set is rejected, an error code is sent with the negative acknowledgment, both via the device interface and via the bus interface. This provides information about the reason for the negative acknowledgment.

The error codes comply with the PROFIBUS-DPV1 standard in as far as it applies to the soft starter.

Evaluation via local device interface with Soft Starter ES

The error codes are evaluated by the Soft Starter ES parameterization and diagnostic software and output in plain text. More information on this can be found in the online help of Soft Starter ES.

Evaluation via PROFIBUS DP

The error codes are output via PROFIBUS DP Layer 2. More information can be found in the relevant manuals for the PROFIBUS DP protocol description.



Error codes

The following error codes are generated by the soft starter:

Table 9- 15 Error codes

Error codes		Error message	Cause	
Byte				
High	Low			
00н	00н	No error		
Comm	unication	interface		
80н	АОн	Negative acknowledgement for "Read data set"	Data set write-only	
80 _H	A1 _H	Negative acknowledgement for "Write data set"	Data set read-only	
80н	A2 _H	Protocol error	Layer 2 (fieldbus)	
			Device interface	
			Incorrect coordination	
80н	А9н	This function is not supported	DPV1 service does not support Read/write data set	
Access	to techn	ology		
80н	В0н	Unknown data set number	Data set number not known in the soft starter	
80н	В1н	Incorrect data set length when writing	Data set length and specified data set length different	
80 _H	В2н	Incorrect slot number	Slot not 1 or 4	
80н	В6н	Communication partner declined data acceptance!	Incorrect operating mode (automatic, manual bus, manual mode local) Determine read only. Output Determine read only.	
			Data set is read-onlyParameters cannot be changed in	
			ON state	
80H	В8н	Invalid parameter	Invalid parameter value	
Device	resource	es		
80н	С2н		No free receive buffer	
		device!	The data set is currently being updated	
			The data set request is currently active on another interface.	



9.12 Data sets (BS)

Reading/writing data sets with STEP 7

You can access the data sets of the soft starter from the user program.

Writing data sets:

S7-DPV1 master: By calling up SFB 53 "WR_REC" or SFC 58

S7 master: by calling up SFC 58

Reading data sets:

S7-DPV1 master: by calling up SFB 52 "RD REC" or SFC 59

S7 master: by calling up SFC 59

Further information

You can find additional information about the SFBs

- in the reference manual "System Software for S7-300/400, System and Standard Functions" (https://support.industry.siemens.com/cs/ww/en/view/1214574)
- in the STEP 7 online help

Byte arrangements

When data longer than one byte is stored, the bytes are arranged as follows ("big endian"):

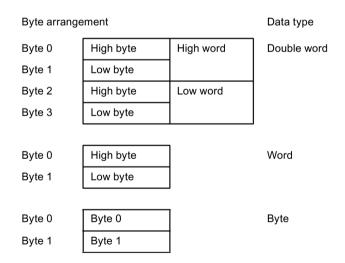


Figure 9-9 Byte arrangement in "big endian" format



9.12.1 Data set 68 - Reading/writing the process image of the outputs

Note

Note that data set 68 is overwritten by the cyclic process image in automatic mode!

Byte	Meaning		
	Header		
0	Writing coordination 0x20 via channel C1 (PLC) Writing 0x30 via channel C2 (PC) Writing 0x40 via device interface (PC)		
1 - 3	Reserved = 0		
	Process image of the outputs		
4	Process data DO-0.0 to DO-0.7, table below		
5	Process data DO-1.0 to DO-1.7, table below		
6	Reserved = 0		
7	Reserved = 0		

Table 9- 16 Data set 68 - Reading/writing the process image of the outputs

ID No.	Process data		Process image
			(16 O (outputs), DO 0.0 to DO 1.7)
1001	DO-0.	0	Motor CW
1002		1	Motor CCW
1003		2	Not used
1004		3	Trip reset
1005		4	Emergency start
1006		5	Not used
1007		6	Slow speed
1008		7	Not used
1009	DO-1.	0	Output 1
1010		1	Output 2
1011		2	Parameter set bit 0
1012		3	Parameter set bit 1
1013		4	Not used
1014		5	Not used
1015		6	Not used
1016		7	Disable quick stop

In the "Automatic mode", the PLC specifies the process image of the outputs. In this case, reading of data set 68 at the local device interface returns the process image of the outputs as transmitted by the PLC.



9.12.2 Data set 69 - Reading the process image of the inputs

Byte	Meaning	
	Process image of the inputs	
0	Process data DI-0.0 to DI-0.7, table below	
1	Process data DI-1.0 to DI-1.7, table below	
2	Reserved = 0	
3	Reserved = 0	

Table 9- 17 Data set 69 - Reading the process image of the inputs

ID No.	Process data		Process image:
			(16 I (inputs), DI 0.0 to DI 1.7)
1101	DI-0.	0	Ready (automatic)
1102		1	Motor ON
1103		2	Group fault
1104		3	Group warning
1105		4	Input 1
1106		5	Input 2
1107		6	Input 3
1108		7	Input 4
1109	DI-1.	0	Motor current I _{act-bit0}
1110		1	Motor current lact-bit1
1111		2	Motor current Iact-bit2
1112		3	Motor current I _{act-bit3}
1113		4	Motor current Iact-bit4
1114		5	Motor current I _{act-bit5}
1115		6	Manual mode local
1116		7	Ramp operation



9.12.3 Data set 72 - Logbook - Reading device errors

Table 9- 18 Data set 72 - Logbook - Reading device errors

Byte	Meaning	Value range	Increment	Note
0 - 3	Operating hours - device	1 2 ³² s	1 second	Oldest entry
4 - 5	ID number of the device error	0 ±32767 s	1	
6 - 9	Operating hours - device	1 2 ³² s	1 second	Second oldest entry
10 - 11	ID number of the device error	0 ±32767 s	1	
etc.				
120 - 123	Operating hours - device	1 2 ³² s	1 second	Last, newest entry
124 - 125	ID number of tripping operation	0 ±32767 s	1	

This data set can accommodate 21 entries. When all locations have been written, the first entry is overwritten again.

Note

The newest entry is entered at the end of the data set. The remaining entries are moved up one entry.

The following messages can be entered:

ID No.	Device fault - messages
452	Heatsink - thermistor defective
1466	Contact 1 failed
1467	Contact 2 failed
1468	Contact 3 failed
1417	Bypass element defective



9.12.4 Data set 73 - Logbook - Reading the trips

Table 9- 19 Data set 73 - Logbook - Reading the trips

Byte	Meaning	Value range	Increment	Note
0 - 3	Operating hours - device	1 2 ³² s	1 second	Oldest entry
4 - 5	ID number of the device error	0 ± 32767	1	
6 - 9	Operating hours - device	1 2 ³² s	1 second	Second oldest entry
10 - 11	ID number of the device error	0 ± 32767	1	
etc.				
120 - 123	Operating hours - device	1 2 ³² s	1 second	Last, newest entry
124 - 125	ID number of tripping operation	0 ± 32767	1	

This data set can accommodate 21 entries. When all locations have been written, the first entry is overwritten again.

Note

The newest entry is entered at the end of the data set. The remaining entries are moved up one entry.



The following messages can be entered:

Table 9- 20 Messages in the logbook - Reading the trips

ID No.	Trips - messages
309	Contact block overload
317	Electronics supply voltage too low
319	No supply voltage
324	Temperature sensor overload
325	Temperature sensor wire break
326	Temperature sensor short-circuit
327	Thermal motor model overload
334	I _e limit value overshot
335	I _e limit value undershot
339	Motor stalled - switched off
341	Asymmetry tripping
343	Ground fault tripping
355	Process image error
365	Invalid parameter value
ID No. of inc	correct parameter
1407	Electronics supply voltage too high
1408	No load
1409	Phase failure L1
1410	Phase failure L2
1411	Phase failure L3
1421	Impermissible I _e /CLASS setting
1479	Phase angle control failure
1481	System voltage too high
1482	Current measuring range overshot



9.12.5 Data set 75 - Logbook - Reading events

Table 9- 21 Data set 75 - Logbook - Reading events

Byte	Meaning	Value range	Increment	Note
0 - 3	Operating hours - device	1 2 ³² s	1 second	Oldest entry
4 - 5	ID number of the device error	0 ± 32767*)	1	
6 - 9	Operating hours - device	1 2 ³² s	1 second	Second oldest entry
10 - 11	ID number of the device error	0 ± 32767*)	1	
etc.				
120 - 123	Operating hours - device	1 2 ³² s	1 second	Last, newest entry
124 - 125	ID number of tripping operation	0 ± 32767*)	1	

^{*) +} incoming event, - outgoing event

This data set can accommodate 21 entries. When all locations have been written, the first entry is overwritten again.

Note

The newest entry is entered at the end of the data set. The remaining entries are moved up one entry.



The following messages can be entered:

Table 9- 22 Messages in the logbook - Reading events

ID No.	Events - messages	Note				
	Warnings					
324	Temperature sensor overload	± (coming/going event)				
325	Temperature sensor wire break	± (coming/going event)				
326	Temperature sensor short-circuit	± (coming/going event)				
327	Thermal motor model overload	± (coming/going event)				
334	I _e current limit exceeded	± (coming/going event)				
335	I _e current limit undershot	± (coming/going event)				
340	Asymmetry detected	± (coming/going event)				
342	Ground fault detected	± (coming/going event)				
Action	s					
310	Emergency start active	± (coming/going event)				
357	Automatic mode	+ (coming event only)				
358	Manual bus mode	+ (coming event only)				
359	Manual mode local	+ (coming event only)				
360	Connection abort in manual mode	+ (coming event only)				
363	Maximum pointer deleted	+ (coming event only)				
365	Invalid parameter value	+ (coming event only)				
ID No.	of incorrect parameter					
366	Parameters cannot be changed in ON state	+ (coming event only)				
ID No.	ID No. of incorrect parameter					
368	Parameters disabled CPU/master active	± (coming/going event)				
369	Factory settings restored	+ (coming event only)				
1302	Logbook - trips deleted	+ (coming event only)				
1303	Logbook - events deleted	+ (coming event only)				



9.12.6 Data set 81 - Reading the basic settings of data set 131

Data set 81 corresponds in structure and content to data set 131. Data set 81 supplies the default values for all parameters of data set 131.

9.12.7 Data set 82 - Reading the basic settings of data set 132

Data set 82 corresponds in structure and content to data set 132. Data set 82 supplies the default values for all parameters of data set 132.

9.12.8 Data set 83 - Reading the basic settings of data set 133

Data set 83 corresponds in structure and content to data set 133. Data set 83 supplies the default values for all parameters of data set 133.

9.12.9 Data set 92 - Reading device diagnostics

Table 9-23 Data set 92 - Reading device diagnostics

ID No.	Byte ^{Bit}	Alarm bit	Error No.*)	Meaning/acknowledgment
Switching	/controlling	•	<u>.</u>	
301	00	Ready (automatic)	-	Device is ready for operation via host (e.g. PLC), alarm bit is updated continually.
306	01	Motor CW	-	Contact block 1 is switched on, alarm bit is updated continually.
307	02	Motor CCW	-	Contact block 2 is switched on, alarm bit is updated continually.
309	03	Contact block overload	F5, F24	e.g. power semiconductor too hot, causing motor to trip.
				Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged with "trip reset".
308	04	Contact block defective	F9	e.g. contactor is fusion- welded/jammed or power semiconductor has fused.
				Alarm bit can only be deleted by switching the supply voltage on and off once the cause of the error has been eliminated.
310	05	Emergency start active	-	Alarm bit is deleted when emergency start is deactivated.



ID No.	Byte ^{Bit}	Alarm bit	Error No.*)	Meaning/acknowledgment
302	0e	Group fault	-	At least 1 error that generates an E No. is set. Alarm bit is deleted when the cause of tripping has been eliminated and acknowledged with "trip reset, auto reset, OFF command"
304	07	Group warning	-	At least 1 warning is pending, alarm bit is updated continually.
	10	Reserved = 0	-	
319	11	No supply voltage	F17, F24	Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged with "trip reset".
	12	Reserved = 0	-	
312	1 ³	Starting active	-	Alarm bit is updated continually.
313	14	Coast down active	-	7
	15	Reserved = 0	-	
316	16	Electrical braking active	-	Brake output is switched on by the soft starter, alarm bit is updated continually.
314	17	Slow speed active	-	Alarm bit is updated continually.
Protective	e function: Mo	tor/cable/ short-circuit	•	-
324	20	Temperature sensor overload	F4	Overload detected, alarm bit is updated continually.
325	21	Temperature sensor wire break	F6	Thermistor circuit interrupted, alarm bit is updated continually.
326	22	Temperature sensor short-circuit	F1	Short-circuit in thermistor circuit, alarm bit is updated continually.
327	23	Thermal motor model overload	F4	Overload detected, alarm bit is updated continually.
328	24	Overload tripping	F24	Motor is tripped due to a detected overload. Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged with "trip reset"/"auto reset".
329	25	Idle time active	-	Alarm bit is updated continually.
330	2 ⁶	Cooling time active	-	Alarm bit is updated continually.
	27	Reserved = 0	-	
	30-6	Reserved = 0	-	
352	37	Input control	-	Device receives control commands via the inputs, alarm bit is updated continually.
340	40	Asymmetry detected	-	Asymmetry is present, alarm bit is updated continually.



ID No.	Byte ^{Bit}	Alarm bit	Error No.*)	Meaning/acknowledgment
341	41	Asymmetry tripping	F24	Tripping of the motor due to asymmetry. Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged with "trip reset".
334	42	I _e limit value overshot	F7	Limit exceeded, alarm bit is updated continually.
335	43	le limit value undershot	F8	Limit undershot, alarm bit is updated continually.
336	44	I _e current limit tripping	F24	Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged with "trip reset".
	4 ⁵	Reserved = 0	-	
	46	Reserved = 0	-	
339	47	Motor stalled - switched off	F24	Trip, stalling current detected for longer than the permitted stalling time. Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged
				with "trip reset".
344	50	Input 1	-	States of the inputs
345	5 ¹	Input 2	-	"1" = active, HIGH level is present
346	5 ²	Input 3	-	"0" = inactive, LOW level is present
347	5 ³	Input 4	-	Alarm bit is updated continually.
	5 ⁴⁻⁷	Reserved = 0	-	
342	60	Ground fault detected	-	Ground fault is present, alarm bit is updated continually.
343	61	Ground fault tripping	F24	Tripping of the motor due to ground fault. Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged with "trip reset".
353	62	Quick stop active	F26, F24	Tripping of the motor due to quick stop. Alarm bit is automatically deleted when the cause of the fault has been removed and acknowledged with "trip reset".
	6 ³	Reserved = 0	-	



ID No.	Byte ^{Bit}	Alarm bit	Error No.*)	Meaning/acknowledgment
361	64	Trip reset successful	-	Alarm bit is deleted by an update or by a "Trip Reset" in ready for operation status.
362	6 ⁵	Trip reset not possible	-	Tripping cause is still present.
				Alarm bit is deleted by an update (new "Trip Reset") or by a "Trip Reset" in ready for operation status.
363	6 ⁶	Maximum pointer deleted	-	Alarm bit is always deleted when acknowledged with "trip reset".
317	67	Electronics supply voltage too low	-	Alarm bit is deleted automatically when the cause of tripping has been eliminated.
Communic	cation			
303	70	Bus fault	-	Watchdog timer of DP interface has elapsed, alarm bit is updated continually.
356	71	CPU/Master STOP	-	PLC program is no longer being executed, alarm bit is updated continually.
357	72	Automatic mode	-	Automatic (PLC controlled), alarm bit is updated continually.
358	73	Manual bus mode	-	Manual mode via fieldbus (HMI controls), alarm bit is updated continually.
359	74	Manual mode local	-	Manual mode via local device interface, (HMI controls), alarm bit is updated continually.
	7 ⁵	Reserved = 0	-	
360	76	Connection abort in manual mode local	-	During manual mode, the related communication connection was interrupted, alarm bit is updated continually.
355	77	Process image error	F26, F24	Process image of the outputs contains an impermissible bit combination.
				Alarm bit is deleted automatically when the cause of tripping has been eliminated.
Paramete	rs			
364	80	Parameter assignment active	-	Alarm bit is updated continually.
365	81	Invalid parameter value	F16	Alarm bit is always deleted when acknowledged with "Trip Reset" or valid parameters have been received.



ID No.	Byte ^{Bit}	Alarm bit	Error No.*)	Meaning/acknowledgment
366	82	Parameters cannot be changed in ON state	-	Attempted parameter change while motor is running or during relevant device function, which has caused the trip.
				Alarm bit is always deleted when acknowledged with "Trip Reset" or valid parameters have been received.
368	83	Parameters disabled CPU/master active	-	Alarm bit is updated continually, soft starter ignores parameters from the PLC.
	84-7	Reserved = 0	-	
Device fur	nctions			
	90-2	Reserved = 0	-	
369	93	Factory settings restored	-	Alarm bit is always deleted when acknowledged with "trip reset".
	94-7	Reserved = 0	-	
367	10	Incorrect parameter number (low byte)	-	In conjunction with bytes 81 and 82,
	11	Incorrect parameter number (high byte)	-	specifies the ID No. of the first parameter not accepted.
				Alarm bit is always deleted when acknowledged with "trip reset".
	120-1	Reserved = 0	-	
1421	12 ²	Impermissible I _e /CLASS setting	-	
	12 ³⁻⁷	Reserved = 0	-	
1449	130	Parameter set 1 active	-	
1450	13 ¹	Parameter set 2 active	-	
1451	13 ²	Parameter set 3 active	-	
	13 ³	Reserved = 0	-	
1453	13 ⁴	Parameter set change impermissible	-	
	13 ⁵⁻⁷	Reserved = 0	-	
	140-1	Reserved = 0	-	
1404	142	Motor heating active	-	
1402	14 ³	DC braking active	-	
1403	14 ⁴	Dynamic DC braking active	-	
1471	14 ⁵	Star/delta motor connection	-	
1472	14 ⁶	Inside-delta motor connection	-	
1473	14 ⁷	Motor connection type unknown	-	
1408	15 ⁰	No load	-	
	15 ¹	Reserved = 0	-	
1409	15 ²	Phase failure L1	-	
1410	15 ³	Phase failure L2	-	
1411	15 ⁴	Phase failure L3	-	
1412	15 ⁵	Rotational direction of line frequency right	-	



ID No.	Byte ^{Bit}	Alarm bit	Error No.*)	Meaning/acknowledgment
1413	15 ⁶	Rotational direction of line frequency left	-	
	15 ⁷	Reserved = 0	-	
	16	Reserved = 0	-	
1435	170	Output 1 active	-	
1436	17 ¹	Output 2 active	-	
1437	17 ²	Output 3 active	-	
1438	17 ³	Output 4 active	-	
	174-7	Reserved = 0	-	
	18	Reserved = 0	-	
Switching	controlling			·
1407	19 ⁰	Electronics supply voltage too high		
1470	19¹	Ready to start ON for motor		
1414	19 ²	Contact block short-circuited		
1417	19 ³	Bypass element defective		
1418	19 ⁴	Reserved = 0		
1466	19 ⁵	Contact 1 failed		
1467	19 ⁶	Contact 2 failed		
1468	19 ⁷	Contact 3 failed		
Protection	function			·
1422	200	Thermal motor model deactivated		
	201-2	Reserved = 0		
1479	203	Phase angle control failure		
	204-7	Reserved = 0		
1415	21 ⁰	Contact block cooling time active		
1416	21 ¹	Contact block too hot for start		
1482	21 ²	Current measuring range overshot		
	213-7	Reserved = 0		
Communi	cation			
357	220	Automatic mode (redundant to bit 7.2)		
358	221	Manual bus mode (redundant to bit 7.3)		
1443	22 ²	Manual bus - PC controls		
359	223	Manual mode local (redundant to bit 7.4)		
1444	224	Manual mode local - input controls		
1445	225	Manual mode local - HMI controls		
1446	22 ⁶	Manual mode local - PC controls		
	22 ⁷	Reserved = 0		
	23	Reserved = 0		



ID No.	Byte ^{Bit}	Alarm bit	Error No.*)	Meaning/acknowledgment
Prewarnin	ıgs			
	240-1	Reserved = 0		
1419	242	Prewarning limit - remaining time for tripping undershot		
1420	24 ³	Prewarning limit - motor heating exceeded		
	244-7	Reserved = 0		
	25	Reserved = 0		
	26	Reserved = 0		
	27	Reserved = 0		
	28	Reserved = 0		
	29	Reserved = 0		

^{*)} PROFIBUS DP error numbers



9.12.10 Data set 93 - Writing a command

Structure of the command data set

Byte	Meaning	Note
Header	,	
0	Coordination	0x20 Writing via C1 channel (PLC)
		0x30 Writing via C2 channel (PC)
		0x40 Writing 0x40 via device interface (PC)
1 - 3	Reserved	
Command		
4	Number of commands	Value range 1 5
		Number of subsequent valid commands
5	Command 1	Sequential No., see table below
6	Command 2	Optional (see table below for coding)
7	Command 3	Optional (see table below for coding)
8	Command 4	Optional (see table below for coding)
9	Command 5	Optional (see table below for coding)

Table 9- 24 Data set 93 - Writing a command

ID No.	Coding	Command	Meaning
1-byte co	mmands		-
0	0	Reserved	No function
703	1	Trip reset	Resetting and acknowledging of error messages
713	2	Emergency start ON	Switch on emergency start
714	3	Emergency start OFF	Switch off emergency start
701	6	Factory settings	Restore the basic factory settings of the parameters.
704	7	Reset maximum pointer	The measured values for preventive diagnostics are deleted (= 0).
705	13	Logbook - delete trips	Delete logbook of recorded error causes.
706	14	Logbook - delete events	Delete logbook of recorded alarms and specific actions.
702	9	Restart	Initiate a restart (same as after power ON), e.g., after reassignment of the station address.
707	10	Parameters disabled CPU/master ON	Parameterization by parameterizing master not possible, or its parameters are ignored.
708	11	Parameters disabled CPU/master OFF	Parameterization by parameterizing master is possible.



9.12.11 Data set 94 - Reading measured values

Table 9- 25 Data set 94 - Reading measured values

ID No.	Byte ^{Bit}	Meaning	Value range/[coding]	Increment	Note	
Measure	d values					
504	0	Phase current I _{L1} (%)	0 797 % / [0 255]	3.125%	8-bit current	
505	1	Phase current I _{L2} (%)	0 797 % / [0 255]	3.125%	format	
506	2	Phase current I _{L3} (%)	0 797 % / [0 255]	3.125%		
507	3	Reserved = 0				
501	4 - 5	Remaining motor cooling time	0 1 800 s / [0 18 000]	0.1 s		
502	60-6	Motor heating	0 200 % / [0 100]	2 %		
	6 ⁷	Asymmetry ≥ 40%	No asymmetry [0]			
			Asymmetry (≥ 40%) [1]			
503	7	Asymmetry	0 100 % / [0100]	1 %		
	8	Reserved = 0				
	10	Reserved = 0				
	11	Reserved = 0				
	12 - 13	Reserved = 0				
	14	Reserved = 0				
508	16	Output frequency	0 100 Hz / [0 200]	0.5 Hz		
	17	Reserved = 0				
	18	Reserved = 0				
	19	Reserved = 0				
509	20	Line frequency	0 100 Hz / [0 200]	0.5 Hz		
	21	Reserved = 0				
510	22 - 23	Line-to-line voltage U _{L1-L2} (rms)	0 1500 V / [0 15000]	0.1 V		
511	24 - 25	Line-to-line voltage U _{L2-L3} (rms)	0 1500 V / [0 15000]	0.1 V		
512	26 - 27	Line-to-line voltage U _{L3-L1} (rms)	0 1500 V / [0 15000]	0.1 V		
513	28 - 31	Phase current I _{L1} (rms)	0 20000 A / [0 2000000]	0.01 A		
514	32 - 35	Phase current I _{L2} (rms)	0 20000 A / [0 2000000]	0.01 A		
515	36 - 39	Phase current I _{L3} (rms)	0 20000 A / [0 2000000]	0.01 A		
516	40 - 41	Electronics supply voltage	0 1500 V / [0 15000]	0.1 V		
517	42	Heatsink temperature	-40 127 °C / [-40 127]	1 °C		
518	43	Contact block heating	0 250 °C / [0 250]	1 °C		
519	44 - 45	Remaining cooling time of contact block	0 1800 s/ [0 18000]	0.1 s		
520	46 - 47	Remaining time for tripping of thermal motor model	0 10000 s / [0 10000]	1 s		
521	48 - 51	Output power	0 2147483 W / [0 21474830]	0.1 W		
522	52 - 63	Reserved = 0				



9.12.12 Data set 95 - Reading statistical data

Table 9- 26 Data set 95 - Reading statistical data

ID No.	Byte ^{Bit}	Meaning	Value range/[coding]	Increment	Note
Statistics					
609	0	Motor current I _{max}	0 797 % / [0 255]	3.125%	8-bit current format
	1	Reserved = 0			
608	2	Last tripping current I _A (%)	0 1 000 % / [0 320]	3.125%	
	4	Operating hours - device	0 2 ³² -1 s / [0 2 ³² -1]	1 s	
603	8 - 11	Number of starts - motor CW	0 2 ³² -1 / [0 2 ³² -1]	1	
604	12 - 15	Number of starts - motor CCW	0 2 ³² -1 / [0 2 ³² -1]	1	
605	16 - 17	Number of overload trips	0 65 535 / [0 65 535]	1	
	18	Reserved = 0			
	19	Reserved = 0			
607	20	Motor current I _{max} (rms)	0 20 000 A / [0 2 000 000]	0.01 A	
606	24	Last tripping current I _A (rms)	0 20 000 A / [0 2 000 000]	0.01 A	
602	28	Operating hours - motor	0 2 ³² -1 s / [0 2 ³² -1]	1 s	
611	32	Operating hours - motor current 18 49.9 % x I _e (max)	0 2 ³² -1 s / [0 2 ³² -1]	1 s	
612	36	Operating hours - motor current 50 89.9 % x I _{e(max)}	0 2 ³² -1 s / [0 2 ³² -1]	1 s	
613	40	Operating hours - motor current 90 119.9 % x I _{e(max)}	0 2 ³² -1 s / [0 2 ³² -1]	1 s	
614	44	Operating hours - motor current 120 1000 % x l _{e (max)}	0 2 ³² -1 s / [0 2 ³² -1]	1 s	
615	48	Reserved = 0			
616	50	Number of contact block overload trips	0 2 ³² -1 s / [0 2 ³² -1]	1	
617	52	Reserved = 0			
618	54	Reserved = 0			
619	56	Reserved = 0			
620	60	Number of electrical braking stops	0 2 ³² -1 s / [0 2 ³² -1]	1	
621	64	Number of starts - output 1	0 2 ³² -1 s / [0 2 ³² -1]	1	
622	68	Number of starts - output 2	0 2 ³² -1 s / [0 2 ³² -1]	1	
623	72	Number of starts - output 3	0 2 ³² -1 s / [0 2 ³² -1]	1	
624	76	Number of starts - output 4	0 2 ³² -1 s / [0 2 ³² -1]	1	
	80	Reserved = 0			
	84	Reserved = 0			
	88	Reserved = 0			
	89	Reserved = 0			



9.12.13 Data set 96 - Reading the maximum pointer

Table 9- 27 Data set 96 - Reading the maximum pointer

ID No.	ByteBit	Meaning	Value range/[coding]	Increment	Note
	ım pointei			•	
656	4	Phase current I _{L1 min} (%)	0 797 % / [0 255]	3.125%	In bypass
657	5	Phase current I _{L2 min} (%)	0 797 % / [0 255]	3.125%	operation
658	6	Phase current I _{L3 min} (%)	0 797 % / [0 255]	3.125%]
	7	Reserved = 0]
653	8	Phase current I _{L1 max} (%)	0 797 % / [0 255]	3.125%]
654	9	Phase current I _{L2 max} (%)	0 797 % / [0 255]	3.125%]
655	10	Phase current I _{L3 max} (%)	0 797 % / [0 255]	3.125%]
	11	Reserved = 0			
652	12	Maximum tripping current IA max (%)	0 1000 % / [0 320]	3.125%	Current during switch-off due to error
651	14	Number of motor overload trips	0 65 535 / [0 65 535]	1	Motor protection, temperature sensor, stalling
659	16	Maximum tripping current I _{A max} (rms)	0 20 000 A / [0 2 000 000]	0.01 A	Current during switch-off due to error
660	20	Phase current I _{L1 min} (rms)	0 20 000 A / [0 2 000 000]	0.01 A	In bypass operation
661	24	Phase current I _{L2 min} (rms)	0 20 000 A / [0 2 000 000]	0.01 A	
662	28	Phase current I _{L3 min} (rms)	0 20 000 A / [0 2 000 000]	0.01 A	
663	32	Phase current I _{L1 max} (rms)	0 20 000 A / [0 2 000 000]	0.01 A	
664	36	Phase current I _{L2 max} (rms)	0 20 000 A / [0 2 000 000]	0.01 A	
665	40	Phase current I _{L3 max} (rms)	0 20 000 A / [0 2 000 000]	0.01 A	
666	44	Line-to-line voltage U _{L1 - L2min} (rms)	0 1500 V / [0 15 000]	0.1 V	Reset to 0 in the
667	46	Line-to-line voltage U _{L2 - L3min} (rms)	0 1500 V / [0 15 000]	0.1 V	event of phase
668	48	Line-to-line voltage U _{L3 - L1min} (rms)	0 1500 V / [0 15 000]	0.1 V	failure or switch- off of main
669	50	Line-to-line voltage U _{L1 - L2max} (rms)	0 1500 V / [0 15 000]	0.1 V	voltage.
670	52	Line-to-line voltage U _{L2 - L3max} (rms)	0 1500 V / [0 15 000]	0.1 V	
671	54	Line-to-line voltage U _{L3 - L1max} (rms)	0 1500 V / [0 15 000]	0.1 V	
672	56	Electronics supply voltage U _{NS min} (rms)	0 1500 V / [0 15 000]	0.1 V	Reset to zero at "Power on"
673	58	Electronics supply voltage U _{NS max} (rms)	0 1500 V / [0 15 000]	0.1 V	
674	60	Maximum heatsink temperature	140 °C/ [-40 127]	1 °C	
675	61	Maximum contact block heating	0 250 % / [0 250]	1 %	



ID No.	Byte ^{Bit}	Meaning	Value range/[coding]	Increment	Note
676	62	Minimum line frequency	0 100 Hz / [0 200]	0.5 Hz	During line failure or phase failure = 0
677	63	Maximum line frequency	0 100 Hz / [0 200]	0.5 Hz	
678	64	Operating hours - motor current = 18 49.9 x l _e	0 2 ³² -1 s/ [0 2 ³² -1]	1 s	
679	68	Operating hours - motor current = 50 89.9 x l _e	0 2 ³² -1 s [0 2 ³² -1]	1 s	
680	72	Operating hours - motor current = 90 119.9 x l _e	0 2 ³² -1 s [0 2 ³² -1]	1 s	
681	76	Operating hours - motor current = 120 1000 % x l _e		1 s	
682	80	Operating hours - device	0 2 ³² -1 s/ [0 2 ³² -1]	1 s	
	84	Reserved = 0			
	85	Reserved = 0			



9.12.14 Data set 100 - Reading the device identification

Table 9- 28 Data set 100 - Reading the device identification

ID No.	Byte ^{Bit}	Value	Note
Header			
	0	Coordination	0x20 Writing via C1 channel (PLC)
			0x30 Writing via C2 channel (PC)
			0x40 Writing 0x40 via device interface (PC)
	1 - 3	Reserved = 0	
Device id	lentificatio	n (TF)	
901	4 - 11		Time stamp*)
902	12 - 31	Siemens AG	Vendor
903	32 - 55		MLFB number
904	56	0x01	Device family: Load feeder
905	57	0x01	Device subfamily: Soft starter
906	58	0x01	Device class: e.g. direct-on-line starter
907	59	0x03	System: SIRIUS 3RW44
908	60	0x46	Function group
909	61	0x00	Reserved = 0
910	62 - 77		Product order code
911	78 - 81	e.g. E001	Hardware version (byte 0 byte 3)
	82	0x00	Ident number (byte 0) (3RW44)
	83	0x00	Ident number (byte 1) (3RW44)
912	84	0x80	Ident number (byte 2) (3RW44)
	85	0xDE	Ident number (byte 3) (3RW44)
915	86 - 87	0x00	Reserved = 0
	88 - 95		Service number:
	96	0x00	Reserved = 0
	97	0x00	Reserved = 0
	98	0x00	Reserved = 0
	99	0x00	Reserved = 0

 $[\]ensuremath{^{^{*}}}\xspace$ Time stamp: Time of initialization to factory settings



Table 9- 29 Coding for time stamp

Object	name	ld_da	te						
Object	length	8 byte	es						
Bits	8	7	6	5	4	3	2	1	
Octet									
1	215	214	213	212	211	210	29	28	0 to 59999 milliseconds
2	27	26	2 ⁵	24	23	22	21	20	
3	Res	Res	2 ⁵	24	23	22	21	20	0 to 59 minutes
4	SU	Res	Res	24	23	22	21	20	0 to 23 hours
									SU: 0: Normal time; 1: Daylight saving time
5	22	21	20						1 to 7; 1 = Monday, 7 = Sunday
				24	23	22	21	20	1 to 31 days
6	Res	Res	2 ⁵	24	23	22	21	20	1 to 12 months
7	Res	2 ⁶	2 ⁵	24	23	22	21	20	0 to 99 years; 0 = 2000
8	Res	Res	Res	Res	Res	Res	Res	Res	Reserved

9.12.15 Data sets 131, 141, 151 - Technology parameters 2: Reading/writing sets 1, 2, 3

Byte ^{Bit}	Value	Note	
Header	eader		
0	Coordination	0x20 Writing via C1 channel (PLC)	
		0x30 Writing via C2 channel (PC)	
		0x40 Writing 0x40 via device interface (PC)	
1 3	Reserved = 0		



Table 9- 30 Data sets 131, 141, 151 - Technology parameters 2: Reading/writing sets 1, 2, 3

ID No.	Byte ^{Bit}	Meaning	Only in data set	Value range/[coding]	Factor
120	4 7	Device functions_2	Х		
1	8 11	Device functions_1	Х		
130	12	Rated operational current le		0 2 000 A [0 200 000]	0.01 A
3	160	Load type	Х	3-phase [0]	
4	16 ¹	Protection against voltage failure	X	No [0]Yes [1]	
	1627	Reserved = 0			
136	17	Prewarning limit - motor heating	Х	0 95 % [0 19]	5 %
5	1802	Response to overload - thermal motor model	Х	Tripping without restart [0]Tripping with restart [1]Warning [2]	
	1837	Reserved = 0			
6	1904	Tripping class	X	 CLASS 5 (10a) [3] CLASS 10 [0] CLASS 15 [4] CLASS 20 [1] CLASS 30 [2] CLASS OFF [15] 	
	1957	Reserved = 0			
7	20	Recovery time	Х	60 1 800 s [2 60]	30 s
8	21	Idle time	Х	0 255 s [0 255]	1 s
137	2223	Prewarning limit - remaining time for tripping	Х	0 500 s [0 500]	1 s
10	2401	Response to overload - temperature sensor	Х	Tripping without restart [0]Tripping with restart [1]Warning [2]	
	2423	Reserved = 0			
9	24 ⁴⁶	Temperature sensor	Х	Deactivated [0]Thermoclick [1]PTC type A [2]	
12	24 ⁷	Temperature sensor monitoring	Х	No [0]Yes [1]	
	2526	Reserved = 0			
15	28	Lower current limit		18.75 100 % [6 32]	3.125%
16	29	Upper current limit		50 150 % [16 48]	3.125%
	3031	Reserved = 0			
	3205	Reserved = 0			



ID No.	Byte ^{Bit}	Meaning	Only in data set	Value range/[coding]	Factor
14	326	Response to current limit violation	Х	Warning [0] Tripping [1]	
	32 ⁷	Reserved = 0			
	3301	Reserved = 0			
140	332	Response to overload - contact block	Х	Tripping without restart [0]Tripping with restart [1]	
	3347	Reserved = 0			
21	3402	Asymmetry limit value	Х	30 60 % [3 6]	10 %
	3435	Reserved = 0			
20	346	Response to asymmetry	Х	Warning [0]Tripping [1]	
22	347	Response to ground fault	Х	Warning [0]Tripping [1]	
	3544	Reserved = 0			
47	45	Braking torque		20 100 % [4 20]	5 %
	4647	Reserved = 0			
40	48	Starting voltage		20 100 % [4 20]	5 %
	49	Reserved = 0			
42	50	Current limiting value		 3RW44 2, 3, 4: 125 550 % [4 176] 3RW44 5: 125 500 % [40 160] 3RW44 6: 125 450 % [40 144] 	3.125 %
167	5103	Startup mode		 Direct [0] Voltage ramp [1] Torque control [2] Motor heating [3] Voltage ramp + current limiting [5] Torque control + current limiting [6] 	
168	5147	Coasting method		 Coasting down [0] Voltage ramp [1] Torque control [2] Pump stop [3] DC braking [4] Combined braking [5] 	



ID No.	Byte ^{Bit}	Meaning	Only in data set	Value range/[coding]	Factor
35	5253	Substitute value	X	The "Substitute value" parameter is only relevant if the "Response to CPU/master STOP" parameter has been set to "Switch substitute value", see Process data and process images (Page 170) • Motor CW 52 [0] • Motor CCW (only if 52 [6] active) 52 [1] • Trip reset 52 [3] • Emergency start 52 [4] • Slow speed 52 [6] • Output 1 53 [0] • Output 2 53 [1] • Parameter set bit 0 53 [2] • Parameter set bit 1 53 [3]	
	5455	Reserved = 0			
	5605	Reserved = 0			
36	56 ⁶	Group diagnostics	X	Disable [0]Enable [1]	
34	56 ⁷	Response to CPU/master STOP	Х	Switch substitute value [0]Hold last value [1]	
	5775	Reserved = 0			
26	76	Input 1 - action	X	 No action (default) [0] Manual mode local [6] Emergency start [7] Slow speed [10] Quick stop [11] Trip reset [12] Motor CW with PS1 [16] Motor CCW with PS1 [17] Motor CW with PS2 [18] Motor CCW with PS2 [19] Motor CW with PS3 [20] Motor CCW with PS3 [21] 	
28	77	Input 2 - (see Input 1 - action)	Х		
30	78	Input 3 - (see Input 1 - action)	Х		
32	79	Input 4 - (see Input 1 - action)	Х		
	8095	Reserved = 0	1		



ID No.	Byte ^{Bit}	Meaning	Only in data set	Value range/[coding]	Factor
163 96 Out		Output 1 - action	131 X	 No action (default) [0] Control source PIO DO 1.0 output 1 [1] Control source PAA-DO 1.1 output 2 [2] Control source input 1 [6] Control source input 2 [7] Control source input 3 [8] Control source input 4 [9] Run-up [10] Operation/bypass [11] Coasting down [12] ON time motor [13] Control command motor ON [14] Fan [15] DC brake contactor [16] Device ON [18] Group warning [31] Group fault [32] Bus fault [33] Device fault [34] 	
164	97	Output 2 - action (see Output 1 - action)	X	Ready to start ON for motor [38]	
165	98	Output 3 - action (see Output 1 - action)	Х		
166	99	Output 4 - action			
	100111	Reserved = 0			
116	112	Breakaway time		0 2 s [0 200]	0.01 s
117	113	Breakaway voltage		40 100 % [8 20]	5 %
169	114115	Maximum starting time		0 1 000 s [0 10 000]	0.1 s
170	116117	Starting time		0 360 s [0 3 600]	0.1 s
171	118119	Coast-down time		0 360 s [0 3 600]	0.1 s
172	120	Starting torque		10 100 % [2 20]	5 %
118	121	Limiting torque		20 200 % [4 40]	5 %
173	122	Stopping torque		10 100 % [2 20]	5 %
	123	Reserved = 0			
	124	Reserved = 0			
119	125	Motor thermal capacity		1 100 % [1 100]	1 %
	126129	Reserved = 0			



ID No.	Byte ^{Bit}	Meaning	Only in data set	Value range/[coding]	Factor
43	131	Slow speed rotation factor: CW		3 21 [3 21]	1
198	132	Slow speed rotation factor: CCW		3 21 [3 21]	1
44	133	Slow speed torque CW		20 100 % [4 20]	5 %
199	134	Slow speed torque CCW		20 100 % [4 20]	5 %
	135137	Reserved = 0			

Dependencies

- Upper current limit > lower current limit
- DC braking can only be selected when the "DC braking contactor" function is assigned to an output.
- Maximum starting time ≥ starting time
- Limiting torque > starting torque

9.12.16 Data sets 132, 142, 152 - Technology parameters 3: Reading/writing sets 1, 2, 3

Byte ^{Bit}	Value	Note
Header		
0	Coordination	0x20 Writing via C1 channel (PLC)
		0x30 Writing via C2 channel (PC)
		0x40 Writing 0x40 via device interface (PC)
1 - 3	Reserved = 0	

Table 9- 31 Data sets 132, 142, 152 - Technology parameters 3: Reading/writing sets 1, 2, 3

ID No.	ByteBit	Meaning	Value range [coding]	Factor
	4 - 9	Reserved = 0		
104	10 - 11	Rated speed	500 3 600 rpm [500 3 600]	1 rpm
	12 - 18	Reserved = 0		
113	19 - 20	Rated torque	0 65 535 Nm [0 65 535]	1 Nm
	21 - 63	Reserved = 0		



9.12.17 Data set 133 - Technology parameters 4: HMI module

Byte ^{Bit}	Value	Note
Header		
0	Coordination	0x20 Writing via C1 channel (PLC)
		0x30 Writing via C2 channel (PC)
		0x40 Writing 0x40 via device interface (PC)
1 - 3	Reserved = 0	

Table 9- 32 Data set 133 - Technology parameters 4: HMI module

ID No.	Byte ^{Bit}	Meaning	Value range [coding]	Factor
	4	Reserved = 0		
179	80-3	Language	English [0]	
			German [1]	
			French [2]	
			Spanish [3]	
			Italian [4]	
			Portuguese [5]	
181	84-7	Lighting brightness	Normal [0]	
			Delay off [4]	
			• Off [5]	
180	9	Contrast display	0 100 % [0 20]	5 %
182	100-3	Response of LEDs to fault	Unchanged [0]	
			• On (1)	
			Flashing [2]	
			Flickering [3]	
183	104-7	Response of LEDs to warning	Unchanged [0]	
			• On (1)	
			Flashing [2]	
			Flickering [3]	
	11	Reserved = 0		
184	12	Reaction time keys	10 100 % [2 20]	5 %
185	13	Auto repeat speed	10 100 % [2 20]	5 %
186	14	Auto repeat time	10 250 ms [2 20]	5 ms
187	15	HMI keys - activity monitoring time	0 1800 s [0 60]	30 s
	16 - 19	Reserved = 0		



9.12.18 Data set 160 - Reading/writing communication parameters

This data set is meant only for devices with direct access to the fieldbus (e.g. PROFIBUS DP) for assignment of communication parameters.

Table 9- 33 Data set 160 - Reading/writing communication parameters

ID No.	Byte ^{Bit}	Communication parameters	Value range [coding]	Increment	Default setting	
Header						
200	0	Coordination	0x20 Writing via C1 channel (PLC)			
			0x30 Writing via C2 channel (PC)			
			0x40 Writing 0x40 via device interface (PC)			
	1	Reserved1				
	2-3	Reserved2				
Communication						
210	4	Station address	1 126	1	126	
211	5	Baud rate	12 000 kBd [0]			
			6 000 kBd [1]			
			3 000 kBd [2]			
			1 500 kBd [3]			
			500 kBd [4]			
			187.5 kBd [5]			
			93.75 kBd [6]			
			45.45 kBd [7]			
			19.2 kBd [8]			
			9.6 kBd [9]			
			Not used [1014]			
			Automatic baud rate detection [15]			
	6-11	Reserved = 0				

Note

3RW44 soft starters signal the current baud rate while reading. During writing, the value entered is ignored, as the baud rate is always automatically detected by the soft starter.



9.12.19 Data set 165 - Reading/writing comments

You can save any text containing up to 121 characters (max. 121 bytes) in the soft starter, e.g. for system documentation.

Table 9- 34 Data set 165 - Reading/writing comments

Byte ^{Bit}	Communication parameters	Value range [coding]
Header		
0	Coordination	0x20 Writing via C1 channel (PLC)
		0x30 Writing via C2 channel (PC)
		0x40 Writing 0x40 via device interface (PC)
1	Reserved1	
2 - 3	Reserved2	
Comment		
4 - 124	Comment data	




Typical circuit diagrams

10

10.1 Connection examples for main and control circuits


10.1.1 3RW44 in a standard circuit with control via keys

3RW44 in a standard circuit with control via keys

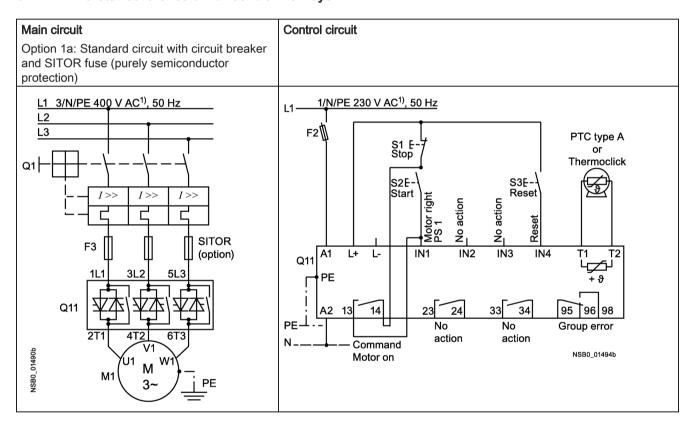




Alternative feeder configuration in the standard circuit

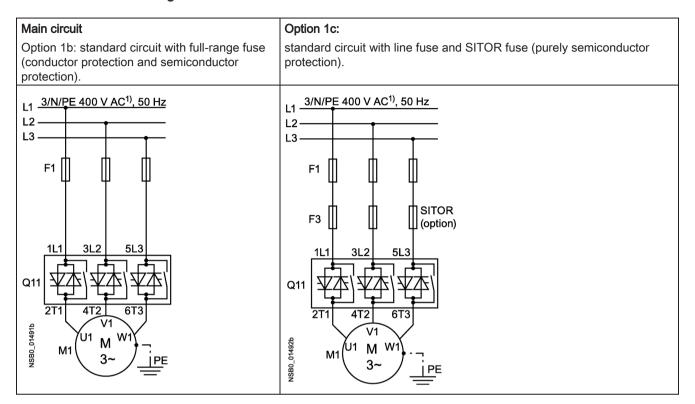

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).



10.1.2 3RW44 in a standard circuit with line contactor and control via PLC

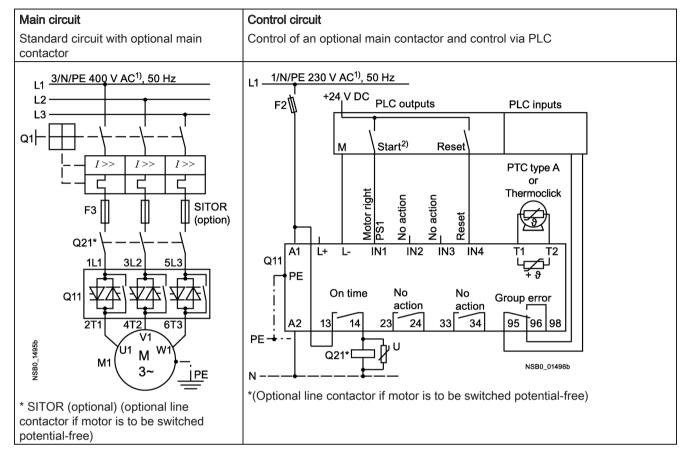

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).


Note

2) Risk of restart

The start command (e.g. issued by the PLC) must be reset when a group fault occurs, because the motor attempts to restart again automatically if a start command is still active following this reset command. This particularly applies to motor protection tripping. For safety reasons, you are advised to integrate the group fault output (terminals 95 and 96) in the controller.



10.1.3 3RW44 in a standard circuit and DC braking stopping function for device types 3RW44 22 to 3RW44 25

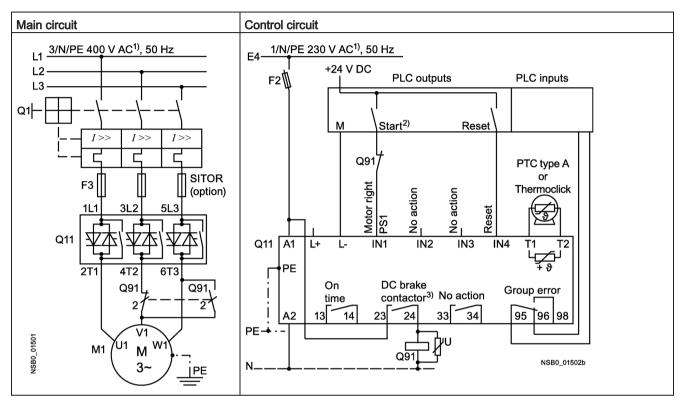

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).

Note

2) Risk of restart

The start command (e.g. issued by the PLC) must be reset prior to issuing a reset command, because the motor attempts to restart again automatically if a start command is still active following this reset command. This particularly applies if the motor protection has tripped. For safety reasons, you are advised to integrate the group fault output (terminals 95 and 96) in the controller.


- ³⁾ If the "combined braking" stopping function is selected, a braking contactor is not required. A braking contactor must be additionally used if the "DC braking" function is selected.
- ◆For types, refer to the "Feeder component layout (standard circuit)" table in chapter Feeder component layout (standard circuit) (Page 270).

The "DC braking" function is recommended for applications with larger centrifugal masses $(J_{load} > J_{motor})$.

Output 2 must be set to "DC braking contactor".



10.1.4 3RW44 in a standard circuit and DC braking stopping function for device types 3RW44 26 to 3RW44 66

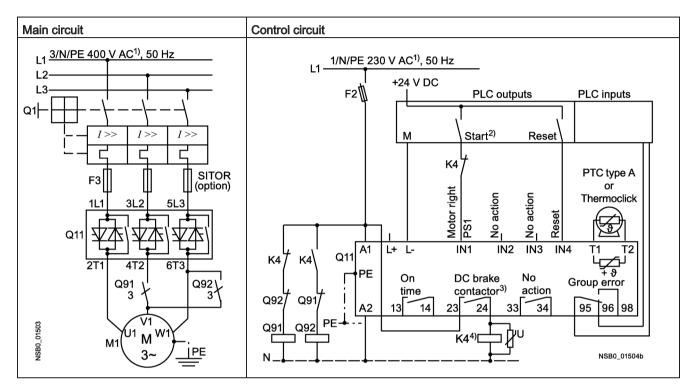

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).

Note

2) Risk of restart

The start command (e.g. issued by the PLC) must be reset prior to issuing a reset command, because the motor attempts to restart again automatically if a start command is still active following this reset command. This particularly applies if the motor protection has tripped. For safety reasons, you are advised to integrate the group fault output (terminals 95 and 96) in the controller.

³⁾ If the "combined braking" stopping function is selected, a braking contactor is not required. A braking contactor must be additionally used if the "DC braking" function is selected. For types, refer to the "Feeder component layout (standard circuit)" table in chapter Feeder component layout (standard circuit) (Page 270).

The "DC braking" function is recommended for applications with larger centrifugal masses $(J_{load} > J_{motor})$.

Output 2 must be set to "DC braking contactor".


4) Auxiliary relay K4, e.g.:

LZS:RT4A4T30 (230 V AC rated control supply voltage),

LZS:RT4A4S15 (115 V AC rated control supply voltage).



10.1.5 3RW44 in an inside-delta circuit

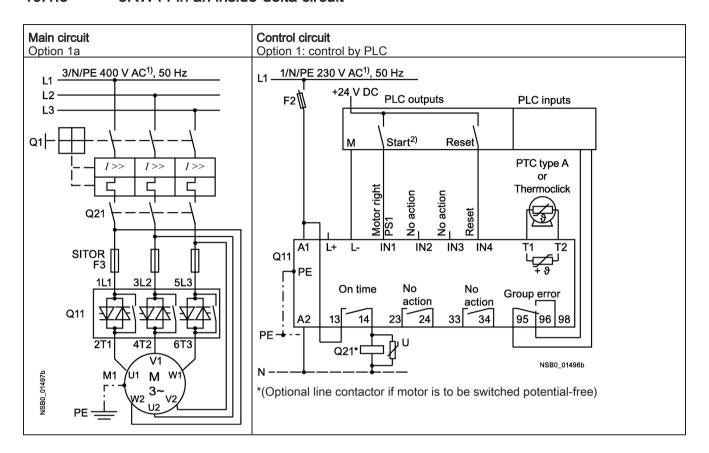




Direction of rotation change in inside-delta circuit

Main circuit

Option 1b

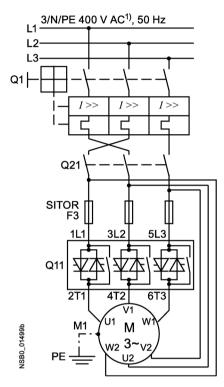

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).

Note

Please note the wiring suggestions for the inside-delta circuit on the main circuit side. Incorrect connection can result in faults.

Note


Risk of restart

The start command (e.g. issued by the PLC) must be reset prior to issuing a reset command, because the motor attempts to restart again automatically if a start command is still active following this reset command. This particularly applies if the motor protection has tripped.

For safety reasons, you are advised to integrate the group fault output (terminals 95 and 96) in the controller.



10.1.6 3RW44 in a standard circuit and control like a contactor

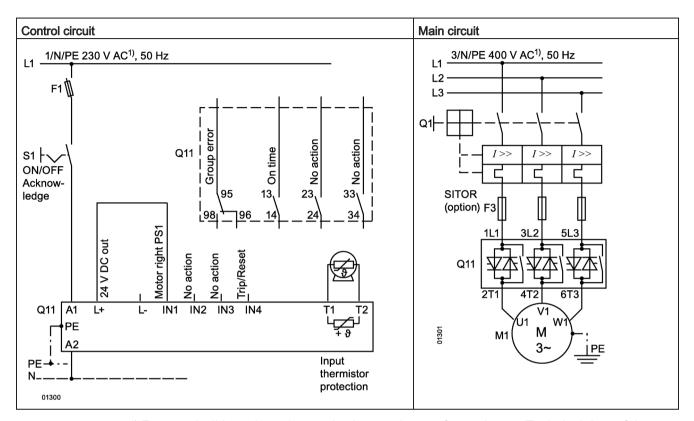

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).

Note

With this circuit type, motor starting may be delayed by up to 5 s after the start command, due to the internal run times of the soft starter. Coasting down is the only possible coasting method.

Note


After the control supply voltage has been switched off and before restarting, the device must be allowed to cool down for at least 30 s, as this influences the effectiveness of the inherent protection of the soft starter.

This type of circuit is not recommended for higher switching frequencies as the integrated fan cannot idle after the soft starter has been switched off, thus reducing the switching frequency specified in the technical data.





10.1.7 3RW44 in a standard circuit with soft start/stop and additional slow speed function in both directions of rotation with one parameter set

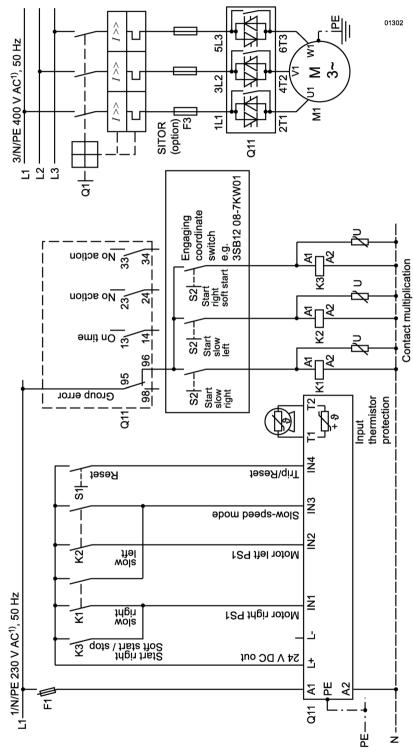

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).



Note

Parameter assignment

Set the control input functions to::

IN1: Motor CW PS1 IN2: Motor CCW PS1 IN3: Slow-speed mode

IN4: Trip/reset (factory default)

The slow-speed parameters in parameter set 1 must be set. Motor CW means rotation in line phase direction, motor CCW means rotation against the line phase direction.

Note

The slow-speed function is not suitable for continuous operation. The motor can heat up to an inadmissible extent during continuous operation at slow speed.

Note


Risk of restart

The start command must be reset prior to issuing a reset command, because the motor attempts to restart again automatically if a start command is still active following this reset command. This particularly applies if the motor protection has tripped.

K1, K2, K3 = relays for contact multiplication, e.g. for 230 V AC operation: 3RS 1800-1BP00




10.1.8 Control via @PROFIBUS with switchover to manual local operation (e.g. on the control cabinet)

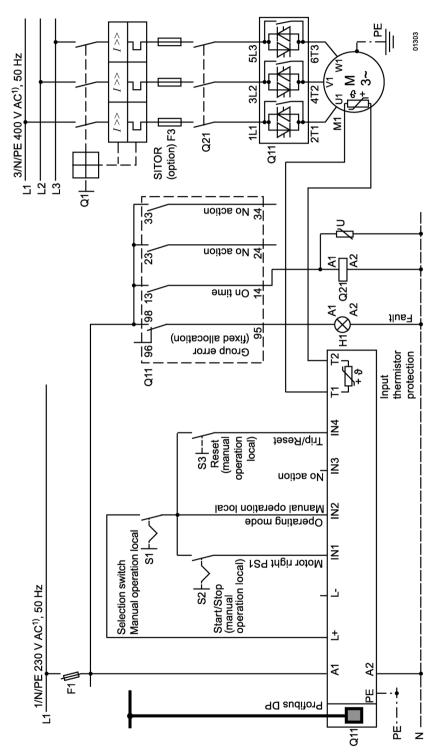

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).



10.1.9 3RW44 in a standard circuit and reversing operation via main contactors with one parameter set without soft stopping

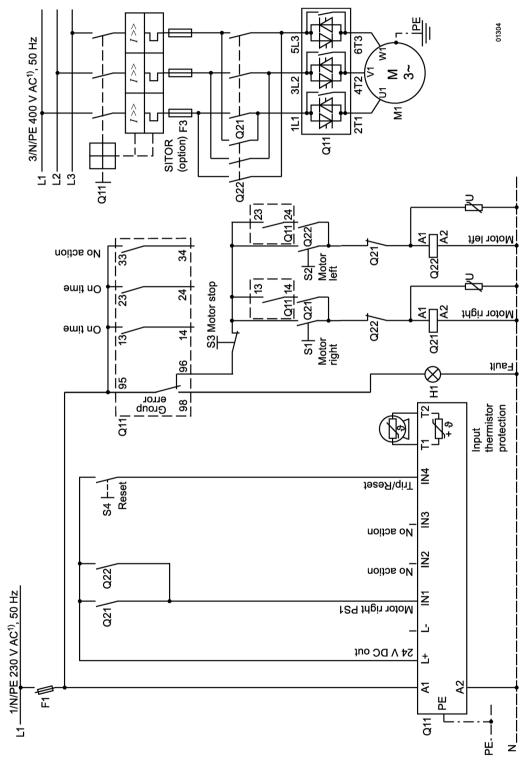


¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).



The "Coasting down" coasting method must be set on the 3RW44.




10.1.10 Reversing operation with soft stopping

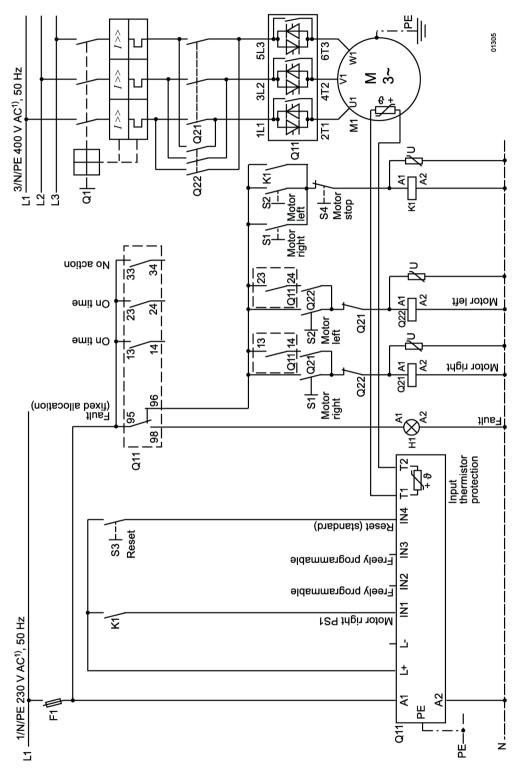

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).



10.1.11 Soft starter for pole-changing motor with separate windings and 2 parameter sets

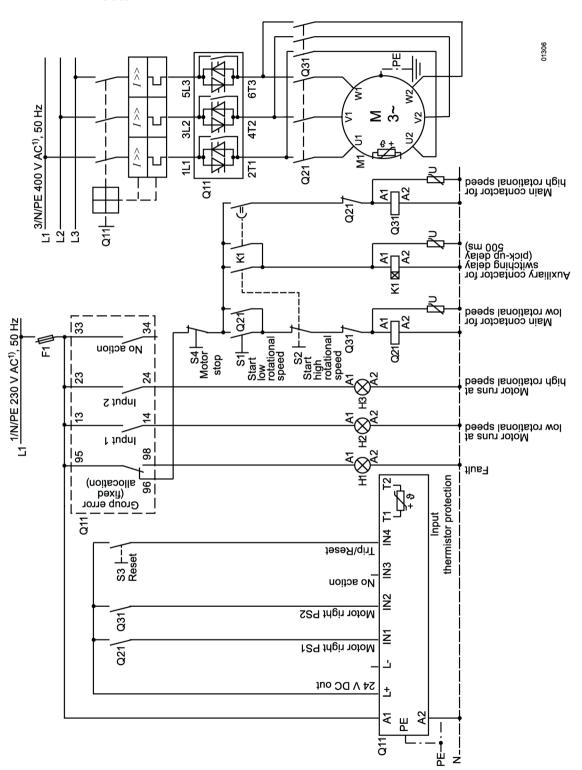

¹⁾ For permissible main and control voltage values, refer to chapter Technical data (Page 253).




B. I	-4-	
N	OTO	

The "Coasting down" coasting method must be set on the 3RW44.



10.1.12 Soft starter for Dahlander motors with 2 parameter sets

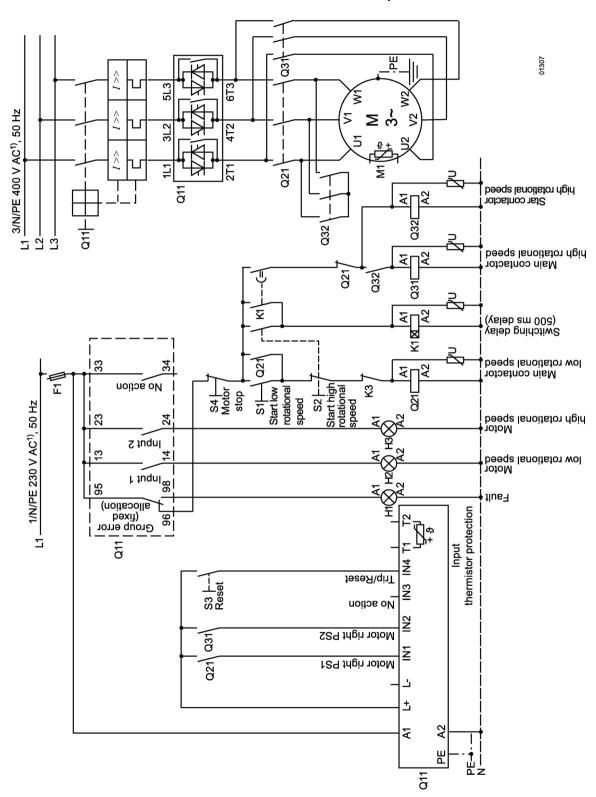

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).




Note

The "Coasting down" coasting method must be set on the 3RW44.

10.1.13 Parallel starting of 3 motors

Control circuit

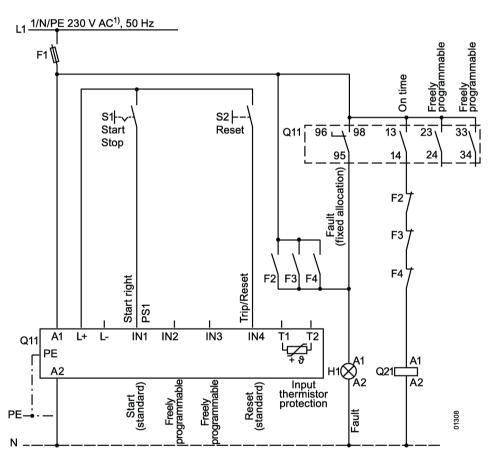

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).

Note


The rated output of the 3RW44 to be configured must be at least as high as the sum of the motor's rated outputs.

The loads should have similar mass moments of inertia and torque curves.



Parallel starting of 3 motors

Main circuit

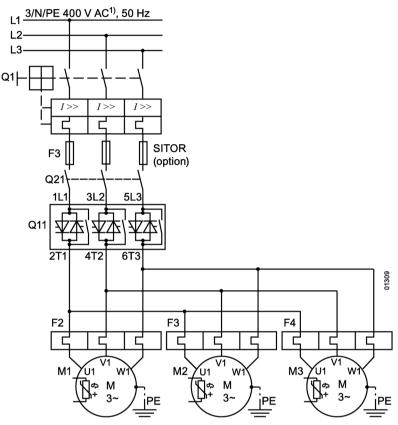

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).


Note

The rated output of the 3RW44 to be configured must be at least as high as the sum of the motor's rated outputs.

The loads should have similar mass moments of inertia and torque curves.



10.1.14 Soft starter for serial starting with 3 parameter sets

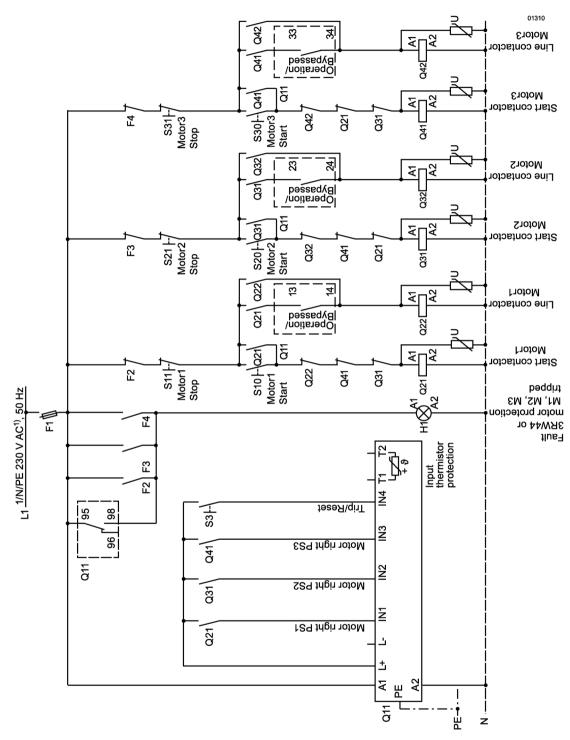

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).



Note


The "Coasting down" coasting method must be set on the 3RW44.

Note

In the case of increased operating sequences, the 3RW44 should be dimensioned at least one capacity level higher than the highest connected motor output.



10.1.15 Soft starter for serial starting with 3 parameter sets (deactivate soft stop and 3RW44 motor protection)

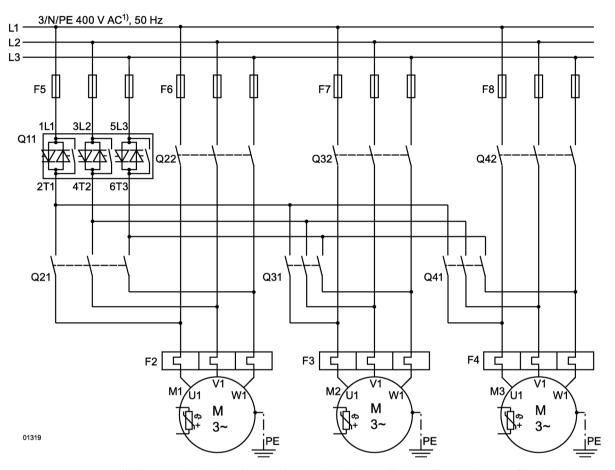

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).

Note


In the case of increased operating sequences, the 3RW44 should be dimensioned at least one capacity level higher than the highest connected motor output.

Note

The "Coasting down" coasting method must be set on the 3RW44.



10.1.16 Soft starter for activation of a motor with a magnetic fixing brake

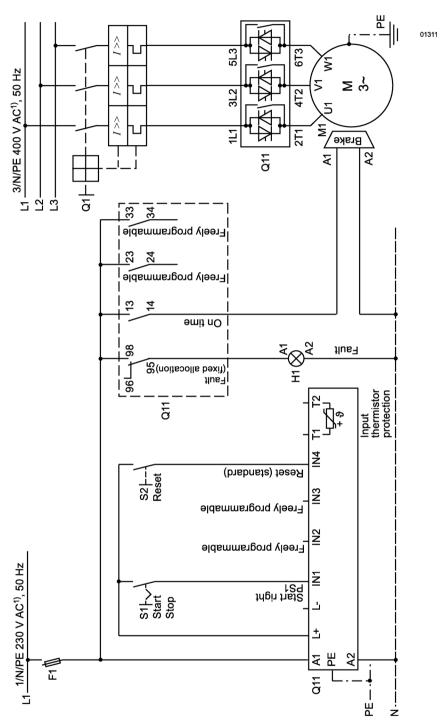

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).




10.1.17 Safe disconnection according to IEC 62061 (SIL) and/or ISO 13849-1 (PL)

The 3RW soft starter is used for functional switching. Safe disconnection can also be realized, for example, with a 3SK1 safety relay and power contactors. The examples given in the FAQ

(<u>https://support.industry.siemens.com/cs/document/67474130</u>) describe possible configurations based on various safety requirements.




10.1.18 Soft starter with direct-on-line starting (DOL) as emergency start

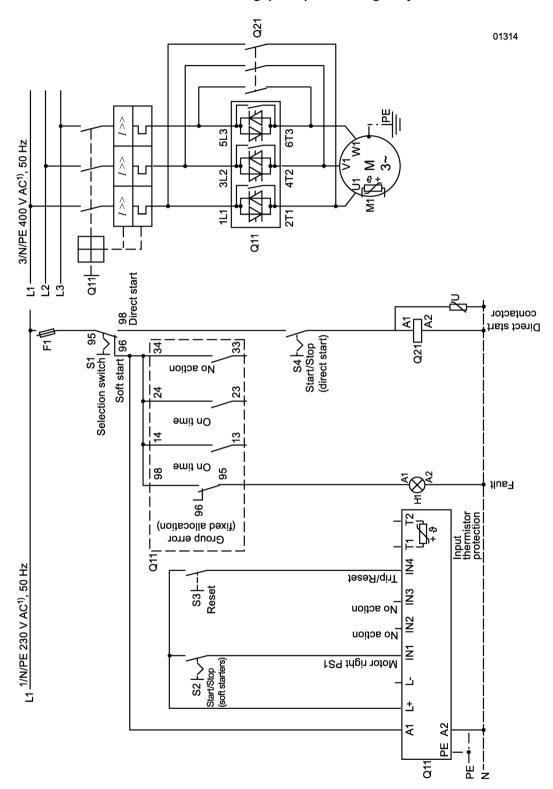

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).




10.1.19 Soft starter with star-delta starter as emergency start (3RW44 in a standard circuit)

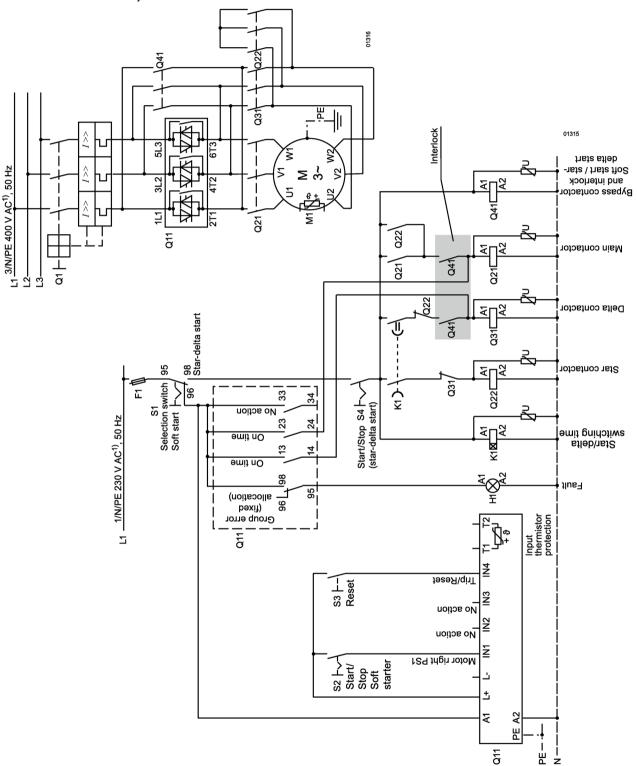

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).



10.1.20 Soft starter and frequency converter on one motor

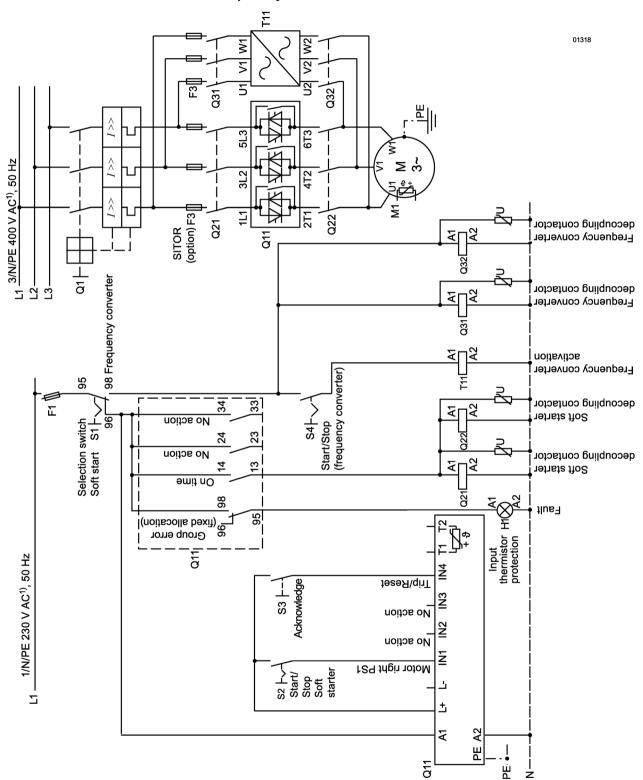

¹⁾ For permissible main and control voltage values, refer to chapter Technical data of the power unit (Page 259).



General technical data

11.1 Menu structure

Menu: measured values display		
Phase voltages	UL1N	
	UL2N	
	UL3N	
Line-to-line voltages	UL1-L2	
	UL2-L3	
	UL3-L1	
Blocking voltages	ULT1	
	ULT2	
	ULT3	
Phase currents	IL1	
	IL2	
	IL3	
Power		
Line frequency		
Supply voltage		
Heatsink temperature		
Motor heating		
Remaining time for tripping		
Standard display off		

Menu: status display		
	Device status	
Active parameter set	Parameter set 1	
	Parameter set 2	
	Parameter set 3	
Type of connection	Unknown/defective	
	Wye / delta	
	Inside-delta	
Direction of rotation	Unknown	
	CW	
	CCW	



Menu: status display	Status inputs	
Inputs	Status - inputs Input 1 - action	No action
	input i - action	Manual mode local
		Emergency start Slow speed
		Quick stop
		Trip reset
		Motor CW PS1
		Motor CCW PS1*)
		Motor CW PS2
		Motor CCW PS2*)
		Motor CW PS3
		Motor CCW PS3*)
	Input 2 - action []	IVIOLOI GOW F337
	Input 3 - action []	
	Input 4 - action []	
Outputs	Status - outputs	
Outputs	Output 1 - action	No action
	Catput 1 action	PIQ output 1
		PIQ output 2
		Input 1
		Input 2
		Input 3
		Input 4
		Startup
		Operation/bypass
		Run down
		ON time
		Command motor On
		DC braking contactor
		Group warning
		Group fault
		Bus fault
		Device fault
		Power on
		Ready to start
	Output 2 - action []	ready to start
	Output 3 - action []	
	Output 4 - action []	
Article number	Output + - action []	
Firmware information	Version	
iiiiwai G iiiioiiiiatioii	Date	

^{*)} Only possible in combination with slow speed



Menu: Settings			Factory settings	Customer settings
		Parameter set 1		,
Motor 1	Rated operational current I _e		MLFB-dependent	
	Rated torque		0	
	Rated speed		1500	
	Copy motor data to PS2 + 3			
Starting settings	Startup mode	Voltage ramp		
		U + current limiting	x	
		Torque control		
		M + current limiting		
		Direct		
		Motor heating		
	Starting voltage		30 %	
	Starting torque		10 %	
	Limiting torque		150 %	
	Starting time		10 s	
	Maximum starting time		0/deactivated	
	Current limiting value		400 %	
	Breakaway voltage		40 %	
	Breakaway time		0 ms	
	Motor thermal capacity		20 %	
Coasting settings	Coasting method	Coasting down	х	
		Torque control		
		Pump stop		
		DC braking		
		Combined braking		
	Coast-down time		10 s	
	Stopping torque		10 %	
	Dynamic braking torque		50 %	
	DC braking torque		50 %	
Slow speed	Slow speed factor CW		7	
parameters	Slow torque CW		50 %	
	Slow speed factor CCW			
	Slow torque CCW		50 %	
Current limits	Lower current limit		18.75 %	
	Upper current limit		112.50 %	



Menu: Settings			Factory settings	Customer settings
		Parameter set 2 []	,	3
		Parameter set 3 []		
		Inputs		
	No action			
Input 1 - action	Manual mode local			
	Emergency start			
	Slow speed			
	Quick Stop			
	Trip reset			
	Motor CW PS1		х	
	Motor CCW PS1*)			
	Motor CW PS2			
	Motor CCW PS2*)			
	Motor CW PS3			
	Motor CCW PS3*)			
Input 2 - action []			No action	
Input 3 - action []			No action	
Input 4 - action []			Trip reset	
		Outputs		
Output 1 - action	No action			
	PIQ output 1			
	PIQ output 2			
	Input 1			
	Input 2			
	Input 3			
	Input 4			
	Startup			
	Operation/bypass			
	Run down			
	ON time		х	
	Command motor On			
	DC braking contactor			
	Group warning			
	Group fault			
	Bus fault			
	Device fault			
	Power on			
	Ready to start			
Output 2 - action []			No action	
Output 3 - action []			No action	



Menu: Settings			Factory settings	Customer settings
		Motor protection		
Tripping class	None			
	CLASS 5 (10a)			
	CLASS 10		х	
	CLASS 15			
	CLASS 20			
	CLASS 30			
Current asymmetry limit value			40 %	
Prewarning limit - remaining time for tripping			0 s	
Prewarning limit - motor heating			80 %	
Idle time			0 s	
Recovery time			60 s	
Protection against	No			
voltage failure	Yes		х	
Temperature sensor	Deactivated		х	
	Thermoclick			
	PTC type A			
		Display		
Language	English		х	
	Deutsch			
	Français			
	Español			
	Italiano			
	Português			
	Nederlands			
	Ελληνικά			
	Türkçe			
	Русский			
	中文			
Contrast			50 %	



Menu: Settings			Factory settings	Customer settings
Lighting	Brightness	Lighting on	Х	
		Time delayed off		
		Lighting off		
	Response to fault	Unchanged		
		On		
		Flashing		
		Flicker	х	
	Response to warning	Unchanged		
		On		
		Flashing	х	
		Flicker		
Reaction time keys			60 %	
Autorepeat	Time		80 ms	
•	Velocity		80 %	
Activity monitoring			30 s	
time		Pagnanag ta		
Overload - therm.	Tripping without restart	Response to	v	
motor model	Tripping with restart		X	
	Warning			
Overload -	Tripping without restart			
temperature sensor	Tripping with restart		X	
•	Warning			
Current limit violation	-		V	
Current iiniit violation	Warning		X	
Overdeed eveter	Tripping			
Overload - contact block	Tripping without restart		X	
	Tripping with restart			
Asymmetry	Warning			
	Tripping		X	
Ground fault	Warning		X	
	Tripping			
Name		Name		
Name		Fieldburg		
Eletable of C. C.	0"	Fieldbus		
Fieldbus interface	Off		X	
0 " "	On			
Group diagnostics	Disable		X	
	Enable			
Response to CPU/master STOP	Substitute value		X	
	Last value			
Station address			126	



Menu: Settings			Factory settings	Customer settings
Baud rate				
Substitute value	Motor CW			
	Motor CCW			
	Slow speed			
	Emergency start			
	Output 1			
	Output 2			
	Parameter set 1			
	Parameter set 2			
	Parameter set 3			
	Disable quick stop			
Parameters disabled	Off		Х	
CPU/Master	On			
		Saving options		
Save settings				
Restoring settings				
Factory settings				

^{*)} Only possible in combination with slow speed

Menu: Motor control		
Keys control motor	Key control	Activate
		Deactivate
	Selecting the parameter set	Parameter set 1
		Parameter set 2
		Parameter set 3
	Execute control function	Motor CW
		Motor CCW*)
		Slow speed
		Emergency start
		Output 1
		Output 2
Control via inputs	Control inputs	Activate
		Deactivate
Standard control	Automatic/None	
	Inputs	
	Keys	

^{*)} Only possible in combination with slow speed



Menu: Statistics Logbooks	Device fault	
-ogbooks	Trips	
	Events	
Maximum pointer	Currents (%)	Phase current L1 min
	Carrente (70)	Phase current L2 min
		Phase current L3 min
		Phase current L1 max
		Phase current L2 max
		Phase current L3 max
	Currents (rms)	Phase current L1 min
		Phase current L2 min
		Phase current L3 min
		Phase current L1 max
		Phase current L2 max
		Phase current L3 max
	Line-to-line voltages	UL1 - L2 min (rms)
		UL2 - L3 min (rms)
		UL3 - L1 min (rms)
		UL1 - L2 max (rms)
		UL2 - L3 max (rms)
		UL3 - L1 max (rms)
	Maximum operating current I _A (%)	
	Maximum operating current I _A (rms)	
	Number of overload trips	
	Minimum line frequency	
	Maximum line frequency	
	Max. heat sink temperature	
	Max. contact block heating	
	Reset maximum pointer	



Menu: Statistics		
Statistical data	Motor current I _{max} (%)	
	Motor current I _{max} (rms)	
	Last tripping current I _A (%)	
	Last tripping current I _A (rms)	
	Operating hours - device	
	Operating hours - motor	
	Number of starts motor CW	
	Number of starts motor CCW	
	Number of overload trips	
	Number of stops with electrical braking	
	Number of starts output 1	
	Number of starts output 2	
	Number of starts output 3	
	Number of starts output 4	

Menu: Safety				
		Factory settings	Customer settings	
Enter user code		1000		
User level	Customer read only (> 1000)			
	Customer write (1000)			



11.2 Transport and storage conditions

Transport and storage conditions

The soft starters comply with the requirements of DIN IEC 721-3-1/HD478.3.1 S1 for transport and storage conditions. The following information applies to modules transported and stored in the original packaging.

Type of condition	Permissible range
Temperature	-25°C to +80°C
Atmospheric pressure	700 to 1060 hPa
Relative humidity	10 to 95 %



11.3 Technical data

11.3.1 Selection and ordering data

Table 11- 1 Normal starting (CLASS 10) in inline circuit - Part 1/3

	Ambient	temperat	ture 40 °C	3		Ambient	tempera	ture 50 °C	0		
Rated operation- al voltage U _e	Rated operational current I _e		oower of at rated U _e	Article No.							
v	A	230 V kW	400 V kW	500 V kW	690 V kW	A	200 V HP	230 V HP	460 V HP	575 V HP	
200 460	29	5.5	15	-	-	26	7.5	7.5	15	-	3RW44 22-x1BCx24
	36	7.5	18.5	-	-	32	10	10	20	-	3RW44 23-x ¹ BCx ² 4
	47	11	22	-	-	42	10	15	25	-	3RW44 24-x ¹ BCx ² 4
	57	15	30	-	-	51	15	15	30	-	3RW44 25-x1BCx24
	77	18.5	37	-	-	68	20	20	50	-	3RW44 26-x ¹ BCx ² 4
	93	22	45	-	-	82	25	25	60	-	3RW44 27-x ¹ BCx ² 4
400 600	29	-	15	18.5	-	26	-	-	15	20	3RW44 22-x ¹ BCx ² 5
	36	-	18.5	22	-	32	-	-	20	25	3RW44 23-x ¹ BCx ² 5
	47	-	22	30	-	42	-	-	25	30	3RW44 24-x ¹ BCx ² 5
	57	-	30	37	-	51	-	-	30	40	3RW44 25-x ¹ BCx ² 5
	77	-	37	45	_	68	-	-	50	50	3RW44 26-x ¹ BCx ² 5
	93	-	45	55	-	82		-	60	75	3RW44 27-x ¹ BCx ² 5
400 690	29	-	15	18.5	30	26	-	-	15	20	3RW44 22-x ¹ BCx ² 6
	36	-	18.5	22	37	32	-	-	20	25	3RW44 23-x1BCx26
	47	-	22	30	45	42	-	-	25	30	3RW44 24-x ¹ BCx ² 6
	57	-	30	37	55	51	-	-	30	40	3RW44 25-x ¹ BCx ² 6
	77	-	37	45	75	68	-	-	50	50	3RW44 26-x ¹ BCx ² 6
	93	-	45	55	90	82	-	-	60	75	3RW44 27-x ¹ BCx ² 6

 x^1 1 = screw-type terminals, 3 = spring-loaded terminals



Table 11-2 Normal starting (CLASS 10) in inline circuit - Part 2/3

	Ambient	tempera	ture 40 °			Ambient	tempera	ture 50 °C			
Rated operation- al voltage U _e	Rated operational current I _e		oower of at rated o			Rated opera- tional current I _e		oower of t at rated o	-		Article No.
V	A	230 V kW	400 V kW	500 V kW	690 V kW	Α	200 V HP	230 V HP	460 V HP	575 V HP	
200 460	113	30	55	-	-	100	30	30	75	-	3RW44 34-x ¹ BCx ² 4
	134	37	75	-	-	117	30	40	75	-	3RW44 35-x ¹ BCx ² 4
	162	45	90	-	-	145	40	50	100	-	3RW44 36-x ¹ BCx ² 4
	203	55	110	-	-	180	50	60	125	-	3RW44 43-x ¹ BCx ² 4
	250	75	132	-	-	215	60	75	150	-	3RW44 44-x ¹ BCx ² 4
	313	90	160	-	-	280	75	100	200	-	3RW44 45-x ¹ BCx ² 4
	356	110	200	-	-	315	100	125	250	-	3RW44 46-x ¹ BCx ² 4
	432	132	250	-	_	385	125	150	300	-	3RW44 47-x ¹ BCx ² 4
	551	160	315	-	-	494	150	200	400	-	3RW44 53-x1BCx24
	615	200	355	-	_	551	150	200	450	-	3RW44 54-x ¹ BCx ² 4
	693	200	400	-	_	615	200	250	500	-	3RW44 55-x ¹ BCx ² 4
	780 250		450	-	-	693	200	250	600	-	3RW44 56-x ¹ BCx ² 4
	880	250	500	-	_	780	250	300	700	-	3RW44 57-x ¹ BCx ² 4
	970	315	560	-	-	850	300	350	750	-	3RW44 58-x ¹ BCx ² 4
	1076	355	630	-	-	970	350	400	850	-	3RW44 65-x ¹ BCx ² 4
	1214	400	710	-	_	1076	350	450	950	-	3RW44 66-x ¹ BCx ² 4
400 600	113	-	55	75	-	100	-	_	75	75	3RW44 34-x ¹ BCx ² 5
	134	-	75	90	-	117	-	_	75	100	3RW44 35-x ¹ BCx ² 5
	162	-	90	110	-	145	-	-	100	125	3RW44 36-x ¹ BCx ² 5
	203	-	110	132	-	180	-	-	125	150	3RW44 43-x ¹ BCx ² 5
	250	-	132	160	-	215	-	-	150	200	3RW44 44-x ¹ BCx ² 5
	313	-	160	200	-	280	-	-	200	250	3RW44 45-x ¹ BCx ² 5
	356	-	200	250	-	315	-	-	250	300	3RW44 46-x ¹ BCx ² 5
	432	-	250	315	-	385	-	-	300	400	3RW44 47-x ¹ BCx ² 5
	551	-	315	355	-	494	-	-	400	500	3RW44 53-x ¹ BCx ² 5
	615	-	355	400	-	551	-	-	450	600	3RW44 54-x ¹ BCx ² 5
	693	-	400	500	-	615	-	-	500	700	3RW44 55-x ¹ BCx ² 5
	780	-	450	560	-	693	-	-	600	750	3RW44 56-x ¹ BCx ² 5
	880	-	500	630	-	780	-	-	700	850	3RW44 57-x ¹ BCx ² 5
	970	-	560	710	-	850	-	-	750	900	3RW44 58-x ¹ BCx ² 5
	1076	-	630	800	-	970	-	_	850	1100	3RW44 65-x ¹ BCx ² 5
	1214		710	900		1076	-	_	950	1200	3RW44 66-x ¹ BCx ² 5

 x^1 2 = screw-type terminals, 6 = spring-loaded terminals

x² 3 = 115 V AC, 4 = 230 V AC



Table 11-3 Normal starting (CLASS 10) in inline circuit - Part 3/3

	Ambient	tempera	ture 40 °C	0		Ambient	temperat	ture 50 °C	2		
Rated operation- al voltage U _e	Rated operational current le	motors	ated power of three-phase otors at rated operational litage U _e					oower of t at rated o		Article No.	
v	A	230 V kW	400 V kW	500 V kW	690 V kW	A	200 V HP	230 V HP	460 V HP	575 V HP	
400 690	113	-	55	75	110	100	-	-	75	75	3RW44 34-x ¹ BCx ² 6
	134	-	75	90	132	117	-	-	75	100	3RW44 35-x ¹ BCx ² 6
	162	-	90	110	160	145	-	-	100	125	3RW44 36-x ¹ BCx ² 6
	203	-	110	132	200	180	-	-	125	150	3RW44 43-x ¹ BCx ² 6
	250	-	132	160	250	215	-	-	150	200	3RW44 44-x ¹ BCx ² 6
	313	-	160	200	315	280	-	-	200	250	3RW44 45-x ¹ BCx ² 6
	356	-	200	250	355	315	-	-	250	300	3RW44 46-x ¹ BCx ² 6
	432	-	250	315	400	385	-	-	300	400	3RW44 47-x ¹ BCx ² 6
	551	-	315	355	560	494	-	-	400	500	3RW44 53-x1BCx26
	615	-	355	400	630	551	-	-	450	600	3RW44 54-x ¹ BCx ² 6
	693	-	400	500	710	615	-	-	500	700	3RW44 55-x ¹ BCx ² 6
	780	-	450	560	800	693	-	-	600	750	3RW44 56-x ¹ BCx ² 6
	880	-	500	630	900	780	-	-	700	850	3RW44 57-x ¹ BCx ² 6
	970	_	560	710	1000	850	-	-	750	900	3RW44 58-x1BCx26
	1076	-	630	800	1100	970	-	-	850	1100	3RW44 65-x ¹ BCx ² 6
	1214	-	710	900	1200	1076	-	-	950	1200	3RW44 66-x ¹ BCx ² 6

 x^1 2 = screw-type terminals, 6 = spring-loaded terminals

x² 3 = 115 V AC, 4 = 230 V AC



Table 11-4 Normal starting (CLASS 10) in inside-delta circuit - Part 1/2

	Ambient	temperat	ture 40 °C	0		Ambient	tempera	ture 50 °C	0		
Rated operation- al voltage U _e	Rated operational current I _e		at rated o	three-pha		Rated operational current le	Rated p motors voltage		Article No.		
V	A	230 V kW	400 V kW								
200 460	50	15	22	-	-	45	10	15	30	-	3RW44 22-x1BCx24
<u> </u>	62	18.5	30	-	-	55	15	20	40	-	3RW44 23-x ¹ BCx ² 4
	81	22	45	-	-	73	20	25	50	-	3RW44 24-x ¹ BCx ² 4
	99	30	55	-	-	88	25	30	60	-	3RW44 25-x ¹ BCx ² 4
	133	37	75	-	-	118	30	40	75	-	3RW44 26-x ¹ BCx ² 4
	161	45	90	-	-	142	40	50	100	-	3RW44 27-x ¹ BCx ² 4
400 600	50	-	22	30	-	45	-	-	30	40	3RW44 22-x ¹ BCx ² 5
	62	-	30	37	-	55	-	-	40	50	3RW44 23-x ¹ BCx ² 5
	81	-	45	45	-	73	-	-	50	60	3RW44 24-x ¹ BCx ² 5
	99	- 55 55 -		88	-	-	60	75	3RW44 25-x ¹ BCx ² 5		
	133	-	75	90	-	118	-	-	75	100	3RW44 26-x ¹ BCx ² 5
	161	-	90	110	-	142	-	-	100	125	3RW44 27-x ¹ BCx ² 5

 x^1 1 = screw-type terminals, 3 = spring-loaded terminals



Table 11-5 Normal starting (CLASS 10) in inside-delta circuit - Part 2/2

	Ambient	tempera	ture 40 °C			Ambient	tempera	ture 50 °C			
Rated operation- al voltage U _e	Rated operational current		oower of t at rated o	-	ase nal	Article No.					
v	Α	230 V kW	400 V kW	500 V kW	690 V kW	A	200 V HP	230 V HP	460 V HP	575 V HP	
200 460	196	55	110	-	-	173	50	60	125	-	3RW44 34-x ¹ BCx ² 4
	232	75	132	-	-	203	60	75	150	-	3RW44 35-x ¹ BCx ² 4
	281	90	160	-	-	251	75	100	200	-	3RW44 36-x ¹ BCx ² 4
	352	110	200	-	-	312	100	125	250	-	3RW44 43-x ¹ BCx ² 4
	433	132	250	-	-	372	125	150	300	-	3RW44 44-x ¹ BCx ² 4
	542	160	315	-	-	485	150	200	400	-	3RW44 45-x ¹ BCx ² 4
	617	200	355	-	-	546	150	200	450	-	3RW44 46-x ¹ BCx ² 4
	748	250	400	-	-	667	200	250	600	-	3RW44 47-x ¹ BCx ² 4
	954	315	560	-	-	856	300	350	750	-	3RW44 53-x1BCx24
	1065	355	630	-	-	954	350	400	850	-	3RW44 54-x ¹ BCx ² 4
	1200	400	710	-	-	1065	350	450	950	-	3RW44 55-x ¹ BCx ² 4
	1351	450	800	-	-	1200	450	500	1050	-	3RW44 56-x ¹ BCx ² 4
	1524	500	900	-	-	1351	450	600	1200	-	3RW44 57-x ¹ BCx ² 4
	1680	560	1000	-	-	1472	550	650	1300	-	3RW44 58-x1BCx24
	1864	630	1100	-	-	1680	650	750	1500	-	3RW44 65-x ¹ BCx ² 4
	2103	710	1200	-	-	1864	700	850	1700	-	3RW44 66-x ¹ BCx ² 4
400 600	196	-	110	132	-	173	-	-	125	150	3RW44 34-x ¹ BCx ² 5
	232	-	132	160	-	203	-	-	150	200	3RW44 35-x ¹ BCx ² 5
	281	-	160	200	-	251	-	-	200	250	3RW44 36-x ¹ BCx ² 5
	352	-	200	250	-	312	-	-	250	300	3RW44 43-x ¹ BCx ² 5
	433	-	250	315	-	372	-	-	300	350	3RW44 44-x ¹ BCx ² 5
	542	-	315	355	-	485	-	-	400	500	3RW44 45-x1BCx25
	617	-	355	450	-	546	-	-	450	600	3RW44 46-x ¹ BCx ² 5
	748	-	400	500	-	667	-	-	600	750	3RW44 47-x1BCx25
	954	-	560	630	-	856	-	-	750	950	3RW44 53-x ¹ BCx ² 5
	1065	-	630	710	-	954	-	-	850	1050	3RW44 54-x ¹ BCx ² 5
	1200	-	710	800	-	1065	-	-	950	1200	3RW44 55-x1BCx25
	1351	-	800	900	-	1200	-	-	1050	1350	3RW44 56-x ¹ BCx ² 5
	1524	-	900	1000	-	1351	-	-	1200	1500	3RW44 57-x1BCx25
	1680	-	1000	1200	-	1472	_	-	1300	1650	3RW44 58-x ¹ BCx ² 5
	1864	-	1100	1350	-	1680	-	-	1500	1900	3RW44 65-x ¹ BCx ² 5
	2103	-	1200	1500	-	1864	-	-	1700	2100	3RW44 66-x1BCx25

 x^1 2 = screw-type terminals, 6 = spring-loaded terminals

 x^2 3 = 115 V AC, 4 = 230 V AC



General supplementary conditions	
Maximum starting time:	10 s
Current limiting	300 %
Starts/hour	5
ON time	30%
Assembly type	Stand-alone installation
Installation altitude	Max. 1000 m/3280 ft
Ambient temperature	• kW: 40 °C/104 °F
	• hp: 50 °C/122 °F

The listed motor ratings are only approximate values. The soft starter should always be designed on the basis of the motor current (rated operational current). A larger model may need to be selected for different conditions.

Motor output ratings are based on DIN 42973 (kW) and NEC 96/UL508 (hp).

Design with Simulation Tool for Soft Starters (STS)

For dimensioning soft starters under other supplementary conditions, also for heavy starting up to CLASS 30, we recommend our Simulation Tool for Soft Starters (STS): https://support.industry.siemens.com/cs/ww/en/view/101494917 or our Technical Assistance: Tel.: +49 (0) 911-895-5900, e-mail: technical-assistance@siemens.com



11.3.2 Technical data of the power unit

Туре		3RW44BC.4	3RW44BC.5	3RW44BC.6
Power electronics				
Rated operational voltage for standard circuit Tolerance	V %	200 460 AC -15 / +10	400 600 AC -15 / +10	400 690 AC -15 / +10
Rated operational voltage for inside delta circuit Tolerance	V %	200 460 AC -15 / +10	400 600 AC -15 / +10	400 600 AC -15 / +10
Maximum blocking voltage thyristor	V	1400	1800	1800
Rated frequency Tolerance	Hz %	50 60 ±10	1	
Continuous operation at 40 °C (% of I _s)	%	115		
Minimum load (% of set motor current I _M)	%	8		
Maximum cable length between soft starter and motor	m	500 ^{a)}		
Permissible installation height	m	5000 (for derating above	e 1000, see characteristic cur	ves); higher on request
Permissible mounting position and installation type (stand-alone installation)		90° 22,5	5°, 22,5° \$900 0 2	3
Permissible ambient temperature Operation Storage	°C °C	0 +60; (derating abov	re +40)	
Degree of protection		IP00		

a) During configuration, the voltage drop on the motor line must be taken into consideration up to the motor connection. It may be necessary to select a larger dimensioned soft starter with regard to the rated operational voltage and/or the rated operating current.

	3RW44BC.4	3RW44BC.5	3RW44BC.6
Rated insulation voltage Ui	460 V	600 V	690 V
Rate impulse voltage U _{imp}	6 kV		



Torre		3RW44 22	3RW44 23	3RW44 24	3RW44 25	3RW44 26	3RW44 27
Туре		3RVV44 ZZ	3RVV44 23	3RVV44 24	3RVV44 25	3RVV44 20	3RVV44 21
Power electronics	_	00	22	17	F7	77	00
Rated operating current I _e	_	29	36	47	57	77	93
Carrying capacity, rated operating current I _e							
 According to IEC and UL / CSA ¹⁾, for single mounting, AC-53a 			100-20-20				
- At 40 / 50 / 60 °C		29 / 26 /23	36 /32 / 29	47 /42 / 37	57 / 51 / 45	77 / 68 / 59	93 / 82 / 72
Minimum selectable nominal motor current I_{M} for motor overload protection	A	5	7	9	11	15	18
Power loss							
 Uninterrupted rated operating current after run up (40 / 50 / 60 °C) approx. 	W	8/7.5/7	10/9/8.5	32 / 31 / 29	36 / 34 / 31	45 / 41 / 37	55 / 51 / 47
 When starting with current limiting set at 350 % I_M (40 / 50 / 60 °C) 	W	400 / 345 / 290	470 / 410 / 355	600 / 515 / 440	725 / 630 / 525	940 / 790 / 660	1160 / 980 / 830
Permitted rated motor current and starts per hour							
For normal starting (CLASS 5)					20		
 Rated motor current I_M²⁾, run-up time 5 s 	A	29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	77 / 68 / 59	93 / 82 / 72
- Starts per hour ³⁾	1/h	41	34	41	41	41	41
 Rated motor current I_M²⁾, run-up time 10 s 	Α	29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	77 / 68 / 59	93 / 82 / 72
- Starts per hour ³⁾	1/h	20	15	20	20	20	20
For normal starting (CLASS 10)							
- Rated motor current I _M ²⁾ , run-up time 10 s	Α	29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	77 / 68 / 59	93 / 82 / 72
- Starts per hour ³⁾	1/h	20	15	20	20	20	20
 Rated motor current I_M²⁾, run-up time 20 s 	Α	29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	77 / 68 / 59	93 / 82 / 72
- Starts per hour ³⁾	1/h	10	6	10	10	8	8
For normal starting (CLASS 15)							
- Rated motor current I _M ²⁾ , run-up time 15 s	Α	29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	77 / 68 / 59	93 / 82 / 72
- Starts per hour ³⁾	1/h	13	9	13	13	13	13
- Rated motor current I _M ²⁾ , run-up time 30 s	A	29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	77 / 68 / 59	93 / 82 / 72
- Starts per hour ³⁾	1/h	6	4	6	6	6	6
For heavy starting (CLASS 20)							
- Rated motor current I _M ²⁾ , run-up time 20 s	Α	29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	77 / 68 / 59	88 / 80 / 72
- Starts per hour ³⁾	1/h	10	6	10	10	10	10
- Rated motor current $I_{\rm M}{}^2$, run-up time 40 s		29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	77 / 68 / 59	88 / 80 / 72
- Starts per hour ³⁾	1/h		2	4	5	1.8	0.8
For very heavy starting (CLASS 30)			-		(All and a second		
- Rated motor current I _M ²⁾ , run-up time 30 s	A	29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	65 / 60 / 54	77 / 70 / 63
- Starts per hour ³⁾	1/h		4	6	6	6	6
- Rated motor current $I_{\rm M}^{(2)}$, run-up time 60 s	Α	29 / 26 / 23	36 / 32.5 / 29	47 / 42 / 37	57 / 51 / 45	65 / 60 / 54	77 / 70 / 63
- Starts per hour ³⁾	1/b	1.8	0.8	3.3	1.5	2	1
- Otario per riour	1/11	1.0	0.0	0.0	1.0	2	

Measurement at 60 °C not required according to UL/CSA.
 Current limiting on soft starter set at 350 % f_M; on-time OT = 70 %.
 Maximum selectable rated motor current f_M, depending on the CLASS settings.
 During intermittent duty S4 with on-time OT = 70 %, T_u = 40 / 50 / 60 °C, vertical stand-alone installation. The listed switching frequencies do not apply to automatic operation.



Туре		3RW44 34	3RW44 35	3RW44 36
Power electronics			0.0077700	on the second
Rated operating current I _e		113	134	162
Carrying capacity, rated operating current I _P			10000	
According to IEC and UL / CSA ¹⁾ , for single mounting, AC-53a				
- At 40 °C	Α	113	134	162
- At 50 °C	Α	100	117	145
- At 60 °C	Α	88	100	125
Minimum selectable nominal motor current $I_{\rm M}$ For motor overload protection	A	22	26	32
Power loss				
Uninterrupted rated operating current after run up (40 / 50 / 60 °C) approx.	W	64 / 58 / 53	76 / 67 / 58	95 / 83 / 71
 When starting with current limiting set at 350 % I_M (40 / 50 / 60 °C) 	W	1350 / 1140 / 970	1700 / 1400 / 1140	2460 / 1980 / 1620
Permitted rated motor current and starts per hour				
For normal starting (CLASS 5)				
- Rated motor current I _M ²⁾ , run-up time 5 s	Α	113 / 100 / 88	134 / 117 / 100	162 / 145 / 125
- Starts per hour ³⁾	1/h	41	39	41
 Rated motor current I_M²⁾, run-up time 10 s 	Α	113 / 100 / 88	134 / 117 / 100	162 / 145 / 125
- Starts per hour ³⁾	1/h	20	15	20
For normal starting (CLASS 10)				
 Rated motor current I_M², run-up time 10 s 	Α	113 / 100 / 88	134 / 117 / 100	162 / 145 / 125
- Starts per hour ³⁾	1/h	20	15	20
 Rated motor current I_M², run-up time 20 s 	Α	113 / 100 / 88	134 / 117 / 100	162 / 145 / 125
- Starts per hour ³⁾	1/h	9	6	7
For normal starting (CLASS 15)				
 Rated motor current I_M²⁾, run-up time 15 s 	Α	113 / 100 / 88	134 / 117 / 100	162 / 145 / 125
- Starts per hour ³⁾	1/h	13	9	12
 Rated motor current I_M²⁾, run-up time 30 s 	Α	113 / 100 / 88	134 / 117 / 100	162 / 145 / 125
- Starts per hour ³⁾	1/h	6	6	1
For heavy starting (CLASS 20)				
- Rated motor current I _M ²⁾ , run-up time 20 s	Α	106 / 97 / 88	125 / 113 / 100	147 / 134 / 122
- Starts per hour ³⁾	1/h	9	9	10
 Rated motor current I_M²⁾, run-up time 40 s 	Α	106 / 97 / 88	125 / 113 / 100	147 / 134 / 122
- Starts per hour ³⁾	1/h	1.5	2	1
For very heavy starting (CLASS 30)				
- Rated motor current I _M ²⁾ , run-up time 30 s	Α	91 / 84 / 76	110 / 100 / 90	120 / 110 / 100
- Starts per hour ³⁾	1/h	6	6	6
 Rated motor current I_M²⁾, run-up time 60 s 	Α	91 / 84 / 76	110 / 100 / 90	120 / 110 / 100
- Starts per hour ³⁾	1/h	2	2	2

¹⁾ Measurement at 60 °C not required according to UL/CSA.

²⁾ Current limiting on soft starter set at 350 % $_{
m Mi}$, on-time OT = 70 %. Maximum selectable rated motor current $l_{
m Mi}$ depending on the CLASS settings.

³⁾ During intermittent duty S4 with on-time OT = 70 %, $T_{\rm u}$ = 40/50/60 °C, vertical stand-alone installation. The listed switching frequencies do not apply to automatic operation.



Туре		3RW44 43	3RW44 44	3RW44 45	3RW44 46	3RW44 47
Power electronics						
Rated operating current I _e	10	203	250	313	356	432
Carrying capacity, rated operating current I _e						
 According to IEC and UL / CSA ¹⁾, for single mounting, AC-53a 						
- At 40 °C	Α	203	250	313	356	432
- At 50 °C	Α	180	215	280	315	385
- At 60 °C	Α	156	185	250	280	335
$ \begin{array}{ll} \textbf{Minimum selectable nominal motor current} \ \textit{I}_{\textbf{M}} \\ \textbf{For motor overload protection} \end{array} $	Α	40	50	62	71	86
Power loss						
• Uninterrupted rated operating current after run up (40 / 50 / 60 °C) approx.	W	89 / 81 / 73	110 / 94 / 83	145 / 126 / 110	174 / 147 / 126	232 / 194 / 159
- When starting with current limiting set at 350 % $\it I_{\rm M}$ (40 / 50 / 60 °C)	W	3350 / 2600 / 2150	4000 / 2900 / 2350	4470 / 4000 / 3400	5350 / 4050 / 3500	5860 / 5020 / 4200
Permitted rated motor current and starts per hour						
For normal starting (CLASS 5)						
- Rated motor current I _M ²⁾ , run-up time 5 s	Α	203 / 180 / 156	250 / 215 / 185	313 / 280 / 250	356 / 315 / 280	432 / 385 / 335
- Starts per hour ³⁾	1/h	41	41	41	41	39
- Rated motor current I _M ²⁾ , run-up time 10 s	Α	203 / 180 / 156	250 / 215 / 185	313 / 280 / 250	356 / 315 / 280	432 / 385 / 335
- Starts per hour ³⁾	1/h	20	20	19	17	16
For normal starting (CLASS 10)						
- Rated motor current I _M ²⁾ , run-up time 10 s	Α	203 / 180 / 156	250 / 215 / 185	313 / 280 / 250	356 / 315 / 280	432 / 385 / 335
- Starts per hour ³⁾	1/h	20	20	19	17	16
- Rated motor current $I_{M}^{(2)}$, run-up time 20 s	Α	203 / 180 / 156	250 / 215 / 185	313 / 280 / 250	356 / 315 / 280	432 / 385 / 335
- Starts per hour ³⁾	1/h	9	10	6	4	5
For normal starting (CLASS 15)						
- Rated motor current $I_M^{(2)}$, run-up time 15 s	Α	203 / 180 / 156	240 / 215 / 185	313 / 280 / 250	325 / 295 / 265	402 / 385 / 335
- Starts per hour ³⁾	1/h	13	13	10	13	11
- Rated motor current $I_{\rm M}^{2)}$, run-up time 30 s	Α	203 / 180 / 156	240 / 215 / 185	313 / 280 / 250	325 / 295 / 265	402 / 385 / 335
- Starts per hour ³⁾	1/h	3	6	1	2	1
• For heavy starting (CLASS 20)						
- Rated motor current I _M ²⁾ , run-up time 20 s	Α	195 / 175 / 155	215 / 195 / 180	275 / 243 / 221	285 / 263 / 240	356 / 326 / 295
- Starts per hour ³⁾	1/h	10	10	10	10	10
Academic Technic Statement					100	
- Rated motor current I _M ²⁾ , run-up time 40 s	A 1/h	195 / 175 / 155	215 / 195 / 180	275 / 243 / 221	285 / 263 / 240	356 / 326 / 295
- Starts per hour ³⁾	1/h	1	5	1	3	1
• For very heavy starting (CLASS 30)						
- Rated motor current I _M ²⁾ , run-up time 30 s	A	162 / 148 / 134	180 / 165 / 150	220 / 201 / 182	240 / 223 / 202	285 / 260 / 235
- Starts per hour ³⁾	1/h	6	6	6	6	6
- Rated motor current I _M ²⁾ , run-up time 60 s	Α	162 / 148 / 134	180 / 165 / 150	220 / 201 / 182	240 / 223 / 202	285 / 260 / 235
- Starts per hour ³⁾	1/h	3	3	3	2	1

¹⁾ Measurement at 60 °C not required according to UL/CSA.

²⁾ Current limiting on soft starter set at 350 % $I_{\rm Mi}$ on-time OT = 70 %. Maximum selectable rated motor current $I_{\rm Mi}$ depending on the CLASS settings.

³⁾ During intermittent duty S4 with on-time OT = 70 %, $T_{\rm u}$ = 40/50/60 °C, vertical stand-alone installation. The listed switching frequencies do not apply to automatic operation.



Туре		3RW44 53	3RW44.54	3RW44 55	3RW44 56	3PW44 57	3RW44 50	3RW4465	3PW44 66
Power electronics	7	31(1144 33	31(444-34	31(444 33	31(444-30	31(444-31	31(444-30	31(1144 03	3114444 00
Carrying capacity, rated operating current I _e	9								
According to IEC and UL / CSA ¹⁾ , for single mounting, AC-53a, at 40 °C	Α	551	615	693	780	880	970	1076	1214
According to IEC and UL / CSA ¹ , for single mounting, AC-53a, at 40 °C According to IEC and UL / CSA ¹ , for single mounting, AC-53a, at 50 °C	A	494	551	615	693	780	850	970	1076
According to IEC and UL / CSA ¹ , for single mounting, AC-53a, at 50 °C According to IEC and UL / CSA ¹), for single mounting, AC-53a, at 60 °C	A	434	489		615	693	760	880	970
Minimum selectable nominal motor current I _M for motor overload protection		110	123	551 138	156	176	194	215	242
Power loss	А	110	123	130	100	1/0	194	215	242
Uninterrupted rated operating current after run up (40 °C) approx.	W	159	186	220	214	250	270	510	630
 Uninterrupted rated operating current after run up (40 °C) approx. Uninterrupted rated operating current after run up (50 °C) approx. 	W	135			176	204	215	420	510
			156	181					
Uninterrupted rated operating current after run up (60 °C) approx. Will a state of the	W	113	130	152	146	168	179	360	420
When starting with current limiting set at 350 % I _M (40 °C) When starting with current limiting set at 350 % I _M (40 °C) When starting with current limiting set at 350 % I _M (40 °C)	W	7020	8100	9500	11100	13100	15000	15000	17500
When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (60 °C) When starting with current limiting set at 350 % I _M (60 °C) When starting with current limiting set at 350 % I _M (60 °C) When starting with current limiting set at 350 % I _M (60 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting set at 350 % I _M (50 °C) When starting with current limiting with lim	W	6111	7020	8100	9500	11000	12500	13000	15000
When starting with current limiting set at 350 % I _M (60 °C)	W	5263	5996	7020	8100	8100	10700	11500	13000
Permitted rated motor current and starts per hour									
• For normal starting (CLASS 5)			0.45	200	700	000	0770	1070	1011
- Rated motor current $I_{\rm M}^{(2)}$, run-up time 5 s, at 40 °C	Α	551	615	693	780	880	970	1076	1214
- Rated motor current I_{M}^{2} , run-up time 5 s, at 50 °C	A	494	551	615	693	780	850	970	1076
- Rated motor current $I_M^{(2)}$, run-up time 5 s, at 60 °C	A	438	489	551	615	693	760	880	970
- Starts per hour ³⁾	1/h	41	41	37	33	22	17	30	20
- Rated motor current $I_{\text{M}}^{(2)}$, run-up time 10 s, at 40 °C	Α	551	615	693	780	880	970	1076	1214
 Rated motor current I_M²⁾, run-up time 10 s, at 50 °C 	Α	494	551	615	693	780	850	970	1076
- Rated motor current $I_M^{(2)}$, run-up time 10 s, at 60 °C	Α	438	489	551	615	693	760	880	970
- Starts per hour ³⁾	1/h	20	20	16	13	8	5	10	6
For normal starting (CLASS 10)									
- Rated motor current I _M ²⁾ , run-up time 10 s, at 40 °C	Α	551	615	693	780	880	970	1076	1214
- Rated motor current $I_{\rm M}^{(2)}$, run-up time 10 s, at 50 °C	Α	494	551	615	693	780	850	970	1076
 Rated motor current I_M²⁾, run-up time 10 s, at 60 °C 	Α	438	489	551	615	693	760	880	970
- Starts per hour ³⁾	1/h	20	20	16	13	8	5	11	6
- Rated motor current I _M ²⁾ , run-up time 20 s, at 40 °C	Α	551	615	693	780	880	970	1076	1214
 Rated motor current I_M²⁾, run-up time 20 s, at 50 °C 	Α	494	551	615	693	780	850	970	1076
 Rated motor current I_M²⁾, run-up time 20 s, at 60 °C 	Α	438	489	551	615	693	760	880	970
- Starts per hour ³⁾	1/h	10	9	6	4	0.3	0.3	3	0.5
For normal starting (CLASS 15)									
 Rated motor current I_M²⁾, run-up time 15 s, at 40 °C 	Α	551	615	666	723	780	821	1020	1090
 Rated motor current I_M²⁾, run-up time 15 s, at 50 °C 	Α	494	551	615	693	710	755	950	1000
 Rated motor current I_M²⁾, run-up time 15 s, at 60 °C 	Α	438	489	551	615	650	693	850	920
- Starts per hour ³⁾	1/h	13	13	11	9	8	8	7	5
 Rated motor current I_M²⁾, run-up time 30 s, at 40 °C 	Α	551	615	666	723	780	821	1020	1090
 Rated motor current I_M²⁾, run-up time 30 s, at 50 °C 	Α	494	551	615	693	710	755	950	1000
 Rated motor current I_M²⁾, run-up time 30 s, at 60 °C 	Α	438	489	551	615	650	693	850	920
- Starts per hour ³⁾	1/h	6	4	3	1	0.4	0.5	1	1
For heavy starting (CLASS 20)									
- Rated motor current I _M ²⁾ , run-up time 20 s, at 40 °C	Α	551	591	633	670	710	740	970	1030
 Rated motor current I_M²⁾, run-up time 20 s, at 50 °C 	Α	494	551	615	634	650	685	880	940
 Rated motor current I_M²⁾, run-up time 20 s, at 60 °C 	Α	438	489	551	576	590	630	810	860
- Starts per hour ³⁾	1/h	10	10	7	8	8	9	7	5
- Rated motor current I _M ²⁾ , run-up time 40 s, at 40 °C	Α	551	591	633	670	710	740	970	1030
 Rated motor current I_M², run-up time 40 s, at 50 °C 	Α	494	551	615	634	650	685	880	940
- Rated motor current $I_M^{(2)}$, run-up time 40 s, at 60 °C	Α	438	489	551	576	590	630	810	860
- Starts per hour ³⁾	1/h	4	2	1	1	0.4	1	1	1
For very heavy starting (CLASS 30)									
- Rated motor current I _M ²⁾ , run-up time 30 s, at 40 °C	Α	500	525	551	575	600	630	880	920
- Rated motor current $I_{\rm M}^{(2)}$, run-up time 30 s, at 50 °C	Α	480	489	520	540	550	580	810	850
- Rated motor current $I_{\rm M}^{(2)}$, run-up time 30 s, at 60 °C	A	438	455	480	490	500	530	740	780
- Starts per hour ³⁾	1/h	6	6	6	6	6	6	6	6
- Rated motor current I _M ²⁾ , run-up time 60 s, at 40 °C	A	500	525	551	575	600	630	880	920
- Rated motor current $I_{\rm M}^{(2)}$, run-up time 60 s, at 40 °C	A	480	489	520	540	550	580	810	850
- Rated motor current $I_{\rm M}^{-2}$, run-up time 60 s, at 60 °C	A	438	455	480	490	500	530	740	780
- Starts per hour ³)	1/h		1	1	1	1.5	1	1	1
1) Measurement at 60 °C not required according to LIL / CSA	1/11	2		1	J.	1.0	1	1	1

[|] Measurement at 60 °C not required according to UL / CSA.
| Current limiting on soft starter set at 350 % I_M; on-time OT = 70 %.
| Maximum selectable rated motor current I_M, depending on the CLASS settings.
| During intermittent duty S4 with on-time OT = 70 %, T_u = 40 / 50 / 60 °C, vertical stand-alone installation. The listed switching frequencies do not apply to automatic operation.



11.3.3 Technical data of the control section

_				
Туре	Terminal		3RW44BC3.	3RW44BC4.
Control unit				
Rated values Rated control supply voltage Tolerance Rated control supply current STANDBY	A1 / A2 / PE	V % mA	115 AC -15 / +10 30	230 AC -15 / +10 20
Rated control supply current ON 3RW44 2. 3RW44 3. 3RW44 4. 3RW44 5. 3RW44 6.		mA mA mA mA	300 500 750 450 650	170 250 400 200 300
Maximum current (pickup bypass) • 3RW44 2. • 3RW44 3. • 3RW44 4. • 3RW44 5. • 3RW44 6.		mA mA mA mA	1000 2500 6000 4500 4500	500 1250 3000 2500 2500
Rated frequency Tolerance		Hz %	50 60 ±10	50 60 ±10
Inrush current			< 15 A / 300 μs	

Туре			3RW44			
Control unit	Terminal			Factory setting		
Control inputs Input 1 Input 2 Input 3 Input 4	IN1 IN2 IN3 IN4			Start motor right parameter set 1 No Action No Action Trip Reset		
Supply Rated operating current	L+/L-	mA	Approx. 10 per input according to DIN 19240 Internal voltage: 24 V DC from internal supply via terminal L+ to IN1 IN4. Maximum load at			
Rated operational voltage	L+ L-		L+ approx. 55 mA External voltage: DC externalvoltage (according to DIN 19240) via terminals L- and IN1 IN4 (min. 12 V DC, max. 30 V DC)			
Thermistor motor protection input Input	T1/T2		PTC type A or Thermo click	deactivated		
Relay outputs (floating auxiliary contacts) Output 1 Output 2 Output 3 Output 4	13/14 23/24 33/34 95/96/98		The type of the time of time of the time of time o	On-time motor No Action No Action Group error		
Switching capacity of the relay outputs 230 V / AC-15 24 V / DC-13 Overvoltage protection Short-circuit protection		A A	3 at 240 V 1 at 24 V Protection using varistor via relaycontact 4 A utilizarion category gL/gG; 6 A quick (fuse not included in scope of deliver			
Protective functions						
Motor protection functions Tripping when Tripping class according to IEC 60947-4-1 Phase loss sensitivity		CLASS %	motor is thermally overloaded 5 / 10 / 15 / 20 / 30 >40	10		
Overload warning Reset and recovery Reset option after trip Pre-charge time		Min.	Yes Manual / automatic Manual / automatic 1 30	Manual Manual 1		
Device protection functions Tripping when Reset option after trip Pre-charge time		Min.	thyristors thermally overloaded Manual / automatic 0.5	Manual		
Bypass protection functions Tripping when Reset option after trip Pre-charge time		Min.	bypass contacts thermally overloaded Manual			



Туре		3RW44	Factory setting
Control times and parameters			
Control times Switch-on delay (when control voltage applied)	ms	< 50	
Switch-on delay (automatic operation)	ms	< 4000	
Pre-charge time (ON command with active stopping mode)	ms	< 100	
Network failure bridging time Control supply voltage	ms	100	
Network failure reaction time Load circuit	ms	100	
Reclosing lockout after overload trip Motor protection tripping Device protection tripping	Min.	1 30 30	1
Setting options for starting Voltage ramp start voltage	%	20 100	30
Start torque control Limiting torque control	% %	10 100 20 200	10 150
•			
Starting time Maximum starting time	s s	0 360 1 1000	20 deactivated
Current limiting value	%	125 550 ¹⁾	450
Breakaway voltage	%	40 100	80
Breakaway time	S	0 2	deactivated
Motor thermal capacity	%	1 100	20
Slow speed mode counter-clockwise <i>l</i> clockwise Speed factor in relation to nominal operating speed (<i>n</i> = <i>n</i> _{nominal} /factor) Slow speed torque ²⁾	%	3 21 20 100	7 50
Setting options for stopping			
Stopping torque control	%	10 100	10
Stopping time	S	0 360	10
Dynamic braking torque DC braking torque	%	20 100 20 100	50 50
Operating messages	70	Checking voltage	00
Operating messages		Checking line phases Ready to start	
		Start mode active	
		Motor running	
		Stopping mode active	
		Emergency start active	
Warnings / error messages		No line voltage Phase angle control failure	
		Phase loss • L1/L2/L3	
		Missing load phase T1/T2/T3	
		Failure • Switching element 1 (thyristor) / switching e	element 2 (thyristor) / switching
		Flash memory error	
		Supply voltage	
		below 75 %below 85 %	
		below 85 % above 110 %	
		Current unbalance exceeded Thermal motor model overload	
		Prewarning limit exceeded	
		Motor heat build-up Remaining time for tripping	
		Bypass element fault Line voltage too high	
		Device not identified	
		Versions not matching	
		Current range exceeded	
		Bypass element protective tripping	
		Overcurrent	
		Motor stalling – tripping Current limit exceeded	
		Power unit	
		Overheated	
3RW44 22 - 3RW44 47:	550 %	Overheated	



Туре	3RW44	Factory setting
Control times and parameters		
Warnings / error messages (continued)	Temperature sensor Overload Wire breakage	
	Short-circuit Ground fault Detected Tripping	
	Connection break in manual operating mode Max. number of starts exceeded /e limit value over / undershot	
	Cool-down time Motor active Contact block active	
	Heatsink thermistor • Wire breakage • Short-circuit	
	Quick stop active Contact block defective Impermissible I _e / CLASS settings No external start parameters received PIO error	
Control inputs Input 1 Input 2 Input 3 Input 4		Motor right parameter set 1 No Action No Action Trip Reset
Parameterization options for control inputs 1 4	No Action Manual operation local operating mode Emergency start Slow speed Quick stop Trip Reset	
	Motor right parameter set 1 Motor left parameter set 1 1) Motor right parameter set 2 Motor left parameter set 2 1) Motor right parameter set 3 Motor left parameter set 3	
Relay outputs Output 1 Output 2 Output 3 Output 4		On-time motor No Action No Action Group error
Parameterization options for relay inputs 1 3	No Action PIO Output 1 PIO Output 2	
	Input 1 Input 2 Input 3 Input 4	
	Run up Bypass operation Coasting down On-time motor Commanc motor-on	
	Fans DC braking contactor Group warning	
	Group error Bus error Device errors	
	Power on Ready to start	
Motor temperature sensor	deactivated Thermo clck PTC type A	deactivated



Thermistor motor protection (PTC binary)					
Summation cold resistance	≤ 1.5 kOhm				
Response value	3.4 kOhm to 3.8 kOhm				
Return value	1.5 kOhm - 1.65 kOhm				
Cable lengths (single), conductor cross sections:	Cross section:	Length:			
	2.5 mm ²	250 m			
	1.5 mm ²	150 m			
	0.5 mm ²	50 m			



11.3.4 Conductor cross-sections

Туре			3RW44 2.	3RW44 3.	3RW44 4.	3RW44 5. 3RW44 6.
Conductor cross-sect	ions					
Screw-type terminals	Main conductor:					
With box terminal				3RT19 55-4G (55 kW)	3RT19 66-4G	_
Front terminal connected	 Finely stranded with cable end sleeve Finely stranded without cable end sleeve Solid 	mm ² mm ² mm ²	2.5 35 4 50 2.5 16	16 70 16 70	70 240 70 240	_
ī.	Stranded	mm ²	4 70	16 70	95 300	_
NSB00479	Ribbon cable (number x width x thickness)	mm	6 x 9 x 0.8	min. 3 x 9 x 0.8, max. 6 x 15.5 x 0.8	min. 6 x 9 x 0.8 max. 20 x 24 x 0.5	_
	AWG conductors, solid or stranded	AWG	10 2/0	6 2/0	3/0 600 kcmil	-
Rear terminal connected	Finely stranded with cable end sleeve Finely stranded without cable end sleeve Solid	mm ² mm ² mm ²	2.5 50 10 50 2.5 16	16 70 16 70	120 185 120 185	E
00480	Stranded	mm ²	10 70	16 70	120 240	_
NSB	Ribbon cable (number x width x thickness)	mm	6 x 9 x 0.8	min. 3 x 9 x 0.8, max. 6 x 15.5 x 0.8	min. 6 x 9 x 0.8 max. 20 x 24 x 0.5	_
	AWG conductors, solid or stranded	AWG	10 2/0	6 2/0	250 500 kcmil	_
Both terminals connected	Finely stranded with cable end sleeve	mm^2	2 x (2.5 35)	max. 1 x 50, 1 x 70	min. 2 x 50; max. 2 x 185	_
	Finely stranded without cable end sleeve	mm ²	2 x (4 35)	max. 1 x 50, 1 x 70	min. 2 x 50; max. 2 x 185	_
SB00481	Solid Stranded	mm ² mm ²	2 x (2.5 16) 2 x (4 50)	— max. 2 x 70	— max. 2 x 70; max. 2 x 240	_
ž	Ribbon cable (number x width x thickness)	mm	2 x (6 x 9 x 0.8)	max. 2 x (6 x 15.5 x 0.8)	max. 2 x (20 x 24 x 0.5)	_
	AWG conductors, solid or stranded	AWG	2 x (10 1/0)	max. 2 x 1/0	min. 2 x 2/0; max. 2 x 500 kcmil	_
	Connecting screws		M6 (hexagon socket, A/F4)	M10 (hexagon socket, A/F4)	M12 (hexagon socket, A/F5)	_
	- Tightening torque	Nm lbf.in	4 6 36 53	10 12 90 110	20 22 180 195	_
Screw-type terminals	Main conductor:					
With box terminal			_	3RT19 56-4G	_	-
Front or rear terminal	Finely stranded with cable end sleeve	mm ² mm ²	-	16 120	_	_
connected $\qquad \qquad \qquad$	 Finely stranded without cable end sleeve Stranded 	mm ²	_	16 120 16 120	_	_
	Ribbon cable (number x width x thickness)	mm	_	min. 3 x 9 x 0.8	_	_
1SB00479	AWOdustanlidtdd	414/0		max. 6 x 15.5 x 0.8		
w w	AWG conductors, solid or stranded	AWG	_	6 250 kcmil		
Both terminals	Finely stranded with cable end sleeve	mm ²	_	max. 1 x 95, 1 x 120	_	_
connected	 Finely stranded without cable end sleeve 	mm^2	-	max. 1 x 95, 1 x 120	-	_
	StrandedRibbon cable (number x width x thickness)	mm ² mm	_	max. 2 x 120 max. 2 x	_	
\$800481	AWG conductors, solid or stranded	AWG	_	(10 x 15.5 x 0.8) max. 2 x 3/0	_	_
<u> </u>						
Screw-type terminals	Main conductor:					
	Without box terminal / busbar connections					-
	Finely stranded with cable lug	mm ²	_	16 95 ¹⁾	50 240 ²⁾	50 240 ²⁾
	 Stranded with cable lug AWG conductors, solid or stranded 	mm² AWG	_	25 120 ¹⁾ 4 250 kcmil	70 240 ²⁾ 2/0 500 kcmil	70 240 ²⁾ 2/0 500 kcmil
	Connecting bar (max. width)	mm	_	17	25	60
	Connecting screws		_	M8 x 25 (A/F13)	M10 x 30 (A/F17)	M12 x 40
	- Tightening torque	Nm lbf.in	Ξ	10 14 89 124	14 24 124 210	20 35 177 310

¹⁾ When connecting cable lugs according to DIN 46235 from a conductor cross-section of 95 mm², the 3RT19 56-4EA1 terminal cover is required to ensure phase clearance.

²⁾ When connecting cable lugs according to DIN 46234 from a conductor cross-section of 240 mm² as well as DIN 46235 from a conductor cross-section of 185 mm², the 3RT19 66-4EA1 terminal cover is required to ensure phase clearance.



Soft starters	Туре		3RW44
Conductor cross-secti	ions		
Auxiliary conductor (1 or 2	2 conductors can be connected):		
	Screw-type terminals		
	SolidFinely stranded with cable end sleeve	$\frac{\text{mm}^2}{\text{mm}^2}$	2 x (0.5 2.5) 2 x (0.5 1.5)
	 AWG conductors solid or stranded Finely stranded with cable end sleeve 	AWG AWG	2 x (20 14) 2 x (20 16)
	Connecting screws Tightening torque	Nm Ibf.in	0.8 1.2 7 10.3
	Spring-type terminals		
	SolidFinely stranded with cable end sleeveAWG conductors, solid or stranded	mm ² mm ² AWG	2 x (2.25 1.5) 2 x (2.25 1.5) 2 x (24 16)

11.3.5 Electromagnetic compatibility

	Standard	Parameter
Electromagnetic Compatibility according to EN 60947-4-2		•
EMC interference immunity		
Electrostatic discharge (ESD)	EN 61000-4-2	±4 kV contact discharge, ±8 kV air discharge
Electromagnetic HF fields	EN 61000-4-3	Frequency range: 80 1000 MHz with 80 % at 1 kHz Severity 3, 10 V/m
Conducted HF interference	EN 61000-4-6	Frequency range: 150 kHz 80 MHz with 80 % at 1 kHz Interference 10 V
HF voltages and HF currents on conductors Burst Surge	EN 61000-4-4 EN 61000-4-5	±2 kV/5 kHz ±1 kV line to line ±2 kV line to ground
EMC emission		
EMC radio interference field strength	EN 55011	Limit value of Class A at 30 1000 MHz
Radio interference voltage	EN 55011	Limit value of Class A at 0.15 30 MHz
Is a radio interference suppression filter required?		
Radio interference suppression A (industrial application)	No	

Types of coordination

The DIN EN 60947-4-1 (VDE 0660 Part 102) or IEC 60947-4-1 standard distinguishes between two types of coordination, referred to as coordination type "1" and coordination type "2". The short circuit that needs to be dealt with is cleared reliably and safely with both types of coordination; the only differences are in the extent of the damage sustained by the device following a short circuit.


Type of coordination 1	Type of coordination 2
ToC 1	ToC 2
The fuseless load feeder may be non-operational after a short circuit has been cleared. Damage to the contactor or to the overload release is permissible. For 3RA1 load feeders, the circuit breaker itself always achieves type 2 coordination.	There must be no damage to the overload release or to any other components after a short circuit has been cleared. The 3RA1 fuseless load feeder can resume operation without needing to be renewed. At most, welding of the contactor contacts is permissible if they can be disconnected easily without any significant deformation.



11.3.6 Feeder component layout (standard circuit)

Fuse assignment


The type of coordination according to which the motor feeder with soft starter is mounted depends on the application-specific requirements. Normally, fuseless mounting (combination of motor starter protector and soft starter) is sufficient. If type of coordination 2 is to be fulfilled, semiconductor fuses must be fitted in the motor feeder.

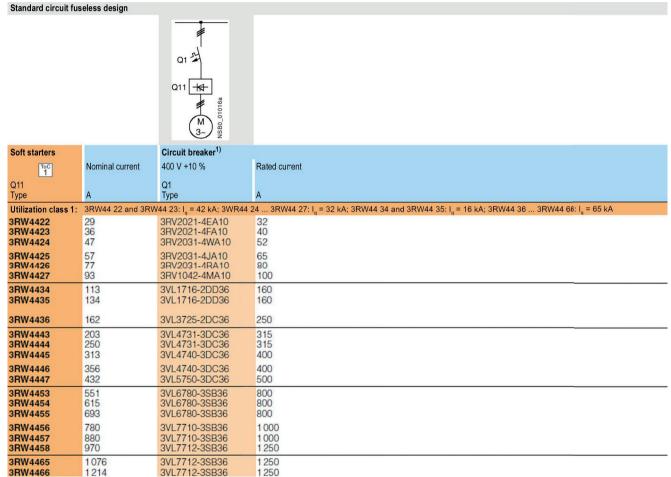

¹⁾ The rated motor current must be taken into consideration during device selection.



 Standard circuit fused design (line protection only)



		<u> </u>					
Soft starters		Line fuse, maximun	1		Line contactor up to 400 V	Braking contactor	1)2)
T _o C 1	Nominal current	690 V +5 %	Rated current	Size	(option)		
Q11		E1			Q21	Q91	Q92
Туре	Α	Туре	Α		Туре	Туре	Туре
Utilization class 13)	: / _q = 65 kA						
3RW4422	29	3NA3820-6	50	00	3RT2027	3RT2526	-
3RW4423	36	3NA3822-6	63	00	3RT2028	3RT2526	
3RW4424	47	3NA3824-6	80	00	3RT2036	3RT2535	
3RW4425	57	3NA3830-6	100	00	3RT2037	3RT2535	-
3RW4426	77 93	3NA3132-6	125 160	1	3RT2038 3RT2046	3RT2024	3RT2035
3RW4427		3NA3136-6	0.000	- 1		3RT2025	3RT2036
3RW4434	113	3NA3244-6	250	2 2 3	3RT1054	3RT2027	3RT2037
3RW4435 3RW4436	134 162	3NA3244-6 3NA3365-6	250 500	2	3RT1055 3RT1056	3RT2036 3RT2037	3RT2038 3RT2038
3RW4443 3RW4444	203 250	2 x 3NA3354-6 2 x 3NA3354-6	2 x 355 2 x 355	3	3RT1064 3RT1065	3RT2037 3RT2037	3RT1054 3RT1055
3RW4444	313	2 x 3NA3365-6	2 x 500	3	3RT1075	3RT1054	3RT1056
	Control				Control of the Contro		
3RW4446 3RW4447	356 432	2 x 3NA3365-6 2 x 3NA3365-6	2 x 500 2 x 500	3	3RT1075 3RT1076	3RT1054 3RT1055	3RT1056 3RT1064
			200000000000000000000000000000000000000	N. C.			174.111.217.E.D
3RW4453 3RW4454	551 615	2 x 3NA3365-6 2 x 3NA3365-6	2 x 500 2 x 500	3	3TF68 3TF68	3RT1064 3RT1064	3RT1066 3RT1075
3RW4454	693	2 x 3NA3365-6	2 x 500	3	3TF69	3RT1064 3RT1065	3RT1075
	1,000,000					200700000000000000000000000000000000000	
3RW4456 3RW4457	780 880	2 x 3NA3365-6 2 x 3NA3365-6	2 x 500 2 x 500	3	3TF69	3RT1065 3RT1075	3RT1075 3RT1076
3RW4458	970	3 x 3NA3365-6	3 x 500	3 3 3		3RT1075	3RT1076
3RW4465	1076	3 x 3NA3365-6	3 x 500	3		3RT1075	3TF68
3RW4466	1214	3 x 3NA3365-6	3 x 500	3		3RT1076	3TF68

 
¹⁾ If the "Combined braking" stopping function is selected, no braking contactor is required. If the "DC braking" function is selected, a braking contactor must be additionally used (for type, see table). The "DC braking" function is recommended for applications with larger centrifugal masses ($J_{load} > J_{motor}$).

Additional K4 auxiliary relay:
 LZX:RT4A4T30 (3RW44 soft starter with 230 V AC rated control supply vollage),
 LZX:RT4A4S15 (3RW44 soft starter with 115 V AC rated control supply voltage).

^{3) &}quot;Utilization class 1" refers to the soft starter in combination with the protective device listed (circuit breaker/fuse), not to other components in the branch.



Standard circuit fused design with SITOR 3NE1 all-range fuse (semiconductor and line protection)



For suitable fuse bases, see LV1 catalog at "SENTRON Switching and Protection Devices for Power Distribution" -> "Switch Disconnectors" and ET B1 Catalog at "BETA Protecting" -> "SITOR Semiconductor Fuses" and/or at www.siemens.com/sitor > SITOR Semiconductor Fuses

Soft starters		All-range fuse				Line contactor up to 400 V	Braking contactor ¹⁾²⁾	
ToC 2	Nominal current		Rated current	Voltage	Size	(option)		
Q11 Type	A	E'1 Type	A	V		Q21 Type	Q91 Type	Q92 Type
Utilization class	$s 2^{3}$: $I_q = 65 \text{ kA}$							
3RW4422	29	3NE1020-2	80	690 +5 %	00	3RT2027	3RT2526	Ξ
3RW4423	36	3NE1020-2	80	690 +5 %	00	3RT2028	3RT2526	
3RW4424	47	3NE1021-2	100	690 +5 %	00	3RT2036	3RT2535	
3RW4425 3RW4426 3RW4427	57 77 93	3NE1022-2 3NE1022-2 3NE1224-2	125 125 160	690 +5 % 690 +5 % 690 +5 %	00 00 1	3RT2037 3RT2038 3RT2046	3RT2535 3RT2024 3RT2025	3RT2035 3RT2036
3RW4434	113	3NE1225-2	200	690 +5 %	1	3RT1054	3RT2027	3RT2037
3RW4435	134	3NE1227-2	250	690 +5 %	1	3RT1055	3RT2036	3RT2038
3RW4436	162	3NE1227-2	250	690 +5 %	1	3RT1056	3RT2037	3RT2038
3RW4443	203	3NE1230-2	315	600 +10 %	1	3RT1064	3RT2037	3RT1054
3RW4444	250	3NE1331-2	350	460 +10 %	2	3RT1065	3RT2037	3RT1055
3RW4445	313	3NE1333-2	450	690 +5 %	2	3RT1075	3RT1054	3RT1056
3RW4446	356	3NE1334-2	500	690 +5 %	2	3RT1075	3RT1054	3RT1056
3RW4447	432	3NE1435-2	560	690 +5 %		3RT1076	3RT1055	3RT1064
3RW4453	551	2 x 3NE1334-2	500	690 +10 %	2	3TF68	3RT1064	3RT1066
3RW4454	615	2 x 3NE1334-2	500	690 +10 %	2	3TF68	3RT1064	3RT1075
3RW4455	693	2 x 3NE1334-2	500	690 +10 %	2	3TF69	3RT1065	3RT1075
3RW4456	780	2 x 3NE1435-2	560	690 +10 %	3	3TF69	3RT1065	3RT1075
3RW4457	880	2 x 3NE1435-2	560	690 +10 %	3		3RT1075	3RT1076
3RW4458	970	2 x 3NE1435-2	560	690 +10 %	3		3RT1075	3RT1076
3RW4465 3RW4466	1 076 1 214	3 x 3NE1334-2 3 x 3NE1435-2	500 560	690 +10 % 690 +10 %	2 3		3RT1075 3RT1076	3TF68 3TF68

If the "Combined braking" stopping function is selected, no braking contactor is required.
 If the "DC braking" function is selected, a braking contactor must be additionally used (for type, see table).
 The "DC braking" function is recommended for applications with larger centrifugal masses (J_{load} > J_{motor}).

LZX:RT4A4T30

(3RW44 soft starter with 230 V AC rated control supply voltage), LZX:RT4A4S15

 
(3RW44 soft starter with 115 V AC rated control supply voltage).

 
3) "Utilization class 2" refers to the soft starter in combination with the protective device listed (circuit breaker/fuse), not to other components in the branch.

²⁾ Additional K4 auxiliary relay:



Standard circuit fused design with SITOR 3NE or 3NC semiconductor fuse (semiconductor protection using fuse, line and overload protection using circuit breaker)





For suitable fuse bases, see LV1 catalog at "SENTRON Switching and Protection Devices for Power Distribution" -> "Switch Disconnectors" and ET B1 Catalog at "BETA Protecting" -> "SITOR Semiconductor Fuses" and/or at www.siemens.com/sitor > SITOR Semiconductor Fuses

					્	~/ ¹²	
Soft starters		Semiconductor fu	se minimum		Semicond	uctor fuse (cylinder	·)
ToC 2	Nominal current	690 V +10 %	Rated current	Size		Rated current	Size
Q11 Type	A	E3 Type	A		E3 Type	A	
Utilization class	2 ¹⁾ : I _q = 65 kA						
3RW44 22 3RW44 23 3RW44 24	29 36 47	3NE4 120 3NE4 121 3NE4 121	80 100 100	0 0 0	3NC2 280 3NC2 200 3NC2 200	100	22 x 58 22 x 58 22 x 58
3RW44 25 3RW44 26 3RW44 27	57 77 93	3NE4 122 3NE4 124 3NE3 224	125 160 160	0 0 1			
3RW44 34 3RW44 35 3RW44 36	113 134 162	3NE3 225 3NE3 225 3NE3 227	200 200 250	1 1 1			
3RW44 43 3RW44 44 3RW44 45	203 250 313	3NE3 230-0B 3NE3 230-0B 3NE3 233	315 315 450	1 1 1			
3RW44 46 3RW44 47	356 432	3NE3 333 3NE3 335	450 560	2 2			
3RW44 53 3RW44 54 3RW44 55	551 615 693	2 x 3NE3 335 2 x 3NE3 335 2 x 3NE3 335	560 560 560	2 2 2			
3RW44 56 3RW44 57 3RW44 58 3RW44 65 3RW44 66	780 880 970 1076 1214	2 x 3NE3 336 2 x 3NE3 336 2 x 3NE3 336 2 x 3NE3 340-8 2 x 3NE3 340-8	630 630 630 900 900	2 2 2 2 2			

^{1) &}quot;Utilization class 2" refers to the soft starter in combination with the protective device listed (circuit breaker/fuse), not to other components in the branch.



Soft starters		Line contactor up to 400 V	Braking contactor ¹⁾²⁾	Braking contactor ¹⁾²⁾			Line fuse, maximu	m	
ToC 2	Nominal current	(option)			400 V +10 %	Rated current	690 V +5 %	Rated current	Size
Q11 Type	A	Q21 Type	Q91 Type	Q92 Type	Q1 Type	A	E1 Type	A	
Utilization cl	ass 2 ³⁾ : I _g = 65	i kA							
3RW4422 3RW4423 3RW4424	36	3RT2027 3RT2028 3RT2036	3RT2526 3RT2526 3RT2535	-	3RV2021-4EA10 3RV2021-4FA10 3RV2031-4WA10	32 40 52	3NA3820-6 3NA3822-6 3NA3824-6	50 63 80	00 00 00
3RW4425 3RW4426 3RW4427	77	3RT2037 3RT2038 3RT2046	3RT2535 3RT2024 3RT2025	3RT2035 3RT2036	3RV2031-4JA10 3RV2031-4RA10 3RV1042-4MA10	65 80 100	3NA3830-6 3NA3132-6 3NA3136-6	100 125 160	00 1 1
3RW4434 3RW4435 3RW4436	134	3RT1054 3RT1055 3RT1056	3RT2027 3RT2036 3RT2037	3RT2037 3RT2038 3RT2038	3VL1716 3VL1716 3VL3725	160 160 250	3NA3244-6 3NA3244-6 3NA3365-6	250 250 500	2 2 3
3RW4443 3RW4444 3RW4445	250	3RT1064 3RT1065 3RT1075	3RT2037 3RT2037 3RT1054	3RT1054 3RT1055 3RT1056	3VL4731 3VL4731 3VL4740	315 315 400	2 x 3NA3354-6 2 x 3NA3354-6 2 x 3NA3365-6	2 x 355 2 x 355 2 x 500	3 3 3
3RW4446 3RW4447		3RT1075 3RT1076	3RT1054 3RT1055	3RT1056 3RT1064	3VL4740 3VL5750	400 500	2 x 3NA3365-6 2 x 3NA3365-6	2 x 500 2 x 500	3
3RW4453 3RW4454 3RW4455	615	3TF68 3TF68 3TF69	3RT1064 3RT1064 3RT1065	3RT1066 3RT1075 3RT1075	3VL6780 3VL6780 3VL6780	800 800 800	2 x 3NA3365-6 2 x 3NA3365-6 2 x 3NA3365-6	2 x 500 2 x 500 2 x 500	3 3 3
3RW4456 3RW4457 3RW4458	880	3TF69	3RT1065 3RT1075 3RT1075	3RT1075 3RT1076 3RT1076	3VL7710 3VL7710 3VL7712	1 000 1 000 1 250	2 x 3NA3365-6 2 x 3NA3365-6 3 x 3NA3365-6	2 x 500 2 x 500 3 x 500	3 3 3
3RW4465 3RW4466			3RT1075 3RT1076	3TF68 3TF68	3VL7712 3VL7712	1 250 1 250	3 x 3NA3365-6 3 x 3NA3365-6	3 x 500 3 x 500	3


If the "Combined braking" stopping function is selected, no braking contactor is required.
 If the "DC braking" function is selected, a braking contactor must be additionally used (for type, see table).
 The "DC braking" function is recommended for applications with larger centrifugal masses (J_{load} > J_{motor}).

Additional K4 auxiliary relay: LZX:RT4A4T30 (3RW44 soft starter with 230 V AC rated control supply voltage), LZX:RT4A4S15 (3RW44 soft starter with 115 V AC rated control supply voltage).

^{3) &}quot;Utilization class 2" refers to the soft starter in combination with the protective device listed (circuit breaker/fuse), not to other components in the branch.



11.3.7 Feeder component layout (inside-delta circuit)

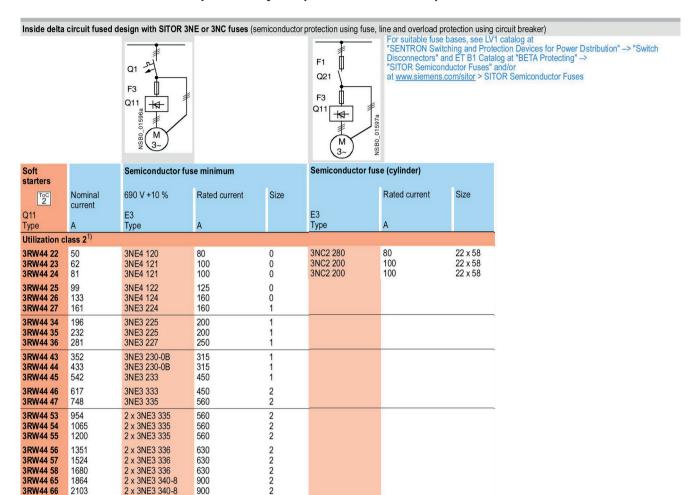

Note

2 x 3NE3 340-8

900

900

If the F3 semiconductor fuse is not used, the type of coordination "2" is reduced to type of coordination "1" for soft starters in combination with the stipulated protective device.

3RW44 65

3RW44 66

1864

2103



Soft starters		Line contactor up to 400 V	Circuit breaker		Line fuse, maximun	1	
T _o C 2	Nominal current	(option)	400 V +10 %	Rated current	690 V +5 %	Rated current	Size
Q11 Type	A	Q21 Type	Q1 Type	Α	E1 Type	A	
Itilization class 2	2 ¹⁾						
3RW4422	50	3RT2036-1AP04	3RV1042-4KA10	75	3NA3824-6	80	00
3RW4423	62	3RT2037-1AP04	3RV1042-4LA10	90	3NA3830-6	100	00
3RW4424	81	3RT2038-1AP04	3RV1042-4MA10	100	3NA3132-6	125	1
3RW4425	99	3RT1054-1AP36	3VL2716	160	3NA3136-6	160	1
3RW4426	133	3RT1055-6AP36	3VL2716	160	3NA3240-6	200	2
3RW4427	161	3RT1056-6AP36	3VL3720	200	3NA3244-6	250	2
3RW4434	196	3RT1064-6AP36	3VL3725	250	3NA3360-6	400	3
3RW4435	232	3RT1065-6AP36	3VL4731	315	3NA3360-6	400	3
3RW4436	281	3RT1066-6AP36	3VL4740	400	2 x 3NA3360-6	2 x 400	3
BRW4443	352	3RT1075-6AP36	3VL4740	400	2 x 3NA3365-6	2 x 500	3
BRW4444	433	3RT1076-6AP36	3VL5750	500	2 x 3NA3365-6	2 x 500	3
BRW4445	542	3TF6844-0CM7	3VL5763	630	3 x 3NA3365-6	3 x 500	3
3RW4446	617	3TF6844-0CM7	3VL6780	800	3 x 3NA3365-6	3 x 500	3
3RW4447	748	3TF69	3VL6780	800	3 x 3NA3365-6	3 x 500	
3RW4453	954		3VL7710	1 000	3 x 3NA3365-6	3 x 500	3
3RW4454	1 065		3VL7712	1 250	3 x 3NA3365-6	3 x 500	3
3RW4455	1 200		3VL8716	1 600	3 x 3NA3365-6	3 x 500	3
3RW4456	1351		3VL8716	1 600	3 x 3NA3372	3 x 630	3
3RW4457	1524		3VL8716	1 600	3 x 3NA3372	3 x 630	3
3RW4458	1680		3WL1220	2 000	2 x 3NA3480	2 x 1000	4
3RW4465 3RW4466	1 864 2 103		3WL1225 3WL1225	2500 2500	2 x 3NA3482 2 x 3NA3482	2 x 1250 2 x 1250	4 4

 [&]quot;Utilization class 2" refers to the soft starter in combination with the protective device listed (circuit breaker/fuse), not to other components in the branch.



11.3.8 Accessories

	Version	DT	Article No.
Soft Starter ES 2007 Basic 32	S1313-4CC10-0YA5 Floating		
	Floating License for one user		
STRIPE.	Engineering software in limited-function version for diagnostics purposes, software and documentation on CD, 3 languages (German/English/French), communication through system interface		
	License key on USB stick, Class A, including CD	В	3ZS1313-4CC10-0YA5
3ZS1313-4CC10-0YA5	License key download, Class A, without CD		3ZS1313-4CE10-0YB5
Soft Starter ES 2007 Standard	d		
	Floating License for one user		
	Engineering software, software and documentation on CD, 3 languages (German/English/French), communication through system interface		
MEMENS	License key on USB stick, Class A, including CD	В	3ZS1313-5CC10-0YA5
3ZS1313-5CC10-0YA5	License key download, Class A, without CD		3ZS1313-5CE10-0YB5
	Upgrade for Soft Starter ES 2006	В	3ZS1313-5CC10-0YE5
	Floating license for one user, engineering software, software and documentation on CD, license key on USB stick, Class A, 3 languages (German/English/French), communication through the system interface		
	Powerpack for Soft Starter ES 2007 Basic	В	3ZS1313-5CC10-0YD5
	Floating license for one user, engineering software, license key on USB stick, Class A, 3 languages (German/English/French), communication through the system interface		
	Software Update Service		3ZS1313-5CC10-0YL5
	For 1 year with automatic extension, assuming the current software version is in use, engineering software, software and documentation on CD, communication through the system interface		
Optional accessories			
	USB PC cable		3UF7941-0AA00-0
	For connecting to the USB interface of a PC/PG, for communication with Soft Starter ES through the system interface		
3UF7941-0AA00-0	Optional communication module for SIRIUS 3RW44		
	PROFIBUS		3RW4900-0KC00
	PROFINET		3RW4900-0NC00



	Version	DT	Article No.
Communication modules			
3RW4900-0KC00	PROFIBUS communication module For 3RW44 soft starter integration in the PROFIBUS network with DPV1 slave functionality. With firmware version E04 and higher (or date of manufacture May 1, 2009 and later) of the module, DPV1 operation of the soft starter on a Y-link is also possible (only DPV0 operation possible with < E04).		3RW4900-0KC00
311114900-011000			
3RW4900-0NC00	PROFINET communication module For 3RW44 soft starter integration in the PROFINET network, suitable for devices with firmware version E12 or higher		3RW4900-0NC00
External display and operat	or module	•	
	For indicating and operating the functions provided by the soft starter using an externally mounted display and operator module in IP54 degree of protection (e.g. in the control cabinet door)		
3RW4900-0AC00	Connecting cable		
	From the device interface (serial) of the 3RW44 soft starter to the external display and operator module		
	Length 0.5 m, flat		3UF7932-0AA00-0
	Length 0.5 m, round		3UF7932-0BA00-0
	Length 1.0 m, round		3UF7937-0BA00-0
	Length 2.5 m, round		3UF7933-0BA00-0




	T		1	
	Version		DT	Article No.
Box terminal block for soft sta	ırters			1
	Box terminal bloc	:k		
	(2 units required per device)			
	3RW442.	Included in the scope of supply		
	3RW443.	• Max. 70 mm ²		3RT1955-4G
3RT19		• Up to 120 mm2		3RT1956-4G
		Auxiliary conductor connection for box terminals	В	3TX7500-0A
	3RW444.	Max. 240 mm² (with auxiliary conductor connection)		3RT1966-4G
Covers for soft starters			1	
	Terminal covers t	for box terminals		
	Additional touch protection to be fitted at the box terminals (2 units required per device)			
	3RW442. and 3RW443.			3RT1956-4EA2
	3RW444.			3RT1966-4EA2
	Terminal covers to	for cable lugs and busbar		
3RT19.6-4EA1	3RW442. and 3RW443. For complying with the voltage clearances and as touch protection (2 units required per contactor)			3RT1956-4EA1
3K119.0-4EA1	3RW444.	Also fits on mounted box terminals		3RT1966-4EA1
SIRIUS 3RW44 Soft Starter N	/lanual			
	(https://support.ir /21772518) is ava	/44 Soft Starter Manual adustry.siemens.com/cs/ww/en/view ailable at the Industry Online a free PDF download.		

The SIRIUS 3RW442/443/444/445/446 soft starter operating instructions (https://support.industry.siemens.com/cs/ww/en/view/21189750) (article number 3ZX1012-0RW44-0AA0) are included in the scope of supply of the soft starter, or are available (like the manual) as a PDF download at the Industry Online Support Portal.



11.3.9 Spare parts

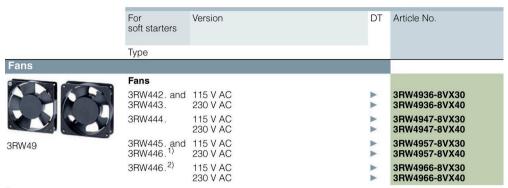

^{1) 3}RW446. mounting on output side.

Note

3RW4422 and 3RW4423


The 3RW4422 and 3RW4423 soft starters do not need fans. These devices are adequately designed for natural convection.

²⁾ For mounting on front side.




11.4 Tripping characteristics

11.4.1 Motor protection tripping characteristics: 3RW44 with symmetry

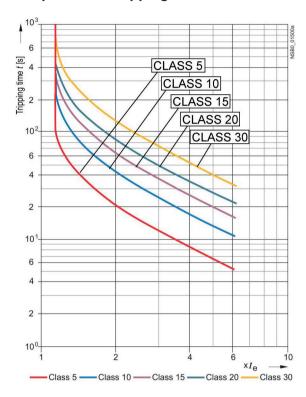



11.4.2 Motor protection tripping characteristics: 3RW44 with asymmetry

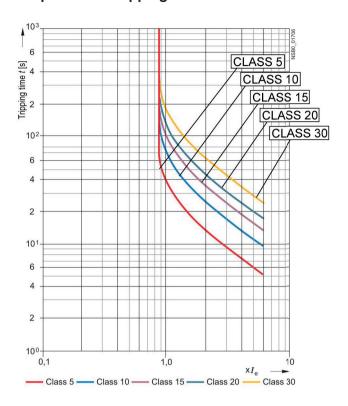



11.5 Dimension drawings

11.5.1 Dimension drawings

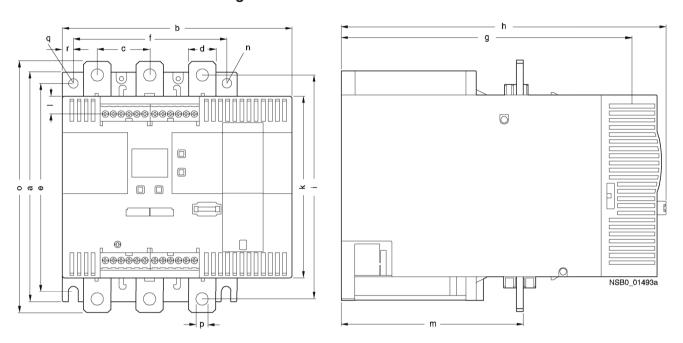


Figure 11-1 3RW44 2, 3RW44 3, 3RW44 4

	3RW44 2	3RW44 3	3RW44 4
а	180 mm (7.09 in)	180 mm (7.09 in)	210 mm (8.27 in)
b	170 mm (6.69 in)	170 mm (6.69 in)	210 mm (8.27 in)
С	37 mm (1.46 in)	37 mm (1.46 in)	48 mm (1.89 in)
d	11 mm (0.43 in)	17 mm (0.67 in)	25 mm (0.98 in)
е	167 mm (6.57 in)	167 mm (6.57 in)	190 mm (7.48 in)
f	100 mm (3.94 in)	100 mm (3.94 in)	140 mm (5.51 in)
g	240 mm (9.45 in)	240 mm (9.45 in)	269 mm (10.59 in)
h	270 mm (10.63 in)	270 mm (10.63 in)	298 mm (11.73 in)
i	174 mm (6.85 in)	174 mm (6.85 in)	205 mm (8.07 in)
k	148 mm (5.83 in)	148 mm (5.83 in)	166 mm (6.54 in)
I	7.5 mm (0.30 in)	7.5 mm (0.30 in)	16 mm (0.63 in)
m	153 mm (6.02 in)	153 mm (6.02 in)	166 mm (6.54 in)
n	7 mm (0.28 in)	7 mm (0.28 in)	9 mm (0.35 in)
0	184 mm (7.24 in)	198 mm (7.80 in)	230 mm (9.06 in)
р	6.6 mm (0.26 in)	9 mm (0.35 in)	11 mm (0.43 in)
q	M6 10 Nm (89 lbf.in)	M6 10 Nm (89 lbf.in)	M8 15 Nm (134 lbf.in)
r	10 mm (0.39 in)	10 mm (0.39 in)	10 mm (0.39 in)
Weight	6.5 kg	7.9 kg	11.5 kg



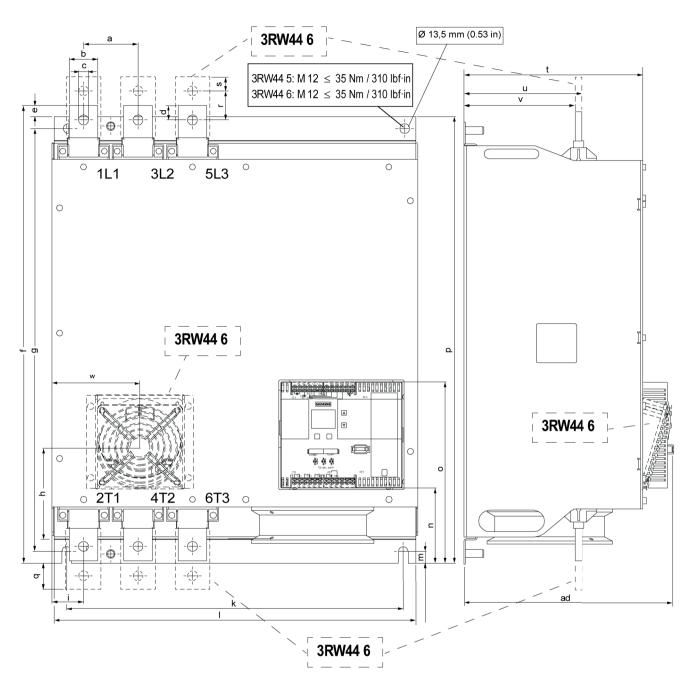


Figure 11-2 3RW44 5/3RW44 6



	3RW44 5	3RW44 6		
а	76 mm (3 in)	85 mm (3.35 in)		
b	40 mm (1.6 in)	50 mm (1.97 in)		
С	14 mm (0.6 in)	14 mm (0.6 in)		
d	20 mm (0.8 in)	-		
е	15.5 mm (0.7 in)	-		
f	638.5 mm (25.2 in)	667 mm (26.3 in)		
g	590 mm (9.45 in)	660 mm (26 in)		
h	-	160 mm (6.3 in)		
i	44 mm (1.8 in)	37.5 mm (1.48 in)		
k	470mm (18 in)	535 mm (21 in)		
I	510 mm (20 in)	576 mm (22.7 in)		
m	16.5 mm (0.7 in)	16.5 mm (0.7 in)		
n	105 mm (4.1 in)	103 mm (4.06 in)		
0	253 mm (10 in)	251 mm (9.88 in)		
р	623 mm (24.6 in)	693 mm (27.3 in)		
q	-	43.5 mm (1.71 in)		
r	-	40 mm (1.6 in)		
S	-	20 mm (0.78 in)		
t	249 mm (9.8 in)	249 mm (9.8 in)		
u	162 mm (6.4 in)	162 mm (6.4 in)		
V	152 mm (5.9 in)	151.4 mm (5.96 in)		
w	-	123 mm (4.84 in)		
ad	290 mm	290 mm		
Weight	50.0 kg	78.0 kg		



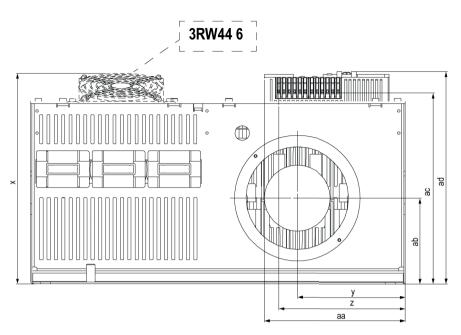


Figure 11-3 3RW44 6

	3RW44 5	3RW44 6		
х	290 mm (11.4 in)	289.5 mm (11.4 in)		
у	147 mm (5.7 in)	175 mm (6.9 in)		
z	173 mm (6.9 in)	173 mm (6.8 in)		
aa	195 mm (7.7 in)	-		
ab	118 mm (4.6 in)	118 mm (4.65 in)		
ac	261 mm (10.2 in)	261 mm (10.28 in)		
ad	290 mm (11.5 in)	290 mm (11.42 in)		



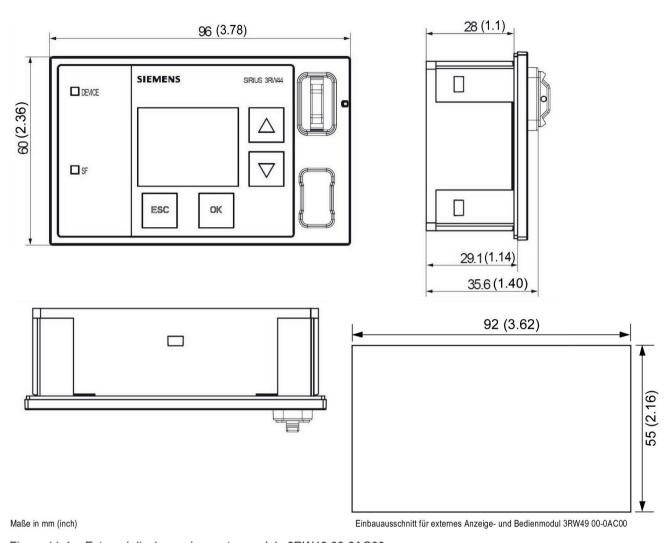


Figure 11-4 External display and operator module 3RW49 00-0AC00



Appendix



Configuration data

Siemens AG

Technical Support Low-Voltage Control Systems

Tel.: +49 (0) 911-895-5900 Fax: +49 (0) 911-895-5907

E-mail: technical-assistance@siemens.com



1. Motor data

Siemens motor?	
Rated power:	kW
Rated voltage:	V
Line frequency:	Hz
Rated current:	А
Starting current:	A
Rated speed:	rpm
Rated torque:	Nm
Breakdown torque:	Nm
Mass moment of inertia:	kg*m2

Speed/torque characteristic curve

(The speed increments of the value pairs do not have to be equal)

n _M 1/m						"n _{syn} "
Мм %						

Speed/current characteristic curve

(The speed increments of the value pairs do not have to be equal)

n _M 1/m			"n _{syn} "
I _M %			

2. Load data

Load type (e.g. pump, mill, etc.):	
Rated speed:	rpm
Rated torque or rated output	Nm or kW
Mass moment of inertia (load-specific)	kg*m²
Mass moment of inertia (motor-specific)	kg*m²

Speed/torque characteristic curve

(The speed increments of the value pairs do not have to be equal)

n _L 1/m						"n _{syn} "
ML %						



3. Start conditions

4.

Starting frequ	Starts					
Switching cycles:	Ramp-up time					
	Operating time					
	Idle time					
	Coast-down time					
Ambient temp	perature			°C		
		1				
		Yes	Value	Value		
Starting curre	nt limitation?					
Acceleration t	torque limitation?					
Maximum sta	rting time?					
Personal det	ails					
Last name, fi	rst name:					
Company:						
Department:						
Street:						
Zip code, tov	vn/city:					
Country:						
Phone:						
Fax:						



Index

Α

Ambient temperature, 26 Application examples, 21 Applications, 17, 119, 123 Asymmetry, 136 Asymmetry limit value, 136

В

Breakaway pulse, 124 Breakaway time, 124 Breakaway voltage, 124 Byte arrangements, 186

C

Capacitor, 41 CLASS 10, 21, 138 CLASS 10A, 138 CLASS setting, 136, 137, 145 Coast-down time, 129, 132, 133, 133 Coasting down, 129 Coasting methods, 128 Combined braking, 131 Configuration, 20 Configuring with GSD, 162 Contact element, 32 Control voltage versions, 42 Current asymmetry limit value, 136 Current limiting, 126 Current limiting value, 125 Current limits, 135

D

Data sets, 186
DC braking, 131, 132
DC braking torque, 132, 133
Degree of protection, 30
Diagnostics, 140
Disconnector, 32
Dynamic braking torque, 131

F

Factory settings, 27

G

Ground fault, 145 GSD file, 162

ı

Idle time, 137, 138 Inchnig, 137 Installation altitude, 26 Internal run-up recognition, 120, 123 Intrinsic device protection, 139

L

Limiting torque, 122 Locked-rotor torque, 13, 119, 122, 124

М

Maximum pointer, 183
Maximum starting time, 120
Messages, 140
Motor heating, 127, 137
Motor overload protection, 136
Motor protection function, 136

0

ON time motor, 25 Overtemperature, 144

P

Parameter sets, 119
PC Interface, 20
Phase failure, 142
PLC, 32, 146, 146, 183, 187, 187, 198
Prewarning limit, 137
Profibus, 47



PROFIBUS DP communication module, 142, 143, 148, 151, 151, 153, 155, 156, 158, 161, 164, 165, 165 Protection against voltage failure, 138 PTC thermistors, 138 Pump stop, 129, 130

V

Very heavy starting, 24 Voltage ramp, 119, 121

W

Water hammer, 130

R

Ramp-up detection, 126, 127 Rated speed, 134 Reduced starting current, 14 Run-up recognition, 120, 123

S

Screw connections, 42 See display for details of the operating and monitoring module, 20 See operating and monitoring module for details of the display, 20 Selection criteria, 17 Semiconductor fuse, 40, 139 SITOR, 40, 139 SITOR fuses, 40 SITOR semiconductor fuse, 139 Size 3RW44 2., 42 3RW44 3.. 43 3RW44 4., 43 Slow speed factor, 134 Slow speed torque, 134 Software, 20, 47 Spring-loaded connections, 42 Starting current, 12 Starting time, 120, 122 Starting torque, 122 Starting voltage, 119 Startup, 16, 17 Startup class, 21 Stopping torque, 129 Supply voltage, 143 Switching frequency, 25

Т

Temperature sensor, 138
Thermoclick sensors, 138
Three-phase asynchronous motors, 136
Torque control, 121
Tripping class, 136, 136