

ABB MACHINERY DRIVES

# ACS355 drives

## User's manual



[www.nicsanat.com](http://www.nicsanat.com)

021-87700210



# List of related manuals

## Drive manuals and guides

|  | Code (English) |
|--|----------------|
| ACS355 user's manual   | 3AUA0000066143 |
| ACS355 drives with IP66/67 / UL Type 4x enclosure supplement | 3AUA0000066066 |
| ACS355 quick installation guide                              | 3AUA0000092940 |
| ACS355 common DC application guide                           | 3AUA0000070130 |

## Option manuals and guides

|   |                 |
|---|-----------------|
| FCAN-01 CANopen adapter module user's manual                                    | 3AFE68615500    |
| FDNA-01 DeviceNet adapter module user's manual                                  | 3AFE68573360    |
| FCNA-01 ControlNet adapter module quick guide                                   | 3AXD50000158201 |
| FECA-01 EtherCAT® adapter module user's manual                                  | 3AUA0000068940  |
| FENA-01/-11/-21 Ethernet adapter module user's manual                           | 3AUA0000093568  |
| FEPL-02 Ethernet POWERLINK adapter module user's manual                         | 3AUA0000123527  |
| FLON-01 LonWORKS® adapter module user's manual                                  | 3AUA0000041017  |
| FMBA-01 Modbus adapter module user's manual                                     | 3AFE68586704    |
| FPBA-01 PROFIBUS DP adapter module user's manual                                | 3AFE68573271    |
| FRSA-00 RS-485 adapter board user's manual                                      | 3AFE68640300    |
| FSCA-01 RS-485 adapter module quick guide                                       | 3AXD5000158546  |
| MFDT-01 FlashDrop user's manual   | 3AFE68591074    |
| M POT-01 potentiometer module instructions for installation and use             | 3AFE68591082    |
| MREL-01 output relay module user's manual                                       | 3AUA0000035974  |
| MTAC-01 pulse encoder interface module user's manual                            | 3AFE68591091    |
| MUL1-R1 installation instructions for ACS150, ACS310, ACS320, ACS350 and ACS355 | 3AFE68642868    |
| MUL1-R3 installation instructions for ACS310, ACS320, ACS350 and ACS355         | 3AFE68643147    |
| MUL1-R4 installation instructions for ACS310, ACS320, ACS350 and ACS355         | 3AUA0000025916  |
| SREA-01 Ethernet adapter module quick start-up guide                            | 3AUA0000042902  |
| SREA-01 Ethernet adapter module user's manual                                   | 3AUA0000042896  |
| ACS355 and AC500-eCo application guide  | 2CDC125152M0201 |
| AC500-eCo PLC and ACS355 quick installation guide                               | 2CDC125145M0201 |

## Maintenance manuals and guides

|  |              |
|--|--------------|
| Guide for capacitor reforming in ACS50, ACS55, ACS150, ACS310, ACS350, ACS355, ACS550, ACH550 and R1-R4 OINT/SINT boards | 3AFE68735190 |
|--|--------------|

You can find manuals and other product documents in PDF format on the Internet. See section [Document library on the Internet](#) the inside of the back cover. For manuals not available in the Document library, contact your local ABB representative.

# User's manual

## ACS355

Table of contents



1. Safety



4. Mechanical installation



6. Electrical installation



8. Start-up, control with I/O  
and ID run



# Table of contents

---

List of related manuals ..... 2

## **1. Safety**

What this chapter contains ..... 17  
Use of warnings ..... 17  
Safety in installation and maintenance ..... 18  
    Electrical safety ..... 18  
    General safety ..... 19  
Safe start-up and operation ..... 20  
    Electrical safety ..... 20  
    General safety ..... 20

## **2. Introduction to the manual**

What this chapter contains ..... 21  
Applicability ..... 21  
Target audience ..... 21  
Purpose of the manual ..... 21  
Contents of this manual ..... 22  
Related documents ..... 23  
Categorization by frame size ..... 23  
Quick installation and commissioning flowchart ..... 24  
Terms and abbreviations ..... 25



## **3. Operation principle and hardware description**

What this chapter contains ..... 27  
Operation principle ..... 27  
Product overview ..... 28  
    Layout ..... 28  
    Overview of power and control connections ..... 29  
Type designation label ..... 30  
Type designation key ..... 31

## **4. Mechanical installation**

What this chapter contains ..... 33  
Checking the installation site ..... 33  
    Requirements for the installation site ..... 33  
Required tools ..... 34  
Unpacking ..... 35  
Checking the delivery ..... 35  
Installing ..... 36  
    Install the drive ..... 36  
    Fasten clamping plates ..... 38  
    Attach the optional fieldbus module ..... 38

---

## 5. Planning the electrical installation

|   |    |
|---|----|
| What this chapter contains  | 39 |
| Implementing the AC power line connection   | 39 |
| Using an input choke  | 39 |
| Selecting the supply disconnecting device (disconnecting means)   | 40 |
| European union  | 40 |
| Other regions   | 40 |
| Checking the compatibility of the motor and drive   | 40 |
| Checking the compatibility of the drive when multiple motors are connected to the drive                                 | 40 |
| Selecting the power cables  | 41 |
| General rules   | 41 |
| Alternative power cable types   | 42 |
| Motor cable shield  | 42 |
| Additional US requirements  | 43 |
| Selecting the control cables  | 44 |
| General rules   | 44 |
| Relay cable   | 44 |
| Control panel cable   | 44 |
| Routing the cables  | 45 |
| Control cable ducts   | 45 |
| Protecting the drive, input power cable, motor and motor cable in short-circuit situations and against thermal overload | 46 |
| Protecting the drive and input power cable in short-circuit situations  | 46 |
| Protecting the motor and motor cable in short-circuit situations  | 46 |
| Protecting the drive, motor cable and input power cable against thermal overload  | 46 |
| Protecting the motor against thermal overload   | 47 |
| Implementing the Safe torque off (STO) function   | 47 |
| Using residual current devices (RCD) with the drive   | 47 |
| Using a safety switch between the drive and the motor   | 47 |
| Implementing a bypass connection  | 47 |
| Protecting the contacts of relay outputs  | 48 |

## 6. Electrical installation

|  |    |
|--|----|
| What this chapter contains   | 49 |
| Checking the insulation of the assembly  | 49 |
| Drive  | 49 |
| Input power cable  | 49 |
| Motor and motor cable  | 50 |
| Checking the compatibility with IT (ungrounded) and corner-grounded TN systems | 50 |
| Connecting the power cables  | 51 |
| Connection diagram   | 51 |
| Connection procedure   | 52 |
| Connecting the control cables  | 53 |
| I/O terminals  | 53 |
| Default I/O connection diagram   | 55 |
| Connection procedure   | 57 |



## 7. Installation checklist

|                                  |    |
|----------------------------------|----|
| What this chapter contains ..... | 59 |
| Checking the installation .....  | 59 |

## 8. Start-up, control with I/O and ID run

|   |    |
|---|----|
| What this chapter contains .....                      | 61 |
| Starting up the drive .....                           | 62 |
| Starting up the drive without a control panel .....   | 62 |
| Performing a manual start-up .....                    | 63 |
| Performing a guided start-up .....                    | 68 |
| Controlling the drive through the I/O interface ..... | 70 |
| Performing the ID run .....                           | 71 |
| ID run procedure .....                                | 71 |

## 9. Control panels

|                                       |     |
|---------------------------------------|-----|
| What this chapter contains .....      | 75  |
| About control panels .....            | 75  |
| Applicability .....                   | 76  |
| Basic control panel .....             | 76  |
| Features .....                        | 76  |
| Overview .....                        | 77  |
| Operation .....                       | 78  |
| Output mode .....                     | 80  |
| Reference mode .....                  | 81  |
| Parameter mode .....                  | 82  |
| Copy mode .....                       | 84  |
| Basic control panel alarm codes ..... | 85  |
| Assistant control panel .....         | 86  |
| Features .....                        | 86  |
| Overview .....                        | 87  |
| Operation .....                       | 88  |
| Output mode .....                     | 92  |
| Parameters mode .....                 | 93  |
| Assistants mode .....                 | 96  |
| Changed parameters mode .....         | 98  |
| Fault logger mode .....               | 99  |
| Time and date mode .....              | 100 |
| Parameter backup mode .....           | 102 |
| I/O settings mode .....               | 105 |



## 10. Application macros

|  |     |
|--|-----|
| What this chapter contains .....                               | 107 |
| Overview of macros .....                                       | 107 |
| Summary of the I/O connections of the application macros ..... | 109 |
| ABB standard macro .....                                       | 110 |
| Default I/O connections .....                                  | 110 |
| 3-wire macro .....   | 111 |
| Default I/O connections .....                                  | 111 |

|                                 |     |
|---------------------------------|-----|
| Alternate macro .....           | 112 |
| Default I/O connections .....   | 112 |
| Motor potentiometer macro ..... | 113 |
| Default I/O connections .....   | 113 |
| Hand/Auto macro .....           | 114 |
| Default I/O connections .....   | 114 |
| PID control macro .....         | 115 |
| Default I/O connections .....   | 115 |
| Torque control macro .....      | 116 |
| Default I/O connections .....   | 116 |
| AC500 Modbus macro .....        | 117 |
| User macros .....               | 119 |

## 11. Program features

|  |     |
|--|-----|
| What this chapter contains .....                                   | 121 |
| Start-up assistant .....   | 121 |
| Introduction .....   | 121 |
| Default order of the tasks .....                                   | 122 |
| List of the tasks and the relevant drive parameters .....          | 123 |
| Contents of the assistant displays .....                           | 125 |
| Local control vs. external control .....                           | 126 |
| Local control .....  | 126 |
| External control .....   | 127 |
| Settings .....   | 127 |
| Diagnostics .....  | 127 |
| Block diagram: Start, stop, direction source for <i>EXT1</i> ..... | 128 |
| Block diagram: Reference source for <i>EXT1</i> .....              | 128 |
| Reference types and processing .....                               | 129 |
| Settings .....   | 129 |
| Diagnostics .....  | 129 |
| Reference trimming .....   | 130 |
| Settings .....   | 130 |
| Example .....  | 131 |
| Programmable analog inputs .....                                   | 132 |
| Settings .....   | 132 |
| Diagnostics .....  | 132 |
| Programmable analog output .....                                   | 133 |
| Settings .....   | 133 |
| Diagnostics .....  | 133 |
| Programmable digital inputs .....                                  | 134 |
| Settings .....   | 134 |
| Diagnostics .....  | 134 |
| Programmable relay output .....                                    | 135 |
| Settings .....   | 135 |
| Diagnostics .....  | 135 |
| Frequency input .....  | 135 |
| Settings .....   | 135 |
| Diagnostics .....  | 135 |
| Transistor output .....  | 136 |
| Settings .....   | 136 |



|   |     |
|---|-----|
| Diagnostics                                   | 136 |
| Actual signals                                | 136 |
| Settings                                      | 136 |
| Diagnostics                                   | 137 |
| Motor identification                          | 137 |
| Settings                                      | 137 |
| Power loss ride-through                       | 138 |
| Settings                                      | 138 |
| DC magnetizing                                | 138 |
| Settings                                      | 138 |
| Maintenance trigger                           | 139 |
| Settings                                      | 139 |
| DC hold                                       | 139 |
| Settings                                      | 139 |
| Speed compensated stop                        | 139 |
| Settings                                      | 139 |
| Flux braking                                  | 140 |
| Settings                                      | 141 |
| Flux optimization                             | 141 |
| Settings                                      | 141 |
| Acceleration and deceleration ramps           | 141 |
| Settings                                      | 141 |
| Critical speeds                               | 142 |
| Settings                                      | 142 |
| Constant speeds                               | 142 |
| Settings                                      | 142 |
| Custom U/f ratio                              | 143 |
| Settings                                      | 143 |
| Diagnostics                                   | 143 |
| Speed controller tuning                       | 144 |
| Settings                                      | 145 |
| Diagnostics                                   | 145 |
| Speed control performance figures             | 145 |
| Torque control performance figures            | 146 |
| Scalar control                                | 146 |
| Settings                                      | 146 |
| IR compensation for a scalar controlled drive | 147 |
| Settings                                      | 147 |
| Programmable protection functions             | 147 |
| AI<Min  | 147 |
| Panel loss                                    | 147 |
| External fault                                | 147 |
| Stall protection                              | 147 |
| Motor thermal protection                      | 148 |
| Underload protection                          | 148 |
| Earth fault protection                        | 149 |
| Incorrect wiring                              | 149 |
| Input phase loss                              | 149 |
| Pre-programmed faults                         | 149 |
| Overcurrent                                   | 149 |
| DC overvoltage                                | 149 |





|  |     |
|--|-----|
| DC undervoltage  | 149 |
| Drive temperature                                      | 149 |
| Short-circuit  | 150 |
| Internal fault   | 150 |
| Operation limits                                       | 150 |
| Settings   | 150 |
| Power limit  | 150 |
| Automatic resets                                       | 150 |
| Settings   | 150 |
| Diagnostics  | 150 |
| Supervisions   | 151 |
| Settings   | 151 |
| Diagnostics  | 151 |
| Parameter lock   | 151 |
| Settings   | 151 |
| PID control  | 151 |
| Process controller PID1                                | 152 |
| External/Trim controller PID2                          | 152 |
| Block diagrams   | 152 |
| Settings   | 154 |
| Diagnostics  | 154 |
| Sleep function for the process PID (PID1) control      | 155 |
| Example  | 156 |
| Settings   | 156 |
| Diagnostics  | 157 |
| Motor temperature measurement through the standard I/O | 157 |
| Settings   | 158 |
| Diagnostics  | 158 |
| Control of a mechanical brake                          | 159 |
| Example  | 159 |
| Operation time scheme                                  | 160 |
| State shifts   | 161 |
| Settings   | 162 |
| Jogging  | 162 |
| Settings   | 164 |
| Diagnostics  | 164 |
| Real-time clock and timed functions                    | 165 |
| Real-time clock  | 165 |
| Timed functions  | 165 |
| Example  | 167 |
| Settings   | 168 |
| Timer  | 168 |
| Settings   | 168 |
| Diagnostics  | 168 |
| Counter  | 169 |
| Settings   | 169 |
| Diagnostics  | 169 |
| Sequence programming                                   | 169 |
| Settings   | 170 |
| Diagnostics  | 170 |
| State shifts   | 171 |



|                                |     |
|--------------------------------|-----|
| Example 1                      | 172 |
| Example 2                      | 173 |
| Safe torque off (STO) function | 177 |

## 12. Actual signals and parameters

|   |     |
|---|-----|
| What this chapter contains                                    | 179 |
| Terms and abbreviations                                       | 179 |
| Fieldbus addresses  | 179 |
| Fieldbus equivalent   | 180 |
| Storing the parameters  | 180 |
| Default values with different macros                          | 180 |
| Differences between the default values in E and U type drives | 182 |
| Actual signals  | 183 |
| 01 OPERATING DATA   | 183 |
| 03 FB ACTUAL SIGNALS  | 186 |
| 04 FAULT HISTORY  | 189 |
| Parameters  | 191 |
| 10 START/STOP/DIR   | 191 |
| 11 REFERENCE SELECT   | 194 |
| 12 CONSTANT SPEEDS  | 199 |
| 13 ANALOG INPUTS  | 203 |
| 14 RELAY OUTPUTS  | 205 |
| 15 ANALOG OUTPUTS   | 208 |
| 16 SYSTEM CONTROLS  | 209 |
| 18 FREQ IN & TRAN OUT   | 215 |
| 19 TIMER & COUNTER  | 217 |
| 20 LIMITS   | 222 |
| 21 START/STOP   | 226 |
| 22 ACCEL/DECEL  | 232 |
| 23 SPEED CONTROL  | 236 |
| 24 TORQUE CONTROL   | 239 |
| 25 CRITICAL SPEEDS  | 240 |
| 26 MOTOR CONTROL  | 241 |
| 29 MAINTENANCE TRIG   | 247 |
| 30 FAULT FUNCTIONS  | 248 |
| 31 AUTOMATIC RESET  | 257 |
| 32 SUPERVISION  | 259 |
| 33 INFORMATION  | 261 |
| 34 PANEL DISPLAY  | 262 |
| 35 MOTOR TEMP MEAS  | 267 |
| 36 TIMED FUNCTIONS  | 269 |
| 40 PROCESS PID SET 1  | 273 |
| 41 PROCESS PID SET 2  | 282 |
| 42 EXT / TRIM PID   | 283 |
| 43 MECH BRK CONTROL   | 285 |
| 50 ENCODER  | 286 |
| 51 EXT COMM MODULE  | 287 |
| 52 PANEL COMM   | 289 |
| 53 EFB PROTOCOL   | 290 |
| 54 FBA DATA IN  | 292 |



|                        |     |
|------------------------|-----|
| 55 FBA DATA OUT .....  | 293 |
| 84 SEQUENCE PROG ..... | 293 |
| 98 OPTIONS .....       | 307 |
| 99 START-UP DATA ..... | 307 |

### **13. Fieldbus control with embedded fieldbus**

|  |     |
|--|-----|
| What this chapter contains .....                           | 313 |
| System overview .....                                      | 313 |
| Setting up communication through the embedded Modbus ..... | 315 |
| Drive control parameters .....                             | 316 |
| Fieldbus control interface .....                           | 319 |
| Control word and Status word .....                         | 319 |
| References .....   | 319 |
| Actual values .....  | 319 |
| Fieldbus references .....                                  | 320 |
| Reference selection and correction .....                   | 320 |
| Fieldbus reference scaling .....                           | 322 |
| Reference handling .....                                   | 323 |
| Actual value scaling .....                                 | 324 |
| Modbus mapping .....                                       | 324 |
| Register mapping .....                                     | 325 |
| Function codes .....                                       | 326 |
| Exception codes .....                                      | 327 |
| Communication profiles .....                               | 328 |
| ABB drives communication profile .....                     | 328 |
| DCU communication profile .....                            | 333 |



### **14. Fieldbus control with fieldbus adapter**

|  |     |
|--|-----|
| What this chapter contains .....                                 | 339 |
| System overview .....  | 339 |
| Setting up communication through a fieldbus adapter module ..... | 341 |
| Drive control parameters .....                                   | 342 |
| Fieldbus control interface .....                                 | 345 |
| Control word and Status word .....                               | 345 |
| References .....   | 346 |
| Actual values .....  | 346 |
| Communication profile .....                                      | 346 |
| Fieldbus references .....  | 347 |
| Reference selection and correction .....                         | 347 |
| Fieldbus reference scaling .....                                 | 349 |
| Reference handling .....   | 349 |
| Actual value scaling .....                                       | 349 |

### **15. Fault tracing**

|                                   |     |
|-----------------------------------|-----|
| What this chapter contains .....  | 351 |
| Safety .....                      | 351 |
| Alarm and fault indications ..... | 351 |
| How to reset .....                | 352 |

|   |     |
|---|-----|
| Fault history                               | 352 |
| Alarm messages generated by the drive       | 353 |
| Alarms generated by the basic control panel | 356 |
| Fault messages generated by the drive       | 359 |
| Embedded fieldbus faults                    | 369 |
| No master device                            | 369 |
| Same device address                         | 369 |
| Incorrect wiring                            | 369 |

## 16. Maintenance and hardware diagnostics

|   |     |
|---|-----|
| What this chapter contains                          | 371 |
| Maintenance intervals                               | 371 |
| Cooling fan   | 372 |
| Replacing the cooling fan (frame sizes R1...R4)     | 372 |
| Capacitors  | 373 |
| Reforming the capacitors                            | 373 |
| Power connections                                   | 373 |
| Control panel                                       | 374 |
| Cleaning the control panel                          | 374 |
| Changing the battery in the assistant control panel | 374 |
| LEDs  | 374 |



## 17. Technical data

|   |     |
|---|-----|
| What this chapter contains                            | 375 |
| Ratings   | 376 |
| Definitions   | 377 |
| Sizing  | 377 |
| Derating  | 378 |
| Power cable sizes and fuses                           | 379 |
| Fuses (IEC)   | 380 |
| Fuses (UL)  | 380 |
| Alternate short-circuit protection                    | 380 |
| Dimensions, weights and free space requirements       | 383 |
| Dimensions and weights                                | 383 |
| Free space requirements                               | 383 |
| Losses, cooling data and noise                        | 384 |
| Losses and cooling data                               | 384 |
| Noise   | 385 |
| Terminal and lead-through data for the power cables   | 386 |
| Terminal and lead-through data for the control cables | 386 |
| Electric power network specification                  | 387 |
| Motor connection data                                 | 387 |
| Control connection data                               | 389 |
| Clearance and creepage distance                       | 389 |
| Brake resistor connection                             | 390 |
| Common DC connection                                  | 390 |
| Efficiency  | 390 |
| Degrees of protection                                 | 390 |
| Ambient conditions                                    | 391 |

|  |     |
|--|-----|
| Materials                                  | 392 |
| Applicable standards                       | 392 |
| CE marking                                 | 393 |
| Compliance with the European EMC Directive | 393 |
| Compliance with EN 61800-3:2004            | 393 |
| Definitions                                | 393 |
| Category C1                                | 394 |
| Category C2                                | 394 |
| Category C3                                | 394 |
| UL marking                                 | 395 |
| UL checklist                               | 395 |
| C-Tick marking                             | 396 |
| TÜV NORD Safety Approved mark              | 396 |
| RoHS marking                               | 396 |
| Compliance with the Machinery Directive    | 396 |

## 18. Dimension drawings

|  |     |
|--|-----|
| What this chapter contains                                   | 397 |
| Frame sizes R0 and R1, IP20 (cabinet installation) / UL open | 398 |
| Frame sizes R0 and R1, IP20 / NEMA 1                         | 399 |
| Frame size R2, IP20 (cabinet installation) / UL open         | 400 |
| Frame size R2, IP20 / NEMA 1                                 | 401 |
| Frame size R3, IP20 (cabinet installation) / UL open         | 402 |
| Frame size R3, IP20 / NEMA 1                                 | 403 |
| Frame size R4, IP20 (cabinet installation) / UL open         | 404 |
| Frame size R4, IP20 / NEMA 1                                 | 405 |

## 19. Appendix: Resistor braking

|   |     |
|---|-----|
| What this chapter contains                              | 407 |
| Planning the braking system                             | 407 |
| Selecting the brake resistor                            | 407 |
| Selecting the brake resistor cables                     | 409 |
| Placing the brake resistor                              | 410 |
| Protecting the system in brake circuit fault situations | 410 |
| Electrical installation                                 | 410 |
| Start-up  | 411 |

## 20. Appendix: Extension modules

|  |     |
|--|-----|
| What this chapter contains               | 413 |
| Extension modules                        | 413 |
| Description                              | 413 |
| Installation                             | 414 |
| Technical data                           | 416 |
| MTAC-01 pulse encoder interface module   | 416 |
| MREL-01 output relay module              | 416 |
| MPOW-01 auxiliary power extension module | 417 |
| Description                              | 417 |
| Electrical installation                  | 417 |

Technical data ..... 418

## **21. Appendix: Safe torque off (STO)**

|  |     |
|--|-----|
| What this appendix contains .....                      | 419 |
| Description .....                                      | 419 |
| Compliance with the European Machinery Directive ..... | 420 |
| Wiring .....   | 421 |
| Connection principle .....                             | 421 |
| Wiring examples .....                                  | 422 |
| Activation switch .....                                | 423 |
| Cable types and lengths .....                          | 423 |
| Grounding of protective shields .....                  | 423 |
| Operation principle .....                              | 424 |
| Start-up including acceptance test .....               | 424 |
| Competence .....                                       | 424 |
| Acceptance test reports .....                          | 424 |
| Acceptance test procedure .....                        | 425 |
| Use .....  | 426 |
| Maintenance .....                                      | 428 |
| Competence .....                                       | 428 |
| Fault tracing .....                                    | 429 |
| Safety data .....                                      | 430 |
| Abbreviations .....                                    | 431 |
| TÜV certificate .....                                  | 432 |
| Declaration of conformity .....                        | 433 |



## **22. Appendix: Permanent magnet synchronous motors (PMSMs)**

|  |     |
|--|-----|
| What this chapter contains .....   | 435 |
| Setting the parameters .....   | 435 |
| Start mode .....   | 437 |
| Smooth start .....   | 437 |
| Speed controller tuning .....  | 437 |
| Adjusting motor speed estimation gain in case of an over current failure ..... | 437 |

### **Further information**



# 1

## Safety

---

### What this chapter contains

The chapter contains safety instructions which you must follow when installing, operating and servicing the drive. If ignored, physical injury or death may follow, or damage may occur to the drive, motor or driven equipment. Read the safety instructions before you work on the drive.



### Use of warnings

Warnings caution you about conditions which can result in serious injury or death and/or damage to the equipment, and advise on how to avoid the danger. The following warning symbols are used in this manual:



**Electricity warning** warns of hazards from electricity which can cause physical injury and/or damage to the equipment.

---



**General warning** warns about conditions, other than those caused by electricity, which can result in physical injury and/or damage to the equipment.

---



## Safety in installation and maintenance

These warnings are intended for all who work on the drive, motor cable or motor.

### ■ Electrical safety



**WARNING!** Ignoring the following instructions can cause physical injury or death, or damage to the equipment.

#### Only qualified electricians are allowed to install and maintain the drive!

- Never work on the drive, motor cable or motor when input power is applied. After disconnecting the input power, always wait for 5 minutes to let the intermediate circuit capacitors discharge before you start working on the drive, motor or motor cable.

Always ensure by measuring with a multimeter (impedance at least 1 Mohm) that

1. there is no voltage between the drive input phases U1, V1 and W1 and the ground
  2. there is no voltage between terminals BRK+ and BRK- and the ground.
- Do not work on the control cables when power is applied to the drive or to the external control circuits. Externally supplied control circuits may carry dangerous voltage even when the input power of the drive is switched off.
  - Do not make any insulation or voltage withstand tests on the drive.
  - Disconnect the internal EMC filter when installing the drive on an IT system (an ungrounded power system or a high-resistance-grounded [over 30 ohms] power system), otherwise the system will be connected to ground potential through the EMC filter capacitors. This may cause danger or damage the drive. See page 50. **Note:** When the internal EMC filter is disconnected, the drive is not EMC compatible without an external filter.
  - Disconnect the internal EMC filter when installing the drive on a corner-grounded TN system, otherwise the drive will be damaged. See page 50. **Note:** When the internal EMC filter is disconnected, the drive is not EMC compatible without an external filter.
  - All ELV (extra low voltage) circuits connected to the drive must be used within a zone of equipotential bonding, ie, within a zone where all simultaneously accessible conductive parts are electrically connected to prevent hazardous voltages appearing between them. This is accomplished by a proper factory grounding.

#### Note:

- Even when the motor is stopped, dangerous voltage is present at the power circuit terminals U1, V1, W1 and U2, V2, W2 and BRK+ and BRK-.

## Permanent magnet synchronous motor drives

These are additional warnings concerning permanent magnet synchronous motor drives. Ignoring the instructions can cause physical injury or death, or damage to the equipment.



**WARNING!** Do not work on the drive when the permanent magnet synchronous motor is rotating. Also, when the supply power is switched off and the inverter is stopped, a rotating permanent magnet synchronous motor feeds power to the intermediate circuit of the drive and the supply connections become live.

Before installation and maintenance work on the drive:

- Stop the motor.
- Ensure that there is no voltage on the drive power terminals according to step 1 or 2, or if possible, according to the both steps.
  1. Disconnect the motor from the drive with a safety switch or by other means. Measure that there is no voltage present on the drive input or output terminals (U1, V1, W1, U2, V2, W2, BRK+, BRK-).
  2. Ensure that the motor cannot rotate during work. Make sure that no other system, like hydraulic crawling drives, is able to rotate the motor directly or through any mechanical connection like felt, nip, rope, etc. Measure that there is no voltage present on the drive input or output terminals (U1, V1, W1, U2, V2, W2, BRK+, BRK-). Ground the drive output terminals temporarily by connecting them together as well as to the PE.



## ■ General safety



**WARNING!** Ignoring the following instructions can cause physical injury or death, or damage to the equipment.

- The drive is not field repairable. Never attempt to repair a malfunctioning drive; contact your local ABB representative or Authorized Service Center for replacement.
- Make sure that dust from drilling does not enter the drive during the installation. Electrically conductive dust inside the drive may cause damage or lead to malfunction.
- Ensure sufficient cooling.

## Safe start-up and operation


These warnings are intended for all who plan the operation, start up or operate the drive.

### ■ Electrical safety

#### Permanent magnet synchronous motor drives

These warnings concern permanent magnet synchronous motor drives. Ignoring the instructions can cause physical injury or death, or damage to the equipment.


---



 **WARNING!** It is not recommended to run the permanent magnet synchronous motor over 1.2 times the rated speed. Motor overspeed may lead to overvoltage which may permanently damage the drive.

---



### ■ General safety

---

 **WARNING!** Ignoring the following instructions can cause physical injury or death, or damage to the equipment.

- Before adjusting the drive and putting it into service, make sure that the motor and all driven equipment are suitable for operation throughout the speed range provided by the drive. The drive can be adjusted to operate the motor at speeds above and below the speed provided by connecting the motor directly to the power line.
- Do not activate automatic fault reset functions if dangerous situations can occur. When activated, these functions will reset the drive and resume operation after a fault. If these functions are activated, the installation must be clearly marked as defined in IEC/EN 61800-5-1, subclause 6.5.3, for example, "THIS MACHINE STARTS AUTOMATICALLY".
- Do not control the motor with an AC contactor or disconnecting device (disconnecting means); use instead the control panel start and stop keys  and  or external commands (I/O or fieldbus). The maximum allowed number of charging cycles of the DC capacitors (ie, power-ups by applying power) is two per minute and the maximum total number of chargings is 15 000.

#### Note:

- If an external source for start command is selected and it is ON, the drive will start immediately after an input voltage break or fault reset unless the drive is configured for 3-wire (a pulse) start/stop.
  - When the control location is not set to local (LOC not shown on the display), the stop key on the control panel will not stop the drive. To stop the drive using the control panel, first press the LOC/REM key  and then the stop key .
-

# 2

## Introduction to the manual

---

### What this chapter contains

The chapter describes applicability, target audience and purpose of this manual. It describes the contents of this manual and refers to a list of related manuals for more information. The chapter also contains a flowchart of steps for checking the delivery, installing and commissioning the drive. The flowchart refers to chapters/sections in this manual.

### Applicability

The manual is applicable to the ACS355 drive firmware version 5.110 or later. See parameter [3301 FIRMWARE](#) on page [261](#).

### Target audience

The reader is expected to know the fundamentals of electricity, wiring, electrical components and electrical schematic symbols.

The manual is written for readers worldwide. Both SI and imperial units are shown. Special US instructions for installations in the United States are given.

### Purpose of the manual

This manual provides information needed for planning the installation, installing, commissioning, using and servicing the drive.

---

## Contents of this manual

The manual consists of the following chapters:

- *Safety* (page 17) gives safety instructions you must follow when installing, commissioning, operating and servicing the drive.
  - *Introduction to the manual* (this chapter, page 21) describes applicability, target audience, purpose and contents of this manual. It also contains a quick installation and commissioning flowchart.
  - *Operation principle and hardware description* (page 27) describes the operation principle, layout, power connections and control interfaces, type designation label and type designation information in short.
  - *Mechanical installation* (page 33) tells how to check the installation site, unpack, check the delivery and install the drive mechanically.
  - *Planning the electrical installation* (page 39) tells how to check the compatibility of the motor and the drive and select cables, protections and cable routing.
  - *Electrical installation* (page 49) tells how to check the insulation of the assembly and the compatibility with IT (ungrounded) and corner-grounded TN systems as well as connect power cables and control cables.
  - *Installation checklist* (page 59) contains a checklist for checking the mechanical and electrical installation of the drive.
  - *Start-up, control with I/O and ID run* (page 61) tells how to start up the drive as well as how to start, stop, change the direction of the motor rotation and adjust the motor speed through the I/O interface.
  - *Control panels* (page 75) describes the control panel keys, LED indicators and display fields and tells how to use the panel for control, monitoring and changing the settings.
  - *Application macros* (page 107) gives a brief description of each application macro together with a wiring diagram showing the default control connections. It also explains how to save a user macro and how to recall it.
  - *Program features* (page 121) describes program features with lists of related user settings, actual signals, and fault and alarm messages.
  - *Actual signals and parameters* (page 179) describes actual signals and parameters. It also lists the default values for the different macros.
  - *Fieldbus control with embedded fieldbus* (page 313) tells how the drive can be controlled by external devices over a communication network using embedded fieldbus.
  - *Fieldbus control with fieldbus adapter* (page 339) tells how the drive can be controlled by external devices over a communication network using a fieldbus adapter.
  - *Fault tracing* (page 351) tells how to reset faults and view fault history. It lists all alarm and fault messages including the possible cause and corrective actions.
  - *Maintenance and hardware diagnostics* (page 371) contains preventive
-

maintenance instructions and LED indicator descriptions.

- *Technical data* (page 375) contains technical specifications of the drive, eg, ratings, sizes and technical requirements as well as provisions for fulfilling the requirements for CE and other marks.
- *Dimension drawings* (page 397) shows dimension drawings of the drive.
- *Appendix: Resistor braking* (page 407) tells how to select the brake resistor.
- *Appendix: Extension modules* (page 413) describes common features and mechanical installation of the optional extension modules: MPOW-01 auxiliary power extension module, MTAC-01 pulse encoder interface module and MREL-01 output relay module. Specific features and electrical installation for the MPOW-01 are also described; for information on the MTAC-01 and MREL-01, refer to the corresponding user's manual.
- *Appendix: Safe torque off (STO)* (page 419) describes STO features, installation and technical data.
- *Appendix: Permanent magnet synchronous motors (PMSMs)* (page 435) describes the parameter settings needed for permanent magnet synchronous motors.
- *Further information* (inside of the back cover, page 439) tells how to make product and service inquiries, get information on product training, provide feedback on ABB Drives manuals and how to find documents on the Internet.

## Related documents


See *List of related manuals* on page 2 (inside of the front cover).

## Categorization by frame size

The ACS355 is manufactured in frame sizes R0...R4. Some instructions and other information which only concern certain frame sizes are marked with the symbol of the frame size (R0...R4). To identify the frame size of your drive, see the table in section *Ratings* on page 376.

---

## Quick installation and commissioning flowchart

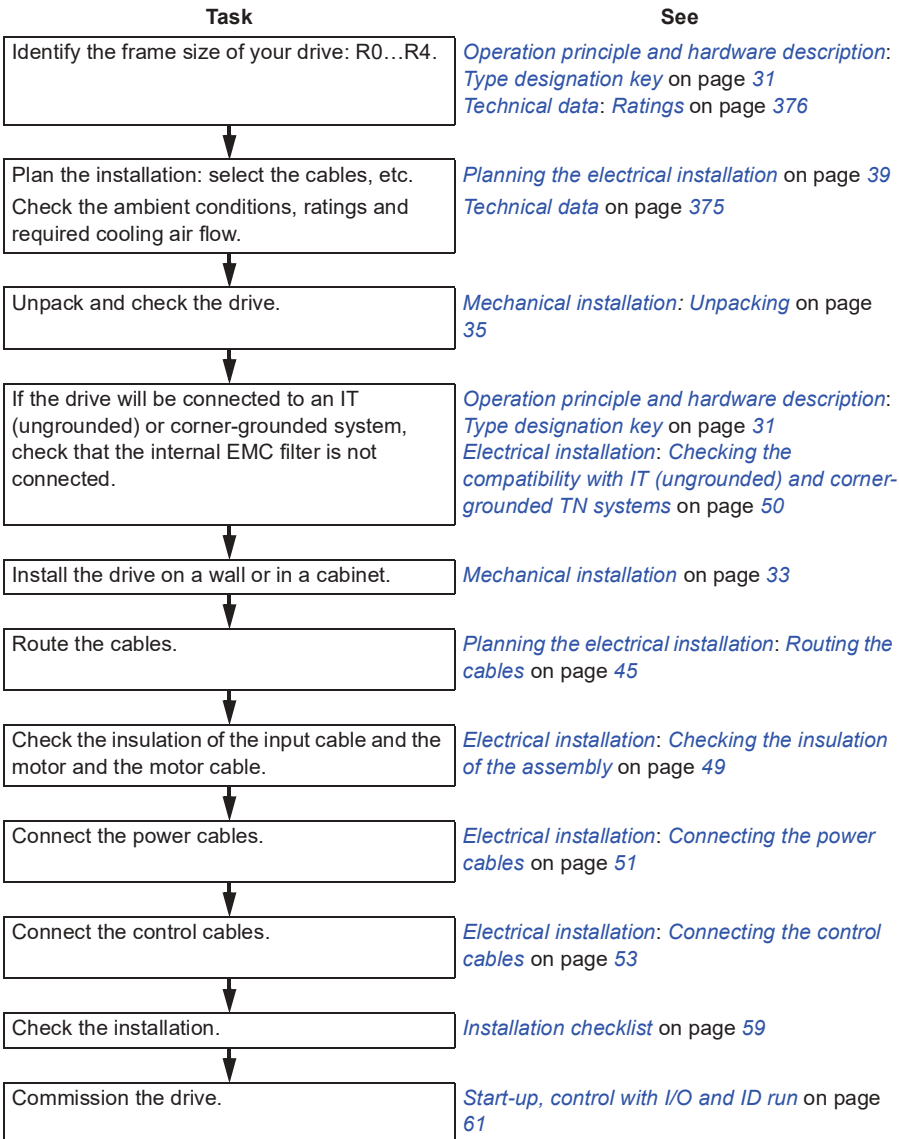

## Terms and abbreviations

| Term/abbreviation  | Explanation   |
|--------------------|---|
| ACS-CP-A           | Assistant control panel, advanced operator keypad for communication with the drive  |
| ACS-CP-C           | Basic control panel, basic operator keypad for communication with the drive   |
| ACS-CP-D           | Assistant control panel for Asian languages, advanced operator keypad for communication with the drive  |
| Brake chopper      | Conducts the surplus energy from the intermediate circuit of the drive to the brake resistor when necessary. The chopper operates when the DC link voltage exceeds a certain maximum limit. The voltage rise is typically caused by deceleration (braking) of a high inertia motor. |
| Brake resistor     | Dissipates the drive surplus braking energy conducted by the brake chopper to heat. Essential part of the brake circuit. See <i>Brake chopper</i> .   |
| Capacitor bank     | See <i>DC link capacitors</i> .   |
| Control board      | Circuit board in which the control program runs.  |
| CRC                | Cyclic redundancy check   |
| DC link            | DC circuit between rectifier and inverter   |
| DC link capacitors | Energy storage which stabilizes the intermediate circuit DC voltage.  |
| DCU                | Drive control unit  |
| Drive              | Frequency converter for controlling AC motors   |
| EMC                | Electromagnetic compatibility   |
| EFB                | Embedded fieldbus   |
| ESP                | Enhanced Sequence Program   |
| FBA                | Fieldbus adapter  |
| FCAN               | Optional CANopen adapter module   |
| FCNA               | Optional ControlNet adapter module  |
| FDNA               | Optional DeviceNet adapter module   |
| FECA               | Optional EtherCAT adapter module  |
| FENA               | Optional Ethernet adapter module for EtherNet/IP, Modbus TCP and PROFINET IO protocols  |
| FLON               | Optional LonWorks® adapter module   |
| FMBA               | Optional Modbus RTU adapter module  |
| FPBA               | Optional PROFIBUS DP adapter module   |
| Frame (size)       | Refers to drive physical size, for example R1 and R2. To determine the frame size of a drive, refer to the rating table in chapter <i>Technical data</i> on page 375.   |
| FRSA               | RSA-485 adapter board   |
| FSCA               | Optional Modbus RTU adapter module  |
| I/O                | Input/Output  |
| ID run             | Identification run  |



| Term/abbreviation                  | Explanation   |
|------------------------------------|---|
| IGBT                               | Insulated gate bipolar transistor   |
| Intermediate circuit               | See <a href="#">DC link</a> .   |
| Inverter                           | Converts direct current and voltage to alternating current and voltage.   |
| IT system                          | Type of supply system that has no (low-impedance) connection to ground/earth.   |
| LRFI                               | Series of optional EMC filters  |
| LSW                                | Least significant word  |
| Macro                              | Pre-defined default values of parameters in drive control program. Each macro is intended for a specific application. See <a href="#">Parameter</a> . |
| MFDT-01                            | FlashDrop, a tool for configuring an unpowered drive  |
| MMP                                | Manual motor protector  |
| MPOT                               | Potentiometer module  |
| MPOW                               | Auxiliary power extension module  |
| MREL                               | Relay output module   |
| MSW                                | Most significant word   |
| MTAC                               | Pulse encoder interface module  |
| MUL1-R1                            | Option kit for R1 frame sizes for compliance with NEMA 1  |
| MUL1-R3                            | Option kit for R3 frame sizes for compliance with NEMA 1  |
| MUL1-R4                            | Option kit for R4 frame sizes for compliance with NEMA 1  |
| Parameter                          | User-adjustable operation instruction to the drive, or signal measured or calculated by the drive   |
| PLC                                | Programmable logic controller   |
| PMSM                               | Permanent magnet synchronous motor  |
| PROFIBUS, PROFIBUS DP, PROFINET IO | Registered trademarks of PI - PROFIBUS & PROFINET International   |
| R1, R2, ...                        | <a href="#">Frame (size)</a>  |
| RCD                                | Residual current device   |
| Rectifier                          | Converts alternating current and voltage to direct current and voltage.   |
| RFI                                | Radio-frequency interference  |
| RTU                                | Remote terminal unit  |
| SIL                                | Safety integrity level. See <a href="#">Appendix: Safe torque off (STO)</a> on page 419.  |
| SREA-01                            | Ethernet adapter module   |
| STO                                | Safe torque off. See <a href="#">Appendix: Safe torque off (STO)</a> on page 419.   |
| TN system                          | Type of supply system that provides a direct connection to ground/earth.  |



# Operation principle and hardware description


## What this chapter contains

The chapter briefly describes the operation principle, layout, type designation label and type designation information. It also shows a general diagram of power connections and control interfaces.

## Operation principle

The ACS355 is a wall or cabinet mountable drive for controlling asynchronous AC induction motors and permanent magnet synchronous motors.


The figure below shows the simplified main circuit diagram of the drive. The rectifier converts three-phase AC voltage to DC voltage. The capacitor bank of the intermediate circuit stabilizes the DC voltage. The inverter converts the DC voltage back to AC voltage for the AC motor. The brake chopper connects the external brake resistor to the intermediate DC circuit when the voltage in the circuit exceeds its maximum limit.

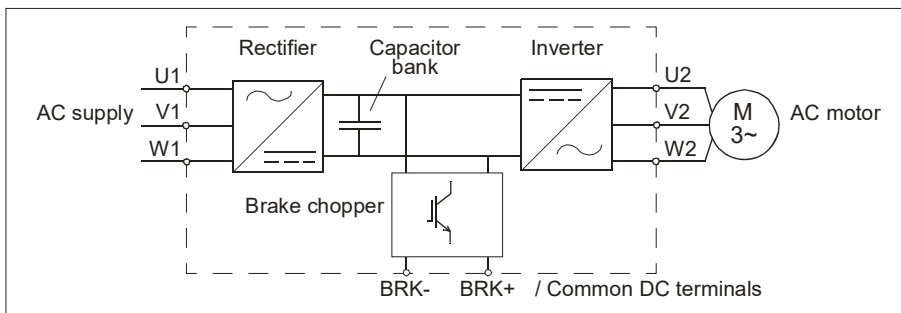

## Product overview

### Layout

The layout of the drive is presented below. The construction of the different frame sizes R0...R4 varies to some extent.

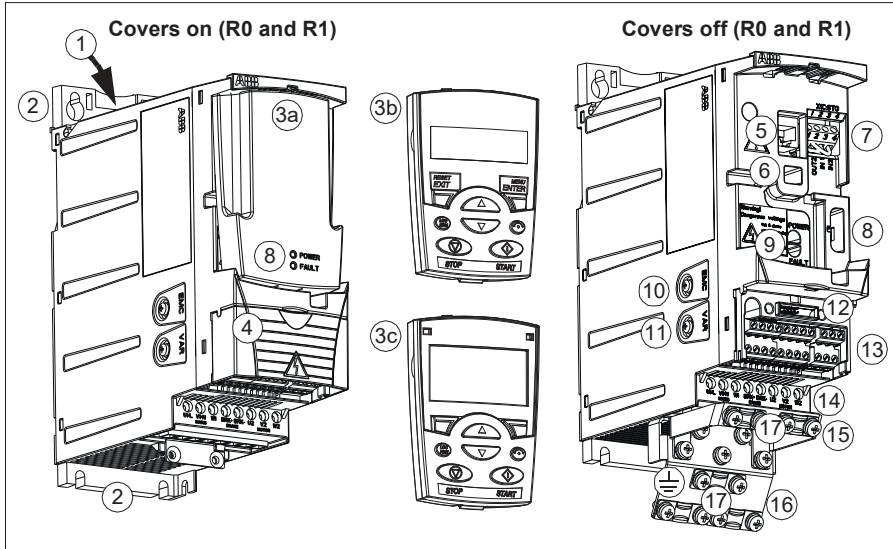


|   |   |
|---|---|
| 1 | Cooling outlet through top cover  |
| 2 | Mounting holes  |
| 3 | Panel cover (a) / basic control panel (b) / assistant control panel (c) |
| 4 | Terminal cover (or optional potentiometer unit MPOT-01)                 |
| 5 | Panel connection  |
| 6 | Option connection   |
| 7 | STO (Safe torque off) connection  |
| 8 | FlashDrop connection  |
| 9 | Power OK and Fault LEDs. See section <a href="#">LEDs</a> on page 374.  |

|    |  |
|----|--|
| 10 | EMC filter grounding screw (EMC).<br><b>Note:</b> The screw is on the front in frame size R4.                  |
| 11 | Varistor grounding screw (VAR)   |
| 12 | Fieldbus adapter (serial communication) connection   |
| 13 | I/O connections  |
| 14 | Input power connection (U1, V1, W1), brake resistor connection (BRK+, BRK-) and motor connection (U2, V2, W2). |
| 15 | I/O clamping plate   |
| 16 | Clamping plate   |
| 17 | Clamps   |



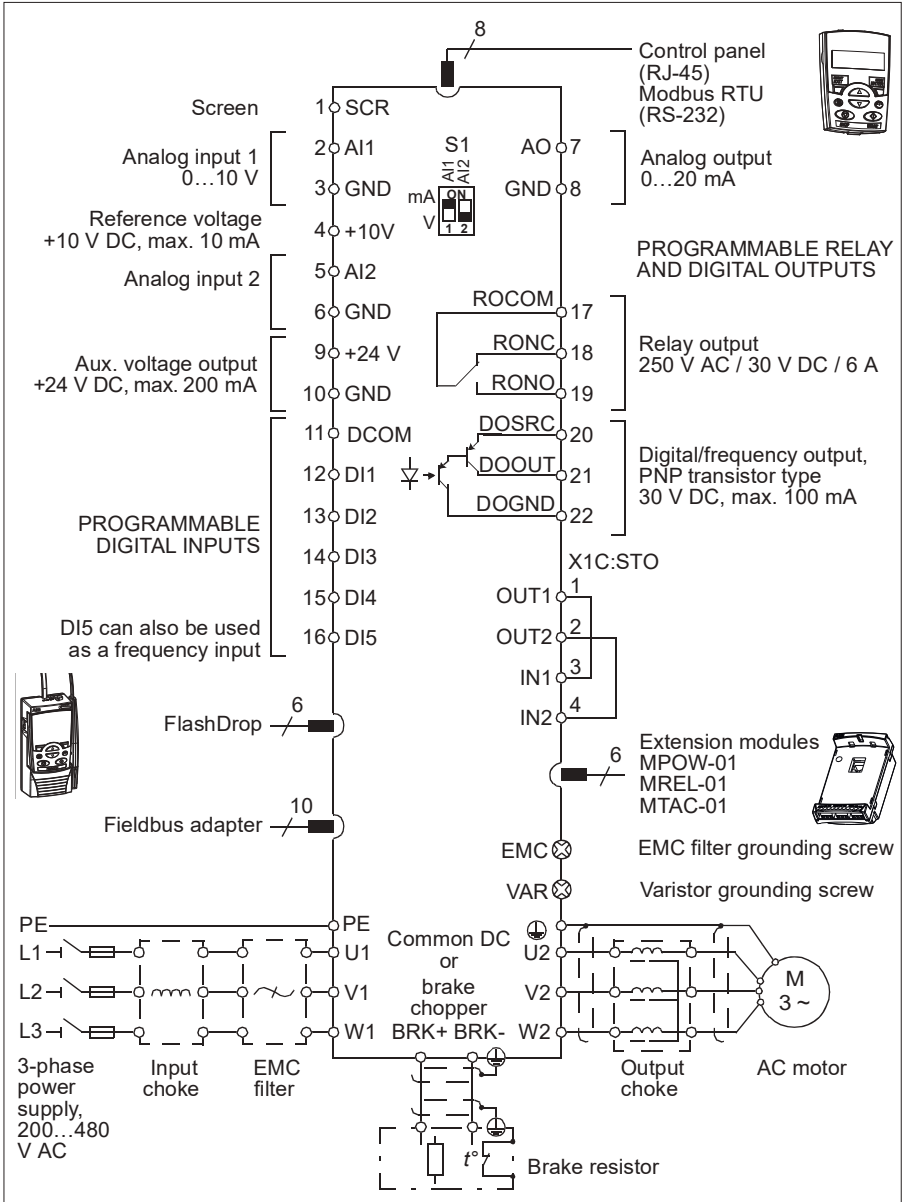

## Overview of power and control connections

The diagram gives an overview of connections. I/O connections are parameterable. See chapter *Application macros* on page 107 for I/O connections for the different macros and chapter *Electrical installation* on page 49 for installation in general.



## Type designation label

The type designation label is attached to the left side of the drive. An example label and explanation of the label contents are shown below.

|                                  |   |   |
|----------------------------------|---|---|
| <b>ABB</b>                       | <b>ACS355-03E-08A8-4</b>  | ① |
| IP20 / UL Open type ②            |   |   |
| UL Type 1 with MUL1 option       | S/N MYYWWRXXXX  | ④ |
| PN 4 kW (5 HP)                   |   |   |
| U1 3~400 V / 480 V               | 3AUA00000XXXX   | ⑤ |
| I1 ③ 14 A / 11 A                 | RoHS  |   |
| I1 with ext. choke 7.7 A / 6.4 A |  |   |
| f1 48...63 Hz                    |  |   |
| U2 3~0...U1 V                    |  | ⑥ |
| I2 8.8 A (150% 1/10 min)         |  |   |
| f2 0...599 Hz                    | N713  |   |

|   |  |
|---|--|
| 1 | Type designation, see section <a href="#">Type designation key</a> on page 31  |
| 2 | Degree of protection by enclosure (IP and UL/NEMA)   |
| 3 | Nominal ratings, see section <a href="#">Ratings</a> on page 376.  |
| 4 | Serial number of format MYYWWRXXXX, where<br>M: Manufacturer<br>YY: 10, 11, 12, ... for 2010, 2011, 2012, ...<br>WW: 01, 02, 03, ... for week 1, week 2, week 3, ...<br>R: A, B, C, ... for product revision number<br>XXXX: Integer starting every week from 0001 |
| 5 | ABB MRP code of the drive  |
| 6 | CE marking and C-Tick, C-UL US, RoHS and TÜV NORD marks (the label of your drive shows the valid markings)   |

## Type designation key

The type designation contains information on the specifications and configuration of the drive. You find the type designation on the type designation label attached to the drive. The first digits from the left express the basic configuration, for example ACS355-03E-07A3-4. The optional selections are given after that, separated by + signs, for example +J404. The explanations of the type designation selections are described below.

ACS355-03E-07A3-4+J404+...

ACS355 product series

1-phase/3-phase

01 = 1-phase input

03 = 3-phase input

Configuration

E = EMC filter connected, 50 Hz frequency

U = EMC filter disconnected, 60 Hz frequency

See section *Differences between the default values in E and U type drives*.

Output current rating

In format xxAy, where xx indicates the integer part and y the fractional part, eg, 07A3 means 7.3 A.

For more information, see section *Ratings* on page 376.

Input voltage range

2 = 1-phase 200 ... 240 V AC  $\pm 10\%$ . This is indicated on the type designation label as typical input voltage level 1 ~ 230 V AC.

OR

3-phase 200 ... 240 V AC  $\pm 10\%$ . This is indicated on the type designation label as typical input voltage level 3 ~ 230 V AC.

4 = 3-phase 380 ... 480 V AC  $\pm 10\%$ . This is indicated on the type designation label as typical input voltage level 3 ~ 400/480 V AC.

Options

B063 = IP66/IP67/UL Type 4x enclosure (product variant)

J400 = ACS-CP-A assistant control panel <sup>1)</sup>

J404 = ACS-CP-C basic control panel <sup>1)</sup>

J402 = MPOT-01 potentiometer

K451 = FDNA-01 DeviceNet

K452 = FLON-01 LONWORKS®

K454 = FPBA-01 PROFIBUS DP

K457 = FCAN-01 CANopen

K458 = FMBA-01 Modbus RTU

K462 = FCNA-01 ControlNet

K466 = FENA-01 EtherNet/IP / Modbus TCP/PROFINET IO

K469 = FECA-01 EtherCAT

K470 = FEPL-02 Ethernet POWERLINK

K473 = FENA-11 EtherNet/IP / Modbus TCP/PROFINET IO

K475 = FENA-21 EtherNet/IP / Modbus TCP/PROFINET IO

H376 = Cable gland kit (IP66/IP67/UL Type 4x)

F278 = Input switch kit

C169 = Pressure compensation valve

### Extension modules

G406 = MPOW-01 auxiliary power extension module

L502 = MTAC-01 pulse encoder interface module

L511 = MREL-01 output relay module

1) The ACS355 is compatible with panels that have the following panel revisions and panel firmware versions. To find out the revision and firmware version of your panel, see page 76.

| Panel type                     | Type code | Panel revision | Panel firmware version |
|--------------------------------|-----------|----------------|------------------------|
| Basic control panel            | ACS-CP-C  | M or later     | 1.13 or later          |
| Assistant control panel        | ACS-CP-A  | F or later     | 2.04 or later          |
| Assistant control panel (Asia) | ACS-CP-D  | Q or later     | 2.04 or later          |

Note that unlike the other panels, the ACS-CP-D is ordered with a separate material code.

[www.nicsanat.com](http://www.nicsanat.com)

021-87700210



# 4

## Mechanical installation

---

### What this chapter contains

The chapter tells how to check the installation site, unpack, check the delivery and install the drive mechanically.

### Checking the installation site

The drive may be installed on the wall or in a cabinet. Check the enclosure requirements for the need to use the NEMA 1 option in wall installations (see chapter [Technical data](#) on page 375).

The drive can be installed in three different ways, depending on the frame size:

- a) back mounting (all frame sizes)
- b) side mounting (frame sizes R0...R2)
- c) DIN rail mounting (all frame sizes).

The drive must be installed in an upright position.

Check the installation site according to the requirements below. Refer to chapter [Dimension drawings](#) on page 397 for frame details.

#### ■ Requirements for the installation site

##### Operation conditions

See chapter [Technical data](#) on page 375 for the allowed operation conditions of the drive.

##### Wall

The wall should be as close to vertical and even as possible, of non-flammable material and strong enough to carry the weight of the drive.

---





## Floor

The floor/material below the installation should be non-flammable.

## Free space around the drive

The required free space for cooling above and below the drive is 75 mm (3 in). No free space is required on the sides of the drive, so drives can be mounted immediately next to each other.

## Required tools

To install the drive, you need the following tools:

- screwdrivers (as appropriate for the mounting hardware used)
- wire stripper
- tape measure
- drill (if the drive will be installed with screws/bolts)
- mounting hardware: screws or bolts (if the drive will be installed with screws/bolts). For the number of screws/bolts, see [With screws](#) on page 36.



## Unpacking

The drive (1) is delivered in a package that also contains the following items (frame size R1 shown in the figure):

- plastic bag (2) including clamping plate (also used for I/O cables in frame sizes R3 and R4), I/O clamping plate (for frame sizes R0...R2), fieldbus option ground plate, clamps and screws
- panel cover (3)
- mounting template, integrated into the package (4)
- quick installation and start-up guide (5)
- possible options (fieldbus, potentiometer, extension module, all with instructions, basic control panel or assistant control panel).



## Checking the delivery

Check that there are no signs of damage. Notify the shipper immediately if damaged components are found.

Before attempting installation and operation, check the information on the type designation label of the drive to verify that the drive is of the correct type. See section [Type designation label](#) on page 30.

## Installing

The instructions in this manual cover drives with the IP20 degree of protection. To comply with NEMA 1, use the MUL1-R1, MUL1-R3 or MUL1-R4 option kit, which is delivered with multilingual installation instructions (3AFE68642868, 3AFE68643147 or 3AUA0000025916, respectively).

To obtain a higher degree of protection, the drive must be installed inside a cabinet. If there are sand, dust or other impurities in the operating environment, a typical minimum requirement for the installation cabinet is IP54 degree of protection.

### ■ Install the drive

Install the drive with screws or on a DIN rail as appropriate.

**Note:** Make sure that dust from drilling does not enter the drive during the installation.


### With screws

1. Mark the hole locations using for example the mounting template cut out from the package. The locations of the holes are also shown in the drawings in chapter *Dimension drawings* on page 397. The number and location of the holes used depend on how the drive is installed:
  - a) back mounting (frame sizes R0...R4): four holes
  - b) side mounting (frame sizes R0...R2): three holes; one of the bottom holes is located in the clamping plate.
2. Fix the screws or bolts to the marked locations.
3. Position the drive onto the screws on the wall.
4. Tighten the screws in the wall securely.



## On DIN rail


1. Click the drive to the rail.  
To detach the drive, press the release lever on top of the drive (1b).

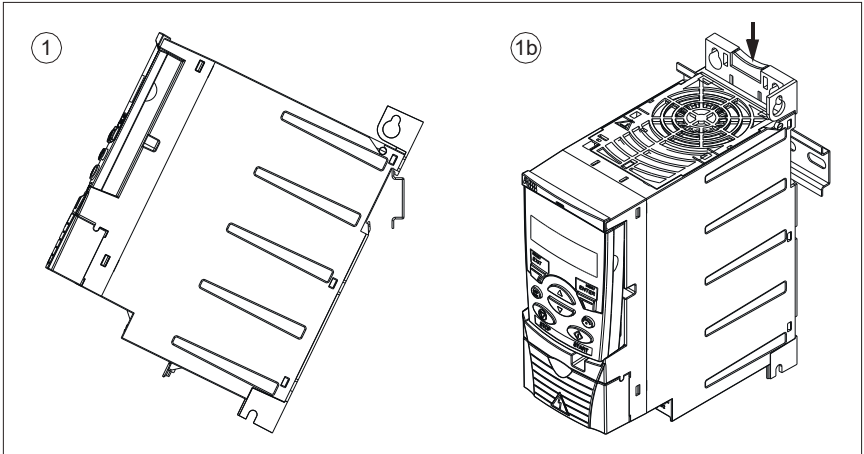

## ■ Fasten clamping plates

**Note:** Make sure that you do not throw the clamping plates away as they are required for proper grounding of the power and control cables as well as the fieldbus option.

1. Fasten the clamping plate (A) to the plate at the bottom of the drive with the provided screws.
2. For frame sizes R0...R2, fasten the I/O clamping plate (B) to the clamping plate with the provided screws.

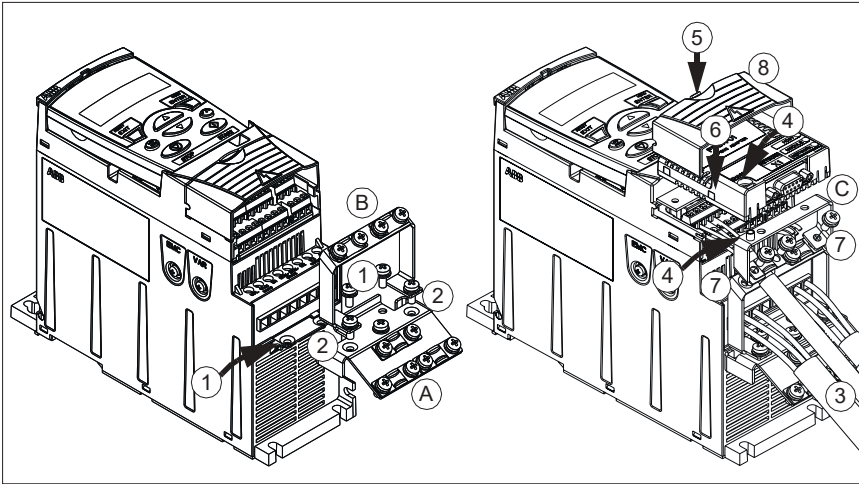

## ■ Attach the optional fieldbus module

1. Connect the power and control cables as instructed in chapter *Electrical installation* on page 49.
2. Place the fieldbus module on the option ground plate (C) and tighten the grounding screw on the left corner of the fieldbus module. This fastens the module to the option ground plate (C).
3. If the terminal cover is not already removed, push the recess in the cover and simultaneously slide the cover off the frame.
4. Snap the fieldbus module attached to the option ground plate (C) in position so that the module is plugged to the connection on the drive front and the screw holes in the option ground plate (C) and the I/O clamping plate (B) are aligned.
5. Fasten the option ground plate (C) to the I/O clamping plate (B) with the provided screws.
6. Slide the terminal cover back in place.

# 5

## Planning the electrical installation

---

### What this chapter contains

The chapter contains the instructions that you must follow when checking the compatibility of the motor and drive, and selecting cables, protections, cable routing and way of operation for the drive.

**Note:** The installation must always be designed and made according to applicable local laws and regulations. ABB does not assume any liability whatsoever for any installation which breaches the local laws and/or other regulations. Furthermore, if the recommendations given by ABB are not followed, the drive may experience problems that the warranty does not cover.

### Implementing the AC power line connection

See the requirements in section *Electric power network specification* on page 387. Use a fixed connection to the AC power line.



**WARNING!** As the leakage current of the device typically exceeds 3.5 mA, a fixed installation is required according to IEC 61800-5-1.

---

#### ■ Using an input choke

An input choke is required in case of unstable supply networks. An input choke can also be used for decreasing the input current.

---

## Selecting the supply disconnecting device (disconnecting means)

Install a hand-operated supply disconnecting device (disconnecting means) between the AC power source and the drive. The disconnecting device must be of a type that can be locked to the open position for installation and maintenance work.

### ■ European union

To meet the European Union Directives, according to standard EN 60204-1, Safety of Machinery, the disconnecting device must be one of the following types:

- a switch-disconnector of utilization category AC-23B (EN 60947-3)
- a disconnector having an auxiliary contact that in all cases causes switching devices to break the load circuit before the opening of the main contacts of the disconnector (EN 60947-3)
- a circuit breaker suitable for isolation in accordance with EN 60947-2.

### ■ Other regions

The disconnecting device must conform to the applicable safety regulations.

## Checking the compatibility of the motor and drive

Check that the 3-phase AC induction motor and the drive are compatible according to the rating table in section [Ratings](#) on page [376](#). The table lists the typical motor power for each drive type.

Only one permanent magnet synchronous motor can be connected to the inverter output.

## Checking the compatibility of the drive when multiple motors are connected to the drive

The drive is selected based on the sum of the connected motor powers. Typically, overdimensioning of the drive and the use of external output chokes is recommended.

When one drive controls several motors, only scalar control is possible. Motor parameters ( $P_N$ ,  $I_{2N}$ ) are given as the sum of the nominal values of the motors. Nominal speed is given as an average of the motors. It is recommended to limit the maximum current according to the actual need and it should not exceed  $1.1 \cdot I_{2N}$  (parameter [2003 MAX CURRENT](#)).

When multiple motors are connected, the sum of the output cable lengths must not exceed the maximum allowed cable length (see [Maximum recommended motor cable length](#) on page [388](#)). If motor contactors are used, switching the contactors during run is not recommended.

---

When more than 4 motors need to be controlled by one drive, contact your local ABB representative.

## Selecting the power cables

### ■ General rules

Dimension the input power and motor cables **according to local regulations**.

- The input power and the motor cables must be able to carry the corresponding load currents. See section [Ratings](#) on page [376](#) for the rated currents.
- The cable must be rated for at least 70 °C (158 °F) maximum permissible temperature of the conductor in continuous use. For US, see section [Additional US requirements](#) on page [43](#).
- The conductivity of the PE conductor must be equal to that of the phase conductor (same cross-sectional area).
- 600 V AC cable is accepted for up to 500 V AC.
- Refer to chapter [Technical data](#) on page [375](#) for the EMC requirements.

A symmetrical shielded motor cable (see the figure below) must be used to meet the EMC requirements of the CE and C-Tick marks.

A four-conductor system is allowed for input cabling, but a shielded symmetrical cable is recommended.


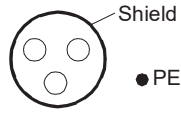
Compared to a four-conductor system, the use of a symmetrical shielded cable reduces electromagnetic emission of the whole drive system as well as motor bearing currents and wear.


---



## Alternative power cable types

Power cable types that can be used with the drive are presented below.


|   |  |
|---|--|
| <p><b>Motor cables</b><br/>(recommended for input cables also)</p> <p>Symmetrical shielded cable: three phase conductors, a concentric or otherwise symmetrically constructed PE conductor and a shield</p>  | <p><b>Note:</b> A separate PE conductor is required if the conductivity of the cable shield is not sufficient for the purpose.</p>  |
|---|--|
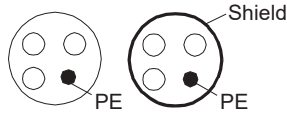
|   |   |
|---|---|
| <p><b>Allowed as input cables</b></p> <p>A four-conductor system: three phase conductors and a protective conductor</p> |  |
|---|---|

## Motor cable shield

To function as a protective conductor, the shield must have the same cross-sectional area as the phase conductors when they are made of the same metal.

To effectively suppress radiated and conducted radio-frequency emissions, the shield conductivity must be at least 1/10 of the phase conductor conductivity. The requirements are easily met with a copper or aluminum shield. The minimum requirement of the motor cable shield of the drive is shown below. It consists of a concentric layer of copper wires. The better and tighter the shield, the lower the emission level and bearing currents.

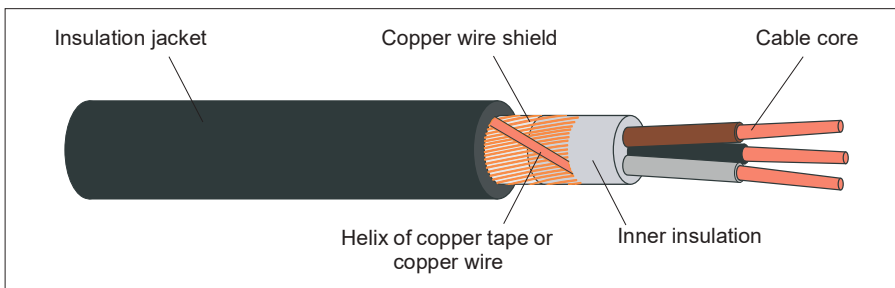

## ■ Additional US requirements

Type MC continuous corrugated aluminum armor cable with symmetrical grounds or shielded power cable is recommended for the motor cables if metallic conduit is not used.

The power cables must be rated for 75 °C (167 °F).

### **Conduit**

Where conduits must be coupled together, bridge the joint with a ground conductor bonded to the conduit on each side of the joint. Bond the conduits also to the drive enclosure. Use separate conduits for input power, motor, brake resistors and control wiring. Do not run motor wiring from more than one drive in the same conduit.

### **Armored cable / shielded power cable**

Six-conductor (three phases and three ground) type MC continuous corrugated aluminum armor cable with symmetrical grounds is available from the following suppliers (trade names in parentheses):

- Anixter Wire & Cable (Philsheath)
- BICC General Corp (Philsheath)
- Rockbestos Co. (Gardex)
- Oaknite (CLX).

Shielded power cable is available from the following suppliers:

- Belden
  - LAPPKABEL (ÖLFLEX)
  - Pirelli.
-


## Selecting the control cables

### ■ General rules

All analog control cables and the cable used for the frequency input must be shielded.

Use a double-shielded twisted pair cable (Figure a, for example JAMAK by Draka NK Cables) for analog signals. Employ one individually shielded pair for each signal. Do not use common return for different analog signals.

A double-shielded cable is the best alternative for low-voltage digital signals, but a single-shielded or unshielded twisted multipair cable (Figure b) is also usable. However, for frequency input, always use a shielded cable.

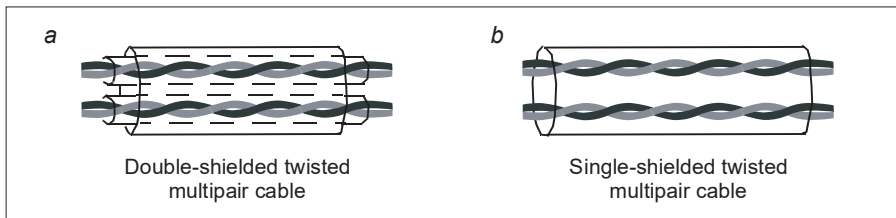

Run analog and digital signals in separate cables.

Relay-controlled signals, providing their voltage does not exceed 48 V, can be run in the same cables as digital input signals. It is recommended that the relay-controlled signals are run as twisted pairs.

Never mix 24 V DC and 115/230 V AC signals in the same cable.

### ■ Relay cable

The cable type with braided metallic screen (for example ÖLFLEX by LAPPKABEL) has been tested and approved by ABB.

### ■ Control panel cable

In remote use, the cable connecting the control panel to the drive must not exceed 3 m (10 ft). The cable type tested and approved by ABB is used in control panel option kits.


## Routing the cables

Route the motor cable away from other cable routes. Motor cables of several drives can be run in parallel installed next to each other. It is recommended that the motor cable, input power cable and control cables are installed on separate trays. Avoid long parallel runs of motor cables with other cables to decrease electromagnetic interference caused by the rapid changes in the drive output voltage.


Where control cables must cross power cables make sure that they are arranged at an angle as near to 90 degrees as possible.

The cable trays must have good electrical bonding to each other and to the grounding electrodes. Aluminum tray systems can be used to improve local equalizing of potential.

A diagram of the cable routing is shown below.

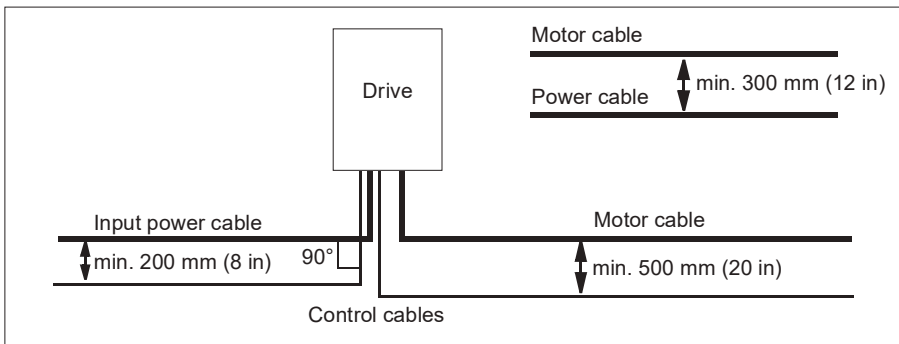


### Control cable ducts

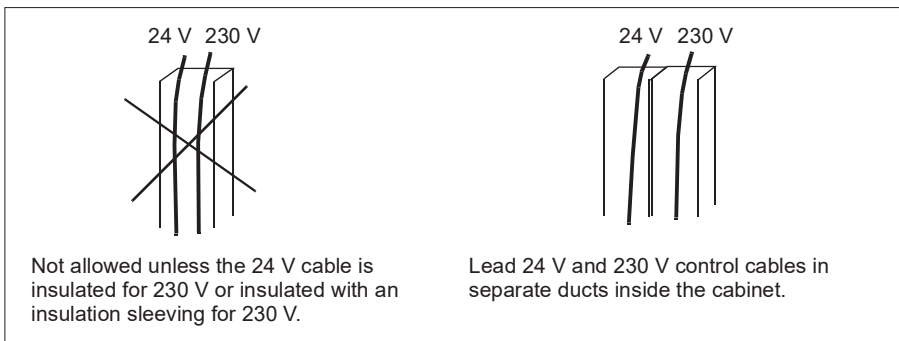

## Protecting the drive, input power cable, motor and motor cable in short-circuit situations and against thermal overload

### ■ Protecting the drive and input power cable in short-circuit situations

Arrange the protection according to the following guidelines.
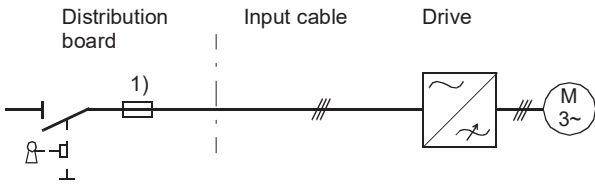
| Circuit diagram   | Short-circuit protection  |
|---|---|
|  <p>The diagram shows a power supply line from a distribution board (containing a switch and a fuse labeled '1') connected to an input cable. The input cable is connected to a drive unit, which is then connected to a three-phase motor (labeled 'M 3~').</p> | <p>Protect the drive and input cable with fuses. See footnote 1).</p> |

1) Size the fuses or manual motor protectors (MMP) according to instructions given in chapter [Technical data](#) on page 375. The fuses or MMPs will protect the input cable in short-circuit situations, restrict drive damage and prevent damage to adjoining equipment in case of a short-circuit inside the drive.


### ■ Protecting the motor and motor cable in short-circuit situations

The drive protects the motor and motor cable in a short-circuit situation when the motor cable is dimensioned according to the nominal current of the drive. No additional protection devices are needed.

### ■ Protecting the drive, motor cable and input power cable against thermal overload

The drive protects itself and the input and motor cables against thermal overload when the cables are dimensioned according to the nominal current of the drive. No additional thermal protection devices are needed.

---

 **WARNING!** If the drive is connected to multiple motors, a separate thermal overload switch must be used for protecting each cable and motor. These devices may require a separate fuse to cut off the short-circuit current.

---

## ■ Protecting the motor against thermal overload

According to regulations, the motor must be protected against thermal overload and the current must be switched off when overload is detected. The drive includes a motor thermal protection function that protects the motor and switches off the current when necessary. It is also possible to connect a motor temperature measurement to the drive. The user can tune both the thermal model and the temperature measurement function further by parameters.

The most common temperature sensors are:

- motor sizes IEC 180...225: thermal switch (for example Klixon)
- motor sizes IEC 200...250 and larger: PTC or Pt100.

For more information on the thermal model, see section [Motor thermal protection](#) on page 148. For more information on the temperature measurement function, see section [Motor temperature measurement through the standard I/O](#) on page 157.

## Implementing the Safe torque off (STO) function

See [Appendix: Safe torque off \(STO\)](#) on page 419.

## Using residual current devices (RCD) with the drive

ACS355-01x drives are suitable to be used with residual current devices of Type A, ACS355-03x drives with residual current devices of Type B. For ACS355-03x drives, other measures for protection in case of direct or indirect contact, such as separation from the environment by double or reinforced insulation or isolation from the supply system by a transformer, can also be applied.

## Using a safety switch between the drive and the motor

It is recommended to install a safety switch between the permanent magnet synchronous motor and the drive output. This is needed to isolate the motor from the drive during maintenance work on the drive.

## Implementing a bypass connection



**WARNING!** Never connect the supply power to the drive output terminals U2, V2 and W2. Power line voltage applied to the output can result in permanent damage to the drive.

---

If frequent bypassing is required, employ mechanically connected switches or contactors to ensure that the motor terminals are not connected to the AC power line and drive output terminals simultaneously. The installation must be clearly marked as defined in IEC/EN 61800-5-1, subclause 6.5.3, for example, "THIS MACHINE STARTS AUTOMATICALLY".


---

## Protecting the contacts of relay outputs

Inductive loads (relays, contactors, motors) cause voltage transients when switched off.

Equip inductive loads with noise attenuating circuits (varistors, RC filters [AC] or diodes [DC]) in order to minimize the EMC emission at switch-off. If not suppressed, the disturbances may connect capacitively or inductively to other conductors in the control cable and form a risk of malfunction in other parts of the system.

Install the protective component as close to the inductive load as possible. Do not install protective components at the I/O terminal block.

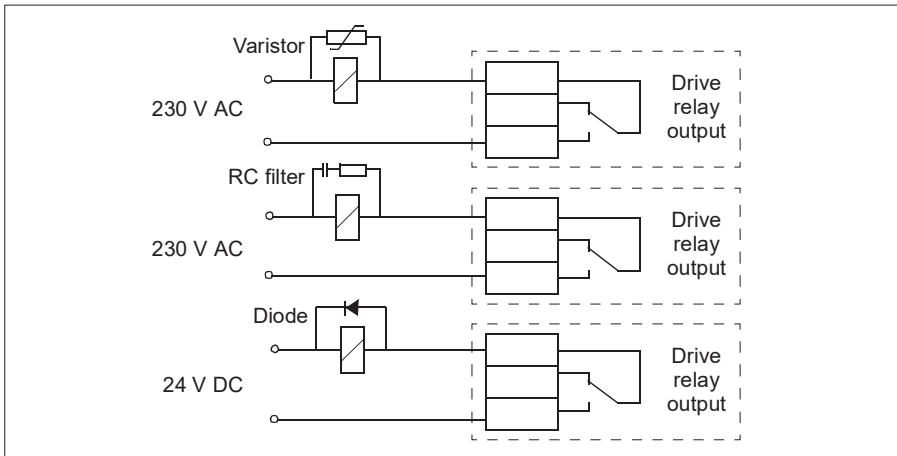

# 6

## Electrical installation

---

### What this chapter contains

The chapter tells how to check the insulation of the assembly and the compatibility with IT (ungrounded) and corner-grounded TN systems as well as connect power cables and control cables.



**WARNING!** The work described in this chapter may only be carried out by a qualified electrician. Follow the instructions in chapter [Safety](#) on page 17. Ignoring the safety instructions can cause injury or death.

**Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.**

---

### Checking the insulation of the assembly

#### ■ Drive

Do not make any voltage tolerance or insulation resistance tests (for example hi-pot or megger) on any part of the drive as testing can damage the drive. Every drive has been tested for insulation between the main circuit and the chassis at the factory. Also, there are voltage-limiting circuits inside the drive which cut down the testing voltage automatically.

#### ■ Input power cable

Check the insulation of the input power cable according to local regulations before connecting to the drive.

---






## Motor and motor cable

Check the insulation of the motor and motor cable as follows:

1. Check that the motor cable is connected to the motor and disconnected from the drive output terminals U2, V2 and W2.
2. Measure the insulation resistance between each phase conductor and the Protective Earth conductor using a measuring voltage of 500 V DC. The insulation resistance of an ABB motor must exceed 100 Mohm (reference value at 25 °C or 77 °F). For the insulation resistance of other motors, please consult the manufacturer's instructions.

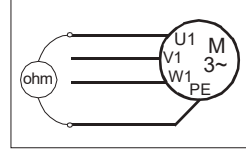

**Note:** Moisture inside the motor casing will reduce the insulation resistance. If moisture is suspected, dry the motor and repeat the measurement.


## Checking the compatibility with IT (ungrounded) and corner-grounded TN systems

**⚠ WARNING!** Disconnect the internal EMC filter when installing the drive on an IT system (an ungrounded power system or a high-resistance-grounded [over 30 ohms] power system), otherwise the system will be connected to ground potential through the EMC filter capacitors. This may cause danger or damage the drive.

Disconnect the internal EMC filter when installing the drive on a corner-grounded TN system, otherwise the drive will be damaged.


**Note:** When the internal EMC filter is disconnected, the drive is not EMC compatible without an external filter.

1. If you have an IT (ungrounded) or corner-grounded TN system, disconnect the internal EMC filter by removing the EMC screw. For 3-phase U-type drives (with type designation ACS355-03U-), the EMC screw is already removed at the factory and replaced by a plastic one.

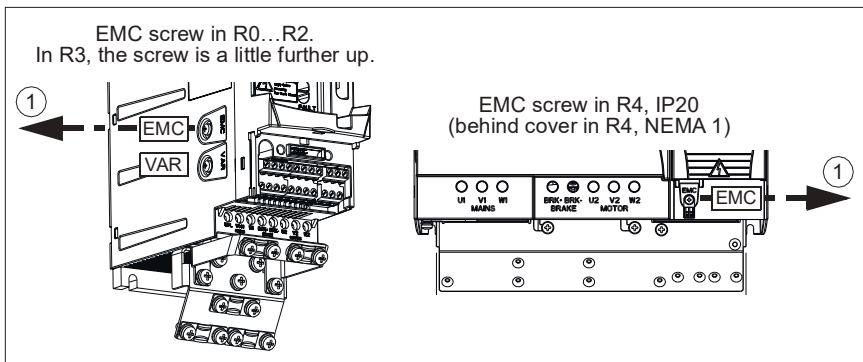

## Connecting the power cables

### ■ Connection diagram

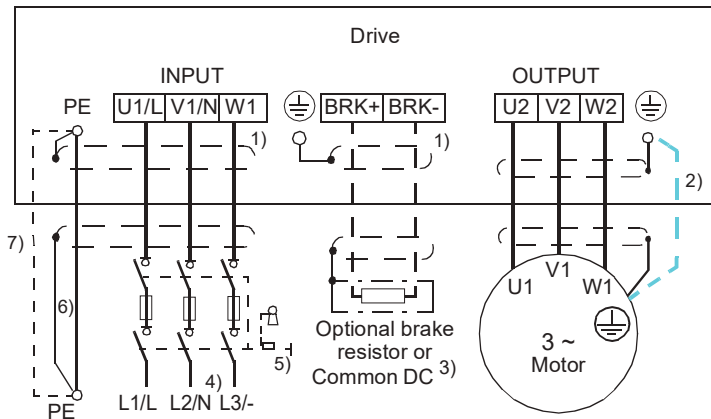

- 1) 360-degree grounding of the cable shield. Required for the motor cable and brake resistor cable, recommended for the input power cable.
- 2) Use a separate grounding cable if the conductivity of the cable shield is not sufficient (smaller than the conductivity of the phase conductor) for the protective grounding, or there is no symmetrically constructed grounding conductor in the cable. See section [Selecting the power cables](#) on page 41.
- 3) For more information on Common DC, see *ACS355 Common DC application guide* (3AUA0000070130 [EN]).
- 4) In one-phase installations, connect phase to L, neutral to N and leave L3/- disconnected.
- 5) For alternatives, see section [Selecting the supply disconnecting device \(disconnecting means\)](#) on page 40.
- 6) Use two grounding conductors if the cross-section of a single grounding conductor is less than 10 mm<sup>2</sup> Cu or 16 mm<sup>2</sup> Al (IEC/EN 61800-5-1). For example, use the cable shield in addition to the fourth conductor.
- 7) Use a separate grounding cable (line side) if the conductivity of the fourth conductor or shield is not sufficient for the protective grounding.

#### Note:

Do not use an asymmetrically constructed motor cable.


If there is a symmetrically constructed grounding conductor in the motor cable in addition to the conductive shield, connect the grounding conductor to the grounding terminal at the drive and motor ends.

Route the motor cable, input power cable and control cables separately. For more information, see section [Routing the cables](#) on page 45.



## ■ Connection procedure


1. Strip the end of the input power cable. Ground the bare shield of the cable (if any) 360 degrees under the grounding clamp. Fasten the grounding conductor (PE) of the input power cable under the grounding clamp. Connect the phase conductors to the U1, V1 and W1 terminals. Use a tightening torque of 0.8 N·m (7 lbf·in) for frame sizes R0...R2, 1.7 N·m (15 lbf·in) for R3 and 2.5 N·m (22 lbf·in) for R4.
2. Strip the end of the motor cable. Ground the bare shield of the cable (if any) 360 degrees under the grounding clamp. Twist the shield to a pigtail. Keep it short. See the drawing below. Fasten the twisted shield under the grounding clamp. Connect the phase conductors to the U2, V2 and W2 terminals. Use a tightening torque of 0.8 N·m (7 lbf·in) for frame sizes R0...R2, 1.7 N·m (15 lbf·in) for R3 and 2.5 N·m (22 lbf·in) for R4.
3. Connect the optional brake resistor to the BRK+ and BRK- terminals with a shielded cable using the same procedure as for the motor cable in the previous step.
4. Connect the motor cable at the motor end. To minimize the RFI emissions, keep the base shield as short as possible. See the drawing below.
5. Secure the cables outside the drive mechanically.

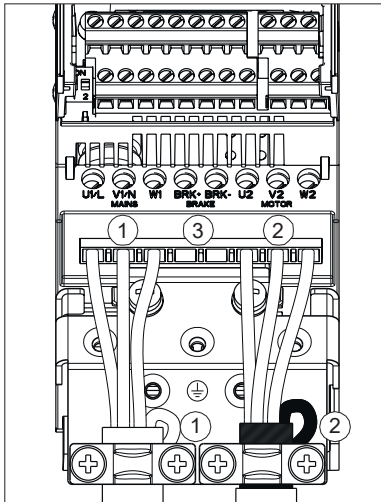

### Grounding of the motor cable shield at the motor end

For the minimum radio frequency interference:


- ground the cable by twisting the shield as follows:  
flattened width  $\geq 1/5 \cdot \text{length}$
- or ground the cable shield 360 degrees at the lead-through of the motor terminal box.

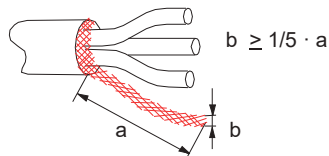

## Connecting the control cables


### I/O terminals

The figure below shows the I/O terminals. Tightening torque is 0.4 N·m / 3.5 lbf·in.

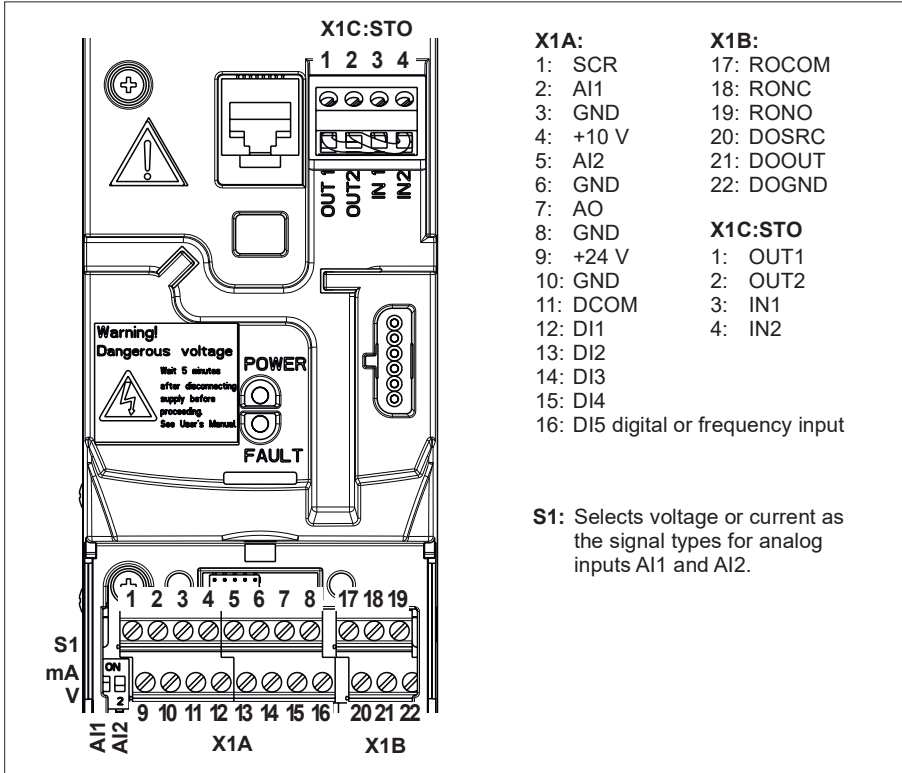


### Voltage and current selection for analog inputs

Switch S1 selects voltage (0 [2]...10 V / -10...10 V) or current (0 [4]...20 mA / -20...20 mA) as the signal types for analog inputs AI1 and AI2. The factory settings are unipolar voltage for AI1 (0 [2]...10 V) and unipolar current for AI2 (0 [4]...20 mA), which correspond to the default usage in the application macros. The switch is located to the left of I/O terminal 9 (see the I/O terminal figure above).

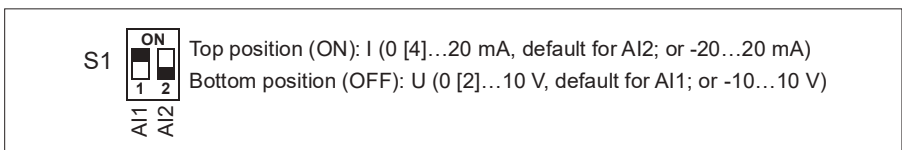


## Voltage and current connection for analog inputs

Bipolar voltage (-10...10 V) and current (-20...20 mA) are also possible. If a bipolar connection is used instead of a unipolar one, see section [Programmable analog inputs](#) on page 132 for how to set parameters accordingly.

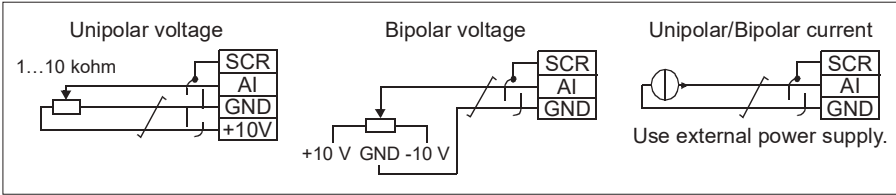


## PNP and NPN configuration for digital inputs

You can wire the digital input terminals in either a PNP or NPN configuration.

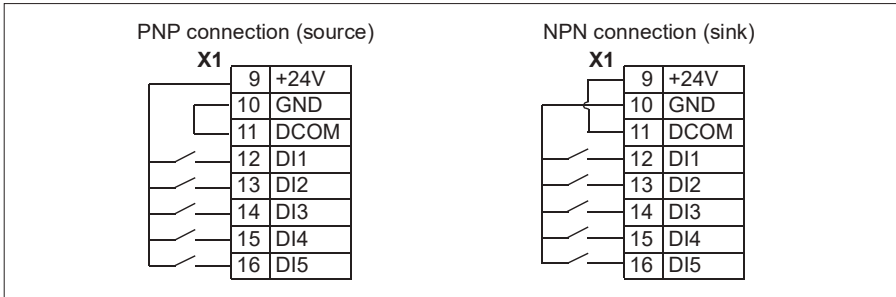

## External power supply for digital inputs

For using an external +24 V supply for the digital inputs, see the figure below.

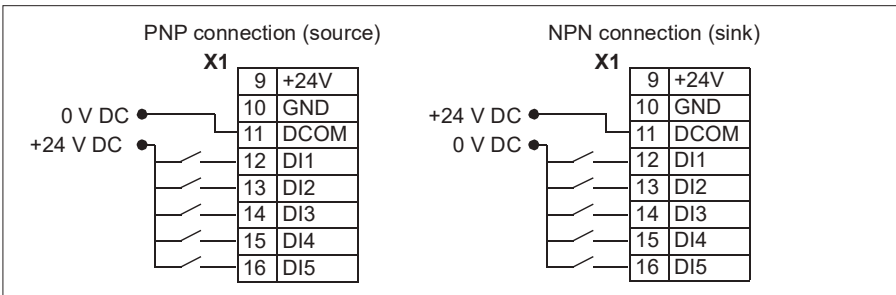


## Frequency input

If DI5 is used as a frequency input, see section [Frequency input](#) on page 135 for how to set parameters accordingly.


### Connection examples of two-wire and three-wire sensors

Hand/Auto, PID control, and Torque control macros (see section *Application macros*, pages 114, 115 and 116, respectively) use analog input 2 (AI2). The macro wiring diagrams on these pages use an externally powered sensor (connections not shown). The figures below give examples of connections using a two-wire or three-wire sensor/transmitter supplied by the drive auxiliary voltage output.

**Note:** Maximum capability of the auxiliary 24 V (200 mA) output must not be exceeded.

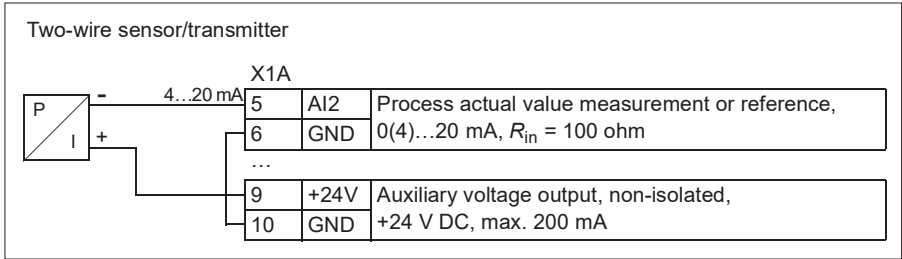

**Note:** The sensor is supplied through its current output and the drive feeds the supply voltage (+24 V). Thus the output signal must be 4...20 mA, not 0...20 mA.

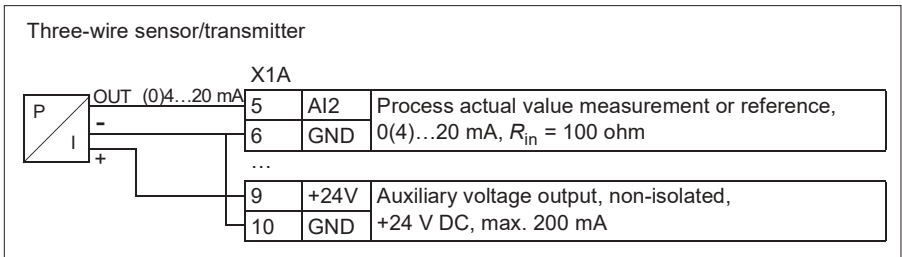


### ■ Default I/O connection diagram

The default connection of the control signals depends on the application macro in use, which is selected with parameter *9902 APPLIC MACRO*.

The default macro is the ABB standard macro. It provides a general purpose I/O configuration with three constant speeds. Parameter values are the default values given in section *Default values with different macros* on page 180. For information on other macros, see chapter *Application macros* on page 107.



The default I/O connections for the ABB standard macro are given in the figure below.

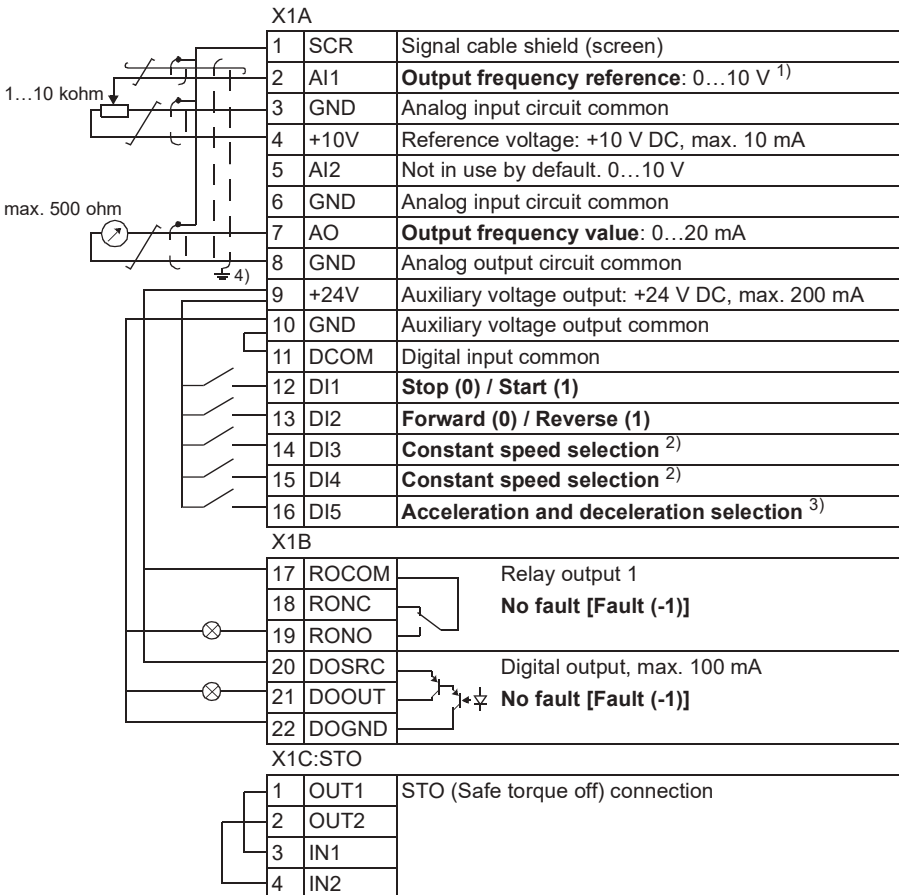

<sup>1)</sup> AI1 is used as a speed reference if vector mode is selected.

<sup>2)</sup> See parameter group **12 CONSTANT SPEEDS**:

| DI3 | DI4 | Operation (parameter)            |
|-----|-----|----------------------------------|
| 0   | 0   | Set speed through AI1            |
| 1   | 0   | Speed 1 ( <a href="#">1202</a> ) |
| 0   | 1   | Speed 2 ( <a href="#">1203</a> ) |
| 1   | 1   | Speed 3 ( <a href="#">1204</a> ) |


<sup>3)</sup> 0 = ramp times according to parameters [2202](#) and [2203](#).

1 = ramp times according to parameters [2205](#) and [2206](#).

<sup>4)</sup> 360 degree grounding under a clamp.  
Tightening torque: 0.4 N·m / 3.5 lbf·in.

## ■ Connection procedure

1. Remove the terminal cover by simultaneously pushing the recess and sliding the cover off the frame.
2. *Analog signals:* Strip the outer insulation of the analog signal cable 360 degrees and ground the bare shield under the clamp.
3. Connect the conductors to the appropriate terminals. Use a tightening torque of 0.4 N·m (3.5 lbf·in).
4. Twist the grounding conductors of each pair in the analog signal cable together and connect the bundle to the SCR terminal (terminal 1).
5. *Digital signals:* Strip the outer insulation of the digital signal cable 360 degrees and ground the bare shield under the clamp.
6. Connect the conductors of the cable to the appropriate terminals. Use a tightening torque of 0.4 N·m (3.5 lbf·in).
7. For double-shielded cables, twist also the grounding conductors of each pair in the cable together and connect the bundle to the SCR terminal (terminal 1).
8. Secure all cables outside the drive mechanically.
9. Unless you need to install the optional fieldbus module (see section [Attach the optional fieldbus module](#) on page 38), slide the terminal cover back in place.
10. If you are going to use an optional Safe Torque Off function, connect STO conductors to the appropriate terminals. Use a tightening torque of 0.4 N·m (3.5 lbf·in).

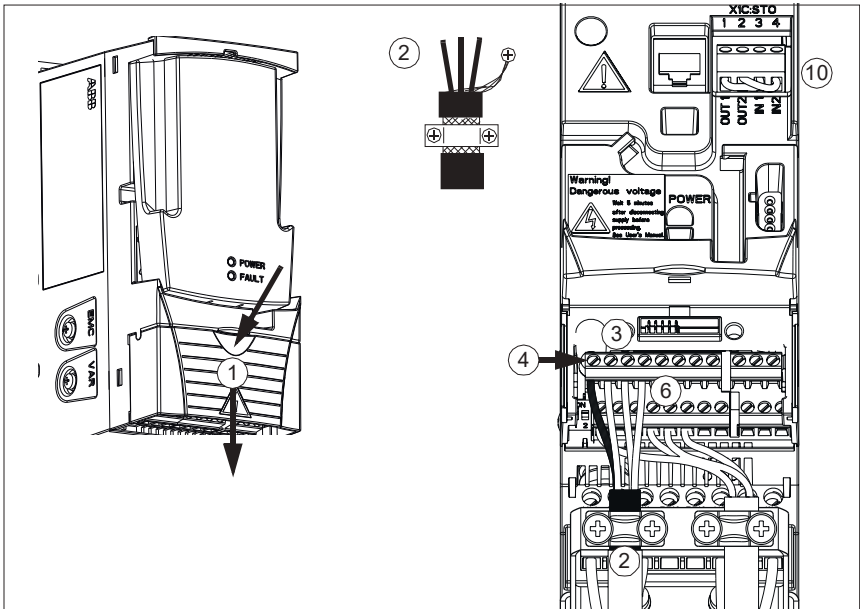





# 7

## Installation checklist

---

### What this chapter contains

This chapter contains a list for checking the mechanical and electrical installation of the drive.

### Checking the installation

Check the mechanical and electrical installation of the drive before start-up. Go through the checklist below together with another person. Read chapter [Safety](#) on page [17](#) of this manual before you work on the drive.

| Check  |
|--|
| <b>MECHANICAL INSTALLATION</b>   |
| <input type="checkbox"/> The ambient operating conditions are within allowed limits. (See <a href="#">Mechanical installation: Checking the installation site</a> on page <a href="#">33</a> as well as <a href="#">Technical data: Losses, cooling data and noise</a> on page <a href="#">384</a> and <a href="#">Ambient conditions</a> on page <a href="#">391</a> .) |
| <input type="checkbox"/> The drive is fixed properly on an even vertical non-flammable wall. (See <a href="#">Mechanical installation</a> on page <a href="#">33</a> .)  |
| <input type="checkbox"/> The cooling air will flow freely. (See <a href="#">Mechanical installation: Free space around the drive</a> on page <a href="#">34</a> .)   |
| <input type="checkbox"/> The motor and the driven equipment are ready for start. (See <a href="#">Planning the electrical installation: Checking the compatibility of the motor and drive</a> on page <a href="#">40</a> as well as <a href="#">Technical data: Motor connection data</a> on page <a href="#">387</a> .)   |
| <b>ELECTRICAL INSTALLATION</b> (See <a href="#">Planning the electrical installation</a> on page <a href="#">39</a> and <a href="#">Electrical installation</a> on page <a href="#">49</a> .)  |
| <input type="checkbox"/> For ungrounded and corner-grounded systems: The internal EMC filter is disconnected (EMC screw removed).  |
| <input type="checkbox"/> The capacitors are reformed if the drive has been stored over a year.   |

---

### Check

- The drive is grounded properly.
  - The input power voltage matches the drive nominal input voltage.
  - The input power connections at U1/L, V1/N and W1 are OK and tightened with the correct torque.
  - Appropriate input power fuses and disconnectors are installed.
  - The motor connections at U2, V2 and W2 are OK and tightened with the correct torque.
  - The motor cable, input power cable and control cables are routed separately.
  - The external control (I/O) connections are OK.
  - Safe torque off (STO) connections, operation and reaction are OK.
  - The input power voltage cannot be applied to the output of the drive (with a bypass connection).
  - Terminal cover and, for NEMA 1, hood and connection box, are in place.
-

# 8

## Start-up, control with I/O and ID run

---

### What this chapter contains

The chapter tells how to:

- perform the start-up
- start, stop, change the direction of the motor rotation and adjust the speed of the motor through the I/O interface
- perform an Identification run for the drive.

Using the control panel to do these tasks is explained briefly in this chapter. For details on how to use the control panel, refer to chapter [Control panels](#) on page 75.



## Starting up the drive



**WARNING!** The start-up may only be carried out by a qualified electrician.

The safety instructions given in chapter [Safety](#) on page [17](#) must be followed during the start-up procedure.

The drive will start up automatically at power-up if the external run command is on and the drive is in the remote control mode.

Check that the starting of the motor does not cause any danger. **De-couple the driven machine** if:

- there is a risk of damage in case of incorrect direction of rotation, or
- an ID run needs to be performed during the drive start-up. ID run is essential only in applications that require the ultimate in motor control accuracy.

- 
- Check the installation. See the checklist in chapter [Installation checklist](#) on page [59](#).

How you start up the drive depends on the control panel you have, if any.

- **If you have no control panel**, follow the instructions given in section [Starting up the drive without a control panel](#) on page [62](#).
- **If you have a basic control panel** (ACS-CP-C), follow the instructions given in section [Performing a manual start-up](#) on page [63](#).
- **If you have an assistant control panel** (ACS-CP-A, ACS-CP-D), you can either run the Start-up assistant (see section [Performing a guided start-up](#) on page [68](#)) or perform a manual start-up (see section [Performing a manual start-up](#) on page [63](#)).

The Start-up assistant, which is included in the assistant control panel only, guides you through all essential settings to be done. In the manual start-up, the drive gives no guidance; you go through the very basic settings by following the instructions given in section [Performing a manual start-up](#) on page [63](#).

### Starting up the drive without a control panel

#### POWER-UP










- Apply input power and wait for a moment.
- Check that the red LED is not lit and the green LED is lit but not blinking.

**The drive is now ready for use.**







## ■ Performing a manual start-up

For the manual start-up, you can use the basic control panel or the assistant control panel. The instructions below are valid for both control panels, but the displays shown are the basic control panel displays, unless the instruction applies to the assistant control panel only.

Before you start, ensure that you have the motor nameplate data on hand.

| POWER-UP  |   |
|---|---|
| <input type="checkbox"/> Apply input power.<br>The basic control panel powers up into the Output mode.<br><br>The assistant control panel asks if you want to run the Start-up assistant. If you press  , the Start-up assistant is not run, and you can continue with manual start-up in a similar manner as described below for the basic control panel.   | <div style="border: 1px solid black; padding: 5px;">                     REM <span style="font-size: 2em;">0.0</span> Hz<br/>                     OUTPUT <span style="float: right;">FWD</span> </div> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">                     REM ↻ CHOICE<br/>                     Do you want to use the start-up assistant?<br/>                     Yes<br/>                     NO<br/>                     EXIT   00:00   OK                 </div>   |
| MANUAL ENTRY OF START-UP DATA (parameter group 99)  |   |
| <input type="checkbox"/> If you have an assistant control panel, select the language (the basic control panel does not support languages). See parameter <a href="#">9901</a> for the values of the available language alternatives.<br><br>For instructions on how to set parameters with the assistant control panel, see section <a href="#">Assistant control panel</a> on page <a href="#">86</a> .  | <div style="border: 1px solid black; padding: 5px;">                     REM ↻ PAR EDIT<br/>                     9901 LANGUAGE<br/> <span style="font-size: 1.5em;">ENGLISH</span><br/>                     [0]<br/>                     CANCEL   00:00   SAVE                 </div>   |
| <input type="checkbox"/> Select the motor type ( <a href="#">9903</a> ). <ul style="list-style-type: none"> <li>• 1 (<i>AM</i>): Asynchronous motor</li> <li>• 2 (<i>PMSM</i>): Permanent magnet synchronous motor.</li> </ul> Setting of parameter <a href="#">9903</a> is shown below as an example of parameter setting with the basic control panel. You find more detailed instructions in section <a href="#">Basic control panel</a> on page <a href="#">76</a> .  | <div style="border: 1px solid black; padding: 5px;">                     REM <span style="font-size: 2em;">9903</span><br/>                     PAR <span style="float: right;">FWD</span> </div>   |
| <ol style="list-style-type: none"> <li>1. To go to the Main menu, press  if the bottom line shows OUTPUT; otherwise press  repeatedly until you see MENU at the bottom.</li> <li>2. Press keys   until you see "PAR", and press .</li> <li>3. Find the appropriate parameter group with keys   and press .</li> </ol> | <div style="border: 1px solid black; padding: 5px;">                     REM <span style="font-size: 2em;">rEF</span><br/>                     MENU <span style="float: right;">FWD</span> </div> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">                     REM <span style="font-size: 2em;">-01-</span><br/>                     PAR <span style="float: right;">FWD</span> </div> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">                     REM <span style="font-size: 2em;">9901</span><br/>                     PAR <span style="float: right;">FWD</span> </div> |



4. Find the appropriate parameter in the group with keys  .
5. Press and hold  for about two seconds until the parameter value is shown with **SET** under the value.
6. Change the value with keys  . The value changes faster while you keep the key pressed down.
7. Save the parameter value by pressing .

- Select the application macro (parameter **9902**) according to how the control cables are connected.

The default value 1 (**ABB STANDARD**) is suitable in most cases.

- Select the motor control mode (parameter **9904**).

- 1 (**VECTOR: SPEED**) is suitable in most cases.
- 2 (**VECTOR: TORQ**) is suitable for torque control applications.
- 3 (**SCALAR: FREQ**) is recommended
  - for multimotor drives when the number of the motors connected to the drive is variable
  - when the nominal motor current is less than 20% of the nominal current of the drive
  - when the drive is used for test purposes with no motor connected.
- 3 (**SCALAR: FREQ**) is not recommended for permanent magnet synchronous motors.

- Enter the motor data from the motor nameplate.

Asynchronous motor nameplate example:

| ABB Motors |    |                    |       |      |       |        |      |  |  | CE |  |
|------------|----|--------------------|-------|------|-------|--------|------|--|--|----|--|
| 3 ~ motor  |    | M2AA 200 MLA 4     |       |      |       |        |      |  |  |    |  |
|            |    | IEC 200 M/L 55     |       |      |       |        |      |  |  |    |  |
|            |    | No                 |       |      |       |        |      |  |  |    |  |
|            |    | Ins.cl. F          |       |      |       | IP 55  |      |  |  |    |  |
| V          | Hz | kW                 | r/min | A    | cos φ | IA/IN  | tE/s |  |  |    |  |
| 690 Y      | 50 | 30                 | 1475  | 32.5 | 0.83  |        |      |  |  |    |  |
| 400 D      | 50 | 30                 | 1475  | 56   | 0.83  |        |      |  |  |    |  |
| 660 Y      | 50 | 30                 | 1470  | 34   | 0.83  |        |      |  |  |    |  |
| 380 D      | 50 | 30                 | 1470  | 59   | 0.83  |        |      |  |  |    |  |
| 415 D      | 50 | 30                 | 1475  | 54   | 0.83  |        |      |  |  |    |  |
| 440 D      | 60 | 35                 | 1770  | 59   | 0.83  |        |      |  |  |    |  |
| Cat. no    |    | 3GAA 202 001 - ADA |       |      |       |        |      |  |  |    |  |
| 6312/C3    |    | 6210/C3            |       |      |       | 180 kg |      |  |  |    |  |
| IEC 34-1   |    |                    |       |      |       |        |      |  |  |    |  |

380 V  
supply  
voltage

REM **9903**  
PAR FWD

REM **1**  
PAR **SET** FWD

REM **2**  
PAR **SET** FWD




REM **9903**  
PAR FWD

REM **9902**  
PAR FWD

REM **9904**  
PAR FWD

**Note:** Set the motor data to exactly the same value as on the motor nameplate. For example, if the motor nominal speed is 1470 rpm on the nameplate, setting the value of parameter **9908 MOTOR NOM SPEED** to 1500 rpm results in the wrong operation of the drive.

Permanent magnet synchronous motor  
nameplate example:

|   |                               |   |      |
|---|-------------------------------|---|------|
| <b>ABB</b>  |                               | MS4836N4008E43C10   |      |
| Io/In   | 9.1/9.5 A                     |   | IP65 |
| Ip  | 27.8 A                        | Insulation class F  |      |
| To/Tn   | 10.5/10.5 Nm                  |  |      |
| Tp  | 31.5 Nm                       |   |      |
| Pn  | 3.3 kW                        |  |      |
| Fn  | 200 Hz                        |   |      |
| Nn  | 3000 r/min                    | C TS 4836   |      |
| Bemf @ Nn   | 208.7 V @ r/min               |   |      |
| Feedback  | RESOLVER                      |   |      |
| Brake   | Vdc                           | A   | Nm   |
|  |                               |   |      |
| S/N   | 6 8 8 4 7 1 8 4 A A 1 2 3 4 5 | Made in Japan   |      |
|   | 01/2007                       |   |      |

- motor nominal voltage (parameter [9905](#)).

For permanent magnet synchronous motors, enter the back emf voltage at nominal speed here. Otherwise use nominal voltage and perform ID run. If the voltage is given as voltage per rpm, eg, 60 V per 1000 rpm, the voltage for 3000 rpm nominal speed is  $3 \cdot 60 \text{ V} = 180 \text{ V}$ .

- nominal motor current (parameter [9906](#))

Allowed range:  $0.2 \dots 2.0 \cdot I_{2N} \text{ A}$

- motor nominal frequency (parameter [9907](#))

- motor nominal speed (parameter [9908](#))

- motor nominal power (parameter [9909](#))

|     |             |
|-----|-------------|
| REM | <b>9905</b> |
|     | PAR FWD     |

|     |             |
|-----|-------------|
| REM | <b>9906</b> |
|     | PAR FWD     |

|     |             |
|-----|-------------|
| REM | <b>9907</b> |
|     | PAR FWD     |

|     |             |
|-----|-------------|
| REM | <b>9908</b> |
|     | PAR FWD     |

|     |             |
|-----|-------------|
| REM | <b>9909</b> |
|     | PAR FWD     |





- Select the motor identification method (parameter **9910**).  
The default value 0 (**OFF/IDMAGN**) using the identification magnetization is suitable for most applications. It is applied in this basic start-up procedure. Note however that this requires that parameter **9904** is set to 1 (**VECTOR: SPEED**) or 2 (**VECTOR: TORQ**).



If your selection is 0 (**OFF/IDMAGN**), move to the next step.

Value 1 (**ON**) should be selected if:










- the operation point is near zero speed, and/or
- operation at torque range above the motor nominal torque over a wide speed range and without any measured speed feedback is required.

If you decide to perform the ID run (value 1 [**ON**]), continue by following the separate instructions given on page **71** in section **ID run procedure** and then return to step **DIRECTION OF THE MOTOR ROTATION** on page **66**.

### IDENTIFICATION MAGNETIZATION WITH ID RUN SELECTION 0 (**OFF/IDMAGN**)


- Press key  to switch to local control (LOC shown on the left).  
Press  to start the drive. The motor model is now calculated by magnetizing the motor for 10 to 15 s at zero speed.

### DIRECTION OF THE MOTOR ROTATION

- Check the direction of the motor rotation.
  - If the drive is in remote control (REM shown on the left), switch to local control by pressing .
  - To go to the Main menu, press  if the bottom line shows OUTPUT; otherwise press  repeatedly until you see MENU at the bottom.
  - Press keys / until you see "rEF" and press .
  - Increase the frequency reference from zero to a small value with key .
  - Press  to start the motor.
  - Check that the actual direction of the motor is the same as indicated on the display (FWD means forward and REV reverse).
  - Press  to stop the motor.



forward direction



reverse direction

To change the direction of the motor rotation:



- Invert the phases by changing the value of parameter **9914** to the opposite, ie, from 0 (**NO**) to 1 (**YES**), or vice versa.
- Verify your work by applying input power and repeating the check as described above.

LOC **9914**  
PAR FWD

### SPEED LIMITS AND ACCELERATION/DECCELERATION TIMES

- Set the minimum speed (parameter **2001**).
- Set the maximum speed (parameter **2002**).
- Set the acceleration time 1 (parameter **2202**).  
**Note:** Set also acceleration time 2 (parameter **2205**) if two acceleration times will be used in the application.
- Set the deceleration time 1 (parameter **2203**).  
**Note:** Set also deceleration time 2 (parameter **2206**) if two deceleration times will be used in the application.

LOC **2001**  
PAR FWD

LOC **2002**  
PAR FWD

LOC **2202**  
PAR FWD

LOC **2203**  
PAR FWD

### SAVING A USER MACRO AND FINAL CHECK

- The start-up is now completed. However, it might be useful at this stage to set the parameters required by your application and save the settings as a user macro as instructed in section **User macros** on page **119**.
- Check that the drive state is OK.  
**Basic control panel:** Check that there are no faults or alarms shown on the display.  
If you want to check the LEDs on the front of the drive, switch first to remote control (otherwise a fault is generated) before removing the panel and verifying that the red LED is not lit and the green LED is lit but not blinking.  
**Assistant control panel:** Check that there are no faults or alarms shown on the display and that the panel LED is green and does not blink.

LOC **9902**  
PAR FWD
















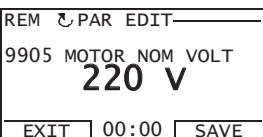
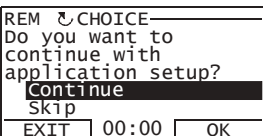
**The drive is now ready for use.**

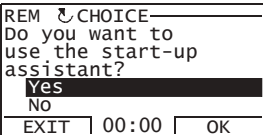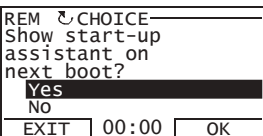





## ■ Performing a guided start-up


To be able to perform the guided start-up, you need the assistant control panel. Guided start-up is applicable to AC induction motors.

Before you start, ensure that you have the motor nameplate data on hand.






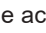

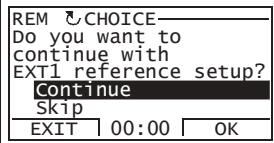
| POWER-UP  |   |
|---|---|
| <p><input type="checkbox"/> Apply input power. The control panel first asks if you want to use the Start-up assistant.</p> <ul style="list-style-type: none"> <li>Press  (when <b>Yes</b> is highlighted) to run the Start-up assistant.</li> <li>Press  if you do not want to run the Start-up assistant.</li> <li>Press key  to highlight <b>No</b> and then press  if you want to make the panel ask (or not ask) the question about running the Start-up assistant again the next time you switch on the power to the drive.</li> </ul> | <br><br>    |
| SELECTING THE LANGUAGE  |   |
| <p><input type="checkbox"/> If you decided to run the Start-up assistant, the display then asks you to select the language. Scroll to the desired language with keys   and press  to accept.</p> <p>If you press , the Start-up assistant is stopped.</p>   |    |
| STARTING THE GUIDED SET-UP  |   |
| <p><input type="checkbox"/> The Start-up assistant now guides you through the set-up tasks, starting with the motor set-up. Set the motor data to exactly the same value as on the motor nameplate.</p> <p>Scroll to the desired parameter value with keys   and press  to accept and continue with the Start-up assistant.</p> <p><b>Note:</b> At any time, if you press , the Start-up assistant is stopped and the display goes to the Output mode.</p>  | <br><br> |
| <p><input type="checkbox"/> The basic start-up is now completed. However, it might be useful at this stage to set the parameters required by your application and continue with the application set-up as suggested by the Start-up assistant.</p>  |   |






- Select the application macro according to which the control cables are connected.
- Continue with the application set-up. After completing a set-up task, the Start-up assistant suggests the next one.
- Press  (when **Continue** is highlighted) to continue with the suggested task.
  - Press key  to highlight **Skip** and then press  to move to the following task without doing the suggested task.
  - Press  to stop the Start-up assistant.



### DIRECTION OF THE MOTOR ROTATION

- Press  to switch to local control (LOC shown on the left).
  - If the drive is in remote control (REM shown on the status line), switch to local control by pressing .
  - If you are not in the Output mode, press  repeatedly until you get there.
  - Increase the frequency reference from zero to a small value with key .
  - Press  to start the motor.
  - Check that the actual direction of the motor is the same as indicated on the display ( means forward and  reverse).
  - Press  to stop the motor.
- To change the direction of the motor rotation:
- Invert the phases by changing the value of parameter **9914** to the opposite, ie, from 0 (**NO**) to 1 (**YES**), or vice versa.
  - Verify your work by applying input power and repeating the check as described above.

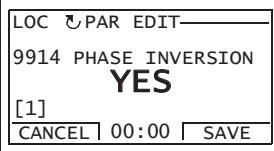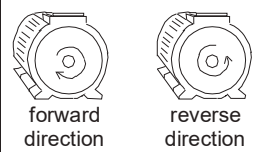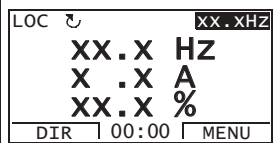

### FINAL CHECK

- After the whole set-up is completed, check that there are no faults or alarms shown on the display and the panel LED is green and does not blink.


**The drive is now ready for use.**

## Controlling the drive through the I/O interface

The table below instructs how to operate the drive through the digital and analog inputs when:

- the motor start-up is performed, and
- the default (standard) parameter settings are valid.

Displays of the basic control panel are shown as an example.

| PRELIMINARY SETTINGS  |   |     |                |        |     |     |                |        |     |
|---|---|-----|----------------|--------|-----|-----|----------------|--------|-----|
| <p>If you need to change the direction of rotation, check that parameter <b>1003 DIRECTION</b> is set to 3 (<b>REQUEST</b>).</p> <p>Ensure that the control connections are wired according to the connection diagram given for the ABB standard macro.</p> <p>Ensure that the drive is in remote control. Press key  to switch between remote and local control.</p> | <p>See section <a href="#">Default I/O connection diagram</a> on page 55.</p> <p>In remote control, the panel display shows text REM.</p>   |     |                |        |     |     |                |        |     |
| STARTING AND CONTROLLING THE SPEED OF THE MOTOR   |   |     |                |        |     |     |                |        |     |
| <p>Start by switching digital input DI1 on.</p> <p><u>Basic control panel</u>: Text FWD starts flashing fast and stops after the setpoint is reached</p> <p><u>Assistant control panel</u>: The arrow starts rotating. It is dotted until the setpoint is reached.</p> <p>Regulate the drive output frequency (motor speed) by adjusting the voltage of analog input AI1.</p>   | <table border="1"> <tr> <td>REM</td> <td><b>0.0</b> Hz</td> </tr> <tr> <td>OUTPUT</td> <td>FWD</td> </tr> </table><br><table border="1"> <tr> <td>REM</td> <td><b>50.0</b> Hz</td> </tr> <tr> <td>OUTPUT</td> <td>FWD</td> </tr> </table> | REM | <b>0.0</b> Hz  | OUTPUT | FWD | REM | <b>50.0</b> Hz | OUTPUT | FWD |
| REM   | <b>0.0</b> Hz   |     |                |        |     |     |                |        |     |
| OUTPUT  | FWD   |     |                |        |     |     |                |        |     |
| REM   | <b>50.0</b> Hz  |     |                |        |     |     |                |        |     |
| OUTPUT  | FWD   |     |                |        |     |     |                |        |     |
| CHANGING THE DIRECTION OF THE MOTOR ROTATION  |   |     |                |        |     |     |                |        |     |
| <p>Reverse direction: Switch digital input DI2 on.</p>  | <table border="1"> <tr> <td>REM</td> <td><b>50.0</b> Hz</td> </tr> <tr> <td>OUTPUT</td> <td>REV</td> </tr> </table>   | REM | <b>50.0</b> Hz | OUTPUT | REV |     |                |        |     |
| REM   | <b>50.0</b> Hz  |     |                |        |     |     |                |        |     |
| OUTPUT  | REV   |     |                |        |     |     |                |        |     |
| <p>Forward direction: Switch digital input DI2 off.</p>   | <table border="1"> <tr> <td>REM</td> <td><b>50.0</b> Hz</td> </tr> <tr> <td>OUTPUT</td> <td>FWD</td> </tr> </table>   | REM | <b>50.0</b> Hz | OUTPUT | FWD |     |                |        |     |
| REM   | <b>50.0</b> Hz  |     |                |        |     |     |                |        |     |
| OUTPUT  | FWD   |     |                |        |     |     |                |        |     |
| STOPPING THE MOTOR  |   |     |                |        |     |     |                |        |     |
| <p>Switch digital input DI1 off. The motor stops.</p> <p><u>Basic control panel</u>: Text FWD starts flashing slowly.</p> <p><u>Assistant control panel</u>: The arrow stops rotating.</p>  | <table border="1"> <tr> <td>REM</td> <td><b>0.0</b> Hz</td> </tr> <tr> <td>OUTPUT</td> <td>FWD</td> </tr> </table>  | REM | <b>0.0</b> Hz  | OUTPUT | FWD |     |                |        |     |
| REM   | <b>0.0</b> Hz   |     |                |        |     |     |                |        |     |
| OUTPUT  | FWD   |     |                |        |     |     |                |        |     |



## Performing the ID run

The drive estimates motor characteristics automatically when the drive is started for the first time and after any motor parameter (group [99 START-UP DATA](#)) is changed. This is valid when parameter [9910 ID RUN](#) has value 0 (*OFF/IDMAGN*).

In most applications there is no need to perform a separate ID run. The ID run should be selected if:

- vector control mode is used (parameter [9904](#) = 1 [*VECTOR: SPEED*] or 2 [*VECTOR: TORQ*]), and
- operation point is near zero speed and/or
- operation at torque range above the motor nominal torque, over a wide speed range, and without any measured speed feedback (ie, without a pulse encoder) is needed or
- permanent magnet synchronous motor is used and the back emf voltage is unknown.

**Note:** If motor parameters (group [99 START-UP DATA](#)) are changed after the ID run, it must be repeated.


### ■ ID run procedure

The general parameter setting procedure is not repeated here. For basic control panel, see page [76](#) and for assistant control panel, see page [86](#) in chapter [Control panels](#). The ID run cannot be performed without a control panel.

#### PRE-CHECK







**WARNING!** The motor will run at up to approximately 50...80% of the nominal speed during the ID run. The motor will rotate in the forward direction. **Ensure that it is safe to run the motor before performing the ID run!**

- De-couple the motor from the driven equipment.
- If parameter values (group [01 OPERATING DATA](#) to group [98 OPTIONS](#)) are changed before the ID run, check that the new settings meet the following conditions:
  - [2001 MINIMUM SPEED](#) < 0 rpm
  - [2002 MAXIMUM SPEED](#) > 80% of the motor rated speed
  - [2003 MAX CURRENT](#) >  $I_{2N}$
  - [2017 MAX TORQUE 1](#) > 50% or [2018 MAX TORQUE 2](#) > 50%, depending on which limit is in use according to parameter [2014 MAX TORQUE SEL](#).
- Check that the Run enable signal is on (parameter [1601](#)).
- Ensure that the panel is in local control (LOC shown at the top). Press key  to switch between local and remote control.







### ID RUN WITH THE BASIC CONTROL PANEL

- Change parameter **9910 ID RUN** to 1 (ON). Save the new setting by pressing .
- If you want to monitor actual values during the ID run, go to the Output mode by pressing  repeatedly until you get there.
- Press  to start the ID run. The panel keeps switching between the display that was shown when you started the run and the alarm display presented on the right.  
In general, it is recommended not to press any control panel keys during the ID run. However, you can stop the ID run at any time by pressing .
- After the ID run is completed, the alarm display is not shown any more.  
If the ID run fails, the fault display presented on the right is shown.

|        |                    |
|--------|--------------------|
| LOC    | <b>9910</b>        |
|        | PAR      FWD       |
| LOC    | <b>1</b>           |
|        | PAR <b>SET</b> FWD |
| LOC    | <b>0.0</b> Hz      |
| OUTPUT | FWD                |
| LOC    | <b>A2019</b>       |
|        | FWD                |
| LOC    | <b>F0011</b>       |
|        | FWD                |

### ID RUN WITH THE ASSISTANT CONTROL PANEL

- Change parameter **9910 ID RUN** to 1 (ON). Save the new setting by pressing .
- If you want to monitor actual values during the ID run, go to the Output mode by pressing  repeatedly until you get there.
- Press  to start the ID run. The panel keeps switching between the display that was shown when you started the run Run and the alarm display presented on the right.  
In general, it is recommended not to press any control panel keys during the ID run. However, you can stop the ID run at any time by pressing .


|                          |
|--------------------------|
| REM ↺ PAR EDIT           |
| 9910 ID RUN<br><b>ON</b> |
| [1]                      |
| CANCEL   00:00   SAVE    |

|                    |        |
|--------------------|--------|
| LOC ↺              | 50.0Hz |
| <b>0.0</b> HZ      |        |
| <b>0.0</b> A       |        |
| <b>0.0</b> %       |        |
| DIR   00:00   MENU |        |

|                   |
|-------------------|
| LOC ↺ ALARM       |
| <b>ALARM 2019</b> |
| ID RUN            |
| 00:00             |



- After the ID run is completed, the alarm display is not shown any more.  
If the ID run fails, the fault display presented on the right is shown.

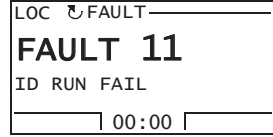





# 9

## Control panels

---

### What this chapter contains

The chapter describes the control panel keys, LED indicators and display fields. It also instructs in using the panel in control, monitoring and changing the settings.

### About control panels

Use a control panel to control the ACS355, read status data, and adjust parameters. The drive works with either of two different control panel types:

- Basic control panel – This panel (described in section [Basic control panel](#) on page [76](#)) provides basic tools for manual entry of parameter values.
  - Assistant control panel – This panel (described in section [Assistant control panel](#) on page [86](#)) includes pre-programmed assistants to automate the most common parameter setups. The panel provides language support. It is available with different language sets.
-

## Applicability

The manual is applicable to panels with the panel revisions and the panel firmware versions given in the table below.

| Panel type                     | Type code | Panel revision | Panel firmware version |
|--------------------------------|-----------|----------------|------------------------|
| Basic control panel            | ACS-CP-C  | M or later     | 1.13 or later          |
| Assistant control panel        | ACS-CP-A  | F or later     | 2.04 or later          |
| Assistant control panel (Asia) | ACS-CP-D  | Q or later     | 2.04 or later          |

To find out the panel revision, see the label on the back of the panel. An example label and explanation of the label contents are shown below.



|   |  |
|---|--|
| 1 | Panel type code  |
| 2 | Serial number of format MYYWWRXXXX, where<br>M: Manufacturer<br>YY: 09, 10, 11, ..., for 2009, 2010, 2011, ...<br>WW: 01, 02, 03, ... for week 1, week 2, week 3, ...<br>R: A, B, C, ... for panel revision<br>XXXX: Integer starting every week from 0001 |
| 3 | RoHS mark (the label of your drive shows the valid markings)   |

To find out the panel firmware version of your assistant control panel, see page [90](#).  
For the basic control panel, see page [79](#).

See parameter [9901 LANGUAGE](#) to find out the languages supported by the different assistant control panels.

## Basic control panel

### ■ Features


The basic control panel features:

- numeric control panel with an LCD display
- copy function – parameters can be copied to the control panel memory for later transfer to other drives or for backup of a particular system.




## Overview


The following table summarizes the key functions and displays on the basic control panel.
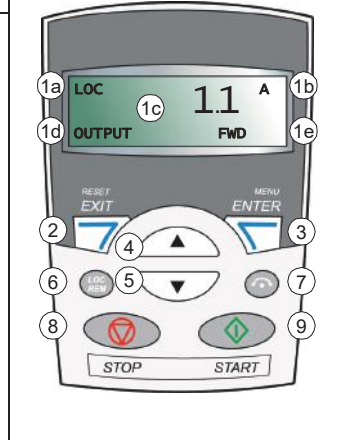
| No. | Use   |
|-----|---|
| 1   | <p>LCD display – Divided into five areas:</p> <ol style="list-style-type: none"> <li>Upper left – Control location:<br/>LOC: drive control is local, that is, from the control panel<br/>REM: drive control is remote, such as the drive I/O or fieldbus.</li> <li>Upper right – Unit of the displayed value.</li> <li>Center – Variable; in general, shows parameter and signal values, menus or lists. Shows also fault and alarm codes.</li> <li>Lower left and center – Panel operation state:<br/>OUTPUT: Output mode<br/>PAR: Parameter mode<br/>MENU: Main menu.<br/><b>FAULT</b>: Fault mode.</li> <li>Lower right – Indicators:<br/>FWD (forward) / REV (reverse): direction of the motor rotation<br/>Flashing slowly: stopped<br/>Flashing rapidly: running, not at setpoint<br/>Steady: running, at setpoint<br/><b>SET</b>: Displayed value can be modified (in the Parameter and Reference modes).</li> </ol> |
| 2   | RESET/EXIT – Exits to the next higher menu level without saving changed values. Resets faults in the Output and Fault modes.  |
| 3   | MENU/ENTER – Enters deeper into menu level. In the Parameter mode, saves the displayed value as the new setting.  |
| 4   | Up – <ul style="list-style-type: none"> <li>Scrolls up through a menu or list.</li> <li>Increases a value if a parameter is selected.</li> <li>Increases the reference value in the Reference mode.</li> <li>Holding the key down changes the value faster.</li> </ul>  |
| 5   | Down – <ul style="list-style-type: none"> <li>Scrolls down through a menu or list.</li> <li>Decreases a value if a parameter is selected.</li> <li>Decreases the reference value in the Reference mode.</li> <li>Holding the key down changes the value faster.</li> </ul>  |
| 6   | LOC/REM – Changes between local and remote control of the drive.  |
| 7   | DIR – Changes the direction of the motor rotation.  |
| 8   | STOP – Stops the drive in local control.  |
| 9   | START – Starts the drive in local control.  |



## ■ Operation

You operate the control panel with the help of menus and keys. You select an option, eg, operation mode or parameter, by scrolling the  and  arrow keys until the option is visible in the display and then pressing the  key.

With the  key, you return to the previous operation level without saving the made changes.

The basic control panel has five panel modes: *Output mode*, *Reference mode*, *Parameter mode*, *Copy mode* and Fault mode. The operation in the first four modes is described in this chapter. When a fault or alarm occurs, the panel goes automatically to the Fault mode showing the fault or alarm code. You can reset the fault or alarm in the Output or Fault mode (see chapter *Fault tracing* on page 351).

After the power is switched on, the panel is in the Output mode, where you can start, stop, change the direction, switch between local and remote control and monitor up to three actual values (one at a time). To do other tasks, go first to the Main menu and select the appropriate mode.




|        |         |
|--------|---------|
| REM    | 49.1 Hz |
| OUTPUT | FWD     |
| REM    | PAR     |
| MENU   | FWD     |

### How to do common tasks

The table below lists common tasks, the mode in which you can perform them and the page number where the steps to do the task are described in detail.





| Task  | Mode          | Page |
|---|---------------|------|
| How to find out the panel firmware version                    | At power up   | 79   |
| How to switch between local and remote control                | Any           | 79   |
| How to start and stop the drive                               | Any           | 79   |
| How to change the direction of the motor rotation             | Any           | 80   |
| How to browse the monitored signals                           | Output        | 80   |
| How to set the speed, frequency or torque reference           | Reference     | 81   |
| How to change the value of a parameter                        | Parameter     | 82   |
| How to select the monitored signals                           | Parameter     | 83   |
| How to reset faults and alarms                                | Output, Fault | 351  |
| How to copy parameters from the drive to the control panel    | Copy          | 85   |
| How to restore parameters from the control panel to the drive | Copy          | 85   |

## How to find out the panel firmware version

| Step | Action   | Display   |
|------|--|---|
| 1.   | If the power is switched on, switch it off.  |   |
| 2.   | <p>Keep key  pressed down while you switch on the power and read the panel firmware version shown on the display.</p> <p>When you release the  key, the panel goes to the Output mode.</p> |  |



## How to start, stop and switch between local and remote control

You can start, stop and switch between local and remote control in any mode. To be able to start or stop the drive, the drive must be in local control.

| Step | Action  | Display  |
|------|---|--|
| 1.   | <ul style="list-style-type: none"> <li>To switch between remote control (REM shown on the left) and local control (LOC shown on the left), press .</li> </ul> <p><b>Note:</b> Switching to local control can be disabled with parameter <b>1606 LOCAL LOCK</b>.</p> <p>After pressing the key, the display briefly shows message “LoC” or “rE”, as appropriate, before returning to the previous display.</p> <p>The very first time the drive is powered up, it is in remote control (REM) and controlled through the drive I/O terminals. To switch to local control (LOC) and control the drive using the control panel, press . The result depends on how long you press the key:</p> <ul style="list-style-type: none"> <li>If you release the key immediately (the display flashes “LoC”), the drive stops. Set the local control reference as instructed on page <b>81</b>.</li> <li>If you press the key for about two seconds (release when the display changes from “LoC” to “LoC r”), the drive continues as before. The drive copies the current remote values for the run/stop status and the reference, and uses them as the initial local control settings.</li> </ul> <ul style="list-style-type: none"> <li>To stop the drive in local control, press .</li> <li>To start the drive in local control, press .</li> </ul> | <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> <p>LOC <span style="float: right;">49.1 Hz</span></p> <p>OUTPUT <span style="float: right;">FWD</span></p> </div> <div style="border: 1px solid black; padding: 5px;"> <p>LOC <span style="float: right;">LoC</span></p> <p style="text-align: right;">FWD</p> </div> <p>Text FWD or REV on the bottom line starts flashing slowly.</p> <p>Text FWD or REV on the bottom line starts flashing rapidly. It stops flashing when the drive reaches the setpoint.</p> |

## How to change the direction of the motor rotation

You can change the direction of the motor rotation in any mode.

| Step   | Action   | Display   |     |                |        |     |
|--------|--|---|-----|----------------|--------|-----|
| 1.     | If the drive is in remote control (REM shown on the left), switch to local control by pressing  . The display briefly shows message "LoC" before returning to the previous display.                                   | <table border="1"> <tr> <td>LOC</td> <td><b>49.1</b> Hz</td> </tr> <tr> <td>OUTPUT</td> <td>FWD</td> </tr> </table> | LOC | <b>49.1</b> Hz | OUTPUT | FWD |
| LOC    | <b>49.1</b> Hz   |   |     |                |        |     |
| OUTPUT | FWD  |   |     |                |        |     |
| 2.     | To change the direction from forward (FWD shown at the bottom) to reverse (REV shown at the bottom), or vice versa, press  .<br><br><b>Note:</b> Parameter <b>1003 DIRECTION</b> must be set to 3 ( <b>REQUEST</b> ). | <table border="1"> <tr> <td>LOC</td> <td><b>49.1</b> Hz</td> </tr> <tr> <td>OUTPUT</td> <td>REV</td> </tr> </table> | LOC | <b>49.1</b> Hz | OUTPUT | REV |
| LOC    | <b>49.1</b> Hz   |   |     |                |        |     |
| OUTPUT | REV  |   |     |                |        |     |

## ■ Output mode

In the Output mode, you can:



- monitor actual values of up to three group **01 OPERATING DATA** signals, one signal at a time
- start, stop, change the direction and switch between local and remote control.

You get to the Output mode by pressing  until the display shows text OUTPUT at the bottom.

The display shows the value of one group **01 OPERATING DATA** signal. The unit is shown on the right. Page **83** tells how to select up to three signals to be monitored in the Output mode. The table below shows how to view them one at a time.

|        |                |
|--------|----------------|
| REM    | <b>49.1</b> Hz |
| OUTPUT | FWD            |

## How to browse the monitored signals









| Step   | Action  | Display  |     |                |        |     |     |              |        |     |     |               |        |     |
|--------|---|--|-----|----------------|--------|-----|-----|--------------|--------|-----|-----|---------------|--------|-----|
| 1.     | If more than one signals have been selected to be monitored (see page <b>83</b> ), you can browse them in the Output mode.<br><br>To browse the signals forward, press key  repeatedly. To browse them backward, press key  repeatedly. | <table border="1"> <tr> <td>REM</td> <td><b>49.1</b> Hz</td> </tr> <tr> <td>OUTPUT</td> <td>FWD</td> </tr> </table><br><table border="1"> <tr> <td>REM</td> <td><b>0.5</b> A</td> </tr> <tr> <td>OUTPUT</td> <td>FWD</td> </tr> </table><br><table border="1"> <tr> <td>REM</td> <td><b>10.7</b> %</td> </tr> <tr> <td>OUTPUT</td> <td>FWD</td> </tr> </table> | REM | <b>49.1</b> Hz | OUTPUT | FWD | REM | <b>0.5</b> A | OUTPUT | FWD | REM | <b>10.7</b> % | OUTPUT | FWD |
| REM    | <b>49.1</b> Hz  |  |     |                |        |     |     |              |        |     |     |               |        |     |
| OUTPUT | FWD   |  |     |                |        |     |     |              |        |     |     |               |        |     |
| REM    | <b>0.5</b> A  |  |     |                |        |     |     |              |        |     |     |               |        |     |
| OUTPUT | FWD   |  |     |                |        |     |     |              |        |     |     |               |        |     |
| REM    | <b>10.7</b> %   |  |     |                |        |     |     |              |        |     |     |               |        |     |
| OUTPUT | FWD   |  |     |                |        |     |     |              |        |     |     |               |        |     |

## ■ Reference mode

In the Reference mode, you can:

- set the speed, frequency or torque reference
- start, stop, change the direction and switch between local and remote control.

### How to set the speed, frequency or torque reference

| Step | Action  | Display   |
|------|---|---|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing  repeatedly until you see MENU at the bottom.   | <div style="border: 1px solid black; padding: 5px;"> <p>REM <span style="font-size: 2em; font-weight: bold;">PAR</span></p> <p>MENU <span style="float: right;">FWD</span></p> </div>   |
| 2.   | If the drive is in remote control (REM shown on the left), switch to local control by pressing  . The display briefly shows "LoC" before switching to local control.<br><b>Note:</b> With group <b>11 REFERENCE SELECT</b> , you can allow the reference modification in remote control (REM).   | <div style="border: 1px solid black; padding: 5px;"> <p>LOC <span style="font-size: 2em; font-weight: bold;">PAR</span></p> <p>MENU <span style="float: right;">FWD</span></p> </div>   |
| 3.   | If the panel is not in the Reference mode ("rEF" not visible), press key  or  until you see "rEF" and then press  . Now the display shows the current reference value with <b>SET</b> under the value.                     | <div style="border: 1px solid black; padding: 5px;"> <p>LOC <span style="font-size: 2em; font-weight: bold;">rEF</span></p> <p>MENU <span style="float: right;">FWD</span></p> </div> <div style="border: 1px solid black; padding: 5px; margin-top: 5px;"> <p>LOC <span style="font-size: 2em; font-weight: bold;">49.1</span> Hz</p> <p><b>SET</b> FWD</p> </div> |
| 4.   | <ul style="list-style-type: none"> <li>• To increase the reference value, press .</li> <li>• To decrease the reference value, press .</li> </ul> <p>The value changes immediately when you press the key. It is stored in the drive permanent memory and restored automatically after power switch-off.</p> | <div style="border: 1px solid black; padding: 5px;"> <p>LOC <span style="font-size: 2em; font-weight: bold;">50.0</span> Hz</p> <p><b>SET</b> FWD</p> </div>  |




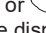



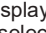











## ■ Parameter mode

In the Parameter mode, you can:

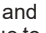- view and change parameter values
- select and modify the signals shown in the Output mode
- start, stop, change the direction and switch between local and remote control.

### How to select a parameter and change its value

| Step | Action   | Display   |
|------|--|---|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing  repeatedly until you see MENU at the bottom.  | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">rEF</span><br/>                     MENU FWD                 </div>         |
| 2.   | If the panel is not in the Parameter mode ("PAR" not visible), press key  or  until you see "PAR" and then press  . The display shows the number of one of the parameter groups.  | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">PAR</span><br/>                     MENU FWD                 </div>         |
|      |  | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">-01-</span><br/>                     PAR FWD                 </div>         |
| 3.   | Use keys  and  to find the desired parameter group.  | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">-11-</span><br/>                     PAR FWD                 </div>         |
| 4.   | Press  . The display shows one of the parameters in the selected group.   | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">1101</span><br/>                     PAR FWD                 </div>         |
| 5.   | Use keys  and  to find the desired parameter.  | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">1103</span><br/>                     PAR FWD                 </div>         |
| 6.   | Press and hold  for about two seconds until the display shows the value of the parameter with <b>SET</b> underneath indicating that changing of the value is now possible.<br><b>Note:</b> When <b>SET</b> is visible, pressing keys  and  simultaneously changes the displayed value to the default value of the parameter.  | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">1</span><br/>                     PAR <b>SET</b> FWD                 </div> |
|      |  | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">2</span><br/>                     PAR <b>SET</b> FWD                 </div> |
| 7.   | Use keys  and  to select the parameter value. When you have changed the parameter value, <b>SET</b> starts flashing.<br><br>• To save the displayed parameter value, press  .<br>• To cancel the new value and keep the original, press  . | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">1103</span><br/>                     PAR FWD                 </div>         |
|      |  | <div style="border: 1px solid black; padding: 5px; text-align: center;">                     LOC<br/> <span style="font-size: 2em;">1103</span><br/>                     PAR FWD                 </div>         |

## How to select the monitored signals

| Step | Action   | Display   |
|------|--|---|
| 1.   | <p>You can select which signals are monitored in the Output mode and how they are displayed with group <b>34 PANEL DISPLAY</b> parameters. See page <b>82</b> for detailed instructions on changing parameter values. By default, the display shows three signals.</p> <p>Signal 1: <b>0102 SPEED</b> for macros 3-wire, Alternate, Motor potentiometer, Hand/Auto and PID control;<br/><b>0103 OUTPUT FREQ</b> for macros ABB standard and Torque control<br/>Signal 2: <b>0104 CURRENT</b><br/>Signal 3: <b>0105 TORQUE</b>.</p> <p>To change the default signals, select up to three signals from group <b>01 OPERATING DATA</b> to be shown.</p> <p>Signal 1: Change the value of parameter <b>3401 SIGNAL1 PARAM</b> to the index of the signal parameter in group <b>01 OPERATING DATA</b> (= number of the parameter without the leading zero), eg, 105 means parameter <b>0105 TORQUE</b>. Value 100 means that no signal is displayed.</p> <p>Repeat for signals 2 (<b>3408 SIGNAL2 PARAM</b>) and 3 (<b>3415 SIGNAL3 PARAM</b>). For example, if <b>3401 = 0</b> and <b>3415 = 0</b>, browsing is disabled and only the signal specified by <b>3408</b> appears in the display. If all three parameters are set to 0, ie, no signals are selected for monitoring, the panel displays text "n.A".</p> | <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">                     LOC <span style="float: right; font-size: 2em;"><b>103</b></span><br/>                     PAR <b>SET</b> FWD                 </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">                     LOC <span style="float: right; font-size: 2em;"><b>104</b></span><br/>                     PAR <b>SET</b> FWD                 </div> <div style="border: 1px solid black; padding: 5px;">                     LOC <span style="float: right; font-size: 2em;"><b>105</b></span><br/>                     PAR <b>SET</b> FWD                 </div> |
| 2.   | <p>Specify the decimal point location, or use the decimal point location and unit of the source signal (setting 9 <b>[DIRECT]</b>). Bar graphs are not available for basic control panel. For details, see parameter <b>3404</b>.</p> <p>Signal 1: parameter <b>3404 OUTPUT1 DSP FORM</b><br/>Signal 2: parameter <b>3411 OUTPUT2 DSP FORM</b><br/>Signal 3: parameter <b>3418 OUTPUT3 DSP FORM</b>.</p>   | <div style="border: 1px solid black; padding: 5px;">                     LOC <span style="float: right; font-size: 2em;"><b>9</b></span><br/>                     PAR <b>SET</b> FWD                 </div>   |
| 3.   | <p>Select the units to be displayed for the signals. This has no effect if parameter <b>3404/3411/3418</b> is set to 9 (<b>DIRECT</b>). For details, see parameter <b>3405</b>.</p> <p>Signal 1: parameter <b>3405 OUTPUT1 UNIT</b><br/>Signal 2: parameter <b>3412 OUTPUT2 UNIT</b><br/>Signal 3: parameter <b>3419 OUTPUT3 UNIT</b>.</p>   | <div style="border: 1px solid black; padding: 5px;">                     LOC <span style="float: right; font-size: 2em;"><b>3</b></span><br/>                     PAR <b>SET</b> FWD                 </div>   |

| Step | Action   | Display   |
|------|--|---|
| 4.   | <p>Select the scalings for the signals by specifying the minimum and maximum display values. This has no effect if parameter <a href="#">3404/3411/3418</a> is set to 9 (<i>DIRECT</i>). For details, see parameters <a href="#">3406</a> and <a href="#">3407</a>.</p> <p>Signal 1: parameters <a href="#">3406 OUTPUT1 MIN</a> and <a href="#">3407 OUTPUT1 MAX</a><br/>                     Signal 2: parameters <a href="#">3413 OUTPUT2 MIN</a> and <a href="#">3414 OUTPUT2 MAX</a><br/>                     Signal 3: parameters <a href="#">3420 OUTPUT3 MIN</a> and <a href="#">3421 OUTPUT3 MAX</a>.</p> | <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">                     LOC <span style="float: right; font-size: 2em;">0.0</span> Hz<br/>                     PAR <span style="border: 1px solid black; padding: 2px;">SET</span> FWD                 </div> <div style="border: 1px solid black; padding: 5px;">                     LOC <span style="float: right; font-size: 2em;">500.0</span> Hz<br/>                     PAR <span style="border: 1px solid black; padding: 2px;">SET</span> FWD                 </div> |

## ■ Copy mode

The basic control panel can store a full set of drive parameters and up to three user sets of drive parameters to the control panel. Uploading and downloading can be performed in local control. The control panel memory is non-volatile.

In the Copy mode, you can do the following:

- Copy all parameters from the drive to the control panel (uL – Upload). This includes all defined user sets of parameters and internal (not adjustable by the user) parameters such as those created by the ID run.
- Restore the full parameter set from the control panel to the drive (dL A – Download all). This writes all parameters, including the internal non-user-adjustable motor parameters, to the drive. It does not include the user sets of parameters.

**Note:** Only use this function to restore a drive, or to transfer parameters to systems that are identical to the original system.

- Copy a partial parameter set from the control panel to a drive (dL P – Download partial). The partial set does not include user sets, internal motor parameters, parameters [9905...9909](#), [1605](#), [1607](#), [5201](#), nor any group [51 EXT COMM MODULE](#) and [53 EFB PROTOCOL](#) parameters.

The source and target drives and their motor sizes do not need to be the same.













- Copy user set 1 parameters from the control panel to the drive (dL u1 – Download user set 1). A user set includes group [99 START-UP DATA](#) parameters and the internal motor parameters.

The function is only shown on the menu when user set 1 has been first saved using parameter [9902 APPLIC MACRO](#) (see section [User macros](#) on page [119](#)) and then uploaded to panel.

- Copy user set 2 parameters from the control panel to the drive (dL u2 – Download user set 2). As dL u1 – Download user set 1 above.
- Copy user set 3 parameters from the control panel to the drive (dL u3 – Download user set 2). As dL u1 – Download user set 1 above.
- Start, stop, change the direction and switch between local and remote control.

## How to upload and download parameters

For the upload and download functions available, see above. Note that the drive has to be in local control for uploading and downloading.

| Step | Action   | Display  |
|------|--|--|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing  repeatedly until you see MENU at the bottom. – If REM is shown on the left, press first  to switch to local control. | <div style="border: 1px solid black; padding: 5px;">                     LOC<br/> <div style="text-align: center; font-size: 2em; font-weight: bold;">PAR</div>                     MENU <span style="float: right;">FWD</span> </div>   |
| 2.   | If the panel is not in the Copy mode (“CoPY” not visible), press key  or  until you see “CoPY”.<br><br>Press  .   | <div style="border: 1px solid black; padding: 5px;">                     LOC<br/> <div style="text-align: center; font-size: 2em; font-weight: bold;">CoPY</div>                     MENU <span style="float: right;">FWD</span> </div> <div style="border: 1px solid black; padding: 5px; margin-top: 5px;">                     LOC<br/> <div style="text-align: center; font-size: 2em; font-weight: bold;">uL</div>                     MENU <span style="float: right;">FWD</span> </div> |
| 3.   | To upload all parameters (including user sets) from the drive to the control panel, step to “uL” with keys  and  .   | <div style="border: 1px solid black; padding: 5px;">                     LOC<br/> <div style="text-align: center; font-size: 2em; font-weight: bold;">uL</div>                     MENU <span style="float: right;">FWD</span> </div>  |
|      | Press  . During the transfer, the display shows the transfer status as a percentage of completion.  | <div style="border: 1px solid black; padding: 5px;">                     LOC<br/> <div style="text-align: center; font-size: 2em; font-weight: bold;">uL 50 %</div>                     MENU <span style="float: right;">FWD</span> </div>   |
|      | To perform downloads, step to the appropriate operation (here “dL A”, Download all, is used as an example) with keys  and  .   | <div style="border: 1px solid black; padding: 5px;">                     LOC<br/> <div style="text-align: center; font-size: 2em; font-weight: bold;">dL A</div>                     MENU <span style="float: right;">FWD</span> </div>  |
|      | Press  . During the transfer, the display shows the transfer status as a percentage of completion.  | <div style="border: 1px solid black; padding: 5px;">                     LOC<br/> <div style="text-align: center; font-size: 2em; font-weight: bold;">dL 50 %</div>                     MENU <span style="float: right;">FWD</span> </div>   |

### ■ Basic control panel alarm codes

In addition to the faults and alarms generated by the drive (see chapter [Fault tracing](#) on page 351), the basic control panel indicates control panel alarms with a code of form A5xxx. See section [Alarms generated by the basic control panel](#) on page 356 for a list of the alarm codes and descriptions.

## Assistant control panel

### ■ Features


The assistant control panel features:

- alphanumeric control panel with an LCD display
  - language selection for the display
  - Start-up assistant to ease drive commissioning
  - copy function – parameters can be copied to the control panel memory for later transfer to other drives or for backup of a particular system.
  - context-sensitive help
  - real time clock.
-

## Overview



The following table summarizes the key functions and displays on the assistant control panel.

| No. | Use   |
|-----|---|
| 1   | Status LED – Green for normal operation. If LED is flashing, or red, see section <a href="#">LEDs</a> on page 374.  |
| 2   | LCD display – Divided into three main areas:<br>a. Status line – variable, depending on the mode of operation, see section <a href="#">Status line</a> on page 88.<br>b. Center – variable; in general, shows signal and parameter values, menus or lists. Shows also faults and alarms.<br>c. Bottom line – shows current functions of the two soft keys and, if enabled, the clock display. |
| 3   | Soft key 1 – Function depends on the context. The text in the lower left corner of the LCD display indicates the function.  |
| 4   | Soft key 2 – Function depends on the context. The text in the lower right corner of the LCD display indicates the function.   |
| 5   | Up –<br>• Scrolls up through a menu or list displayed in the center of the LCD display.<br>• Increments a value if a parameter is selected.<br>• Increments the reference value if the upper right corner is highlighted.<br>Holding the key down changes the value faster.   |
| 6   | Down –<br>• Scrolls down through a menu or list displayed in the center of the LCD display.<br>• Decrements a value if a parameter is selected.<br>• Decrements the reference value if the upper right corner is highlighted.<br>Holding the key down changes the value faster.   |
| 7   | LOC/REM – Changes between local and remote control of the drive.  |
| 8   | Help – Displays context-sensitive information when the key is pressed. The information displayed describes the item currently highlighted in the center of the display.   |
| 9   | STOP – Stops the drive in local control.  |
| 10  | START – Starts the drive in local control.  |

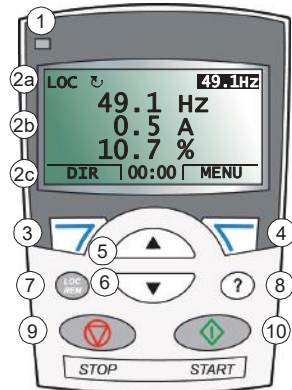

## Status line





The top line of the LCD display shows the basic status information of the drive.



| No. | Field  | Alternatives            | Significance   |
|-----|--|-------------------------|--|
| 1   | Control location                               | LOC                     | Drive control is local, that is, from the control panel.   |
|     |  | REM                     | Drive control is remote, such as the drive I/O or fieldbus.  |
| 2   | State  | ↻                       | Forward shaft direction  |
|     |  | ↺                       | Reverse shaft direction  |
|     |  | Rotating arrow          | Drive is running at setpoint.  |
|     |  | Dotted rotating arrow   | Drive is running but not at setpoint.  |
|     |  | Stationary arrow        | Drive is stopped.  |
|     |  | Dotted stationary arrow | Start command is present, but the motor is not running, eg, because start enable is missing.   |
| 3   | Panel operation mode                           |                         | <ul style="list-style-type: none"> <li>Name of the current mode</li> <li>Name of the list or menu shown</li> <li>Name of the operation state, eg, PAR EDIT.</li> </ul> |
| 4   | Reference value or number of the selected item |                         | <ul style="list-style-type: none"> <li>Reference value in the Output mode</li> <li>Number of the highlighted item, eg, mode, parameter group or fault.</li> </ul>      |

## ■ Operation

You operate the control panel with menus and keys. The keys include two context-sensitive soft keys, whose current function is indicated by the text shown in the display above each key.

You select an option, eg, operation mode or parameter, by scrolling the  and  arrow keys until the option is highlighted (in reverse video) and then pressing the relevant soft key. With the right soft key  you usually enter a mode, accept an option or save the changes. The left soft key  is used to cancel the made changes and return to the previous operation level.

The assistant control panel has nine panel modes: *Output mode*, *Parameter mode*, *Assistants mode*, *Changed parameters mode*, *Fault logger mode*, *Time and date mode*, *Parameter backup mode*, *I/O settings mode* and *Fault mode*. The operation in the first eight modes is described in this chapter. When a fault or alarm occurs, the panel goes automatically to the *Fault mode* showing the fault or alarm. You can reset it in the *Output* or *Fault mode* (see chapter *Fault tracing* on page 351).

Initially, the panel is in the Output mode, where you can start, stop, change the direction, switch between local and remote control, modify the reference value and monitor up to three actual values.

|     |       |         |
|-----|-------|---------|
| LOC | ↺     | 49.1 HZ |
|     |       | 0.5 A   |
|     |       | 10.7 %  |
| DIR | 00:00 | MENU    |

To do other tasks, go first to the Main menu and select the appropriate mode on the menu. The status line (see section *Status line* on page 88) shows the name of the current menu, mode, item or state.

|                    |       |           |   |
|--------------------|-------|-----------|---|
| LOC                | ↺     | MAIN MENU | 1 |
| <b>PARAMETERS</b>  |       |           |   |
| <b>ASSISTANTS</b>  |       |           |   |
| <b>CHANGED PAR</b> |       |           |   |
| EXIT               | 00:00 | ENTER     |   |





### How to do common tasks

The table below lists common tasks, the mode in which you can perform them and the page number where the steps to do the task are described in detail.



| Task  | Mode               | Page |
|---|--------------------|------|
| How to get help   | Any                | 90   |
| How to find out the panel version   | At power up        | 90   |
| How to adjust the display contrast  | Output             | 93   |
| How to switch between local and remote control  | Any                | 91   |
| How to start and stop the drive   | Any                | 92   |
| How to change the direction of the motor rotation   | Output             | 92   |
| How to set the speed, frequency or torque reference   | Output             | 93   |
| How to change the value of a parameter  | Parameters         | 94   |
| How to select the monitored signals   | Parameters         | 95   |
| How to do guided tasks (specification of related parameter sets) with assistants  | Assistants         | 96   |
| How to view and edit changed parameters   | Changed parameters | 98   |
| How to view faults  | Fault logger       | 99   |
| How to reset faults and alarms  | Output, Fault      | 351  |
| How to show/hide the clock, change date and time formats, set the clock and enable/disable automatic clock transitions according to the daylight saving changes | Time and date      | 100  |
| How to copy parameters from the drive to the control panel  | Parameter backup   | 103  |
| How to restore parameters from the control panel to the drive   | Parameter backup   | 103  |
| How to view backup information  | Parameter backup   | 104  |
| How to edit and change parameter settings related to I/O terminals  | I/O settings       | 105  |



## How to get help









| Step | Action   | Display   |
|------|--|---|
| 1.   | Press  to read the context-sensitive help text for the item that is highlighted.<br><br>If help text exists for the item, it is shown on the display. | <pre>LOC  ↵ PAR GROUPS—10 01 OPERATING DATA 03 FB ACTUAL SIGNALS 04 FAULT HISTORY 10 START/STOP/DIR 11 REFERENCE SELECT EXIT   00:00   SEL</pre><br><pre>LOC  ↵ HELP— This group defines external sources (EXT1 and EXT2) for commands that enable start, stop and EXIT   00:00  </pre> |
| 2.   | If the whole text is not visible, scroll the lines with keys  and  . | <pre>LOC  ↵ HELP— external sources (EXT1 and EXT2) for commands that enable start, stop and direction changes. EXIT   00:00  </pre>   |
| 3.   | After reading the text, return to the previous display by pressing  .   | <pre>LOC  ↵ PAR GROUPS—10 01 OPERATING DATA 03 FB ACTUAL SIGNALS 04 FAULT HISTORY 10 START/STOP/DIR 11 REFERENCE SELECT EXIT   00:00   SEL</pre>  |

## How to find out the panel version

| Step | Action   | Display   |
|------|--|---|
| 1.   | If the power is switched on, switch it off.  |   |
| 2.   | Keep key  pressed down while you switch on the power and read the information. The display shows the following panel information:<br>Panel SW: panel firmware version<br>ROM CRC: panel ROM check sum<br>Flash Rev: flash content version<br>Flash content comment.<br>When you release the  key, the panel goes to the Output mode. | <pre>PANEL VERSION INFO Panel SW:      x.xx Rom CRC:      xxxxxxxxxx Flash Rev:     x.xx xxxxxxxxxxxxxxxxxxxx</pre> |

## How to start, stop and switch between local and remote control

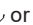
You can start, stop and switch between local and remote control in any mode. To be able to start or stop the drive, the drive must be in local control.
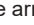
| Step | Action   | Display   |
|------|--|---|
| 1.   | <ul style="list-style-type: none"> <li>To switch between remote control (REM shown on the status line) and local control (LOC shown on the status line), press .</li> </ul> <p><b>Note:</b> Switching to local control can be disabled with parameter <b>1606 LOCAL LOCK</b>.</p> <p>The very first time the drive is powered up, it is in remote control (REM) and controlled through the drive I/O terminals. To switch to local control (LOC) and control the drive using the control panel, press .</p> <p>The result depends on how long you press the key:</p> <ul style="list-style-type: none"> <li>If you release the key immediately (the display flashes “Switching to the local control mode”), the drive stops. Set the local control reference as instructed on page <a href="#">93</a>.</li> <li>If you press the key for about two seconds, the drive continues as before. The drive copies the current remote values for the run/stop status and the reference, and uses them as the initial local control settings.</li> </ul> <ul style="list-style-type: none"> <li>To stop the drive in local control, press .</li> <li>To start the drive in local control, press .</li> </ul> | <div data-bbox="762 284 1025 421" style="border: 1px solid black; padding: 5px;"> <p>LOC MESSAGE<br/>Switching to the<br/>local control mode.</p> <p style="text-align: center;">00:00</p> </div> <p>The arrow ( or ) on the status line stops rotating.</p> <p>The arrow ( or ) on the status line starts rotating. It is dotted until the drive reaches the setpoint.</p> |



## Output mode

In the Output mode, you can:

- monitor actual values of up to three signals in group **01 OPERATING DATA**
- change the direction of the motor rotation
- set the speed, frequency or torque reference
- adjust the display contrast
- start, stop, change the direction and switch between local and remote control.





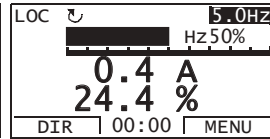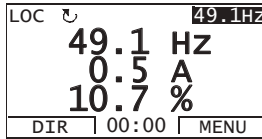



You get to the Output mode by pressing  repeatedly.

The top right corner of the display shows the reference value. The center can be configured to show up to three signal values or bar graphs. If just one or two signals are




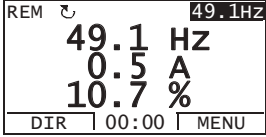

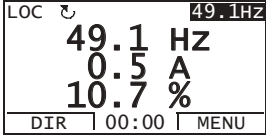



selected for display, the number and name of each displayed signal are shown in addition to the value or bar graph. See page 95 for instructions on selecting and modifying the monitored signals.

## How to change the direction of the motor rotation


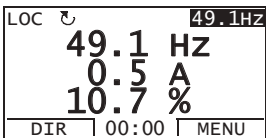





| Step | Action  | Display  |
|------|---|--|
| 1.   | If you are not in the Output mode, press  repeatedly until you get there.  | REM  49.1Hz<br>49.1 Hz<br>0.5 A<br>10.7 %<br>DIR   00:00   MENU   |
| 2.   | If the drive is in remote control (REM shown on the status line), switch to local control by pressing  . The display briefly shows a message about changing the mode and then returns to the Output mode.  | LOC  49.1Hz<br>49.1 Hz<br>0.5 A<br>10.7 %<br>DIR   00:00   MENU  |
| 3.   | To change the direction from forward (  shown on the status line) to reverse (  shown on the status line), or vice versa, press  . | LOC  49.1Hz<br>49.1 Hz<br>0.5 A<br>10.7 %<br>DIR   00:00   MENU |

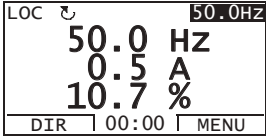**Note:** Parameter **1003 DIRECTION** must be set to 3 (**REQUEST**).

## How to set the speed, frequency or torque reference

| Step | Action   | Display  |
|------|--|--|
| 1.   | If you are not in the Output mode, press  repeatedly until you get there.   |  |
| 2.   | If the drive is in remote control (REM shown on the status line), switch to local control by pressing  . The display briefly shows a message about changing the mode and then returns to the Output mode.<br><b>Note:</b> With group <b>11 REFERENCE SELECT</b> , you can allow the reference modification in remote control.   |  |
| 3.   | <ul style="list-style-type: none"> <li>To increase the highlighted reference value shown in the top right corner of the display, press . The value changes immediately. It is stored in the drive permanent memory and restored automatically after power switch-off.</li> <li>To decrease the value, press .</li> </ul> |  |

## How to adjust the display contrast

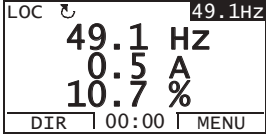
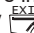













| Step | Action   | Display   |
|------|--|---|
| 1.   | If you are not in the Output mode, press  repeatedly until you get there.   |   |
| 2.   | <ul style="list-style-type: none"> <li>To increase the contrast, press keys  and  simultaneously.</li> <li>To decrease the contrast, press keys  and  simultaneously.</li> </ul> |  |

## ■ Parameters mode

In the Parameters mode, you can:

- view and change parameter values
- start, stop, change the direction and switch between local and remote control.

## How to select a parameter and change its value

| Step | Action  | Display  |
|------|---|--|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing repeatedly  until you get to the Main menu.   | <pre> LOC  MAIN MENU  1 PARAMETERS ASSISTANTS CHANGED PAR EXIT   00:00   ENTER </pre>  |
| 2.   | Go to the Parameters mode by selecting PARAMETERS on the menu with keys  and  , and pressing  .  | <pre> LOC  PAR GROUPS  01 01 OPERATING DATA 03 FB ACTUAL SIGNALS 04 FAULT HISTORY 10 START/STOP/DIR 11 REFERENCE SELECT EXIT   00:00   SEL </pre>  |
| 3.   | Select the appropriate parameter group with keys  and  .<br><br>Press  .   | <pre> LOC  PAR GROUPS  99 99 START-UP DATA 01 OPERATING DATA 03 FB ACTUAL SIGNALS 04 FAULT HISTORY 10 START/STOP/DIR EXIT   00:00   SEL </pre> <pre> LOC  PARAMETERS 9901 LANGUAGE ENGLISH 9902 APPLIC MACRO 9903 MOTOR TYPE 9904 MOTOR CTRL MODE EXIT   00:00   EDIT </pre> |
| 4.   | Select the appropriate parameter with keys  and  . The current value of the parameter is shown below the selected parameter.<br><br>Press  .                                | <pre> LOC  PARAMETERS 9901 LANGUAGE 9902 APPLIC MACRO ABB STANDARD 9903 MOTOR TYPE 9904 MOTOR CTRL MODE EXIT   00:00   EDIT </pre> <pre> LOC  PAR EDIT 9902 APPLIC MACRO ABB STANDARD [1] CANCEL   00:00   SAVE </pre>   |
| 5.   | Specify a new value for the parameter with keys  and  .<br>Pressing the key once increments or decrements the value. Holding the key down changes the value faster. Pressing the keys simultaneously replaces the displayed value with the default value. | <pre> LOC  PAR EDIT 9902 APPLIC MACRO 3-WIRE [2] CANCEL   00:00   SAVE </pre>  |
| 6.   | <ul style="list-style-type: none"> <li>To save the new value, press .</li> <li>To cancel the new value and keep the original, press .</li> </ul>  | <pre> LOC  PARAMETERS 9901 LANGUAGE 9902 APPLIC MACRO 3-WIRE 9903 MOTOR TYPE 9904 MOTOR CTRL MODE EXIT   00:00   EDIT </pre>   |

## How to select the monitored signals

| Step | Action   | Display  |
|------|--|--|
| 1.   | <p>You can select which signals are monitored in the Output mode and how they are displayed with group <b>34 PANEL DISPLAY</b> parameters. See page 94 for detailed instructions on changing parameter values.</p> <p>By default, the display shows three signals.</p> <p>Signal 1: <b>0102 SPEED</b> for macros 3-wire, Alternate, Motor potentiometer, Hand/Auto and PID control;<br/><b>0103 OUTPUT FREQ</b> for macros ABB standard and Torque control</p> <p>Signal 2: <b>0104 CURRENT</b></p> <p>Signal 3: <b>0105 TORQUE</b>.</p> <p>To change the default signals, select up to three signals from group <b>01 OPERATING DATA</b> to be shown.</p> <p>Signal 1: Change the value of parameter <b>3401 SIGNAL1 PARAM</b> to the index of the signal parameter in group <b>01 OPERATING DATA</b> (= number of the parameter without the leading zero), eg, 105 means parameter <b>0105 TORQUE</b>. Value 0 means that no signal is displayed.</p> <p>Repeat for signals 2 (<b>3408 SIGNAL2 PARAM</b>) and 3 (<b>3415 SIGNAL3 PARAM</b>).</p> | <div style="border: 1px solid black; padding: 2px;">                     LOC <input type="checkbox"/> PAR EDIT <input type="checkbox"/> </div> <div style="border: 1px solid black; padding: 2px;">                     3401 SIGNAL1 PARAM<br/> <b>OUTPUT FREQ</b><br/>                     [103]<br/>                     CANCEL   00:00   SAVE                 </div> <div style="border: 1px solid black; padding: 2px;">                     LOC <input type="checkbox"/> PAR EDIT <input type="checkbox"/> </div> <div style="border: 1px solid black; padding: 2px;">                     3408 SIGNAL2 PARAM<br/> <b>CURRENT</b><br/>                     [104]<br/>                     CANCEL   00:00   SAVE                 </div> <div style="border: 1px solid black; padding: 2px;">                     LOC <input type="checkbox"/> PAR EDIT <input type="checkbox"/> </div> <div style="border: 1px solid black; padding: 2px;">                     3415 SIGNAL3 PARAM<br/> <b>TORQUE</b><br/>                     [105]<br/>                     CANCEL   00:00   SAVE                 </div> |
| 2.   | <p>Select how you want the signals to be displayed: as a decimal number or a bar graph. For decimal numbers, you can specify the decimal point location, or use the decimal point location and unit of the source signal (setting 9 [<b>DIRECT</b>]). For details, see parameter <b>3404</b>.</p> <p>Signal 1: parameter <b>3404 OUTPUT1 DSP FORM</b></p> <p>Signal 2: parameter <b>3411 OUTPUT2 DSP FORM</b></p> <p>Signal 3: parameter <b>3418 OUTPUT3 DSP FORM</b>.</p>   | <div style="border: 1px solid black; padding: 2px;">                     LOC <input type="checkbox"/> PAR EDIT <input type="checkbox"/> </div> <div style="border: 1px solid black; padding: 2px;">                     3404 OUTPUT1 DSP FORM<br/> <b>DIRECT</b><br/>                     [9]<br/>                     CANCEL   00:00   SAVE                 </div>  |
| 3.   | <p>Select the units to be displayed for the signals. This has no effect if parameter <b>3404/3411/3418</b> is set to 9 (<b>DIRECT</b>). For details, see parameter <b>3405</b>.</p> <p>Signal 1: parameter <b>3405 OUTPUT1 UNIT</b></p> <p>Signal 2: parameter <b>3412 OUTPUT2 UNIT</b></p> <p>Signal 3: parameter <b>3419 OUTPUT3 UNIT</b>.</p>   | <div style="border: 1px solid black; padding: 2px;">                     LOC <input type="checkbox"/> PAR EDIT <input type="checkbox"/> </div> <div style="border: 1px solid black; padding: 2px;">                     3405 OUTPUT1 UNIT<br/> <b>HZ</b><br/>                     [3]<br/>                     CANCEL   00:00   SAVE                 </div>  |
| 4.   | <p>Select the scalings for the signals by specifying the minimum and maximum display values. This has no effect if parameter <b>3404/3411/3418</b> is set to 9 (<b>DIRECT</b>). For details, see parameters <b>3406</b> and <b>3407</b>.</p> <p>Signal 1: parameters <b>3406 OUTPUT1 MIN</b> and <b>3407 OUTPUT1 MAX</b></p> <p>Signal 2: parameters <b>3413 OUTPUT2 MIN</b> and <b>3414 OUTPUT2 MAX</b></p> <p>Signal 3: parameters <b>3420 OUTPUT3 MIN</b> and <b>3421 OUTPUT3 MAX</b>.</p>  | <div style="border: 1px solid black; padding: 2px;">                     LOC <input type="checkbox"/> PAR EDIT <input type="checkbox"/> </div> <div style="border: 1px solid black; padding: 2px;">                     3406 OUTPUT1 MIN<br/> <b>0.0 HZ</b><br/>                     CANCEL   00:00   SAVE                 </div> <div style="border: 1px solid black; padding: 2px;">                     LOC <input type="checkbox"/> PAR EDIT <input type="checkbox"/> </div> <div style="border: 1px solid black; padding: 2px;">                     3407 OUTPUT1 MAX<br/> <b>500.0 HZ</b><br/>                     CANCEL   00:00   SAVE                 </div>  |

## ■ Assistants mode






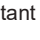





When the drive is first powered up, the Start-up assistant guides you through the setup of the basic parameters. The Start-up assistant is divided into assistants, each of which is responsible for the specification of a related parameter set, for example Motor set-up or PID control. The Start-up assistant activates the assistants one after the other. You may also use the assistants independently. For more information on the tasks of the assistants, see section *Start-up assistant* on page 121.









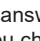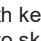


In the Assistants mode, you can:

- use assistants to guide you through the specification of a set of basic parameters
- start, stop, change the direction and switch between local and remote control.

### How to use an assistant

The table below shows the basic operation sequence which leads you through assistants. The Motor set-up assistant is used as an example.

| Step | Action   | Display  |
|------|--|--|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing repeatedly  until you get to the Main menu.  | <pre> LOC ↺ MAIN MENU — 1 PARAMETERS ASSISTANTS CHANGED PAR EXIT   00:00   ENTER                     </pre>  |
| 2.   | Go to the Assistants mode by selecting ASSISTANTS on the menu keys  and  , and pressing  .  | <pre> LOC ↺ ASSISTANTS — 1 Start-up assistant Motor Set-up Application Speed control  EXT1 Speed control  EXT2 EXIT   00:00   SEL                     </pre>   |
| 3.   | Select the assistant with keys  and  , and press  .<br>If you select any other assistant than the Start-up assistant, it guides you through the task of specification of its parameter set as shown in steps 4. and 5. below. After that you can select another assistant on the Assistants menu or exit the Assistants mode. The Motor set-up assistant is used here as an example.<br><br>If you select the Start-up assistant, it activates the first assistant, which guides you through the task of specification of its parameter set as shown in steps 4. and 5. below. The Start-up assistant then asks if you want to continue with the next assistant or skip it – select the appropriate answer with keys  and  , and press  . If you choose to skip, the Start-up assistant asks the same question about the next assistant, and so on. | <pre> LOC ↺ PAR EDIT — 9905 MOTOR NOM VOLT 200 V EXIT   00:00   SAVE                     </pre><br><pre> LOC ↺ CHOICE — Do you want to continue with application setup? Continue Skip EXIT   00:00   OK                     </pre> |

| Step | Action   | Display  |
|------|--|--|
| 4.   | <ul style="list-style-type: none"> <li>To specify a new value, press keys  and .</li> <li>To ask for information on the requested parameter, press key . Scroll the help text with keys  and . Close the help by pressing .</li> </ul> | <div style="border: 1px solid black; padding: 5px;"> <p>LOC  PAR EDIT</p> <p>9905 MOTOR NOM VOLT<br/><b>240 V</b></p> <p>EXIT   00:00   SAVE</p> </div> <div style="border: 1px solid black; padding: 5px; margin-top: 5px;"> <p>LOC  HELP</p> <p>Set as given on the motor nameplate. Voltage value must correspond to motor D/Y connection.</p> <p>EXIT   00:00  </p> </div> |
| 5.   | <ul style="list-style-type: none"> <li>To accept the new value and continue to the setting of the next parameter, press .</li> <li>To stop the assistant, press .</li> </ul>   | <div style="border: 1px solid black; padding: 5px;"> <p>LOC  PAR EDIT</p> <p>9906 MOTOR NOM CURR<br/><b>1.2 A</b></p> <p>EXIT   00:00   SAVE</p> </div>   |















## ■ Changed parameters mode

In the Changed parameters mode, you can:

- view a list of all parameters that have been changed from the macro default values
- change these parameters
- start, stop, change the direction and switch between local and remote control.

### How to view and edit changed parameters






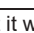
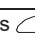



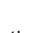

| Step | Action  | Display   |
|------|---|---|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing repeatedly  until you get to the Main menu.   | <pre> LOC ↺ MAIN MENU — 1 PARAMETERS ASSISTANTS CHANGED PAR EXIT   00:00   ENTER                     </pre>   |
| 2.   | Go to the Changed parameters mode by selecting CHANGED PAR on the menu with keys  and  , and pressing  .   | <pre> LOC ↺ CHANGED PAR — 1202 CONST SPEED 1 10.0 Hz 1203 CONST SPEED 2 1204 CONST SPEED 3 9902 APPLIC MACRO EXIT   00:00   EDIT                     </pre> |
| 3.   | Select the changed parameter on the list with keys  and  . The value of the selected parameter is shown below it. Press  to modify the value.                                  | <pre> LOC ↺ PAR EDIT — 1202 CONST SPEED 1 10.0 Hz CANCEL   00:00   SAVE                     </pre>  |
| 4.   | Specify a new value for the parameter with keys  and  .<br>Pressing the key once increments or decrements the value. Holding the key down changes the value faster. Pressing the keys simultaneously replaces the displayed value with the default value.       | <pre> LOC ↺ PAR EDIT — 1202 CONST SPEED 1 15.0 Hz CANCEL   00:00   SAVE                     </pre>  |
| 5.   | <ul style="list-style-type: none"> <li>• To accept the new value, press . If the new value is the default value, the parameter is removed from the list of changed parameters.</li> <li>• To cancel the new value and keep the original, press .</li> </ul> | <pre> LOC ↺ CHANGED PAR — 1202 CONST SPEED 1 15.0 Hz 1203 CONST SPEED 2 1204 CONST SPEED 3 9902 APPLIC MACRO EXIT   00:00   EDIT                     </pre> |

## Fault logger mode

In the Fault logger mode, you can:

- view the drive fault history of maximum ten faults (after a power off, only the three latest faults are kept in the memory)
- see the details of the three latest faults (after a power off, the details of only the most recent fault is kept in the memory)
- read the help text for the fault
- start, stop, change the direction and switch between local and remote control.

### How to view faults

| Step | Action   | Display   |
|------|--|---|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing repeatedly  until you get to the Main menu.  | <pre> LOC  MAIN MENU-----1 PARAMETERS ASSISTANTS CHANGED PAR EXIT  00:00  ENTER                     </pre>  |
| 2.   | Go to the Fault logger mode by selecting <b>FAULT LOGGER</b> on the menu with keys  and  , and pressing  . The display shows the fault log starting with the latest fault.<br><br>The number on the row is the fault code according to which the causes and corrective actions are listed in chapter <a href="#">Fault tracing</a> on page 351. | <pre> LOC  FAULT LOGGER-----1 10:  PANEL LOSS     19.03.05 13:04:57 6:   DC UNDERVOLT 7:   A11 LOSS EXIT  00:00  DETAIL                     </pre>        |
| 3.   | To see the details of a fault, select it with keys  and  , and press  .   | <pre> LOC  PANEL LOSS----- DI STATUS AT FLT 00000 bin FAULT TIME 1 13:04:57 FAULT TIME 2 EXIT  00:00  DIAG                     </pre>                     |
| 4.   | To show the help text, press  . Scroll the help text with keys  and  .<br>After reading the help, press  to return to the previous display.  | <pre> LOC  DIAGNOSTICS----- Check: comm lines and connections, parameter 3002, parameters in groups 10 and 11. EXIT  00:00  OK                     </pre> |















## ■ Time and date mode
























In the Time and date mode, you can:

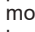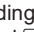- show or hide the clock
- change date and time display formats
- set the date and time
- enable or disable automatic clock transitions according to the daylight saving changes
- start, stop, change the direction and switch between local and remote control.

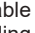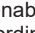The assistant control panel contains a battery to ensure the function of the clock when the panel is not powered by the drive.
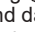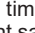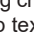
### How to show or hide the clock, change display formats, set the date and time and enable or disable clock transitions due to daylight saving changes

| Step | Action  | Display  |
|------|---|--|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing repeatedly  until you get to the Main menu.   | <pre> LOC ↻MAIN MENU——1 PARAMETERS ASSISTANTS CHANGED PAR EXIT   00:00   ENTER </pre>  |
| 2.   | Go to the Time and date mode by selecting TIME & DATE on the menu with keys  and  , and pressing  .  | <pre> LOC ↻TIME &amp; DATE——1 CLOCK VISIBILITY TIME FORMAT DATE FORMAT SET TIME SET DATE EXIT   00:00   SEL </pre>   |
| 3.   | <ul style="list-style-type: none"> <li>• To show (hide) the clock, select CLOCK VISIBILITY on the menu, press , select Show clock (Hide clock) and press , or, if you want to return to the previous display without making changes, press .</li> <li>• To specify the date format, select DATE FORMAT on the menu, press , and select a suitable format. Press  to save or  to cancel your changes.</li> <li>• To specify the time format, select TIME FORMAT on the menu, press , and select a suitable format. Press  to save or  to cancel your changes.</li> </ul> | <pre> LOC ↻CLOCK VISIB——1 Show clock Hide clock EXIT   00:00   SEL  LOC ↻DATE FORMAT——1 dd.mm.yy mm/dd/yy dd.mm.yyyy mm/dd/yyyy CANCEL   00:00   OK  LOC ↻TIME FORMAT——1 24-hour 12-hour CANCEL   00:00   SEL </pre> |

| Step | Action  | Display  |
|------|---|--|
|      | <ul style="list-style-type: none"> <li>To set the time, select SET TIME on the menu and press . Specify the hours with keys  and , and press . Then specify the minutes. Press  to save or  to cancel your changes.</li> <li>To set the date, select SET DATE on the menu and press . Specify the first part of the date (day or month depending on the selected date format) with keys  and , and press . Repeat for the second part. After specifying the year, press . To cancel your changes, press .</li> <li>To enable or disable the automatic clock transitions according to the daylight saving changes, select DAYLIGHT SAVING on the menu and press . Pressing  opens the help that shows the beginning and end dates of the period during which daylight saving time is used in each country or area whose daylight saving changes you can select to be followed. Scroll the help text with keys  and . <ul style="list-style-type: none"> <li>To disable automatic clock transitions according to the daylight saving changes, select Off and press .</li> <li>To enable automatic clock transitions, select the country or area whose daylight saving changes are followed and press .</li> <li>To return to the previous display without making changes, press .</li> </ul> </li> </ul> | <div data-bbox="762 180 1025 316"> <p>LOC  SET TIME</p> <p><b>15:41</b></p> <p>CANCEL   00:00   OK</p> </div> <div data-bbox="762 331 1025 467"> <p>LOC  SET DATE</p> <p><b>19.03.05</b></p> <p>CANCEL   00:00   OK</p> </div> <div data-bbox="762 483 1025 619"> <p>LOC  DAYLIGHT SAV—1</p> <p>OFF</p> <p>EU</p> <p>US</p> <p>Australia1:NSw,Vict..</p> <p>Australia2:Tasmania..</p> <p>EXIT   00:00   SEL</p> </div> <div data-bbox="762 635 1025 770"> <p>LOC  HELP</p> <p>EU:</p> <p>On: Mar last Sunday</p> <p>Off: Oct last Sunday</p> <p>US:</p> <p>EXIT   00:00  </p> </div> |

## ■ Parameter backup mode

The Parameter backup mode is used to export parameters from one drive to another or to make a backup of the drive parameters. Uploading to the panel stores all drive parameters, including up to three user sets, to the assistant control panel. The full set, partial parameter set (application) and user sets can then be downloaded from the control panel to another drive or the same drive. Uploading and downloading can be performed in local control.

The control panel memory is non-volatile and does not depend on the panel battery.

In the Parameter backup mode, you can:

- Copy all parameters from the drive to the control panel (UPLOAD TO PANEL). This includes all defined user sets of parameters and internal (not adjustable by the user) parameters such as those created by the ID run.
- View the information about the backup stored to the control panel with UPLOAD TO PANEL (BACKUP INFO). This includes, for example, the type and rating of the drive where the backup was made. It is useful to check this information when you are going to copy the parameters to another drive with DOWNLOAD FULL SET to ensure that the drives match.
- Restore the full parameter set from the control panel to the drive (DOWNLOAD FULL SET). This writes all parameters, including the internal non-user-adjustable motor parameters, to the drive. It does not include the user sets of parameters.

**Note:** Only use this function to restore a drive from a backup or to transfer parameters to systems that are identical to the original system.

- Copy a partial parameter set (part of the full set) from the control panel to a drive (DOWNLOAD APPLICATION). The partial set does not include user sets, internal motor parameters, parameters *9905...9909*, *1605*, *1607*, *5201*, nor any group *51 EXT COMM MODULE* and *53 EFB PROTOCOL* parameters.

The source and target drives and their motor sizes do not need to be the same.








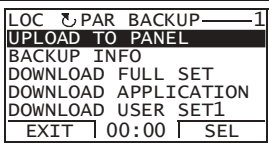






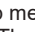



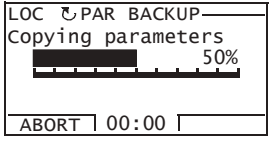
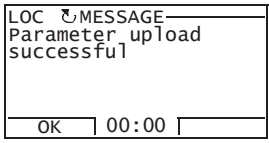
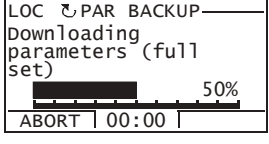

- Copy user set 1 parameters from the control panel to the drive (DOWNLOAD USER SET1). A user set includes group *99 START-UP DATA* parameters and the internal motor parameters.

The function is only shown on the menu when user set 1 has been first saved using parameter *9902 APPLIC MACRO* (see section *user macros* on page *119*) and then uploaded to the control panel with UPLOAD TO PANEL.





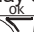






- Copy user set 2 parameters from the control panel to the drive (DOWNLOAD USER SET2). As DOWNLOAD USER SET1 above.
  - Copy user set 3 parameters from the control panel to the drive (DOWNLOAD USER SET3). As DOWNLOAD USER SET1 above.
  - Start, stop, change the direction and switch between local and remote control.
-

## How to upload and download parameters

For the upload and download functions available, see above. Note that the drive has to be in local control for uploading and downloading.

| Step | Action   | Display   |
|------|--|---|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing repeatedly  until you get to the Main menu. – If REM is shown on the status line, press first  to switch to local control.  |   |
| 2.   | Go to the Par backup mode by selecting PAR BACKUP on the menu with keys  and  , and pressing  .   |   |
| 3.   | <ul style="list-style-type: none"> <li>To copy all parameters (including user sets and internal parameters) from the drive to the control panel, select UPLOAD TO PANEL on the Par backup menu with keys  and , and press . During the transfer, the display shows the transfer status as a percentage of completion. Press  if you want to stop the operation.</li> </ul> <p>After the upload is completed, the display shows a message about the completion. Press  to return to the Par backup menu.</p> <ul style="list-style-type: none"> <li>To perform downloads, select the appropriate operation (here DOWNLOAD FULL SET is used as an example) on the Par backup menu with keys  and , and press . The display shows the transfer status as a percentage of completion. Press  if you want to stop the operation.</li> </ul> <p>After the download is completed, the display shows a message about the completion. Press  to return to the Par backup menu.</p> | <br><br><br> |

## How to view information about the backup








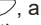







| Step | Action  | Display   |
|------|---|---|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing repeatedly  until you get to the Main menu.   | <pre> LOC  MAIN MENU  1 PARAMETERS ASSISTANTS CHANGED PAR EXIT   00:00   ENTER </pre>   |
| 2.   | Go to the Par backup mode by selecting PAR BACKUP on the menu with keys  and  , and pressing  .  | <pre> LOC  PAR BACKUP  1 UPLOAD TO PANEL BACKUP INFO DOWNLOAD FULL SET DOWNLOAD APPLICATION DOWNLOAD USER SET1 EXIT   00:00   SEL </pre>  |
| 3.   | Select BACKUP INFO on the Par backup menu with keys  and  , and press  . The display shows the following information about the drive where the backup was made:<br><br><b>DRIVE TYPE:</b> type of the drive<br><br><b>DRIVE RATING:</b> rating of the drive in format XXXYZ, where<br>XXX: Nominal current rating. If present, an "A" indicates a decimal point, eg, 9A7 means 9.7 A.<br>Y: 2 = 200 V<br>4 = 400 V<br><br>Z: i = European loading package<br>n = US loading package<br><br><b>FIRMWARE:</b> firmware version of the drive.<br><br>You can scroll the information with keys  and  . | <pre> LOC  BACKUP INFO  1 DRIVE TYPE ACS355 3304 DRIVE RATING 9A741 3301 FIRMWARE EXIT   00:00   </pre> <pre> LOC  BACKUP INFO  1 ACS355 3304 DRIVE RATING 9A741 3301 FIRMWARE 241A hex EXIT   00:00   </pre> |
| 4.   | Press  to return to the Par backup menu.   | <pre> LOC  PAR BACKUP  1 UPLOAD TO PANEL BACKUP INFO DOWNLOAD FULL SET DOWNLOAD APPLICATION DOWNLOAD USER SET1 EXIT   00:00   SEL </pre>  |

## I/O settings mode

In the I/O settings mode, you can:

- check the parameter settings related to any I/O terminal
- edit the parameter setting. For example, if “1103: REF1” is listed under Ain1 (Analog input 1), that is, parameter **1103 REF1 SELECT** has value **A11**, you can change its value to, eg, **A12**. You cannot, however, set the value of parameter **1106 REF2 SELECT** to **A11**.
- start, stop, change the direction and switch between local and remote control.

### How to edit and change parameter settings related to I/O terminals

| Step | Action   | Display  |
|------|--|--|
| 1.   | Go to the Main menu by pressing  if you are in the Output mode, otherwise by pressing repeatedly  until you get to the Main menu.  | <pre> LOC  MAIN MENU-----1 <b>PARAMETERS</b> <b>ASSISTANTS</b> <b>CHANGED PAR</b> EXIT  00:00  ENTER                     </pre>  |
| 2.   | Go to the I/O settings mode by selecting I/O SETTINGS on the menu with keys  and  , and pressing  .   | <pre> LOC  I/O SETTINGS-----1 <b>DIGITAL INPUTS (DI)</b> ANALOG INPUTS (AI) RELAY OUTPUTS (ROUT) ANALOG OUTPUTS (AOUT) PANEL EXIT  00:00  SEL                     </pre> |
| 3.   | Select the I/O group, eg, DIGITAL INPUTS, with keys  and  , and press  . After a brief pause, the display shows the current settings for the selection.                 | <pre> LOC  I/O SETTINGS----- -<b>DI1-</b> 1001:START/STOP (E1) -DI2- 1001:DIR (E1) -DI3- EXIT  00:00                     </pre>  |
| 4.   | Select the setting (line with a parameter number) with keys  and  , and press  .   | <pre> LOC  PAR EDIT----- 1001 EXT1 COMMANDS <b>DI1, 2</b> [2] CANCEL 00:00  SAVE                     </pre>  |
| 5.   | Specify a new value for the setting with keys  and  . Pressing the key once increments or decrements the value. Holding the key down changes the value faster. Pressing the keys simultaneously replaces the displayed value with the default value. | <pre> LOC  PAR EDIT----- 1001 EXT1 COMMANDS <b>DI1P, 2P</b> [3] CANCEL 00:00  SAVE                     </pre>  |
| 6.   | <ul style="list-style-type: none"> <li>• To save the new value, press .</li> <li>• To cancel the new value and keep the original, press .</li> </ul>   | <pre> LOC  I/O SETTINGS----- -<b>DI1-</b> 1001:START PLS (E1) -DI2- 1001:STOP PLS (E1) -DI3- EXIT  00:00                     </pre>                                      |



[www.nicsanat.com](http://www.nicsanat.com)

021-87700210





# Application macros

---

## What this chapter contains

The chapter describes the application macros. For each macro, there is a wiring diagram showing the default control connections (digital and analog I/O). The chapter also explains how to save a user macro and how to recall it.

## Overview of macros

Application macros are pre-programmed parameter sets. While starting up the drive, the user typically selects one of the macros - the one that is best suited for the purpose - with parameter **9902 APPLIC MACRO**, makes the essential changes and saves the result as a user macro.

The ACS355 has eight standard macros and three user macros. The table below contains a summary of the macros and describes suitable applications.

| Macro               | Suitable applications   |
|---------------------|---|
| ABB standard        | Ordinary speed control applications where no, one, two or three constant speeds are used. Start/stop is controlled with one digital input (level start and stop). It is possible to switch between two acceleration and deceleration times. |
| 3-wire              | Ordinary speed control applications where no, one, two or three constant speeds are used. The drive is started and stopped with push buttons.   |
| Alternate           | Speed control applications where no, one, two or three constant speeds are used. Start, stop and direction are controlled by two digital inputs (combination of the input states determines the operation).                                 |
| Motor potentiometer | Speed control applications where no or one constant speed is used. The speed is controlled by two digital inputs (increase / decrease / keep unchanged).  |

---

| Macro          | Suitable applications  |
|----------------|--|
| Hand/Auto      | Speed control applications where switching between two control devices is needed. Some control signal terminals are reserved for one device, the rest for the other. One digital input selects between the terminals (devices) in use.   |
| PID control    | Process control applications, for example different closed loop control systems such as pressure control, level control and flow control. It is possible to switch between process and speed control: Some control signal terminals are reserved for process control, others for speed control. One digital input selects between process and speed control. |
| Torque control | Torque control applications. It is possible to switch between torque and speed control: Some control signal terminals are reserved for torque control, others for speed control. One digital input selects between torque and speed control.   |
| AC500 Modbus   | Applications that require a complex control logic and when several drives are connected together through a Modbus link. AC500-eCo PLC is used for controlling and monitoring the system.   |
| User           | The user can save the customized standard macro, ie, the parameter settings including group <b>99 START-UP DATA</b> , and the results of the motor Identification run into the permanent memory, and recall the data at a later time. For example, three user macros can be used when switching between three different motors is required.                  |




## ABB standard macro

This is the default macro. It provides a general purpose I/O configuration with three constant speeds. Parameter values are the default values given in section [Parameters](#) on page 191.

If you use other than the default connections presented below, see section [I/O terminals](#) on page 53.

### ■ Default I/O connections

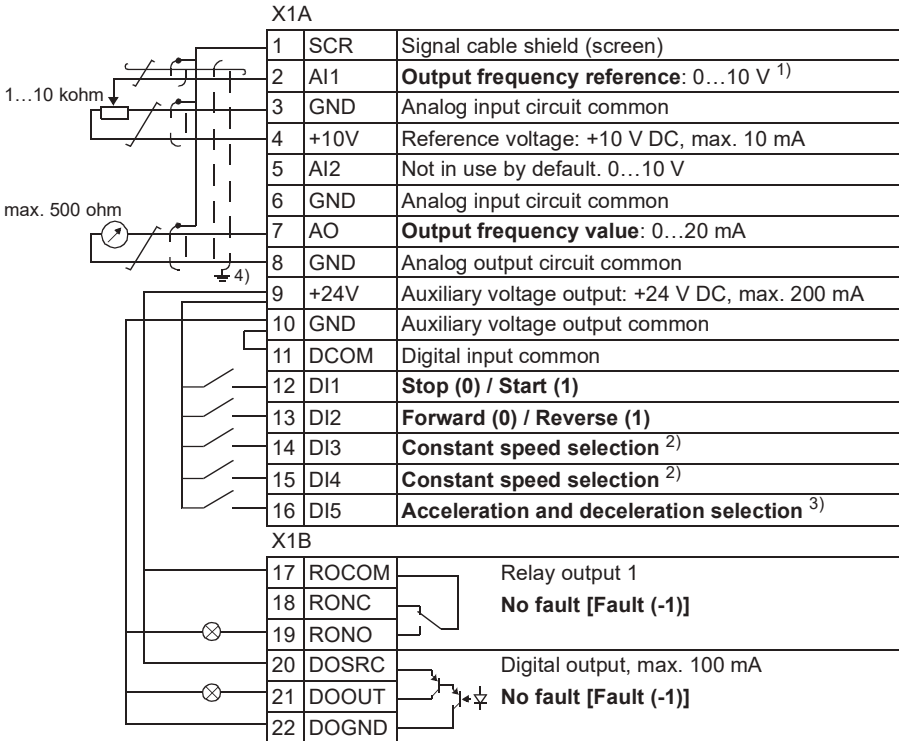

<sup>1)</sup> AI1 is used as a speed reference if vector mode is selected.

<sup>2)</sup> See parameter group [12 CONSTANT SPEEDS](#):

| DI3 | DI4 | Operation (parameter)            |
|-----|-----|----------------------------------|
| 0   | 0   | Set speed through AI1            |
| 1   | 0   | Speed 1 ( <a href="#">1202</a> ) |
| 0   | 1   | Speed 2 ( <a href="#">1203</a> ) |
| 1   | 1   | Speed 3 ( <a href="#">1204</a> ) |

<sup>3)</sup> 0 = ramp times according to parameters [2202](#) and [2203](#).

1 = ramp times according to parameters [2205](#) and [2206](#).

<sup>4)</sup> 360 degree grounding under a clamp.

Tightening torque: 0.4 N·m / 3.5 lbf·in.

Safe torque off connections (X1C:STO; not shown in the diagram) are jumpered by default.


## 3-wire macro

This macro is used when the drive is controlled using momentary push-buttons. It provides three constant speeds. To enable the macro, set the value of parameter **9902 APPLIC MACRO** to 2 (**3-WIRE**).

For the parameter default values, see section *Default values with different macros* on page 180. If you use other than the default connections presented below, see section *I/O terminals* on page 53.

**Note:** When the stop input (DI2) is deactivated (no input), the control panel start and stop buttons are disabled.

### ■ Default I/O connections

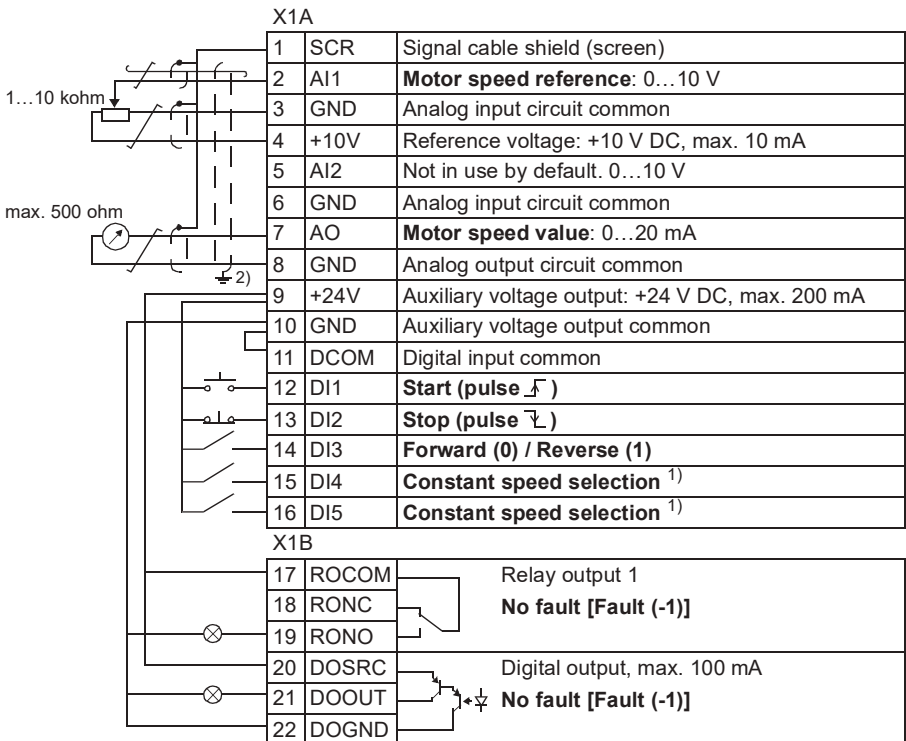

<sup>1)</sup> See parameter group **12 CONSTANT SPEEDS**:

| DI4 | DI5 | Operation (parameter)   |
|-----|-----|-------------------------|
| 0   | 0   | Set speed through AI1   |
| 1   | 0   | Speed 1 ( <b>1202</b> ) |
| 0   | 1   | Speed 2 ( <b>1203</b> ) |
| 1   | 1   | Speed 3 ( <b>1204</b> ) |

<sup>2)</sup> 360 degree grounding under a clamp.


Tightening torque: 0.4 N·m / 3.5 lbf·in.  
Safe torque off connections (X1C:STO; not shown in the diagram) are jumpered by default.

## Alternate macro

This macro provides an I/O configuration adapted to a sequence of DI control signals used when alternating the rotation direction of the motor. To enable the macro, set the value of parameter **9902 APPLIC MACRO** to 3 (**ALTERNATE**).

For the parameter default values, see section **Default values with different macros** on page 180. If you use other than the default connections presented below, see section **I/O terminals** on page 53.

### ■ Default I/O connections

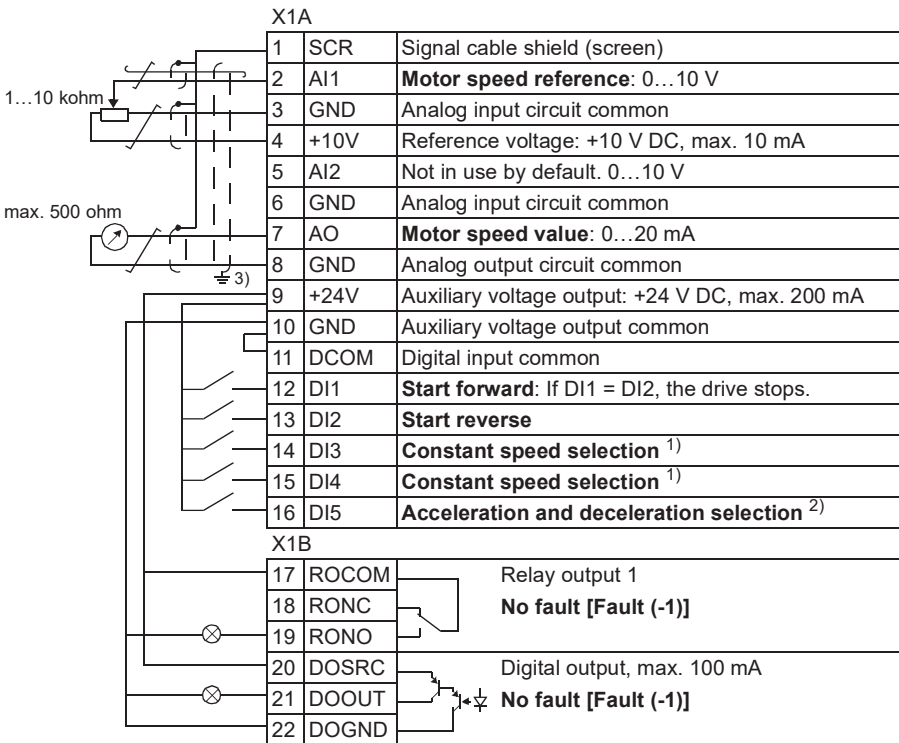

<sup>1)</sup> See parameter group **12 CONSTANT SPEEDS**:

| DI3 | DI4 | Operation (parameter)   |
|-----|-----|-------------------------|
| 0   | 0   | Set speed through AI1   |
| 1   | 0   | Speed 1 ( <b>1202</b> ) |
| 0   | 1   | Speed 2 ( <b>1203</b> ) |
| 1   | 1   | Speed 3 ( <b>1204</b> ) |

<sup>2)</sup> 0 = ramp times according to parameters **2202** and **2203**.

1 = ramp times according to parameters **2205** and **2206**.

<sup>3)</sup> 360 degree grounding under a clamp.

Tightening torque: 0.4 N·m / 3.5 lbf·in.


Safe torque off connections (X1C:STO; not shown in the diagram) are jumpered by default.

## Motor potentiometer macro

This macro provides a cost-effective interface for PLCs that vary the speed of the motor using only digital signals. To enable the macro, set the value of parameter **9902 APPLIC MACRO** to 4 (**MOTOR POT**).

For the parameter default values, see section *Default values with different macros* on page 180. If you use other than the default connections presented below, see section *I/O terminals* on page 53.

### ■ Default I/O connections

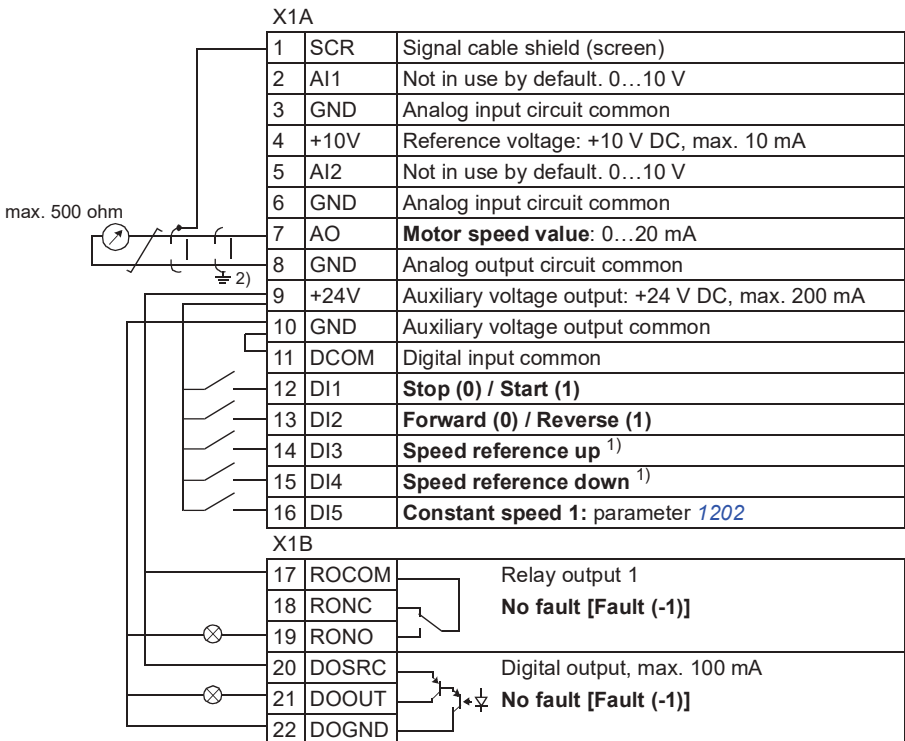

<sup>1)</sup> If DI3 and DI4 are both active or inactive, the speed reference is unchanged.  
The existing speed reference is stored during stop and power down.

<sup>2)</sup> 360 degree grounding under a clamp.  
Tightening torque: 0.4 N·m / 3.5 lbf·in.  
Safe torque off connections (X1C:STO; not shown in the diagram) are jumpered by default.




## Hand/Auto macro

This macro can be used when switching between two external control devices is needed. To enable the macro, set the value of parameter **9902 APPLIC MACRO** to 5 (**HAND/AUTO**).

For the parameter default values, see section **Default values with different macros** on page 180. If you use other than the default connections presented below, see section **I/O terminals** on page 53.

**Note:** Parameter **2108 START INHIBIT** must remain in the default setting 0 (**OFF**).

### ■ Default I/O connections

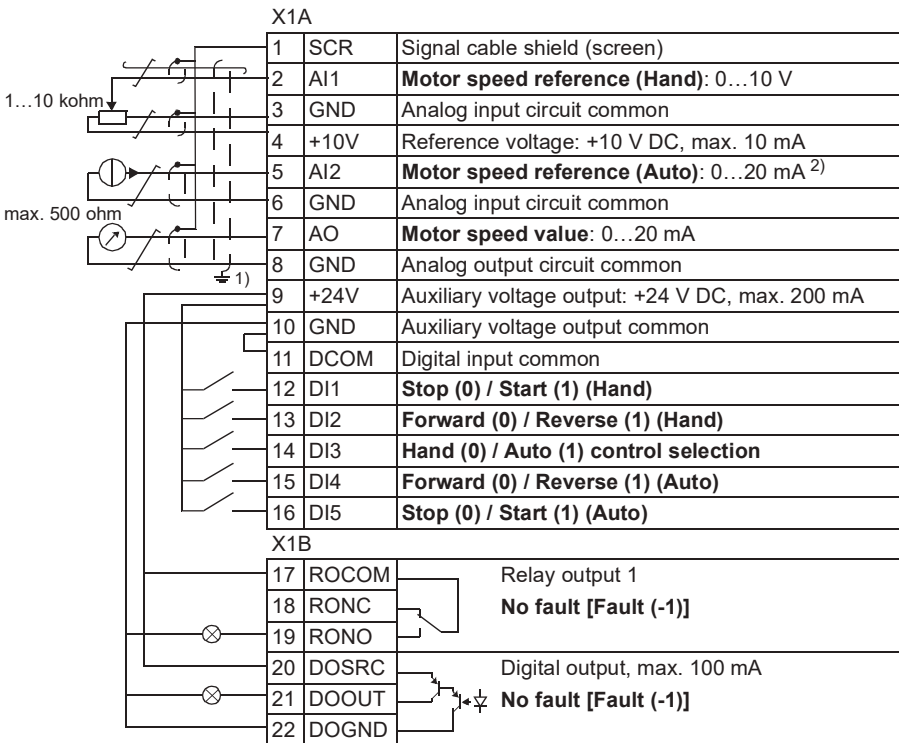

- <sup>1)</sup> 360 degree grounding under a clamp.  
<sup>2)</sup> The signal source is powered externally. See the manufacturer's instructions. To use sensors supplied by the drive aux. voltage output, see page 55.

Tightening torque: 0.4 N·m / 3.5 lbf·in.  
Safe torque off connections (X1C:STO; not shown in the diagram) are jumpered by default.

## PID control macro


This macro provides parameter settings for closed-loop control systems such as pressure control, flow control, etc. Control can also be switched to speed control using a digital input. To enable the macro, set the value of parameter **9902 APPLIC MACRO** to 6 (**PID CONTROL**).

For the parameter default values, see section *Default values with different macros* on page 180. If you use other than the default connections presented below, see section *I/O terminals* on page 53.

**Note:** The default I/O connections described below are applicable to firmware version 5.050 or later. For the default values in earlier firmware versions, see Revision A of this user's manual.

**Note:** Parameter **2108 START INHIBIT** must remain in the default setting 0 (**OFF**).

### ■ Default I/O connections

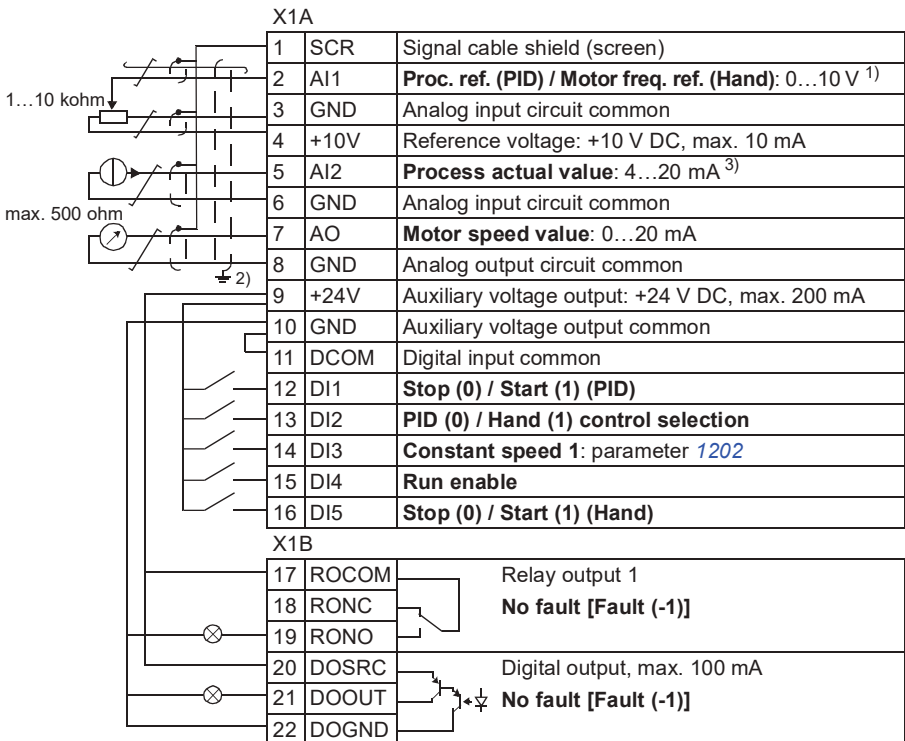

1) Hand: 0...10 V -> speed reference.  
PID: 0...10 V -> 0...100% PID setpoint.

2) 360 degree grounding under a clamp.

3) The signal source is powered externally. See the manufacturer's instructions. To use sensors

supplied by the drive aux. voltage output, see page 55.

Tightening torque: 0.4 N·m / 3.5 lbf·in.


Safe torque off connections (X1C:STO; not shown in the diagram) are jumpered by default.

## Torque control macro

This macro provides parameter settings for applications that require torque control of the motor. Control can also be switched to speed control using a digital input. To enable the macro, set the value of parameter **9902 APPLIC MACRO** to 8 (**TORQUE CTRL**).

For the parameter default values, see section *Default values with different macros* on page 180. If you use other than the default connections presented below, see section *I/O terminals* on page 53.

### ■ Default I/O connections

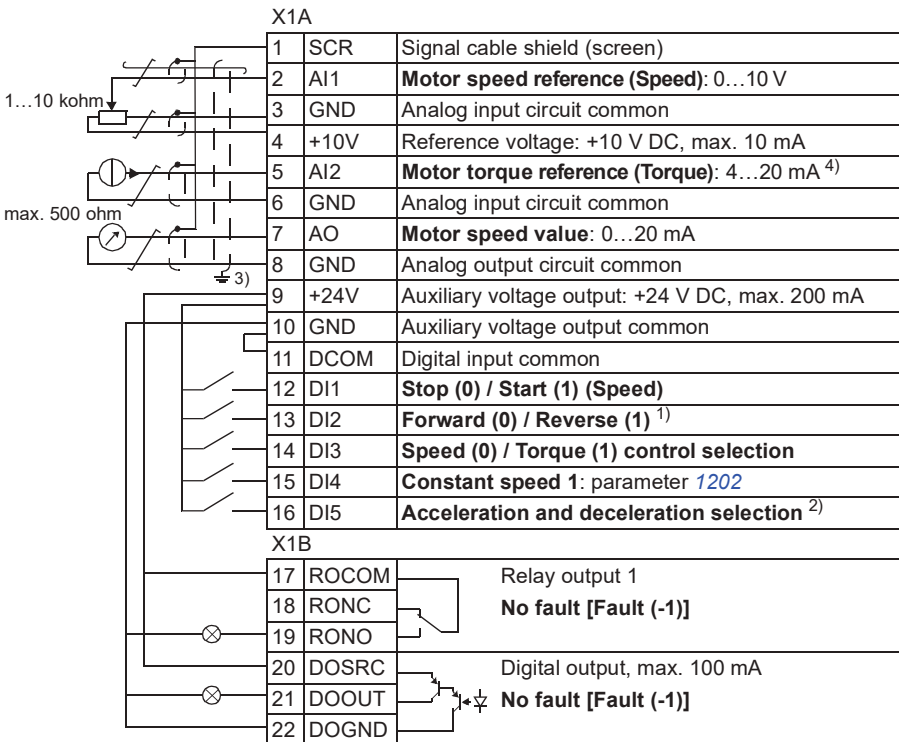

- 1) Speed control: Changes rotation direction.  
Torque control: Changes torque direction.
- 2) 0 = ramp times according to parameters 2202 and 2203.  
1 = ramp times according to parameters 2205 and 2206.
- 3) 360 degree grounding under a clamp.


- 4) The signal source is powered externally. See the manufacturer's instructions. To use sensors supplied by the drive aux. voltage output, see page 55.
- Tightening torque: 0.4 N·m / 3.5 lbf·in.  
Safe torque off connections (X1C:STO; not shown in the diagram) are jumpered by default.

## AC500 Modbus macro

The AC500 Modbus application macro configures the ACS355 drive communication and control parameters to be applicable with the pre-engineered Starter kit for AC500-eCo PLC and ACS355 drive over STD Modbus connection (FMBA-01 adapter).

The macro is available in ACS355 drives with firmware version 5.03C or later.

To activate the macro, set parameter **9902 APPLIC MACRO** to AC500 MODBUS (10).

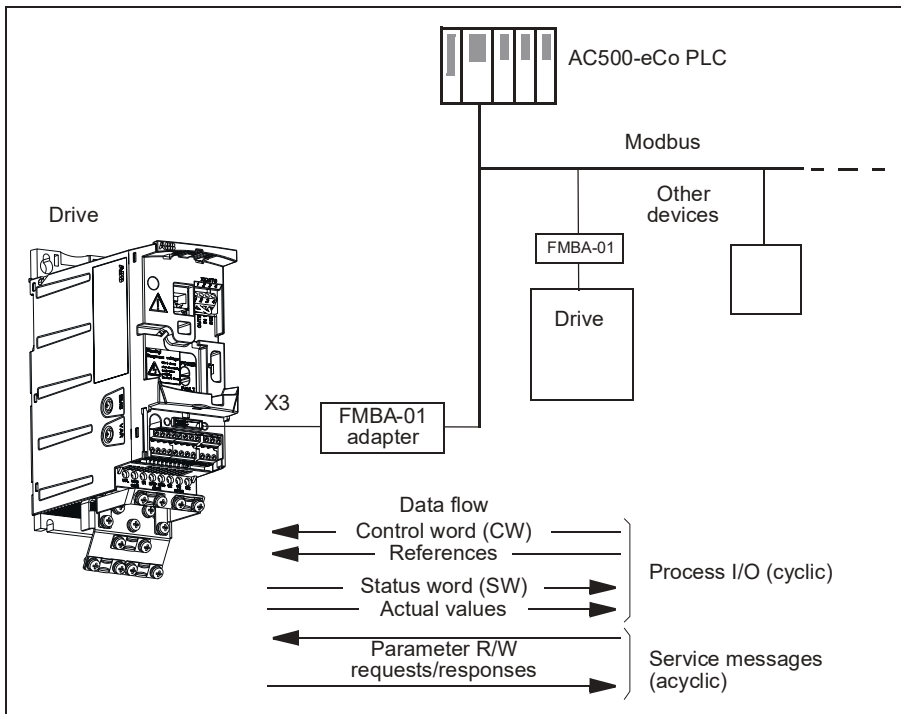

The AC500 Modbus application macro default values for the drive parameters correspond to the ABB standard macro (parameter *9902*, value 1 (*ABB STANDARD*)), see section *ABB standard macro* on page *110*), with the following differences:

| No.  | Name             | Default value    |
|------|------------------|------------------|
| 1001 | EXT1 COMMANDS    | 10 (COMM)        |
| 1102 | EXT1/EXT2 SEL    | 8 (COMM)         |
| 1103 | REF1 SELECT      | 8 (COMM)         |
| 1604 | FAULT RESET SEL  | 8 (COMM)         |
| 2201 | ACC/DEC 1/2 SEL  | 0 (NOT SEL)      |
| 3018 | COMM FAULT FUNC  | 1 (FAULT)        |
| 5302 | EFB STATION ID   | 2                |
| 5303 | EFB BAUD RATE    | 192 (19.2 kb/s)  |
| 5304 | EFB PARITY       | 1 (8 NONE 1)     |
| 5305 | EFB CTRL PROFILE | 2 (ABB DRV FULL) |
| 5310 | EFB PAR 10       | 101              |
| 5311 | EFB PAR 11       | 303              |
| 5312 | EFB PAR 12       | 305              |
| 9802 | COMM PROT SEL    | 1 (STD MODBUS)   |

**Note:** The default slave address of the drive is 2 (parameter *5303 EFB STATION ID*), but if several drives are used, the address must be unique for each drive.



For more information regarding the Starter kit configuration, please refer to *AC500-eCo and ACS355 quick installation guide* (2CDC125145M0201 [English]), and *ACS355 and AC500-eCo application guide* (2CDC125152M0201 [English]).

## User macros



In addition to the standard application macros, it is possible to create three user macros. The user macro allows the user to save the parameter settings, including group **99 START-UP DATA**, and the results of the motor identification into the permanent memory and recall the data at a later time. The panel reference is also saved if the macro is saved and loaded in local control. The remote control setting is saved into the user macro, but the local control setting is not.

The steps below show how to create and recall User macro 1. The procedure for the other two macros is identical, only the parameter **9902 APPLIC MACRO** values are different.

To create User macro 1:

- Adjust the parameters. Perform the motor identification if it is needed in the application but it is not done yet.
- Save the parameter settings and the results of the motor identification to the permanent memory by changing parameter **9902 APPLIC MACRO** to -1 (**USER S1 SAVE**).
- Press  (assistant control panel) or  (basic control panel) to save.

To recall User macro 1:

- Change parameter **9902 APPLIC MACRO** to 0 (**USER S1 LOAD**).
- Press  (assistant control panel) or  (basic control panel) to load.

The user macro can also be switched through digital inputs (see parameter **1605 USER PAR SET CHG**).

**Note:** User macro load restores the parameter settings, including group **99 START-UP DATA** and the results of the motor identification. Check that the settings correspond to the motor used.

**Hint:** The user can, for example, switch the drive between three motors without having to adjust the motor parameters and to repeat the motor identification every time the motor is changed. The user needs only to adjust the settings and perform the motor identification once for each motor and then to save the data as three user macros. When the motor is changed, only the corresponding user macro needs to be loaded, and the drive is ready to operate.

---

[www.nicsanat.com](http://www.nicsanat.com)

021-87700210





# Program features

---

## What this chapter contains

The chapter describes program features. For each feature, there is a list of related user settings, actual signals, and fault and alarm messages.

## Start-up assistant

### ■ Introduction

The Start-up assistant (requires the assistant control panel) guides the user through the start-up procedure, helping to enter the requested data (parameter values) to the drive. The Start-up assistant also checks that the entered values are valid, ie, within the allowed range.

The Start-up assistant calls other assistants, each of which guides the user through the task of specifying a related parameter set. At the first start, the drive suggests entering the first task, Language select, automatically. The user may activate the tasks either one after the other as the Start-up assistant suggests, or independently. The user may also adjust the drive parameters in the conventional way without using the assistant at all.

See section [Assistants mode](#) on page 96 for how to start the Start-up assistant or other assistants.

---



## ■ Default order of the tasks

Depending on the selection made in the Application task (parameter *9902 APPLIC MACRO*), the Start-up assistant decides which consequent tasks it suggests. The default tasks are shown in the table below.

| Application selection | Default tasks  |
|-----------------------|--|
| <i>ABB STANDARD</i>   | Language select, Motor set-up, Application, Option modules, Speed control EXT1, Speed control EXT2, Start/Stop control, Timed functions, Protections, Output signals |
| <i>3-WIRE</i>         | Language select, Motor set-up, Application, Option modules, Speed control EXT1, Speed control EXT2, Start/Stop control, Timed functions, Protections, Output signals |
| <i>ALTERNATE</i>      | Language select, Motor set-up, Application, Option modules, Speed control EXT1, Speed control EXT2, Start/Stop control, Timed functions, Protections, Output signals |
| <i>MOTOR POT</i>      | Language select, Motor set-up, Application, Option modules, Speed control EXT1, Speed control EXT2, Start/Stop control, Timed functions, Protections, Output signals |
| <i>HAND/AUTO</i>      | Language select, Motor set-up, Application, Option modules, Speed control EXT1, Speed control EXT2, Start/Stop control, Timed functions, Protections, Output signals |
| <i>PID CONTROL</i>    | Language select, Motor set-up, Application, Option modules, PID control, Speed control EXT2, Start/Stop control, Timed functions, Protections, Output signals        |
| <i>TORQUE CTRL</i>    | Language select, Motor set-up, Application, Option modules, Speed control EXT2, Start/Stop control, Timed functions, Protections, Output signals                     |
| <i>AC500 MODBUS</i>   | Language select, Motor set-up, Application, Option modules, Speed control EXT1, Speed control EXT2, Start/Stop control, Timed functions, Protections, Output signals |

## ■ List of the tasks and the relevant drive parameters





Depending on the selection made in the Application task (parameter *9902 APPLIC MACRO*), the Start-up assistant decides which consequent tasks it suggests.

| Name                      | Description   | Set parameters  |
|---------------------------|---|---|
| <b>Language select</b>    | Selecting the language  | <i>9901</i>   |
| <b>Motor set-up</b>       | Setting the motor data<br>Performing the motor identification. (If the speed limits are not in the allowed range: Setting the limits.)  | <i>9904...9909</i><br><i>9910</i>   |
| <b>Application</b>        | Selecting the application macro   | <i>9902</i> , parameters associated to the macro  |
| <b>Option modules</b>     | Activating the option modules   | Group <i>35 MOTOR TEMP MEAS</i> , group <i>52 PANEL COMM</i><br><i>9802</i>   |
| <b>Speed control EXT1</b> | Selecting the source for the speed reference<br>(If AI1 is used: Setting analog input AI1 limits, scale, inversion)<br>Setting the reference limits<br>Setting the speed (frequency) limits<br>Setting the acceleration and deceleration times              | <i>1103</i><br><br><i>(1301...1303, 3001)</i><br><br><i>1104, 1105</i><br><br><i>2001, 2002 (2007, 2008)</i><br><br><i>2202, 2203</i>       |
| <b>Speed control EXT2</b> | Selecting the source for the speed reference<br>(If AI1 is used: Setting analog input AI1 limits, scale, inversion)<br>Setting the reference limits   | <i>1106</i><br><br><i>(1301...1303, 3001)</i><br><br><i>1107, 1108</i>  |
| <b>Torque control</b>     | Selecting the source for the torque reference<br>(If AI1 is used: Setting analog input AI1 limits, scale, inversion)<br>Setting the reference limits  | <i>1106</i><br><br><i>(1301...1303, 3001)</i><br><br><i>1107, 1108</i>  |
| <b>PID control</b>        | Selecting the source for the process reference<br>(If AI1 is used: Setting analog input AI1 limits, scale, inversion)<br>Setting the reference limits<br>Setting the speed (frequency) limits<br>Setting the source and limits for the process actual value | <i>1106</i><br><br><i>(1301...1303, 3001)</i><br><br><i>1107, 1108</i><br><br><i>2001, 2002 (2007, 2008)</i><br><br><i>4016, 4018, 4019</i> |

| Name                      | Description   | Set parameters   |
|---------------------------|---|--|
| <b>Start/Stop control</b> | <p>Selecting the source for start and stop signals of the two external control locations, EXT1 and EXT2</p> <p>Selecting between EXT1 and EXT2</p> <p>Defining the direction control</p> <p>Defining the start and stop modes</p> <p>Selecting the use of Run enable signal</p>   | <p>1001, 1002</p> <p>1102</p> <p>1003</p> <p>2101...2103</p> <p>1601</p>                                       |
| <b>Protections</b>        | Setting the current and torque limits   | 2003, 2017   |
| <b>Output signals</b>     | <p>Selecting the signals indicated through relay output RO1 and, if MREL-01 output relay module is in use, RO2...RO4.</p> <p>Selecting the signals indicated through analog output AO</p> <p>Setting the minimum, maximum, scaling and inversion</p>  | <p>Group 14 RELAY OUTPUTS</p> <p>Group 15 ANALOG OUTPUTS</p>   |
| <b>Timed functions</b>    | <p>Setting the timed functions</p> <p>Selecting the timed start/stop control for external control locations EXT1 and EXT2</p> <p>Selecting timed EXT1/EXT2 control</p> <p>Activation of timed constant speed 1</p> <p>Selecting timed function status indicated through relay output RO1 or, if MREL-01 output relay module is in use, RO2...RO4.</p> <p>Selecting timed PID1 parameter set 1/2 control</p> | <p>Group 36 TIMED FUNCTIONS</p> <p>1001, 1002</p> <p>1102</p> <p>1201</p> <p>1401...1403, 1410</p> <p>4027</p> |


## ■ Contents of the assistant displays

There are two types of displays in the Start-up assistant: Main displays and information displays. The main displays prompt the user to feed in information. The assistant steps through the main displays. The information displays contain help texts for the main displays. The figure below shows a typical example of both and explanations of the contents.
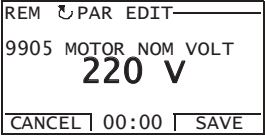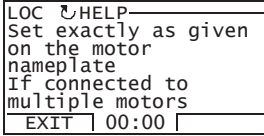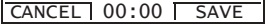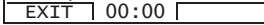
|   | Main display  | Information display   |
|---|---|---|
| 1 |  |  |
| 2 |  |  |
| 1 | Parameter   | Help text ...   |
| 2 | Feed-in field   | ... help text continued   |


## Local control vs. external control

The drive can receive start, stop and direction commands and reference values from the control panel or through digital and analog inputs. Embedded fieldbus or an optional fieldbus adapter enables control over an open fieldbus link. A PC equipped with the DriveWindow Light 2 PC tool can also control the drive.

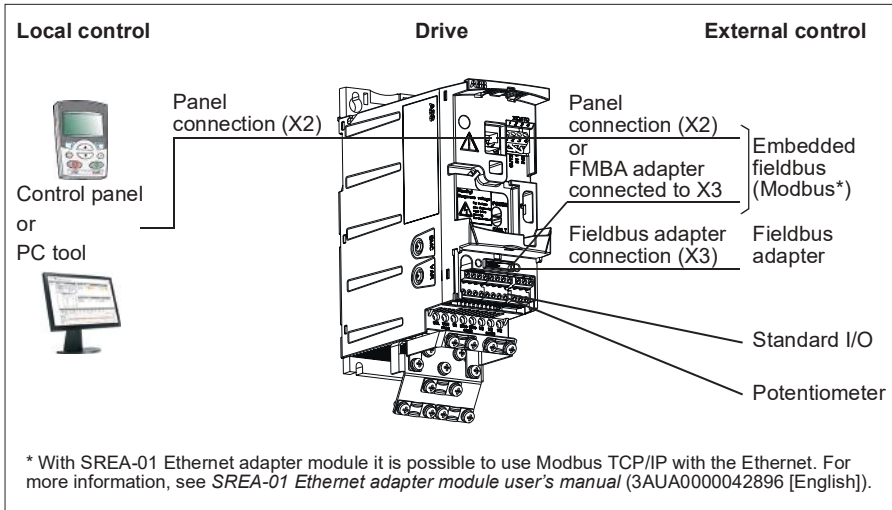

### Local control

The control commands are given from the control panel keypad when the drive is in local control. LOC indicates local control on the panel display.

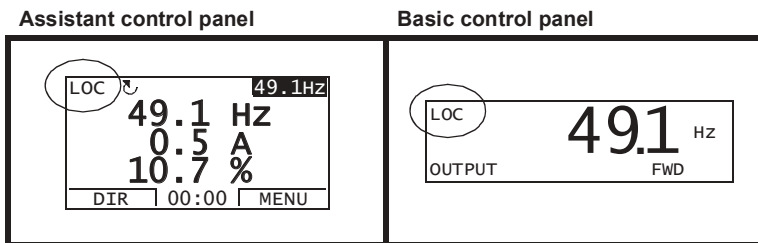


The control panel always overrides the external control signal sources when used in local control.

## External control

When the drive is in external (remote) control, the commands are given through the standard I/O terminals (digital and analog inputs) and/or the fieldbus interface. In addition, it is also possible to set the control panel as the source for the external control.

External control is indicated with REM on the panel display.

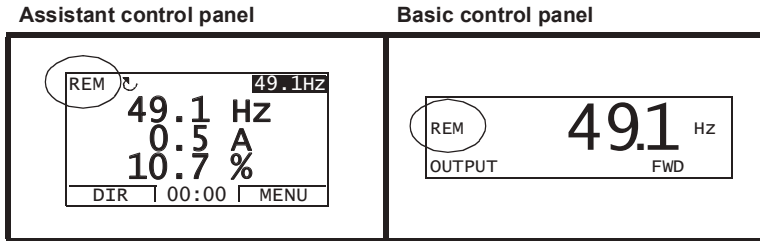

The user can connect the control signals to two external control locations, [EXT1](#) or [EXT2](#). Depending on the user selection, either one is active at a time. This function operates on a 2 ms time level.

## Settings


| Panel key                 | Additional information  |
|---------------------------|---|
| LOC/REM                   | Selection between local and external (remote) control           |
| <b>Parameter</b>          |   |
| <a href="#">1102</a>      | Selection between <a href="#">EXT1</a> and <a href="#">EXT2</a> |
| <a href="#">1001/1002</a> | Start, stop, direction source for <a href="#">EXT1/EXT2</a>     |
| <a href="#">1103/1106</a> | Reference source for <a href="#">EXT1/EXT2</a>                  |

## Diagnostics

| Actual signal             | Additional information              |
|---------------------------|-------------------------------------|
| <a href="#">0111/0112</a> | <a href="#">EXT1/EXT2</a> reference |


### ■ Block diagram: Start, stop, direction source for *EXT1*

The figure below shows the parameters that select the interface for start, stop, and direction for external control location *EXT1*.

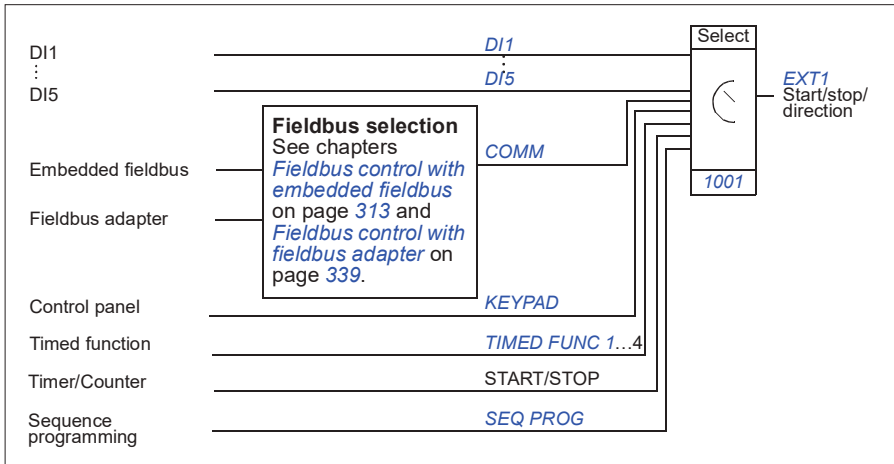

### ■ Block diagram: Reference source for *EXT1*

The figure below shows the parameters that select the interface for the speed reference of external control location *EXT1*.

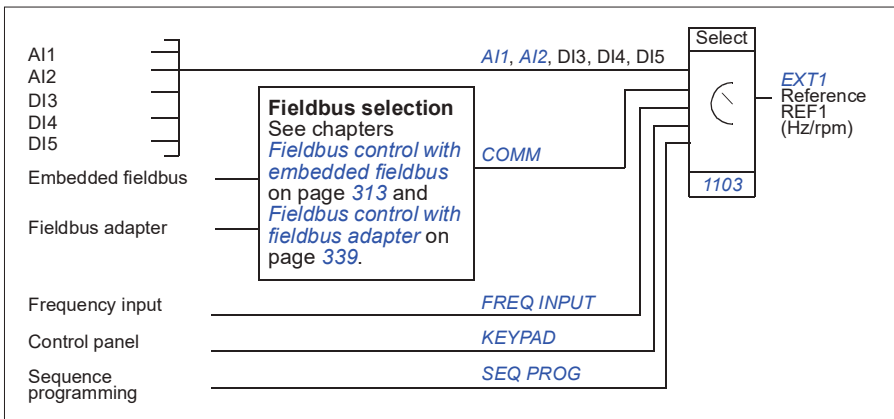

## Reference types and processing

The drive can accept a variety of references in addition to the conventional analog input and control panel signals.

- The drive reference can be given with two digital inputs: One digital input increases the speed, the other decreases it.
- The drive can form a reference out of two analog input signals by using mathematical functions: addition, subtraction, multiplication and division.
- The drive can form a reference out of an analog input signal and a signal received through a serial communication interface by using mathematical functions: addition and multiplication.
- The drive reference can be given with frequency input.
- In external control location EXT1/2, the drive can form a reference out of an analog input signal and a signal received through Sequence programming by using a mathematical function: addition.

It is possible to scale the external reference so that the signal minimum and maximum values correspond to a speed other than the minimum and maximum speed limits.

### ■ Settings

| Parameter                        | Additional information                          |
|----------------------------------|---|
| Group <i>11 REFERENCE SELECT</i> | External reference source, type and scaling     |
| Group <i>20 LIMITS</i>           | Operating limits                                |
| Group <i>22 ACCEL/DECEL</i>      | Speed reference acceleration/deceleration ramps |
| Group <i>24 TORQUE CONTROL</i>   | Torque reference ramp times                     |
| Group <i>32 SUPERVISION</i>      | Reference supervision                           |


### ■ Diagnostics

| Actual signal                     | Additional information   |
|-----------------------------------|--|
| <i>0111/0112</i>                  | REF1/REF2 reference  |
| Group <i>03 FB ACTUAL SIGNALS</i> | References in different stages of the reference processing chain |



## Reference trimming

In reference trimming, the external reference is corrected depending on the measured value of a secondary application variable. The block diagram below illustrates the function.

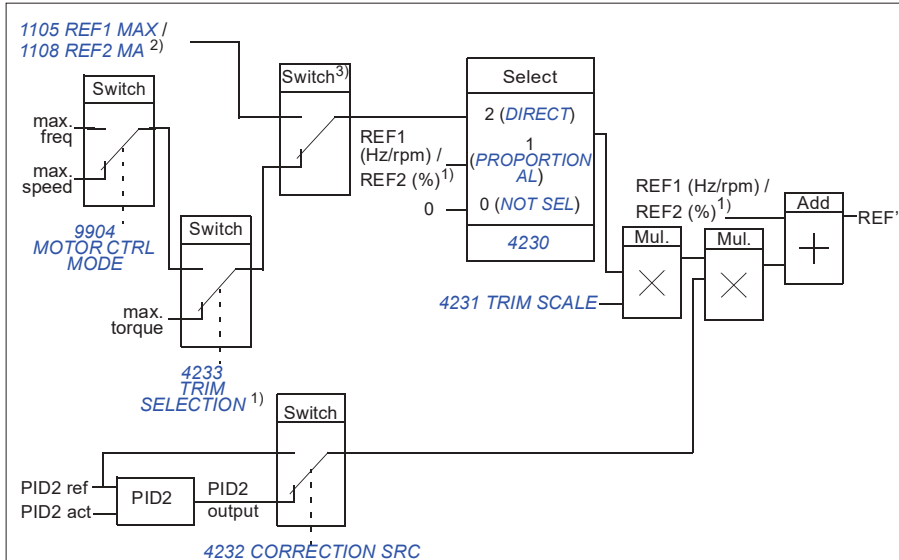

REF1 (Hz/rpm) / REF2 (%) = Drive reference before trimming

REF' = Drive reference after trimming

max. speed = par. 2002 (or 2001 if the absolute value is greater)

max. freq = par. 2008 (or 2007 if the absolute value is greater)

max. torque = par. 2014 (or 2013 if the absolute value is greater)

PID2 ref = par. 4210

PID2 act = par. 4214...4221

1) **Note:** Torque reference trimming is only for external reference REF2 (%)

2) REF1 or REF2 depending on which is active. See parameter 1102.

3) When par. 4232 = PID2REF, the maximum trimming reference is defined by parameter 1105 when REF1 is active and by parameter 1108 when REF2 is active.

When par. 4232 = PID2OUTPUT, the maximum trimming reference is defined by parameter 2002 if parameter 9904 value is VECTOR: SPEED or VECTOR: TORQ and by parameter 2008 value if parameter 9904 value is SCALAR: FREQ.

## Settings


| Parameter       | Additional information     |
|-----------------|----------------------------|
| 1102            | REF1/2 selection           |
| 4230 ...4232    | Trimming function settings |
| 4201 ...4229    | PID control settings       |
| Group 20 LIMITS | Drive operation limits     |

## ■ Example

The drive runs a conveyor line. It is speed controlled but the line tension also needs to be taken into account: If the measured tension exceeds the tension setpoint, the speed will be slightly decreased, and vice versa.

To accomplish the desired speed correction, the user

- activates the trimming function and connects the tension setpoint and the measured tension to it.
- tunes the trimming to a suitable level.

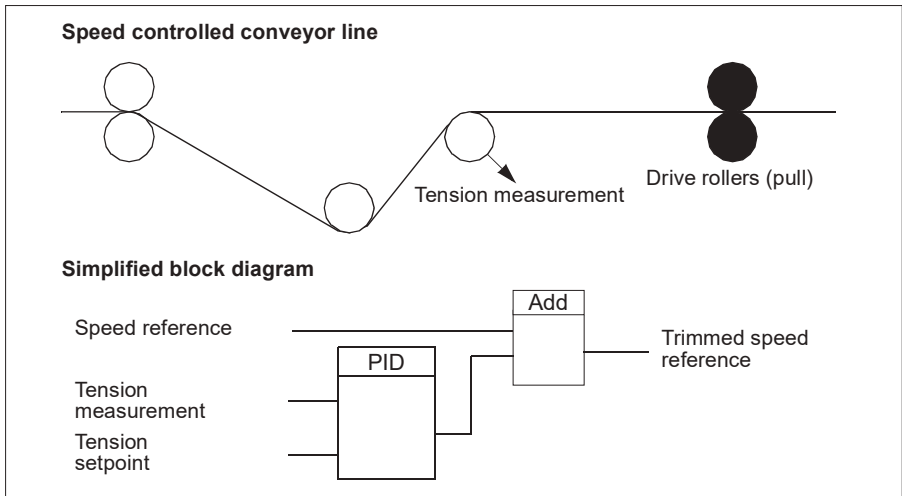

## Programmable analog inputs

The drive has two programmable analog voltage/current inputs. The inputs can be inverted, filtered and the maximum and minimum values can be adjusted. The update cycle for the analog input is 8 ms (12 ms cycle once per second). The cycle time is shorter when information is transferred to the application program (8 ms -> 2 ms).

### ■ Settings

| Parameter  | Additional information                                     |
|--|--|
| Group <i>11 REFERENCE SELECT</i>   | AI as reference source                                     |
| Group <i>13 ANALOG INPUTS</i>  | Analog input processing                                    |
| <i>3001, 3021, 3022, 3107</i>  | AI loss supervision  |
| Group <i>35 MOTOR TEMP MEAS</i>  | AI in motor temperature measurement                        |
| Groups <i>40 PROCESS PID SET 1</i><br><i>... 42 EXT / TRIM PID</i>                   | AI as PID process control reference or actual value source |
| <i>8420, 8425, 8426</i><br><i>8430, 8435, 8436</i><br>...<br><i>8490, 8495, 8496</i> | AI as Sequence programming reference or trigger signal     |

### ■ Diagnostics

| Actual signal              | Additional information   |
|----------------------------|--|
| <i>0120, 0121</i>          | Analog input values  |
| <i>1401</i>                | AI1/AI2 signal loss through RO 1   |
| <i>1402/1403/1410</i>      | AI1/AI2 signal loss through RO 2...4. With option MREL-01 only.                |
| <b>Alarm</b>               |  |
| <i>AI1 LOSS / AI2 LOSS</i> | AI1/AI2 signal below limit <i>3021 AI1 FAULT LIMIT / 3022 AI2 FAULT LIMIT</i>  |
| <b>Fault</b>               |  |
| <i>AI1 LOSS / AI2 LOSS</i> | AI1/AI2 signal below limit <i>3021 AI1 FAULT LIMIT / 3022 AI2 FAULT LIMIT</i>  |
| <i>PAR AI SCALE</i>        | Incorrect AI signal scaling ( <i>1302 &lt; 1301</i> or <i>1305 &lt; 1304</i> ) |

## Programmable analog output

One programmable current output (0...20 mA) is available. Analog output signal can be inverted, filtered and the maximum and minimum values can be adjusted. The analog output signals can be proportional to motor speed, output frequency, output current, motor torque, motor power, etc. The update cycle for the analog output is 2 ms.

Analog output can be controlled with Sequence programming. It is also possible to write a value to an analog output through a serial communication link.

### ■ Settings

| Parameter                       | Additional information               |
|---------------------------------|--------------------------------------|
| Group <i>15 ANALOG OUTPUTS</i>  | AO value selection and processing    |
| Group <i>35 MOTOR TEMP MEAS</i> | AO in motor temperature measurement  |
| <i>8423/8433/.../8493</i>       | AO control with Sequence programming |

### ■ Diagnostics

| Actual signal       | Additional information                                |
|---------------------|---|
| <i>0124</i>         | AO value  |
| <i>0170</i>         | AO control values defined by Sequence programming     |
| <b>Fault</b>        |   |
| <i>PAR AO SCALE</i> | Incorrect AO signal scaling ( <i>1503 &lt; 1502</i> ) |

## Programmable digital inputs

The drive has five programmable digital inputs. The update time for the digital inputs is 2 ms.

One digital input (DI5) can be programmed as a frequency input. See section *Frequency input* on page 135.

### ■ Settings

| Parameter                           | Additional information   |
|-------------------------------------|--|
| Group <i>10 START/STOP/DIR</i>      | DI as start, stop, direction                                       |
| Group <i>11 REFERENCE SELECT</i>    | DI in reference selection, or reference source                     |
| Group <i>12 CONSTANT SPEEDS</i>     | DI in constant speed selection                                     |
| Group <i>16 SYSTEM CONTROLS</i>     | DI as external Run enable, fault reset or user macro change signal |
| Group <i>19 TIMER &amp; COUNTER</i> | DI as timer or counter control signal source                       |
| <i>2013, 2014</i>                   | DI as torque limit source  |
| <i>2109</i>                         | DI as external emergency stop command source                       |
| <i>2201</i>                         | DI as acceleration and deceleration ramp selection signal          |
| <i>2209</i>                         | DI as zero ramp force signal                                       |
| <i>3003</i>                         | DI as external fault source  |
| Group <i>35 MOTOR TEMP MEAS</i>     | DI in motor temperature measurement                                |
| <i>3601</i>                         | DI as timed function enable signal source                          |
| <i>3622</i>                         | DI as booster activation signal source                             |
| <i>4010/4110/4210</i>               | DI as PID controller reference signal source                       |
| <i>4022/4122</i>                    | DI as sleep function activation signal in PID1                     |
| <i>4027</i>                         | DI as PID1 parameter set 1/2 selection signal source               |
| <i>4228</i>                         | DI as external PID2 function activation signal source              |
| Group <i>84 SEQUENCE PROG</i>       | DI as Sequence programming control signal source                   |

### ■ Diagnostics

| Actual signal | Additional information                          |
|---------------|---|
| <i>0160</i>   | DI status                                       |
| <i>0414</i>   | DI status at the time the latest fault occurred |

## Programmable relay output

The drive has one programmable relay output. It is possible to add three additional relay outputs with the optional MREL-01 output relay module. For more information, see *MREL-01 output relay module user's manual* (3AUA0000035974 [English]).

With a parameter setting it is possible to choose what information to indicate through the relay output: Ready, running, fault, alarm, etc. The update time for the relay output is 2 ms.

A value can be written to a relay output through a serial communication link.

### ■ Settings

| Parameter                     | Additional information                  |
|-------------------------------|---|
| Group <i>14 RELAY OUTPUTS</i> | RO value selections and operation times |
| <i>8423</i>                   | RO control with Sequence programming    |

### ■ Diagnostics

| Actual signal | Additional information                     |
|---------------|--|
| <i>0134</i>   | RO Control word through fieldbus control   |
| <i>0162</i>   | RO 1 status                                |
| <i>0173</i>   | RO 2...4 status. With option MREL-01 only. |

## Frequency input

Digital input DI5 can be programmed as a frequency input. Frequency input (0...16000 Hz) can be used as the external reference signal source. The update time for the frequency input is 50 ms. Update time is shorter when information is transferred to the application program (50 ms -> 2 ms).

### ■ Settings

| Parameter                              | Additional information                                   |
|--|--|
| Group <i>18 FREQ IN &amp; TRAN OUT</i> | Frequency input minimum and maximum values and filtering |
| <i>1103/1106</i>                       | External reference REF1/2 through frequency input        |
| <i>4010, 4110, 4210</i>                | Frequency input as PID reference source                  |

### ■ Diagnostics

| Actual signal | Additional information |
|---------------|------------------------|
| <i>0161</i>   | Frequency input value  |

## Transistor output

The drive has one programmable transistor output. The output can be used either as a digital output or frequency output (0...16000 Hz). The update time for the transistor/frequency output is 2 ms.

### ■ Settings

| Parameter                              | Additional information                              |
|--|---|
| Group <i>18 FREQ IN &amp; TRAN OUT</i> | Transistor output settings                          |
| <i>8423</i>                            | Transistor output control with Sequence programming |

### ■ Diagnostics

| Actual signal | Additional information      |
|---------------|-----------------------------|
| <i>0163</i>   | Transistor output status    |
| <i>0164</i>   | Transistor output frequency |

## Actual signals

Several actual signals are available:

- Drive output frequency, current, voltage and power
- Motor speed and torque
- Intermediate circuit DC voltage
- Active control location (LOCAL, EXT1 or EXT2)
- Reference values
- Drive temperature
- Operating time counter (h), kWh counter
- Digital I/O and analog I/O status
- PID controller actual values.

Three signals can be shown simultaneously on the assistant control panel display (one signal on the basic control panel display). It is also possible to read the values through the serial communication link or through the analog outputs.

### ■ Settings

| Parameter                     | Additional information  |
|-------------------------------|---|
| <i>1501</i>                   | Selection of an actual signal to AO                                 |
| <i>1808</i>                   | Selection of an actual signal to frequency output                   |
| Group <i>32 SUPERVISION</i>   | Actual signal supervision   |
| Group <i>34 PANEL DISPLAY</i> | Selection of an actual signals to be displayed on the control panel |

## ■ Diagnostics

| Actual signal  | Additional information  |
|--|-------------------------|
| Groups <i>01 OPERATING DATA ...</i><br><i>04 FAULT HISTORY</i> | Lists of actual signals |

## Motor identification

The performance of vector control is based on an accurate motor model determined during the motor start-up.

A motor Identification magnetization is automatically performed the first time the start command is given. During this first start-up, the motor is magnetized at zero speed for several seconds to allow the motor model to be created. This identification method is suitable for most applications.

In demanding applications a separate Identification run (ID run) can be performed.

## ■ Settings


Parameter *9910 ID RUN*

---



## Power loss ride-through

If the incoming supply voltage is cut off, the drive will continue to operate by utilizing the kinetic energy of the rotating motor. The drive will be fully operational as long as the motor rotates and generates energy to the drive. The drive can continue the operation after the break if the main contactor remained closed.

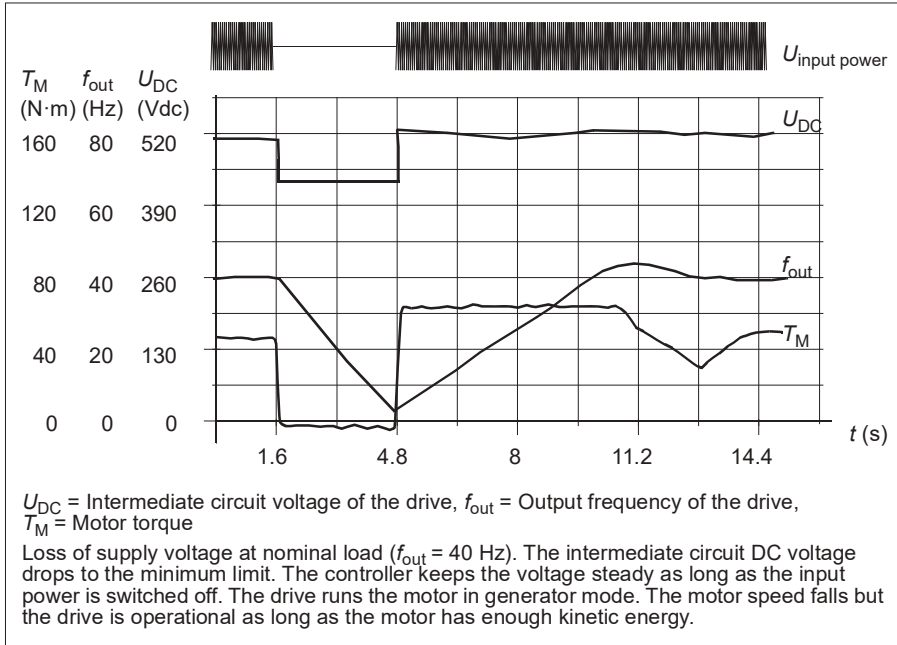

### ■ Settings

Parameter [2006 UNDERVOLT CTRL](#)

## DC magnetizing

When DC magnetizing is activated, the drive automatically magnetizes the motor before starting. This feature guarantees the highest possible break-away torque, up to 180% of the motor nominal torque. By adjusting the premagnetizing time, it is possible to synchronize the motor start and, eg, a mechanical brake release. The Automatic start feature and DC magnetizing cannot be activated at the same time.

### ■ Settings

Parameters [2101 START FUNCTION](#) and [2103 DC MAGN TIME](#)

## Maintenance trigger

A maintenance trigger can be activated to show a notice on the panel display when, eg, drive power consumption has exceeded the defined trigger point.

### ■ Settings


Parameter group [29 MAINTENANCE TRIG](#)

## DC hold

With the motor DC hold feature, it is possible to lock the rotor at zero speed. When both the reference and the motor speed fall below the preset DC hold speed, the drive stops the motor and starts to inject DC into the motor. When the reference speed again exceeds the DC hold speed, the normal drive operation resumes.


### ■ Settings

Parameters [2101...2106](#)

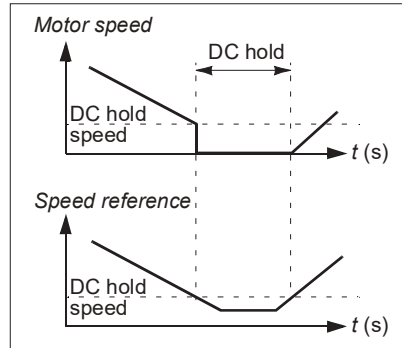

## Speed compensated stop

Speed compensation stop is available, for example, for applications where a conveyor needs to travel a certain distance after receiving the stop command. At maximum speed, the motor is stopped normally along the defined deceleration ramp. Below maximum speed, stop is delayed by running the drive at current speed before the motor is ramped to a stop. As shown in the figure, the distance traveled after the stop command is the same in both cases, that is, area A equals area B.

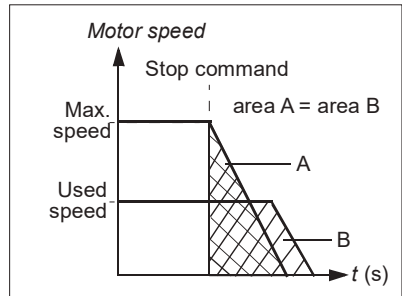

Speed compensation can be restricted to forward or reverse rotating direction.



**Note:** The speed compensated stop feature is active only when the used speed is more than 10% of the maximum speed.

### ■ Settings

Parameter [2102 STOP FUNCTION](#)

## Flux braking

The drive can provide greater deceleration by raising the level of magnetization in the motor. By increasing the motor flux, the energy generated by the motor during braking can be converted to motor thermal energy.

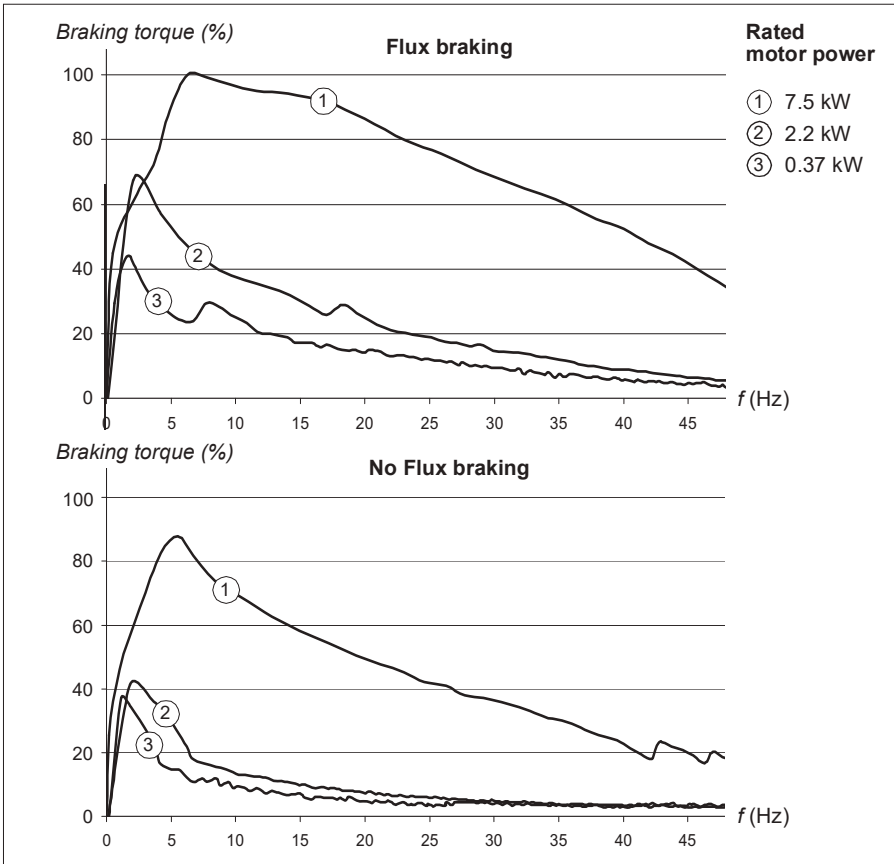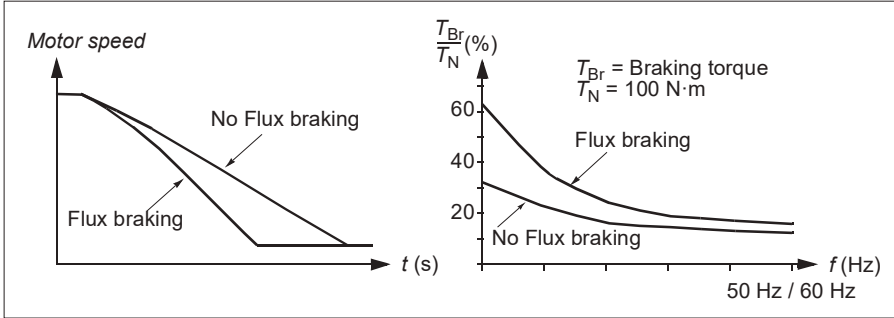

The drive monitors the motor status continuously, also during the Flux braking. Therefore, Flux braking can be used both for stopping the motor and for changing the speed. The other benefits of Flux braking are:

- The braking starts immediately after a stop command is given. The function does not need to wait for the flux reduction before it can start the braking.
- The cooling of the motor is efficient. The stator current of the motor increases during the Flux braking, not the rotor current. The stator cools much more efficiently than the rotor.

## ■ Settings

Parameter [2602 FLUX BRAKING](#)

## Flux optimization

Flux optimization reduces the total energy consumption and motor noise level when the drive operates below the nominal load. The total efficiency (motor and the drive) can be improved by 1% to 10%, depending on the load torque and speed.

## ■ Settings

Parameter [2601 FLUX OPT ENABLE](#)


## Acceleration and deceleration ramps

Two user-selectable acceleration and deceleration ramps are available. It is possible to adjust the acceleration/deceleration times and the ramp shape. Switching between the two ramps can be controlled through a digital input or fieldbus.

The available ramp shape alternatives are Linear and S-curve.

Linear shape is suitable for drives requiring steady or slow acceleration/deceleration.

S-curve shape is ideal for conveyors carrying fragile loads, or other applications where a smooth transition is required when changing the speed.

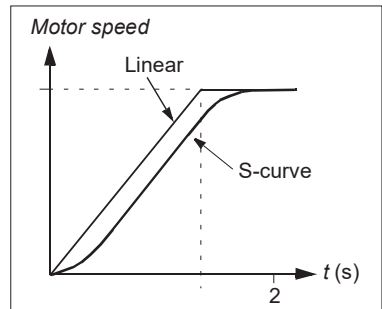

## ■ Settings

Parameter group [22 ACCEL/DECEL](#)

Sequence programming offers eight additional ramp times. See section [Sequence programming](#) on page 169.

## Critical speeds

Critical speeds function is available for applications where it is necessary to avoid certain motor speeds or speed bands because of, eg, mechanical resonance problems. The user can define three critical speeds or speed bands.

### ■ Settings

Parameter group *25 CRITICAL SPEEDS*

## Constant speeds

It is possible to define seven positive constant speeds. Constant speeds are selected with digital inputs. Constant speed activation overrides the external speed reference.

Constant speed selections are ignored if

- torque control is active, or
- PID reference is being followed, or
- drive is in local control mode.


This function operates on a 2 ms time level.

### ■ Settings

| Parameter                       | Additional information  |
|---------------------------------|---|
| Group <i>12 CONSTANT SPEEDS</i> | Constant speed settings   |
| <i>1207</i>                     | Constant speed 6. Used also for jogging function. See section <i>Jogging</i> on page <i>162</i> .   |
| <i>1208</i>                     | Constant speed 7. Used also for fault functions (see group <i>30 FAULT FUNCTIONS</i> ) and for jogging function (see section <i>Jogging</i> on page <i>162</i> ). |

## Custom U/f ratio

The user can define a U/f curve (output voltage as a function of frequency). This custom ratio is used only in special applications where linear and squared U/f ratio are not sufficient (eg, when motor break-away torque needs to be boosted).

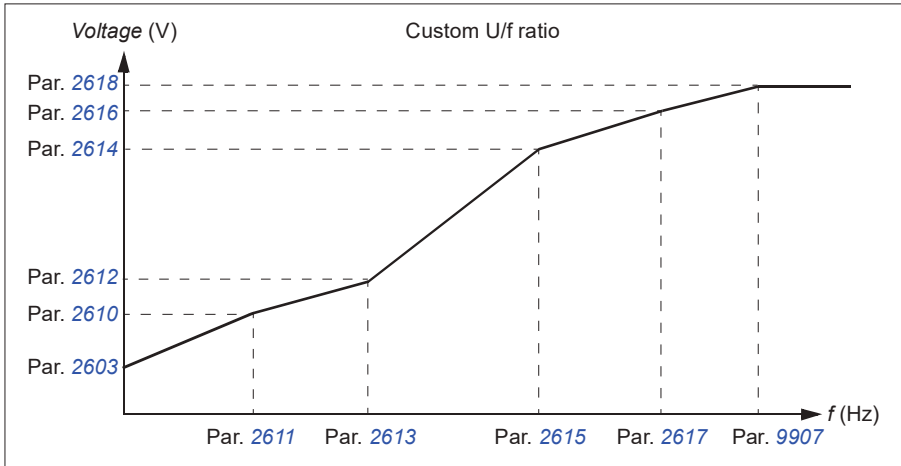

**Note:** The U/f curve can be used in scalar control only, ie, when *9904 MOTOR CTRL MODE* setting is *SCALAR: FREQ.*

**Note:** The voltage and the frequency points of the U/f curve must fulfill the following requirements:

$$2610 < 2612 < 2614 < 2616 < 2618 \text{ and} \\ 2611 < 2613 < 2615 < 2617 < 9907$$



**WARNING!** High voltage at low frequencies may result in poor performance or motor damage (overheating).

### Settings


| Parameter   | Additional information      |
|-------------|-----------------------------|
| 2605        | Custom U/f ratio activation |
| 2610...2618 | Custom U/f ratio settings   |

### Diagnostics


| Fault        | Additional information |
|--------------|------------------------|
| PAR USER U/F | Incorrect U/f ratio    |

## Speed controller tuning

It is possible to manually adjust the controller gain, integration time and derivation time, or let the drive perform a separate speed controller Autotune run (parameter [2305 AUTOTUNE RUN](#)). In Autotune run, the speed controller is tuned based on the load and inertia of the motor and the machine. The figure below shows speed responses at a speed reference step (typically, 1 to 20%).

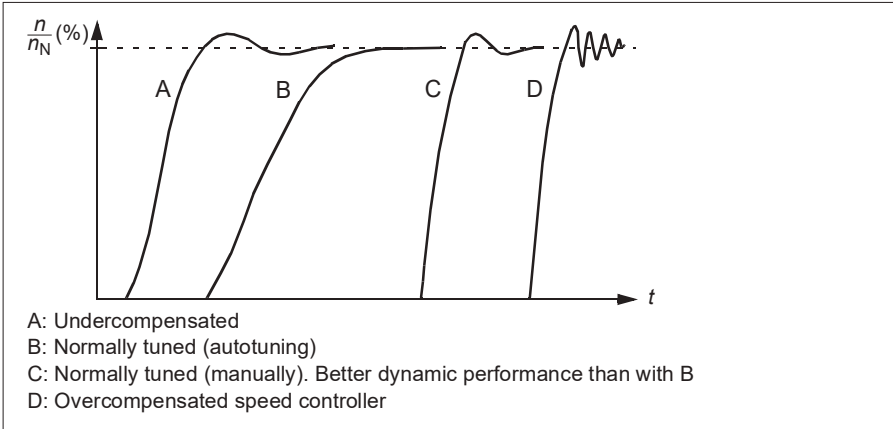

The figure below is a simplified block diagram of the speed controller. The controller output is the reference for the torque controller.

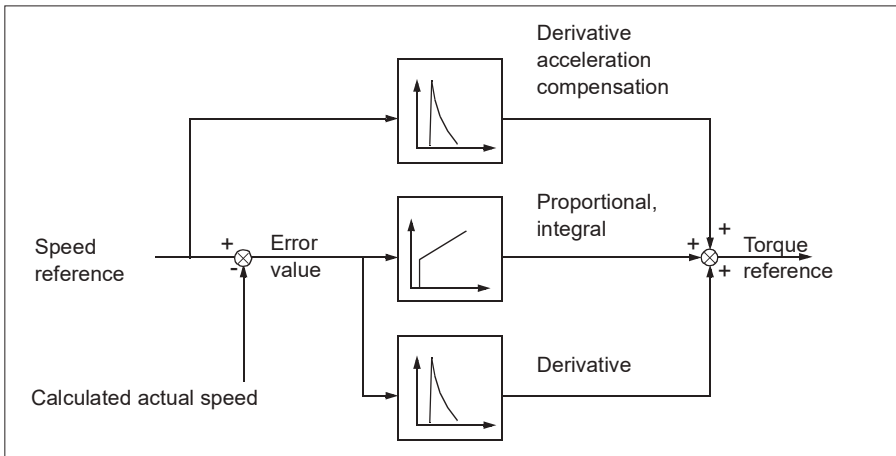

**Note:** The speed controller can be used in vector control, ie, when [9904 MOTOR CTRL MODE](#) setting is [VECTOR: SPEED](#) or [VECTOR: TORQ](#).

## ■ Settings

Parameter groups *23 SPEED CONTROL* and *20 LIMITS*


## ■ Diagnostics

Actual signal *0102 SPEED*

## Speed control performance figures

The table below shows typical performance figures for speed control.

| Speed control    | No pulse encoder             | With pulse encoder           |
|------------------|------------------------------|------------------------------|
| Static accuracy  | 20% of motor nominal slip    | 2% of motor nominal slip     |
| Dynamic accuracy | < 1% s with 100% torque step | < 1% s with 100% torque step |

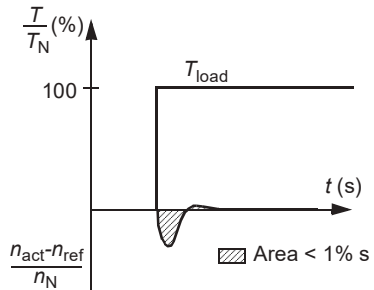


$T_N$  = rated motor torque  
 $n_N$  = rated motor speed  
 $n_{act}$  = actual speed  
 $n_{ref}$  = speed reference



## Torque control performance figures

The drive can perform precise torque control without any speed feedback from the motor shaft. The table below shows typical performance figures for torque control.

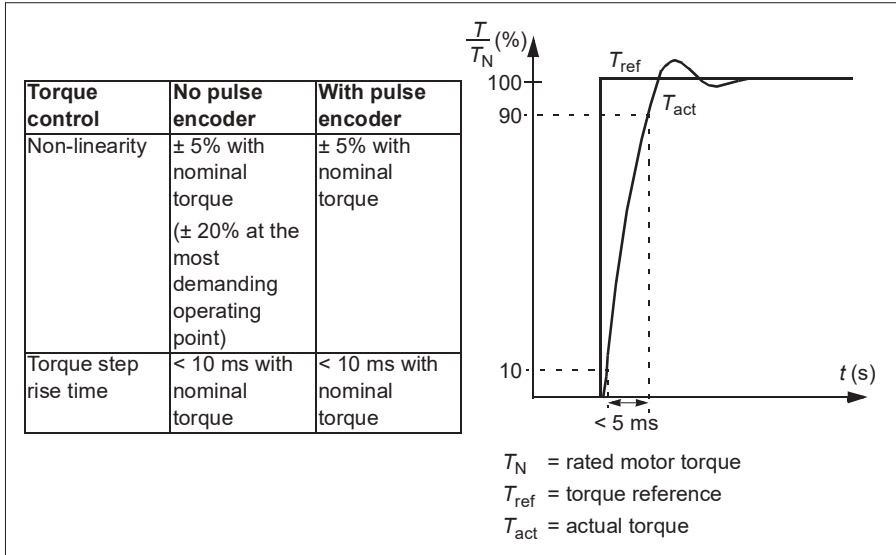

## Scalar control

It is possible to select scalar control as the motor control method instead of vector control. In the scalar control mode, the drive is controlled with a frequency reference.

It is recommended to activate the scalar control mode in the following special applications:

- In multimotor drives: 1) if the load is not equally shared between the motors, 2) if the motors are of different sizes, or 3) if the motors are going to be changed after the motor identification.
- If the nominal motor current is less than 20% of the nominal output current of the drive.
- When the drive is used for test purposes with no motor connected.

The scalar control mode is not recommended for permanent magnet synchronous motors.


In the scalar control mode, some standard features are not available.

### ■ Settings

Parameter [9904 MOTOR CTRL MODE](#)

## IR compensation for a scalar controlled drive

IR compensation is active only when the motor control mode is scalar (see section [Scalar control](#) on page 146). When IR compensation is activated, the drive gives an extra voltage boost to the motor at low speeds. IR compensation is useful in applications that require high break-away torque. In vector control, no IR compensation is possible/needed.

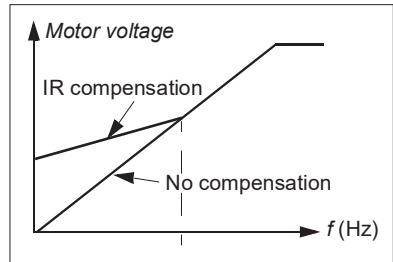

### ■ Settings

Parameter [2603 IR COMP VOLT](#)

## Programmable protection functions

### ■ AI<Min

AI<Min function defines the drive operation if an analog input signal falls below the set minimum limit.

#### Settings

Parameters [3001 AI<MIN FUNCTION](#), [3021 AI1 FAULT LIMIT](#) and [3022 AI2 FAULT LIMIT](#)

### ■ Panel loss

Panel loss function defines the operation of the drive if the control panel selected as the control location for the drive stops communicating.

#### Settings

Parameter [3002 PANEL COMM ERR](#)

### ■ External fault

External faults (1 and 2) can be supervised by defining one digital input as a source for an external fault indication signal.

#### Settings

Parameters [3003 EXTERNAL FAULT 1](#) and [3004 EXTERNAL FAULT 2](#)

### ■ Stall protection

The drive protects the motor in a stall situation. It is possible to adjust the supervision limits (frequency, time) and choose how the drive reacts to the motor stall condition (alarm indication / fault indication & drive stop / no reaction).

## Settings


Parameters [3010 STALL FUNCTION](#), [3011 STALL FREQUENCY](#) and [3012 STALL TIME](#)

### ■ Motor thermal protection

The motor can be protected against overheating by activating the Motor thermal protection function.

The drive calculates the temperature of the motor on the basis of the following assumptions:

- The motor is in the ambient temperature of 30 °C (86 °F) when power is applied to the drive.
- Motor temperature is calculated using either the user-adjustable or automatically calculated motor thermal time constant and motor load curve (see the figures below). The load curve should be adjusted if the ambient temperature exceeds 30 °C (86 °F).

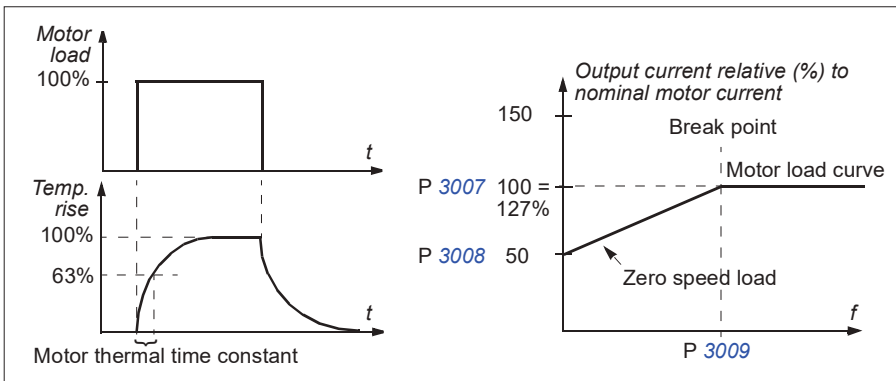

## Settings

Parameters [3005 MOT THERM PROT](#), [3006 MOT THERM TIME](#), [3007 MOT LOAD CURVE](#), [3008 ZERO SPEED LOAD](#) and [3009 BREAK POINT FREQ](#)

**Note:** It is also possible to use the motor temperature measurement function. See section [Motor temperature measurement through the standard I/O](#) on page 157.

### ■ Underload protection

Loss of motor load may indicate a process malfunction. The drive provides an underload function to protect the machinery and process in such a serious fault condition. Supervision limits - underload curve and underload time - can be specified as well as the action taken by the drive upon the underload condition (alarm indication / fault indication & drive stop / no reaction).

## Settings

Parameters [3013 UNDERLOAD FUNC](#), [3014 UNDERLOAD TIME](#) and [3015 UNDERLOAD CURVE](#)

### ■ Earth fault protection

The Earth fault protection detects earth faults in the motor or motor cable. The protection can be selected to be active during start and run or during start only.

An earth fault in the input power line does not activate the protection.

## Settings

Parameter [3017 EARTH FAULT](#)

### ■ Incorrect wiring

Defines the operation when incorrect input power cable connection is detected.

## Settings

Parameter [3023 WIRING FAULT](#)

### ■ Input phase loss

Input phase loss protection circuits supervise the input power cable connection status by detecting intermediate circuit ripple. If a phase is lost, the ripple increases.

## Settings

Parameter [3016 SUPPLY PHASE](#)

## Pre-programmed faults

### ■ Overcurrent

The overcurrent trip limit for the drive is 325% of the drive nominal current.

### ■ DC overvoltage

The DC overvoltage trip limit is 420 V (for 200 V drives) and 840 V (for 400 V drives).

### ■ DC undervoltage

The DC undervoltage trip limit is adaptive. See parameter [2006 UNDERVOLT CTRL](#).

### ■ Drive temperature

The drive supervises the IGBT temperature. There are two supervision limits: Alarm limit and fault trip limit.

---

## ■ Short-circuit

If a short-circuit occurs, the drive will not start and a fault indication is given.

## ■ Internal fault

If the drive detects an internal fault, the drive is stopped and a fault indication is given.

## Operation limits

The drive has adjustable limits for speed, current (maximum), torque (maximum) and DC voltage.

## ■ Settings

Parameter group [20 LIMITS](#)

## Power limit

Power limitation is used to protect the input bridge and the DC intermediate circuit. If the maximum allowed power is exceeded, the drive torque is automatically limited. Maximum overload and continuous power limits depend on the drive hardware. For specific values, see chapter [Technical data](#) on page [375](#).

## Automatic resets

The drive can automatically reset itself after overcurrent, overvoltage, undervoltage, external and “analog input below a minimum” faults. The Automatic resets must be activated by the user.

## ■ Settings

| Parameter                                | Additional information   |
|--|--------------------------|
| Group <a href="#">31 AUTOMATIC RESET</a> | Automatic reset settings |

## ■ Diagnostics

| Alarm                     | Additional information |
|---------------------------|------------------------|
| <a href="#">AUTORESET</a> | Automatic reset alarm  |

## Supervisions

The drive monitors whether certain user selectable variables are within the user-defined limits. The user may set limits for speed, current etc. The supervision status can be indicated through relay or digital output.

The supervision functions operate on a 2 ms time level.

### ■ Settings

Parameter group [32 SUPERVISION](#)

### ■ Diagnostics

| Actual signal                           | Additional information   |
|---|--|
| 1401                                    | Supervision status through RO 1                                      |
| 1402/1403/1410                          | Supervision status through RO 2...4. With option MREL-01 only.       |
| 1805                                    | Supervision status through DO  |
| 8425, 8426 / 8435, 8436 /.../8495, 8496 | Sequence programming state change according to supervision functions |

## Parameter lock

The user can prevent parameter adjustment by activating the parameter lock.

### ■ Settings

Parameters [1602 PARAMETER LOCK](#) and [1603 PASS CODE](#)

## PID control

There are two built-in PID controllers in the drive:

- Process PID (PID1) and
- External/Trim PID (PID2).

The PID controller can be used when the motor speed needs to be controlled based on process variables such as pressure, flow or temperature.

When the PID control is activated, a process reference (setpoint) is connected to the drive instead of a speed reference. An actual value (process feedback) is also brought back to the drive. The drive compares the reference and the actual values, and automatically adjusts the drive speed in order to keep the measured process quantity (actual value) at the desired level (reference).

The control operates on a 2 ms time level.

---

## ■ Process controller PID1

PID1 has two separate sets of parameters (*40 PROCESS PID SET 1*, *41 PROCESS PID SET 2*). Selection between parameter sets 1 and 2 is defined by a parameter.

In most cases when there is only one transducer signal wired to the drive, only parameter set 1 is needed. Two different parameter sets (1 and 2) are used, eg, when the load of the motor changes considerably in time.


## ■ External/Trim controller PID2

PID2 (*42 EXT / TRIM PID*) can be used in two different ways:


- External controller: Instead of using additional PID controller hardware, the user can connect PID2 output through drive analog output or fieldbus controller to control a field instrument like a damper or a valve.
- Trim controller: PID2 can be used to trim or fine tune the reference of the drive. See section *Reference trimming* on page 130.

## ■ Block diagrams

The figure below shows an application example: The controller adjusts the speed of a pressure boost pump according to the measured pressure and the set pressure reference.

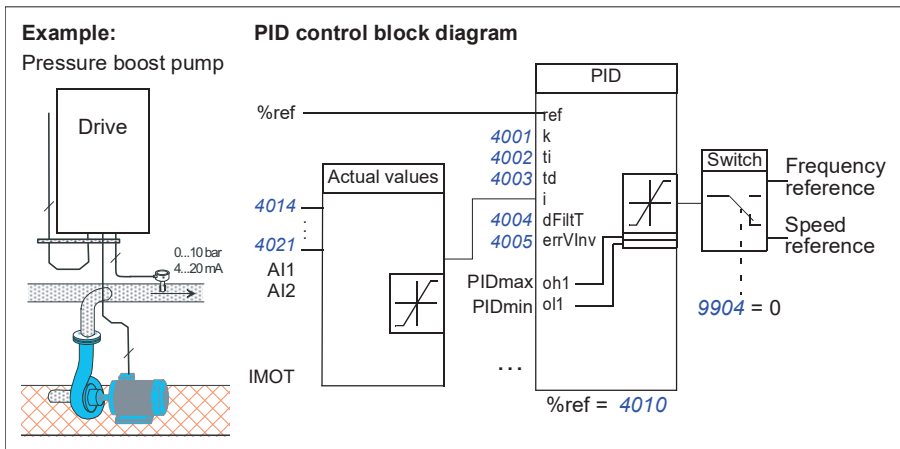

The following figure presents the speed/scalar control block diagram for process controller PID1.

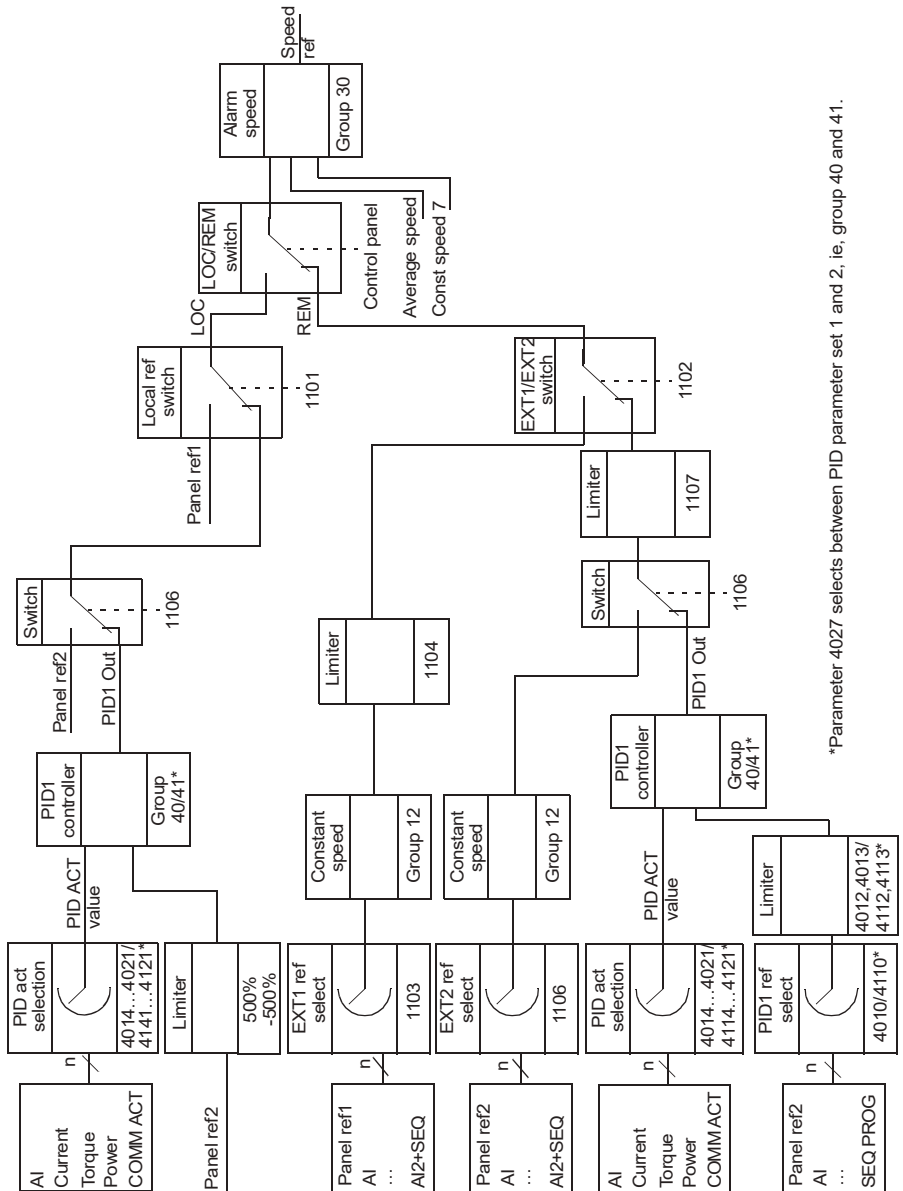

\*Parameter 4027 selects between PID parameter set 1 and 2, ie, group 40 and 41.



## ■ Settings

| Parameter   | Additional information                             |
|---|--|
| 1101  | Local control mode reference type selection        |
| 1102  | <i>EXT1/EXT2</i> selection                         |
| 1106  | PID1 activation                                    |
| 1107  | REF2 minimum limit                                 |
| 1501  | PID2 output (external controller) connection to AO |
| 9902  | PID control macro selection                        |
| Groups <i>40 PROCESS PID SET 1...41 PROCESS PID SET 2</i> | PID1 settings                                      |
| Group <i>42 EXT / TRIM PID</i>                            | PID2 settings                                      |


## ■ Diagnostics

| Actual signal    | Additional information                   |
|------------------|--|
| <i>0126/0127</i> | PID 1/2 output value                     |
| <i>0128/0129</i> | PID 1/2 setpoint value                   |
| <i>0130/0131</i> | PID 1/2 feedback value                   |
| <i>0132/0133</i> | PID 1/2 deviation                        |
| <i>0170</i>      | AO value defined by Sequence programming |

## Sleep function for the process PID (PID1) control


The sleep function operates on a 2 ms time level.

The block diagram below illustrates the sleep function enable/disable logic. The sleep function can be put into use only when the PID control is active.

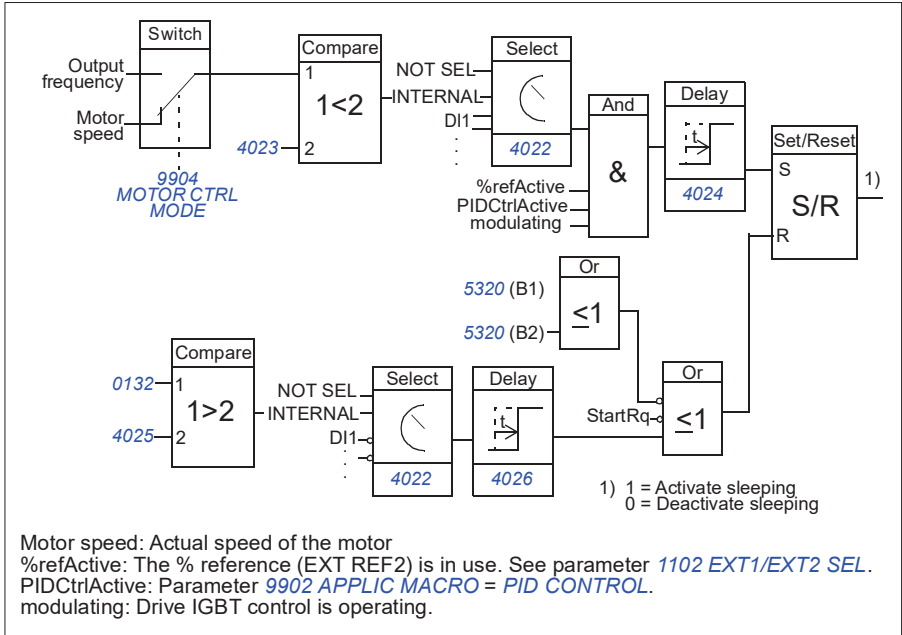

## ■ Example

The time scheme below visualizes the operation of the sleep function.

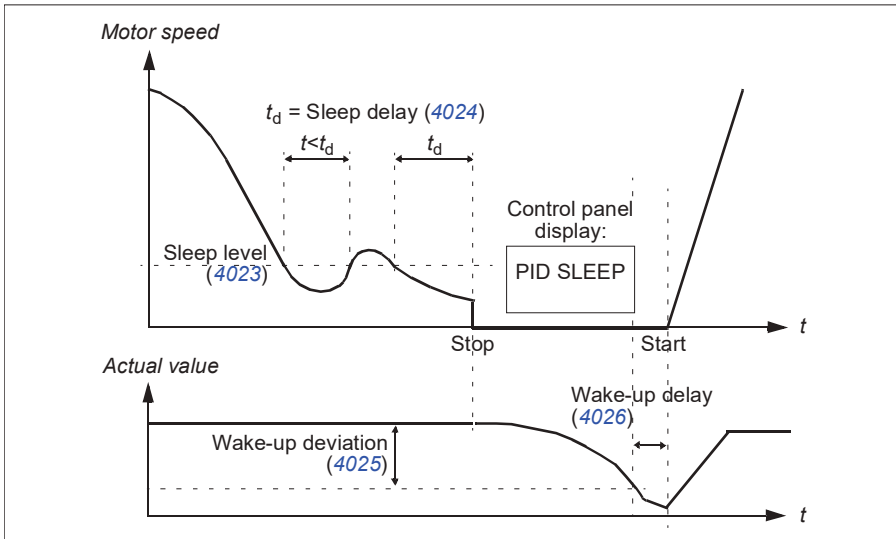

Sleep function for a PID controlled pressure boost pump (when parameter [4022 SLEEP SELECTION](#) is set to [INTERNAL](#)): The water consumption falls at night. As a consequence, the PID process controller decreases the motor speed. However, due to natural losses in the pipes and the low efficiency of the centrifugal pump at low speeds, the motor does not stop but keeps rotating. The sleep function detects the slow rotation, and stops the unnecessary pumping after the sleep delay has passed. The drive shifts into sleep mode, still monitoring the pressure. The pumping restarts when the pressure falls under the allowed minimum level and the wake-up delay has passed.

## ■ Settings

| Parameter                                | Additional information  |
|--|-------------------------|
| <a href="#">9902</a>                     | PID control activation  |
| <a href="#">4022...4026, 4122...4126</a> | Sleep function settings |


## ■ Diagnostics

| Parameter      | Additional information  |
|----------------|---|
| 1401           | PID sleep function status through RO 1                                |
| 1402/1403/1410 | PID sleep function status through RO 2...4. With option MREL-01 only. |
| Alarm          | Additional information  |
| PID SLEEP      | Sleep mode  |

## Motor temperature measurement through the standard I/O

This section describes the temperature measurement of one motor when the drive I/O terminals are used as the connection interface.


Motor temperature can be measured using Pt100 or PTC sensors connected to analog input and output.

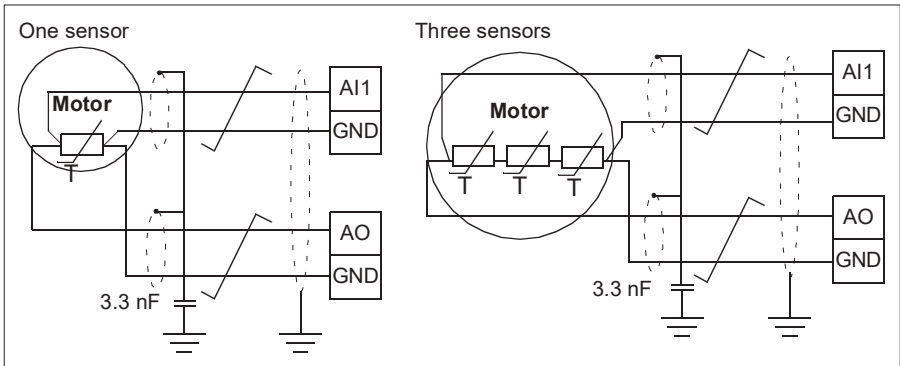

**WARNING!** According to IEC 60664 and IEC 61800-5-1, the connection of the motor temperature sensor requires double or reinforced insulation between motor live parts and the sensor. Reinforced insulation entails a clearance and creepage distance of 8 mm (0.3 in) (400/500 V AC equipment).

If the assembly does not fulfill the requirement, the I/O board terminals must be protected against contact and they may not be connected to other equipment, or the temperature sensor must be isolated from the I/O terminals.

It is also possible to monitor motor temperature by connecting a PTC sensor and a thermistor relay between the +24 V DC voltage supply offered by the drive and a digital input. The figure below displays the connection.

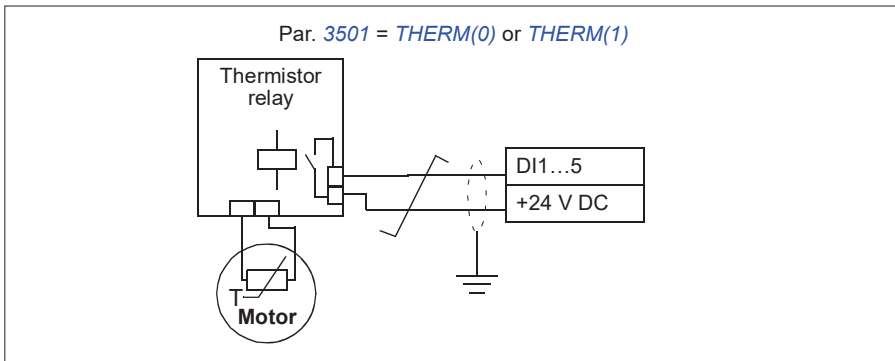

**⚠ WARNING!** According to IEC 60664 and IEC 61800-5-1, the connection of the motor thermistor to the digital input requires double or reinforced insulation between motor live parts and the thermistor. Reinforced insulation entails a clearance and creeping distance of 8 mm (0.3 in) (400/500 V AC equipment).

If the thermistor assembly does not fulfill the requirement, the other I/O terminals of the drive must be protected against contact, or a thermistor relay must be used to isolate the thermistor from the digital input.

## ■ Settings

| Parameter  | Additional information                 |
|--|--|
| Group 13 <i>ANALOG INPUTS</i>  | Analog input settings                  |
| Group 15 <i>ANALOG OUTPUTS</i>   | Analog output settings                 |
| Group 35 <i>MOTOR TEMP MEAS</i>  | Motor temperature measurement settings |
| <b>Other</b>   |  |
| At the motor end the cable shield should be grounded through, eg, a 3.3 nF capacitor. If this is not possible, the shield is to be left unconnected. |  |

## ■ Diagnostics

| Actual signal                  | Additional information |
|--------------------------------|------------------------|
| 0145                           | Motor temperature      |
| <b>Alarm/Fault</b>             |                        |
| <i>MOTOR TEMP/MOT OVERTEMP</i> | Excessive motor temp   |


## Control of a mechanical brake

The mechanical brake is used for holding the motor and driven machinery at zero speed when the drive is stopped, or not powered.

### ■ Example


The figure below shows a brake control application example.

**WARNING!** Make sure that the machinery into which the drive with brake control function is integrated fulfills the personnel safety regulations. Note that the frequency converter (a Complete Drive Module or a Basic Drive Module, as defined in IEC 61800-2), is not considered a safety device mentioned in the European Machinery Directive and related harmonized standards. Thus, the personnel safety of the complete machinery must not be based on a specific frequency converter feature (such as the brake control function), but it has to be implemented as defined in the application specific regulations.

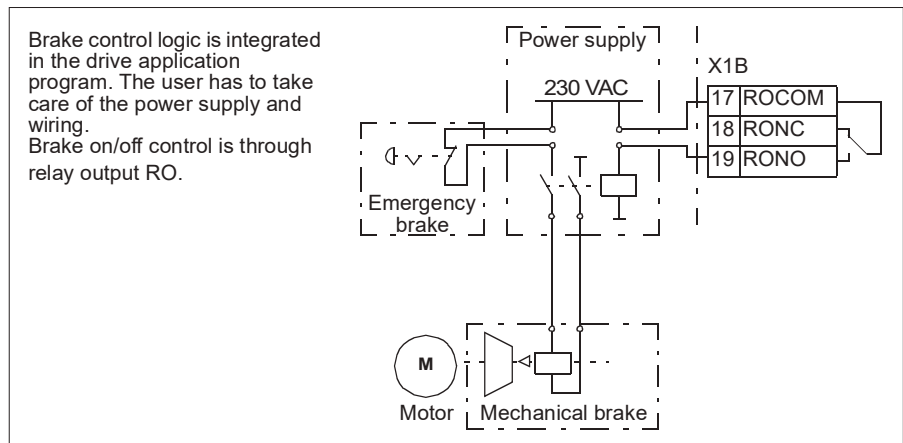


## ■ Operation time scheme

The time scheme below illustrates the operation of the brake control function. See also section [State shifts](#) on page 161.

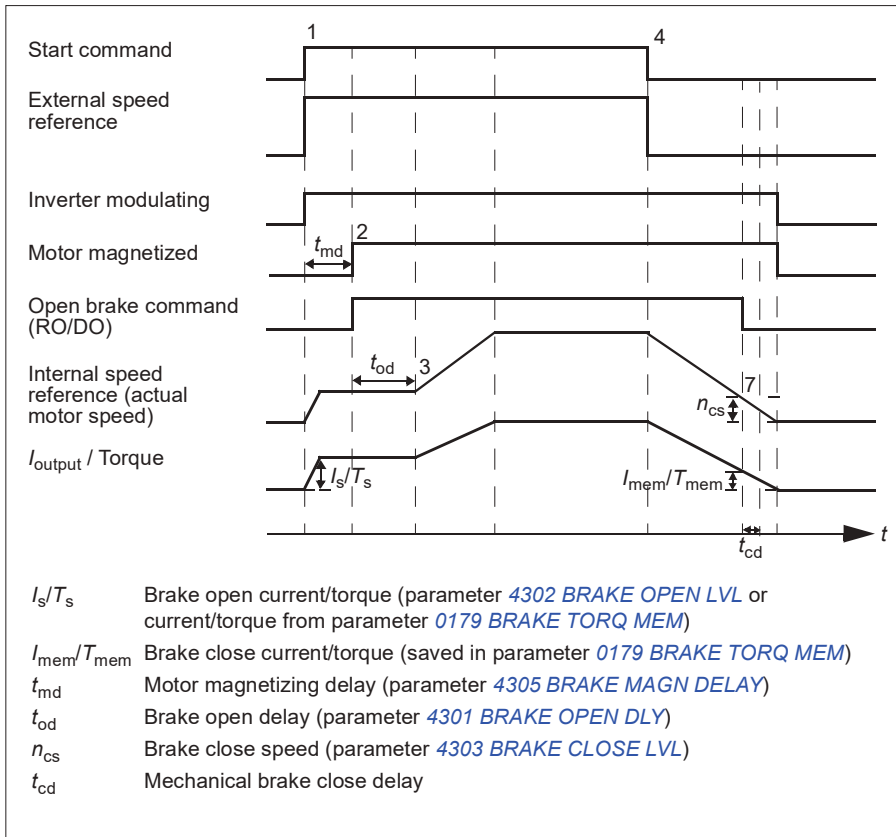

## State shifts

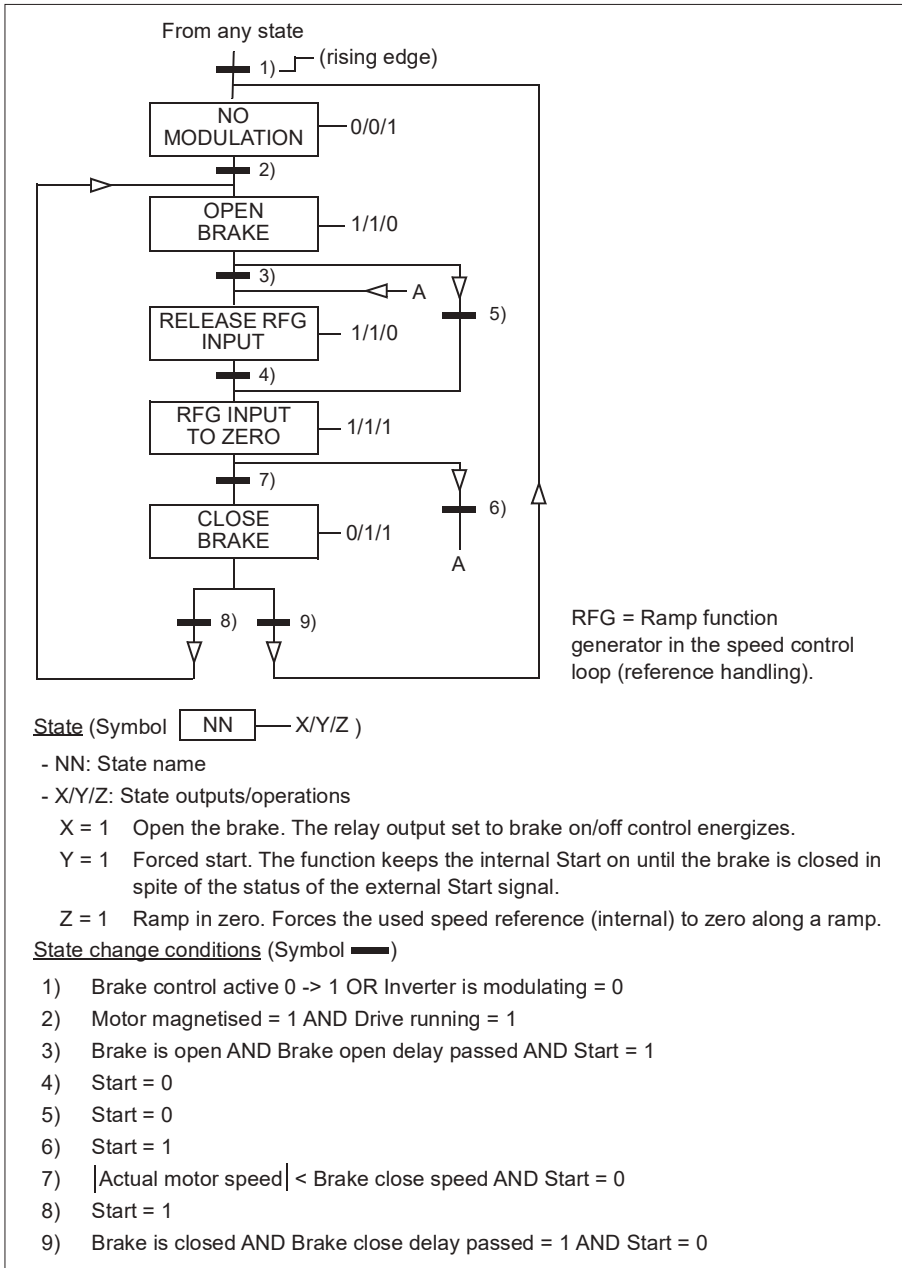



## ■ Settings


| Parameter                                 | Additional information  |
|---|---|
| <a href="#">1401/1805</a>                 | Mechanical brake activation through RO 1 / DO                           |
| <a href="#">1402/1403/1410</a>            | Mechanical brake activation through RO 2...4. With option MREL-01 only. |
| <a href="#">2112</a>                      | Zero speed delay  |
| Group <a href="#">43 MECH BRK CONTROL</a> | Brake function settings   |

## Jogging

The jogging function is typically used to control a cyclical movement of a machine section. One push button controls the drive through the whole cycle: When it is on, the drive starts, accelerates to a preset speed at a preset rate. When it is off, the drive decelerates to zero speed at a preset rate.

The figure and table below describe the operation of the drive. They also represent how the drive shifts to normal operation (= jogging inactive) when the drive start command is switched on. Jog cmd = State of the jogging input, Start cmd = State of the drive start command.

The function operates on a 2 ms time level

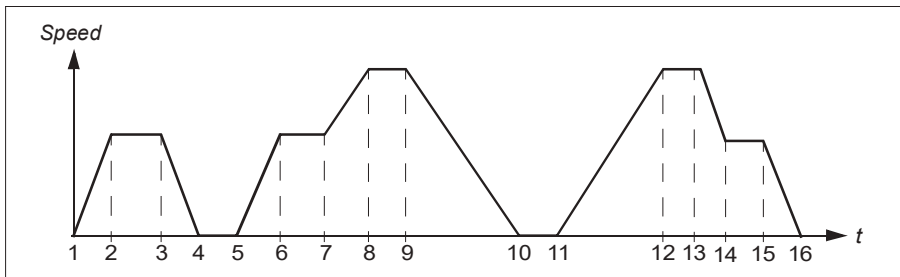

| Phase | Jog cmd | Start cmd | Description  |
|-------|---------|-----------|--|
| 1-2   | 1       | 0         | Drive accelerates to the jogging speed along the acceleration ramp of the jogging function.                          |
| 2-3   | 1       | 0         | Drive runs at the jogging speed.   |
| 3-4   | 0       | 0         | Drive decelerates to zero speed along the deceleration ramp of the jogging function.                                 |
| 4-5   | 0       | 0         | Drive is stopped.  |
| 5-6   | 1       | 0         | Drive accelerates to the jogging speed along the acceleration ramp of the jogging function.                          |
| 6-7   | 1       | 0         | Drive runs at the jogging speed.   |
| 7-8   | x       | 1         | Normal operation overrides the jogging. Drive accelerates to the speed reference along the active acceleration ramp. |
| 8-9   | x       | 1         | Normal operation overrides the jogging. Drive follows the speed reference.   |
| 9-10  | 0       | 0         | Drive decelerates to zero speed along the active deceleration ramp.  |
| 10-11 | 0       | 0         | Drive is stopped.  |
| 11-12 | x       | 1         | Normal operation overrides the jogging. Drive accelerates to the speed reference along the active acceleration ramp. |
| 12-13 | x       | 1         | Normal operation overrides the jogging. Drive follows the speed reference.   |
| 13-14 | 1       | 0         | Drive decelerates to the jogging speed along the deceleration ramp of the jogging function.                          |
| 14-15 | 1       | 0         | Drive runs at the jogging speed.   |
| 15-16 | 0       | 0         | Drive decelerates to zero speed along the deceleration ramp of the jogging function.                                 |

x = state can be either 1 or 0

**Note:** The jogging is not operational when the drive start command is on.

**Note:** The jogging speed overrides the constant speeds.

**Note:** The jogging uses ramp stop even if parameter *2102 STOP FUNCTION* selection is *COAST*.

**Note:** The ramp shape time is set to zero during the jogging (ie, linear ramp).

Jogging function uses constant speed 7 as jogging speed and acceleration/deceleration ramp pair 2.

It is also possible to activate jogging function 1 or 2 through fieldbus. Jogging function 1 uses constant speed 7 and jogging function 2 uses constant speed 6. Both functions use acceleration/deceleration ramp pair 2.

## ■ Settings

| Parameter  | Additional information   |
|------------|--|
| 1010       | Jogging activation   |
| 1208       | Jogging speed  |
| 1208/1207  | Jogging speed for jogging function 1/2 activated through fieldbus                                |
| 2112       | Zero speed delay   |
| 2205, 2206 | Acceleration and deceleration times  |
| 2207       | Acceleration and deceleration ramp shape time: Set to zero during the jogging (ie, linear ramp). |

## ■ Diagnostics

| Actual signal  | Additional information  |
|----------------|---|
| 0302           | Jogging 1/2 activation through fieldbus                             |
| 1401           | Jogging function status through RO 1                                |
| 1402/1403/1410 | Jogging function status through RO 2...4. With option MREL-01 only. |
| 1805           | Jogging function status through DO                                  |

## Real-time clock and timed functions

### ■ Real-time clock

The real-time clock has the following features:

- four daily times
- four weekly times
- timed boost function, eg, a constant speed which is on for a certain pre-programmed time.
- timer enable with digital inputs
- timed constant speed selection
- timed relay activation.

For more information, see Group [36 TIMED FUNCTIONS](#) on page [269](#).

**Note:** To be able to use the timed functions, the internal clock has to be set first. For information on the Time and date mode, see section [Time and date mode](#) on page [100](#).

**Note:** The timed functions work only when the assistant control panel is connected to the drive.

**Note:** Removing the control panel for upload/download purposes does not affect the clock.

**Note:** Daylight saving changeover is automatic if activated.

### ■ Timed functions

A variety of drive functions can be time controlled, eg, start/stop and EXT1/EXT2 control. The drive offers

- four start and stop times ([START TIME 1...START TIME 4](#), [STOP TIME 1...STOP TIME 4](#))
- four start and stop days ([START DAY 1...START DAY 4](#), [STOP DAY 1...STOP DAY 4](#))
- four timed functions for collecting the selected time periods 1...4 together ([TIMED FUNC 1 SRC...TIMED FUNC 4 SRC](#))
- booster time (an additional booster time connected to timed functions).

### Configuring the timed functions


You can use the Timed functions assistant for easy configuring. For more information on the assistants, see section [Assistants mode](#) on page [96](#).

---


Use the control panel to configure the timer in four stages:

1. Enable the timer.  
Configure how the timer is activated. The timer can be enabled from one of the digital inputs or inverted digital inputs.
2. Set the time period.  
Define the start and stop times and start and stop day when the timer operates. These constitute a time period.
3. Create the timer.  
Assign the selected time period to certain timer(s). Different time periods can be collected in a timer and connected to parameters. The timer can act as the source of start/stop and change direction commands, constant speed selection and relay activation signals. Time periods can be in multiple timed functions, but a parameter can only be connected to a single timer. It is possible to create up to four timers.
4. Connect selected parameters to the timer.  
A parameter can only be connected to one timer.

A timed function can be connected to multiple time periods.

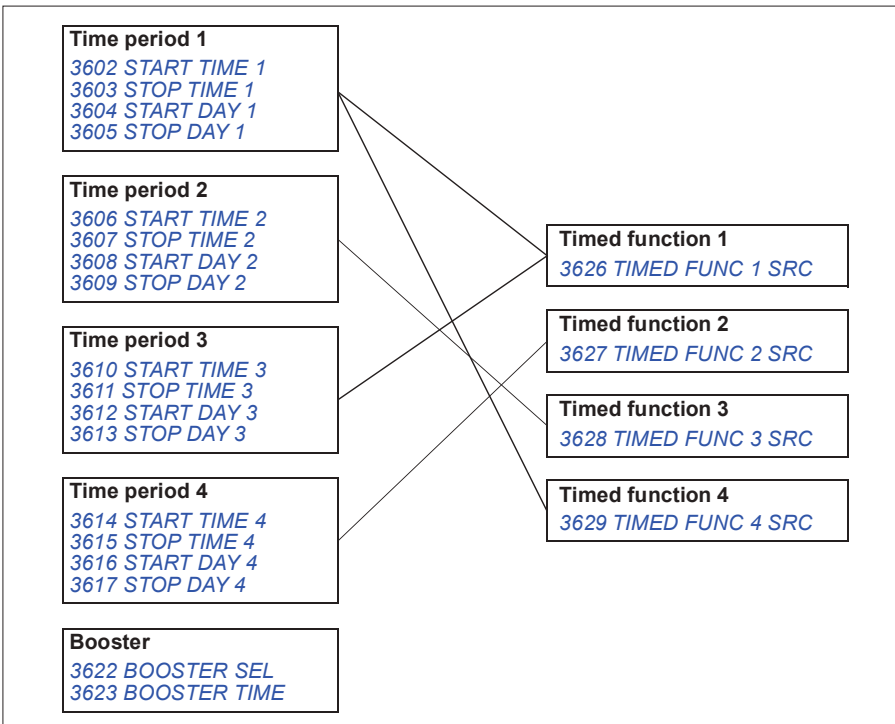

A parameter which is triggered by a timed function can be connected to only one timed function at a time.

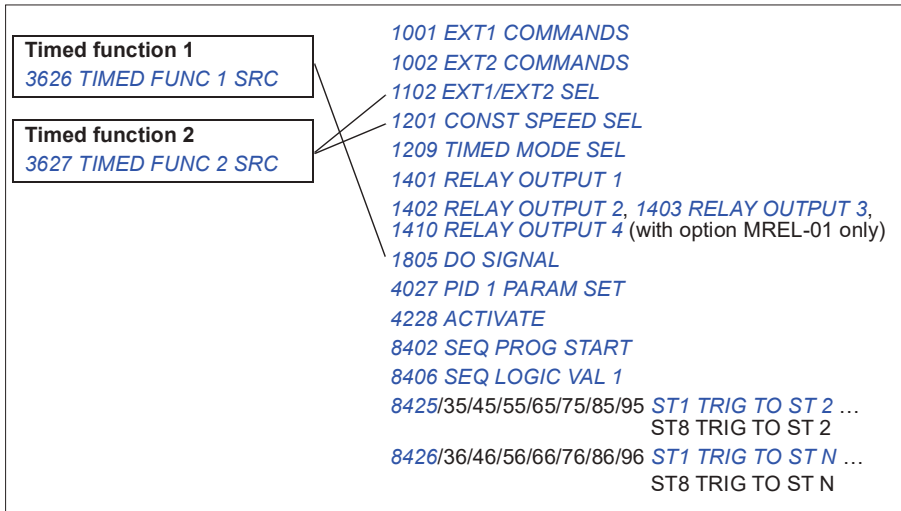

### ■ Example

Air conditioning is active on weekdays from 8:00 to 15:30 (8 a.m to 3:30 p.m) and on Sundays from 12:00 to 15:00 (12 to 3 p.m). By pressing the extension time switch, the air-conditioning is on for an extra hour.

| Parameter                    | Setting   |
|------------------------------|---|
| <i>3601 TIMERS ENABLE</i>    | <i>DI1</i>  |
| <i>3602 START TIME 1</i>     | 08:00:00  |
| <i>3603 STOP TIME 1</i>      | 15:30:00  |
| <i>3604 START DAY 1</i>      | <i>MONDAY</i>   |
| <i>3605 STOP DAY 1</i>       | <i>FRIDAY</i>   |
| <i>3606 START TIME 2</i>     | 12:00:00  |
| <i>3607 STOP TIME 2</i>      | 15:00:00  |
| <i>3608 START DAY 2</i>      | <i>SUNDAY</i>   |
| <i>3609 STOP DAY 2</i>       | <i>SUNDAY</i>   |
| <i>3622 BOOSTER SEL</i>      | <i>DI5 (cannot be the same as parameter 3601 value)</i> |
| <i>3623 BOOSTER TIME</i>     | 01:00:00  |
| <i>3626 TIMED FUNC 1 SRC</i> | <i>T1+T2+B</i>  |

## ■ Settings

| Parameter                 | Additional information   |
|---------------------------|--|
| <b>36 TIMED FUNCTIONS</b> | Timed functions settings   |
| 1001, 1002                | Timed start/stop control   |
| 1102                      | Timed EXT1/EXT2 selection  |
| 1201                      | Timed constant speed 1 activation  |
| 1209                      | Timed speed selection  |
| 1401                      | Timed function status indicated through relay output RO 1                                |
| 1402/1403/1410            | Timed function status indicated through relay output RO 2...4. With option MREL-01 only. |
| 1805                      | Timed function status indicated through digital output DO                                |
| 4027                      | Timed PID1 parameter set 1/2 selection   |
| 4228                      | Timed external PID2 activation   |
| 8402                      | Timed Sequence programming activation  |
| 8425/8435/.../8495        | Sequence programming state change trigger with timed function                            |
| 8426/8436/.../8496        |  |

## Timer

Drive start and stop can be controlled with timer functions.

## ■ Settings

| Parameter                           | Additional information    |
|-------------------------------------|---------------------------|
| 1001, 1002                          | Start/stop signal sources |
| Group 19 <b>TIMER &amp; COUNTER</b> | Timer for start and stop  |

## ■ Diagnostics

| Actual signal | Additional information        |
|---------------|-------------------------------|
| 0165          | Start/stop control time count |

## Counter

Drive start and stop can be controlled with counter functions. The counter function can also be used as state change trigger signal in Sequence programming. See section [Sequence programming](#) on page 169.

### ■ Settings

| Parameter                                | Additional information   |
|--|--|
| 1001, 1002                               | Start/Stop signal sources                                      |
| Group 19 <b>TIMER &amp; COUNTER</b>      | Timer for start and stop                                       |
| 8425, 8426 / 8435, 8436 / .../8495, 8496 | Counter signal as state change trigger in Sequence programming |

### ■ Diagnostics

| Actual signal | Additional information         |
|---------------|--------------------------------|
| 0166          | Start/stop control pulse count |

## Sequence programming

The drive can be programmed to perform a sequence where the drive shifts typically through 1...8 states. User defines the operation rules for the whole sequence and for each state. The rules of a particular state are effective when the Sequence program is active and the program has entered the state. The rules to be defined for each state are:

- Run, stop and direction commands for the drive (forward/reverse/stop)
- Acceleration and deceleration ramp time for the drive
- Source for the drive reference value
- State duration
- RO/DO/AO status
- Signal source for triggering the shift to the next state
- Signal source for triggering the shift to any state (1...8).

Every state can also activate drive outputs to give an indication to external devices.

Sequence programming allows state transitions either to the next state or to a selected state. State change can be activated with, eg, timed functions, digital inputs and supervision functions.

Sequence programming can be applied in simple mixer applications as well as in more complicated traverse applications.

The programming can be done with control panel or with a PC tool. The drive is supported by version 2.91 or later of the DriveWindow Light 2 PC tool which includes a graphical Sequence programming tool.



**Note:** By default all Sequence programming parameters can be changed even when the Sequence programming is active. It is recommended that after the Sequence programming parameters are set, parameters are locked with parameter **1602 PARAMETER LOCK**.


## ■ Settings

| Parameter                           | Additional information   |
|-------------------------------------|--|
| <i>1001/1002</i>                    | Start, stop and direction commands for EXT1/EXT2   |
| <i>1102</i>                         | EXT1/EXT2 selection  |
| <i>1106</i>                         | REF2 source  |
| <i>1201</i>                         | Constant speed deactivation. Constant speed always overrides the Sequence programming reference. |
| <i>1401</i>                         | Sequence programming output through RO 1   |
| <i>1402/1403/1410</i>               | Sequence programming output through relay output RO 2...4. With option MREL-01 only.             |
| <i>1501</i>                         | Sequence programming output through AO   |
| <i>1601</i>                         | Run enable activation/deactivation   |
| <i>1805</i>                         | Sequence programming output through DO   |
| Group <i>19 TIMER &amp; COUNTER</i> | State change according to counter limit  |
| Group <i>32 SUPERVISION</i>         | Timed state change   |
| <i>2201...2207</i>                  | Acceleration/deceleration and ramp time settings   |
| Group <i>32 SUPERVISION</i>         | Supervision settings   |
| <i>4010/4110/4210</i>               | Sequence programming output as PID reference signal  |
| Group <i>84 SEQUENCE PROG</i>       | Sequence programming settings  |


## ■ Diagnostics

| Actual signal | Additional information                     |
|---------------|--|
| <i>0167</i>   | Sequence programming status                |
| <i>0168</i>   | Sequence programming active state          |
| <i>0169</i>   | Current state time counter                 |
| <i>0170</i>   | Analog output PID reference control values |
| <i>0171</i>   | Executed sequence counter                  |

■ State shifts

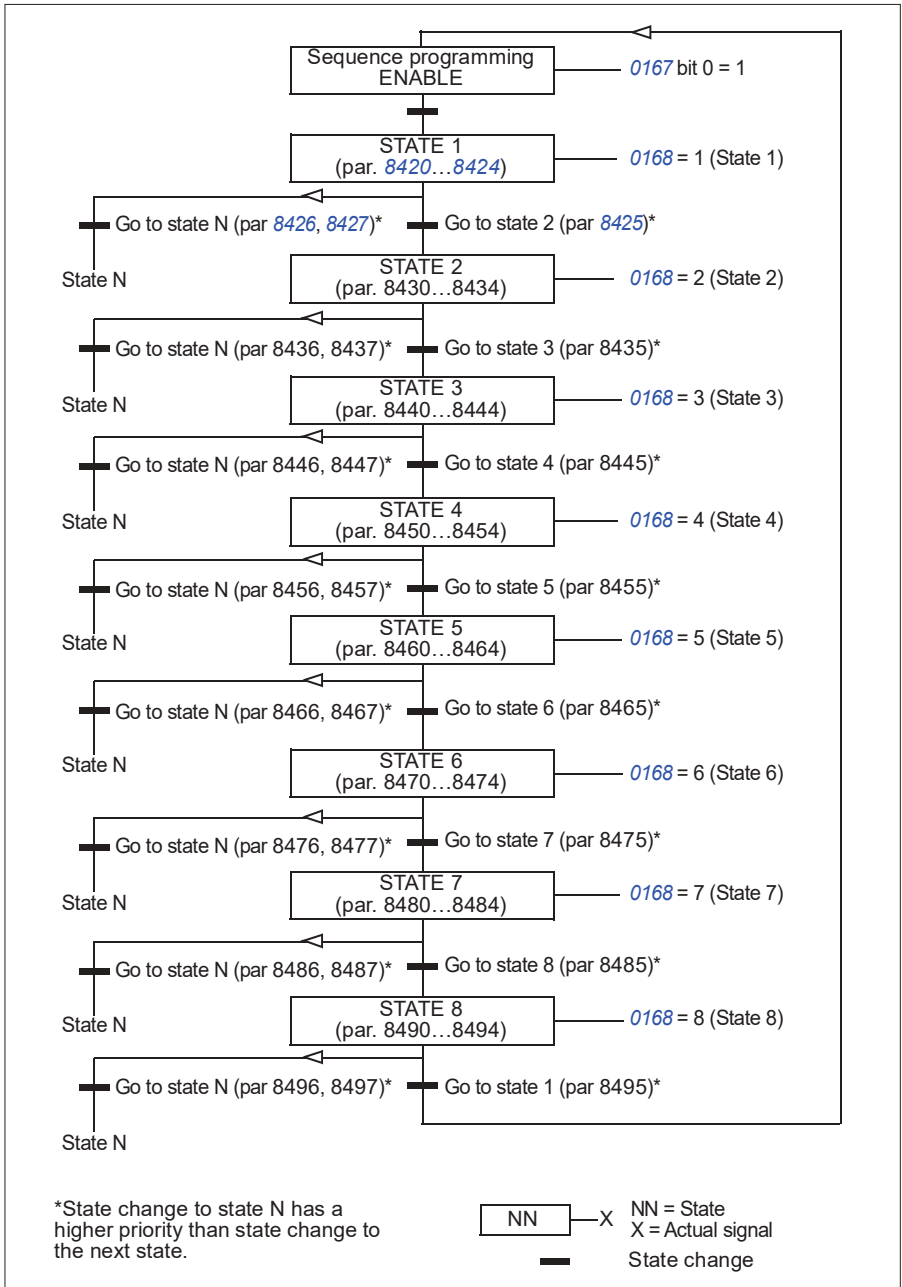

## ■ Example 1

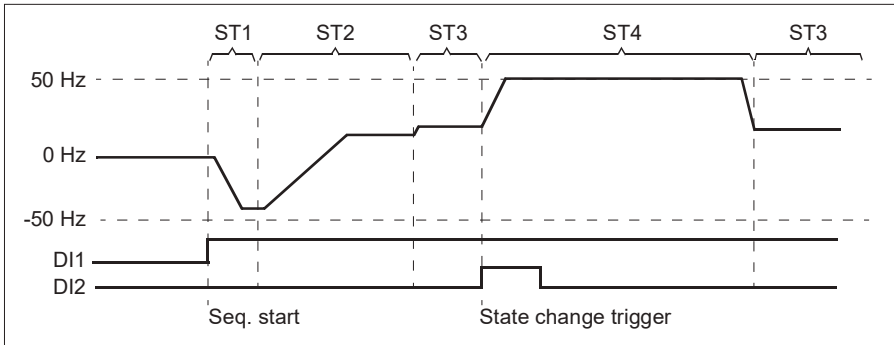

Sequence programming is activated by digital input DI1.

ST1: Drive is started in reverse direction with -50 Hz reference and 10 s ramp time. State 1 is active for 40 s.

ST2: Drive is accelerated to 20 Hz with 60 s ramp time. State 2 is active for 120 s.


ST3: Drive is accelerated to 25 Hz with 5 s ramp time. State 3 is active until the Sequence programming is disabled or until booster start is activated by DI2.

ST4: Drive is accelerated to 50 Hz with 5 s ramp time. State 4 is active for 200 s and after that the state shifts back to state 3.

| Parameter            | Setting  | Additional information  |
|----------------------|----------|---|
| 1002 EXT2 COMMANDS   | SEQ PROG | Start, stop, direction commands for EXT2  |
| 1102 EXT1/EXT2 SEL   | EXT2     | EXT2 activation   |
| 1106 REF2 SELECT     | SEQ PROG | Sequence programming output as REF2   |
| 1601 RUN ENABLE      | NOT SEL  | Deactivation of Run enable  |
| 2102 STOP FUNCTION   | RAMP     | Ramp stop   |
| 2201 ACC/DEC 1/2 SEL | SEQ PROG | Ramp as defined by parameter 8422.../8452.  |
| 8401 SEQ PROG ENABLE | ALWAYS   | Sequence programming enabled  |
| 8402 SEQ PROG START  | DI1      | Sequence programming activation through digital input (DI1)                         |
| 8404 SEQ PROG RESET  | DI1(INV) | Sequence programming reset (ie, reset to state 1, when DI1 signal is lost (1 -> 0)) |

| ST1                   |            | ST2  |            | ST3  |           | ST4  |            | Additional information          |
|-----------------------|------------|------|------------|------|-----------|------|------------|---------------------------------|
| Par.                  | Setting    | Par. | Setting    | Par. | Setting   | Par. | Setting    |                                 |
| 8420 ST1 REF SEL      | 100%       | 8430 | 40%        | 8440 | 50%       | 8450 | 100%       | State reference                 |
| 8421 ST1 COMMANDS     | START REV  | 8431 | START FRW  | 8441 | START FRW | 8451 | START FRW  | Run, direction and stop command |
| 8422 ST1 RAMP         | 10 s       | 8432 | 60 s       | 8442 | 5 s       | 8452 | 5 s        | Ramp time                       |
| 8424 ST1 CHANGE DLY   | 40 s       | 8434 | 120 s      | 8444 |           | 8454 | 200 s      | State change delay              |
| 8425 ST1 TRIG TO ST 2 | CHANGE DLY | 8435 | CHANGE DLY | 8445 | DI2       | 8455 |            | State change trigger            |
| 8426 ST1 TRIG TO ST N | NOT SEL    | 8436 | NOT SEL    | 8446 | NOT SEL   | 8456 | CHANGE DLY |                                 |
| 8427 ST1 STATE N      | -          | 8437 | -          | 8447 | -         | 8457 | STATE 3    |                                 |

### ■ Example 2

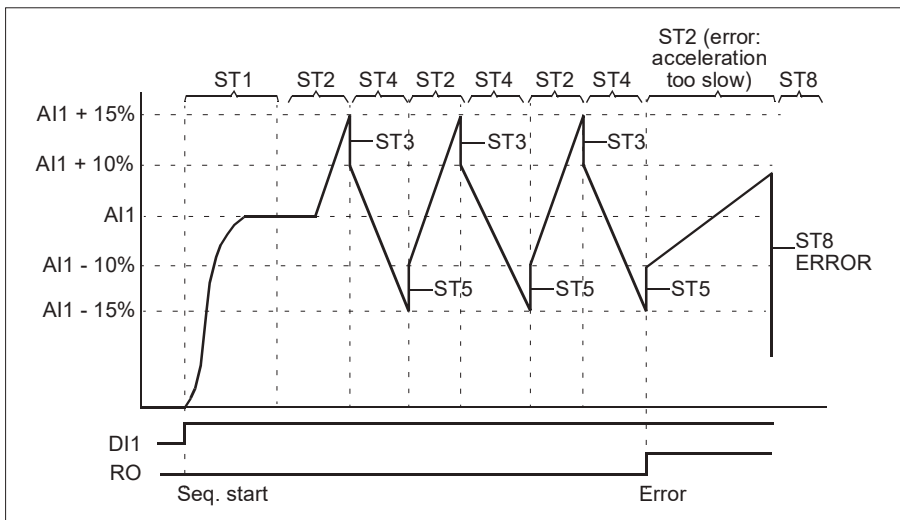

Drive is programmed for traverse control with 30 sequences.

Sequence programming is activated by digital input DI1

ST1: Drive is started in forward direction with AI1 (AI1 + 50% - 50%) reference and ramp pair 2. State shifts to the next state when reference is reached. All relay and analog outputs are cleared.

ST2: Drive is accelerated with AI1 + 15% (AI1 + 65% - 50%) reference and 1.5 s ramp time. State shifts to the next state when reference is reached. If reference is not reached within 2 s, state shifts to state 8 (error state).

ST3: Drive is decelerated with AI1 + 10% (AI1 + 60% - 50%) reference and 0 s ramp time<sup>1)</sup>. State shifts to the next state when reference is reached. If reference is not reached within 0.2 s, state shifts to state 8 (error state).

ST4: Drive is decelerated with AI1 - 15% (AI1 + 35% -50%) reference and 1.5 s ramp time. State shifts to the next state when reference is reached. If reference is not reached within 2 s, state shifts to state 8 (error state).<sup>2)</sup>

ST5: Drive is accelerated with AI1 -10% (AI1 + 40% -50%) reference and 0 s ramp time<sup>1)</sup>. State shifts to the next state when reference is reached. Sequence counter value is increased by 1. If sequence counter elapses, state shifts to state 7 (sequence completed).

ST6: Drive reference and ramp times are the same as in state 2. Drive state shifts immediately to state 2 (delay time is 0 s).

ST7 (sequence completed): Drive is stopped with ramp pair 1. Digital output DO is activated. If Sequence programming is deactivated by the falling edge of digital input DI1, state machine is reset to state 1. New start command can be activated by digital input DI1 or by digital inputs DI4 and DI5 (both inputs DI4 and DI5 must be simultaneously active).

ST8 (error state): Drive is stopped with ramp pair 1. Relay output RO is activated. If Sequence programming is deactivated by the falling edge of digital input DI1, state machine is reset to state 1. New start command can be activated by digital input DI1 or by digital inputs DI4 and DI5 (both inputs DI4 and DI5 must be simultaneously active).

<sup>1)</sup> 0 second ramp time = drive is accelerated/decelerated as rapidly as possible.

<sup>2)</sup> State reference must be between 0...100%, ie, scaled AI1 value must be between 15...85%. If AI1 = 0, reference = 0% + 35% -50% = -15% < 0%.

| Parameter             | Setting         | Additional information  |
|-----------------------|-----------------|---|
| 1002 EXT2 COMMANDS    | SEQ PROG        | Start, stop, direction commands for EXT2  |
| 1102 EXT1/EXT2 SEL    | EXT2            | EXT2 activation   |
| 1106 REF2 SELECT      | A11+SEQ<br>PROG | Sequence programming output as REF2   |
| 1201 CONST SPEED SEL  | NOT SEL         | Deactivation of constant speeds   |
| 1401 RELAY OUTPUT 1   | SEQ PROG        | Relay output RO 1 control as defined by parameter 8423/.../8493   |
| 1601 RUN ENABLE       | NOT SEL         | Deactivation of Run enable  |
| 1805 DO SIGNAL        | SEQ PROG        | Digital output DO control as defined by parameter 8423/.../8493   |
| 2102 STOP FUNCTION    | RAMP            | Ramp stop   |
| 2201 ACC/DEC 1/2 SEL  | SEQ PROG        | Ramp as defined by parameter 8422/.../8452.   |
| 2202 ACCELER TIME 1   | 1 s             | Acceleration/deceleration ramp pair 1   |
| 2203 DECELER TIME 1   | 0 s             |   |
| 2205 ACCELER TIME 2   | 20 s            | Acceleration/deceleration ramp pair 2   |
| 2206 DECELER TIME 2   | 20 s            |   |
| 2207 RAMP SHAPE 2     | 5 s             | Shape of the acceleration/deceleration ramp 2   |
| 3201 SUPERV 1 PARAM   | 171             | Sequence counter (signal 0171 SEQ CYCLE CNTR) supervision   |
| 3202 SUPERV 1 LIM LO  | 30              | Supervision low limit   |
| 3203 SUPERV 1 LIM HI  | 30              | Supervision high limit  |
| 8401 SEQ PROG ENABLE  | EXT2            | Sequence programming enabled  |
| 8402 SEQ PROG START   | DI1             | Sequence programming activation through digital input (DI1)   |
| 8404 SEQ PROG RESET   | DI1(INV)        | Sequence programming reset (ie, reset to state 1, when DI1 signal is lost (1 -> 0))                             |
| 8406 SEQ LOGIC VAL 1  | DI4             | Logic value 1   |
| 8407 SEQ LOGIC OPER 1 | AND             | Operation between logic value 1 and 2   |
| 8408 SEQ LOGIC VAL 2  | DI5             | Logic value 2   |
| 8415 CYCLE CNT LOC    | ST5 TO NEXT     | Sequence counter activation, ie, sequence count increases every time the state changes from state 5 to state 6. |
| 8416 CYCLE CNT RST    | STATE 1         | Sequence counter reset during state transition to state 1   |

| ST1                   |                    | ST2  |              | ST3  |              | ST4  |              | Additional information                   |
|-----------------------|--------------------|------|--------------|------|--------------|------|--------------|--|
| Par.                  | Setting            | Par. | Setting      | Par. | Setting      | Par. | Setting      |  |
| 8420 ST1 REF SEL      | 50%                | 8430 | 65%          | 8440 | 60%          | 8450 | 35%          | State reference                          |
| 8421 ST1 COMMANDS     | START FRW          | 8431 | START FRW    | 8441 | START FRW    | 8451 | START FRW    | Run, direction and stop commands         |
| 8422 ST1 RAMP         | -0.2 (ramp pair 2) | 8432 | 1.5 s        | 8442 | 0 s          | 8452 | 1.5 s        | Acceleration/ deceleration ramp time     |
| 8423 ST1 OUT CONTROL  | R=0,D=0 ,AO=0      | 8433 | AO=0         | 8443 | AO=0         | 8453 | AO=0         | Relay, digital and analog output control |
| 8424 ST1 CHANGE DLY   | 0 s                | 8434 | 2 s          | 8444 | 0.2 s        | 8454 | 2 s          | State change delay                       |
| 8425 ST1 TRIG TO ST 2 | ENTER SETPNT       | 8435 | ENTER SETPNT | 8445 | ENTER SETPNT | 8455 | ENTER SETPNT | State change trigger                     |
| 8426 ST1 TRIG TO ST N | NOT SEL            | 8436 | CHANGE DLY   | 8446 | CHANGE DLY   | 8456 | CHANGE DLY   |  |
| 8427 ST1 STATE N      | STATE 1            | 8437 | STATE 8      | 8447 | STATE 8      | 8457 | STATE 8      |  |

| ST5                  |           | ST6  |           | ST7  |                    | ST8  |                    | Additional information                   |
|----------------------|-----------|------|-----------|------|--------------------|------|--------------------|--|
| Par.                 | Setting   | Par. | Setting   | Par. | Setting            | Par. | Setting            |  |
| 8460 ST5 REF SEL     | 40%       | 8470 | 65%       | 8480 | 0%                 | 8490 | 0%                 | State reference                          |
| 8461 ST5 COMMANDS    | START FRW | 8471 | START FRW | 8481 | DRIVE STOP         | 8491 | DRIVE STOP         | Run, direction and stop commands         |
| 8462 ST5 RAMP        | 0 s       | 8472 | 1.5 s     | 8482 | -0.1 (ramp pair 1) | 8492 | -0.1 (ramp pair 1) | Acceleration/ deceleration ramp time     |
| 8463 ST5 OUT CONTROL | AO=0      | 8473 | AO=0      | 8483 | DO=1               | 8493 | RO=1               | Relay, digital and analog output control |

| ST5                      |                 | ST6  |                | ST7  |              | ST8  |              | Additional information |
|--------------------------|-----------------|------|----------------|------|--------------|------|--------------|------------------------|
| Par.                     | Setting         | Par. | Setting        | Par. | Setting      | Par. | Setting      |                        |
| 8464 ST5<br>CHANGE DLY   | 0.2 s           | 8474 | 0 s            | 8484 | 0 s          | 8494 | 0 s          | State change delay     |
| 8465 ST5<br>TRIG TO ST6  | ENTER<br>SETPNT | 8475 | NOT SEL        | 8485 | NOT SEL      | 8495 | LOGIC<br>VAL | State change trigger   |
| 8466 ST5<br>TRIG TO ST N | SUPRV1<br>OVER  | 8476 | CHANG<br>E DLY | 8486 | LOGIC<br>VAL | 8496 | NOT SEL      |                        |
| 8467 ST5<br>STATE N      | STATE 7         | 8477 | STATE 2        | 8487 | STATE 1      | 8497 | STATE 1      |                        |

## Safe torque off (STO) function

See [Appendix: Safe torque off \(STO\)](#) on page 419.



[www.nicsanat.com](http://www.nicsanat.com)

021-87700210



# 12

## Actual signals and parameters

---

### What this chapter contains

The chapter describes the actual signals and parameters and gives the fieldbus equivalent values for each signal/parameter. It also contains a table of the default values for the different macros.

### Terms and abbreviations

| Term          | Definition  |
|---------------|---|
| Actual signal | Signal measured or calculated by the drive. Can be monitored by the user. No user setting possible. Groups 01...04 contain actual signals.  |
| Def           | Parameter default value   |
| Parameter     | A user-adjustable operation instruction of the drive. Groups 10...99 contain parameters.<br><b>Note:</b> Parameter selections are shown on the basic control panel as integer values. For example, parameter <i>1001 EXT1 COMMANDS</i> selection <i>COMM</i> is shown as value 10 (which is equal to the fieldbus equivalent FbEq). |
| FbEq          | Fieldbus equivalent: The scaling between the value and the integer used in serial communication.  |
| E             | Refers to types 01E- and 03E- with European parametrization   |
| U             | Refers to types 01U- and 03U- with US parametrization   |

### Fieldbus addresses

For FCAN-01 CANopen adapter module, FCNA-01 ControlNet adapter module, FDNA-01 DeviceNet adapter module, FECA-01 EtherCAT adapter module, FENA-01 Ethernet adapter module, FEPL-02 Ethernet POWERLINK adapter module, FMBA-01 Modbus adapter module, FLON-01 LonWorks® adapter module, FPBA-01

---

PROFIBUS DP adapter module and FSCA-01 Modbus adapter module, see the user's manual of the adapter module.

## Fieldbus equivalent

**Example:** If *2017 MAX TORQUE 1* (see page 225) is set from an external control system, an integer value of 1000 corresponds to 100.0%. All the read and sent values are limited to 16 bits (-32768...32767).

## Storing the parameters

All parameter settings are stored automatically to the permanent memory of the drive. However, if an external +24 V DC power supply is used for the drive control unit, it is highly recommended to force a save using parameter *1607 PARAM SAVE* before powering down the control unit after any parameter changes.

## Default values with different macros

When the application macro is changed (parameter *9902 APPLIC MACRO*), the software updates the parameter values to their default values. The table below shows the parameter default values for different macros. For other parameters, the default values are the same for all macros (shown in the parameter list starting on page 191).

If you have made changes to the parameter values and want to restore the default values, you must first select another macro (parameter *9902 APPLIC MACRO*), save the change, select the original macro again and save. This restores the default parameter values of the original macro.

---

The default values for the AC500 Modbus application macro correspond to the ABB Standard macro with some differences, see section *AC500 Modbus macro* on page 117.

| Index Name/<br>Selection | ABB<br>STANDARD        | 3-WIRE                  | ALTERNA<br>TE           | MOTOR<br>POT            | HAND/<br>AUTO           | PID<br>CONTROL         | TORQUE<br>CONTROL      |
|--------------------------|------------------------|-------------------------|-------------------------|-------------------------|-------------------------|------------------------|------------------------|
| 9902 APPLIC<br>MACRO     | 1 =<br>ABB<br>STANDARD | 2 =<br>3-WIRE           | 3 =<br>ALTERNAT<br>E    | 4 =<br>MOTOR<br>POT     | 5 =<br>HAND/AUT<br>O    | 6 =<br>PID<br>CONTROL  | 7 =<br>TORQUE<br>CTRL  |
| 1001 EXT1<br>COMMANDS    | 2 = DI1,2              | 4 =<br>DI1P,2P,3        | 9 = DI1F,2R             | 2 = DI1,2               | 2 = DI1,2               | 20 = DI5               | 2 = DI1,2              |
| 1002 EXT2<br>COMMANDS    | 0 = NOT<br>SEL         | 0 = NOT<br>SEL          | 0 = NOT<br>SEL          | 0 = NOT<br>SEL          | 21 = DI5,4              | 1 = DI1                | 2 = DI1,2              |
| 1003 DIRECTION           | 3 =<br>REQUEST         | 3 =<br>REQUEST          | 3 =<br>REQUEST          | 3 =<br>REQUEST          | 3 =<br>REQUEST          | 1 =<br>FORWARD         | 3 =<br>REQUEST         |
| 1102 EXT1/EXT2<br>SEL    | 0 = EXT1               | 0 = EXT1                | 0 = EXT1                | 0 = EXT1                | 3 = DI3                 | -2 =<br>DI2(INV)       | 3 = DI3                |
| 1103 REF1 SELECT         | 1 = AI1                | 1 = AI1                 | 1 = AI1                 | 12 =<br>DI3U,4D(N<br>C) | 1 = AI1                 | 1 = AI1                | 1 = AI1                |
| 1106 REF2 SELECT         | 2 = AI2                | 2 = AI2                 | 2 = AI2                 | 2 = AI2                 | 2 = AI2                 | 19 =<br>PID1OUT        | 2 = AI2                |
| 1201 CONST<br>SPEED SEL  | 9 = DI3,4              | 10 = DI4,5              | 9 = DI3,4               | 5 = DI5                 | 0 = NOT<br>SEL          | 3 = DI3                | 4 = DI4                |
| 1304 MINIMUM AI2         | 1.0%                   | 1.0%                    | 1.0%                    | 1.0%                    | 20.0%                   | 20.0%                  | 20.0%                  |
| 1501 AO1<br>CONTENT SEL  | 103                    | 102                     | 102                     | 102                     | 102                     | 102                    | 102                    |
| 1601 RUN ENABLE          | 0 = NOT<br>SEL         | 0 = NOT<br>SEL          | 0 = NOT<br>SEL          | 0 = NOT<br>SEL          | 0 = NOT<br>SEL          | 4 = DI4                | 0 = NOT<br>SEL         |
| 2201 ACC/DEC 1/2<br>SEL  | 5 = DI5                | 0 = NOT<br>SEL          | 5 = DI5                 | 0 = NOT<br>SEL          | 0 = NOT<br>SEL          | 0 = NOT<br>SEL         | 5 = DI5                |
| 3201 SUPERV 1<br>PARAM   | 103                    | 102                     | 102                     | 102                     | 102                     | 102                    | 102                    |
| 3401 SIGNAL1<br>PARAM    | 103                    | 102                     | 102                     | 102                     | 102                     | 102                    | 102                    |
| 9904 MOTOR CTRL<br>MODE  | 3 =<br>SCALAR:<br>FREQ | 1 =<br>VECTOR:<br>SPEED | 1 =<br>VECTOR:<br>SPEED | 1 =<br>VECTOR:<br>SPEED | 1 =<br>VECTOR:<br>SPEED | 3 =<br>SCALAR:<br>FREQ | 2 =<br>VECTOR:<br>TORQ |

**Note:** It is possible to control several functions with one input (DI or AI), and there is a chance of mismatch between these functions. In some cases it is desired to control several functions with one input.

For example in the ABB standard macro, DI3 and DI4 are set to control constant speeds. On the other hand, it is possible to select value 6 (*DI3U,4D*) for parameter *1103 REF1 SELECT*. That would mean a mismatched duplicate functionality for DI3 and DI4: either constant speed or acceleration and deceleration. The function that is not required must be disabled. In this case the constant speed selection must be disabled by setting parameter *1201 CONST SPEED SEL* to *NOT SEL* or to values not related to DI3 and DI4.

Remember to also check the default values of the selected macro when configuring the drive inputs.

## Differences between the default values in E and U type drives

The type designation label shows the type of the drive, see section [Type designation key](#) on page 31.

The following table lists the differences between the parameter default values in the E and U type drives.

| No.  | Name            | E type<br>EMC filter screw<br>connected | U type<br>EMC filter screw<br>disconnected |
|------|-----------------|---|--|
| 9905 | MOTOR NOM VOLT  | 230/400V                                | 230/460V                                   |
| 9907 | MOTOR NOM FREQ  | 50                                      | 60   |
| 9909 | MOTOR NOM POWER | [kW]                                    | [hp]                                       |
| 1105 | REF1 MAX        | 50                                      | 60   |
| 1202 | CONST SPEED 1   | 5                                       | 6  |
| 1203 | CONST SPEED 2   | 10                                      | 12   |
| 1204 | CONST SPEED 3   | 15                                      | 18   |
| 1205 | CONST SPEED 4   | 20                                      | 24   |
| 1206 | CONST SPEED 5   | 25                                      | 30   |
| 1207 | CONST SPEED 6   | 40                                      | 48   |
| 1208 | CONST SPEED 7   | 50                                      | 60   |
| 2002 | MAXIMUM SPEED   | 1500                                    | 1800                                       |
| 2008 | MAXIMUM FREQ    | 50                                      | 60   |

## Actual signals

| Actual signals           |                 |   |                    |
|--------------------------|-----------------|---|--------------------|
| No.                      | Name/Value      | Description   | FbEq               |
| <b>01 OPERATING DATA</b> |                 | Basic signals for monitoring the drive (read-only)  |                    |
| 0101                     | SPEED & DIR     | Calculated motor speed in rpm. A negative value indicates reverse direction.  | 1 = 1 rpm          |
| 0102                     | SPEED           | Calculated motor speed in rpm   | 1 = 1 rpm          |
| 0103                     | OUTPUT FREQ     | Calculated drive output frequency in Hz. (Shown by default on the panel Output mode display.)   | 1 = 0.1 Hz         |
| 0104                     | CURRENT         | Measured motor current in A. (Shown by default on the panel Output mode display.)   | 1 = 0.1 A          |
| 0105                     | TORQUE          | Calculated motor torque as a percentage of the motor nominal torque   | 1 = 0.1%           |
| 0106                     | POWER           | Measured motor power in kW  | 1 = 0.1 kW         |
| 0107                     | DC BUS VOLTAGE  | Measured intermediate circuit voltage in V DC   | 1 = 1 V            |
| 0109                     | OUTPUT VOLTAGE  | Calculated motor voltage in V AC  | 1 = 1 V            |
| 0110                     | DRIVE TEMP      | Measured IGBT temperature in °C   | 1 = 0.1 °C         |
| 0111                     | EXTERNAL REF 1  | External reference REF1 in rpm or Hz. Unit depends on parameter <a href="#">9904 MOTOR CTRL MODE</a> setting.   | 1 = 0.1 Hz / 1 rpm |
| 0112                     | EXTERNAL REF 2  | External reference REF2 as a percentage. Depending on the use, 100% equals the maximum motor speed, nominal motor torque, or maximum process reference.   | 1 = 0.1%           |
| 0113                     | CTRL LOCATION   | Active control location. (0) LOCAL; (1) EXT1; (2) EXT2. See section <a href="#">Local control vs. external control</a> on page <a href="#">126</a> .  | 1 = 1              |
| 0114                     | RUN TIME (R)    | Elapsed drive running time counter (hours). Runs when the drive is modulating. The counter can be reset by pressing the UP and DOWN keys simultaneously when the control panel is in the Parameter mode.  | 1 = 1 h            |
| 0115                     | KWH COUNTER (R) | kWh counter. The counter value is accumulated till it reaches 65535 after which the counter rolls over and starts again from 0. The counter can be reset by pressing UP and DOWN keys simultaneously when the control panel is in the Parameter mode. | 1 = 1 kWh          |
| 0120                     | AI 1            | Relative value of analog input AI1 as a percentage  | 1 = 0.1%           |
| 0121                     | AI 2            | Relative value of analog input AI2 as a percentage  | 1 = 0.1%           |
| 0124                     | AO 1            | Value of analog output AO in mA   | 1 = 0.1 mA         |
| 0126                     | PID 1 OUTPUT    | Output value of the process PID1 controller as a percentage   | 1 = 0.1%           |
| 0127                     | PID 2 OUTPUT    | Output value of the PID2 controller as a percentage   | 1 = 0.1%           |

| Actual signals |                  |   |             |
|----------------|------------------|---|-------------|
| No.            | Name/Value       | Description   | FbEq        |
| 0128           | PID 1 SETPNT     | Setpoint signal (reference) for the process PID1 controller. Unit depends on parameter <i>4006 UNITS</i> , <i>4007 UNIT SCALE</i> and <i>4027 PID 1 PARAM SET</i> settings.   | -           |
| 0129           | PID 2 SETPNT     | Setpoint signal (reference) for the PID2 controller. Unit depends on parameter <i>4106 UNITS</i> and <i>4107 UNIT SCALE</i> settings.   | -           |
| 0130           | PID 1 FBK        | Feedback signal for the process PID1 controller. Unit depends on parameter <i>4006 UNITS</i> , <i>4007 UNIT SCALE</i> and <i>4027 PID 1 PARAM SET</i> settings.   | -           |
| 0131           | PID 2 FBK        | Feedback signal for the PID2 controller. Unit depends on parameter <i>4106 UNITS</i> and <i>4107 UNIT SCALE</i> settings.   | -           |
| 0132           | PID 1 DEVIATION  | Deviation of the process PID1 controller, ie, the difference between the reference value and the actual value. Unit depends on parameter <i>4006 UNITS</i> , <i>4007 UNIT SCALE</i> and <i>4027 PID 1 PARAM SET</i> settings. | -           |
| 0133           | PID 2 DEVIATION  | Deviation of the PID2 controller, ie, the difference between the reference value and the actual value. Unit depends on parameter <i>4106 UNITS</i> and <i>4107 UNIT SCALE</i> settings.                                       | -           |
| 0134           | COMM RO WORD     | Relay output Control word through fieldbus (decimal). See parameter <i>1401 RELAY OUTPUT 1</i> .  | 1 = 1       |
| 0135           | COMM VALUE 1     | Data received from fieldbus. Free data location that can be written from fieldbus.  | 1 = 1       |
| 0136           | COMM VALUE 2     | Data received from fieldbus. Free data location that can be written from fieldbus.  | 1 = 1       |
| 0137           | PROCESS VAR 1    | Process variable 1 defined by parameter group <i>34 PANEL DISPLAY</i>   | -           |
| 0138           | PROCESS VAR 2    | Process variable 2 defined by parameter group <i>34 PANEL DISPLAY</i>   | -           |
| 0139           | PROCESS VAR 3    | Process variable 3 defined by parameter group <i>34 PANEL DISPLAY</i>   | -           |
| 0140           | RUN TIME         | Elapsed drive running time counter (thousands of hours). Runs when the drive is modulating. Counter cannot be reset.  | 1 = 0.01 kh |
| 0141           | MWH COUNTER      | MWh counter. The counter value is accumulated till it reaches 65535 after which the counter rolls over and starts again from 0. Cannot be reset.  | 1 = 1 MWh   |
| 0142           | REVOLUTION CNTR  | Motor revolution counter (millions of revolutions). The counter can be reset by pressing UP and DOWN keys simultaneously when the control panel is in the Parameter mode.   | 1 = 1 Mrev  |
| 0143           | DRIVE ON TIME HI | Drive control board power-on time in days. Counter cannot be reset.   | 1 = 1 days  |

| Actual signals |                  |   |            |
|----------------|------------------|---|------------|
| No.            | Name/Value       | Description   | FbEq       |
| 0144           | DRIVE ON TIME LO | Drive control board power-on time in 2 second ticks (30 ticks = 60 seconds). Counter cannot be reset.   | 1 = 2 s    |
| 0145           | MOTOR TEMP       | Measured motor temperature. Unit depends on the sensor type selected by group <a href="#">35 MOTOR TEMP MEAS</a> parameters.  | 1 = 1      |
| 0146           | MECH ANGLE       | Calculated mechanical angle. 1 = 5001 PULSE NR. The signal indicates the angle as a percentage of the number of pulses per revolution.  | 1 = 1      |
| 0147           | MECH REVS        | Mechanical revolutions, ie, the motor shaft revolutions calculated by the encoder. Overflow is not prevented.   | 1 = 1      |
| 0148           | Z PLS DETECTED   | Encoder zero pulse detector. 0 = NOT DETECTED, 1 = DETECTED.  | 1 = 1      |
| 0150           | CB TEMP          | Temperature of the drive control board in degrees Celsius (0.0...150.0 °C).   | 1 = 0.1 °C |
| 0158           | PID COMM VALUE 1 | Data received from fieldbus for PID control (PID1 and PID2)   | 1 = 1      |
| 0159           | PID COMM VALUE 2 | Data received from fieldbus for PID control (PID1 and PID2)   | 1 = 1      |
| 0160           | DI 1-5 STATUS    | Status of digital inputs.<br><b>Example (panel):</b><br><ul style="list-style-type: none"> <li>• 10000 = DI1 is on, DI2...DI5 are off.</li> <li>• 10010 = DI1 and DI4 are on, DI2, DI3 and DI5 are off.</li> </ul> <b>Example (DWL2):</b><br><ul style="list-style-type: none"> <li>• 16 (decimal) = DI1 is on, DI2...DI5 are off.</li> <li>• 18 (decimal) = DI1 and DI4 are on, DI2, DI3 and DI5 are off.</li> </ul> |            |
| 0161           | PULSE INPUT FREQ | Value of frequency input in Hz  | 1 = 1 Hz   |
| 0162           | RO STATUS        | Status of relay output 1. 1 = RO is energized, 0 = RO is de-energized.  | 1 = 1      |
| 0163           | TO STATUS        | Status of transistor output, when transistor output is used as a digital output.  | 1 = 1      |
| 0164           | TO FREQUENCY     | Transistor output frequency, when transistor output is used as a frequency output.  | 1 = 1 Hz   |
| 0165           | TIMER VALUE      | Timer value of timed start/stop. See parameter group <a href="#">19 TIMER &amp; COUNTER</a> .   | 1 = 0.01 s |
| 0166           | COUNTER VALUE    | Pulse counter value of counter start/stop. See parameter group <a href="#">19 TIMER &amp; COUNTER</a> .   | 1 = 1      |



| Actual signals              |                  |   |          |
|-----------------------------|------------------|---|----------|
| No.                         | Name/Value       | Description   | FbEq     |
| 0167                        | SEQ PROG STS     | Status word of the Sequence programming:  | 1 = 1    |
|                             |                  | Bit 0 = ENABLED (1 = enabled)   |          |
|                             |                  | Bit 1 = STARTED   |          |
|                             |                  | Bit 2 = PAUSED  |          |
|                             |                  | Bit 3 = LOGIC VALUE (logic operation defined by parameters <i>8406...8410</i> ).  |          |
| 0168                        | SEQ PROG STATE   | Active state of the Sequence programming. 1...8 = state 1...8.  | 1 = 1    |
| 0169                        | SEQ PROG TIMER   | Current state time counter of the Sequence programming  | 1 = 2 s  |
| 0170                        | SEQ PROG AO VAL  | Analog output control values defined by the Sequence programming. See parameter <i>8423 ST1 OUT CONTROL</i> .   | 1 = 0.1% |
| 0171                        | SEQ CYCLE CNTR   | Executed sequence counter of the Sequence programming. See parameters <i>8415 CYCLE CNT LOC</i> and <i>8416 CYCLE CNT RST</i> .   | 1 = 1    |
| 0172                        | ABS TORQUE       | Calculated absolute value of the motor torque as a percentage of the motor nominal torque   | 1 = 0.1% |
| 0173                        | RO 2-4 STATUS    | Status of the relays in the MREL-01 output relay module. See <i>MREL-01 output relay module user's manual</i> (3AUA0000035974 [English]).<br><b>Example:</b> 100 = RO 2 is on, RO 3 and RO 4 are off.   |          |
| 0179                        | BRAKE TORQ MEM   | Vector control: Torque value (0...180% of the motor nominal torque) saved before the mechanical brake is taken in use.<br>Scalar control: Current value (0...180% of the motor nominal current) saved before the mechanical brake is taken in use.<br>This torque or current is applied when the drive is started. See parameter <i>4307 BRK OPEN LVL SEL</i> . | 1 = 0.1% |
| 0180                        | ENC SYNCHRONIZED | Monitors the synchronization of the measured position with the estimated position for permanent magnet synchronous motors. 0 = NOT SYNC, 1 = SYNC.  | 1 = 1    |
| 0181                        | EXTENSION        | Shows which optional extension module is connected to the drive. 0 = NONE, 1 = EXTENSION MREL-01, 2 = EXTENSION MTAC-01, 3 = EXTENSION MPOW-01  | 1 = 1    |
| <b>03 FB ACTUAL SIGNALS</b> |                  | Data words for monitoring the fieldbus communication (read-only). Each signal is a 16-bit data word.<br>Data words are displayed on the panel in hexadecimal format.  |          |
| 0301                        | FB CMD WORD 1    | A 16-bit data word. See section <i>DCU communication profile</i> on page <i>333</i> .   |          |
| 0302                        | FB CMD WORD 2    | A 16-bit data word. See section <i>DCU communication profile</i> on page <i>333</i>   |          |

| Actual signals |                  |  |      |
|----------------|------------------|--|------|
| No.            | Name/Value       | Description  | FbEq |
| 0303           | FB STS WORD<br>1 | A 16-bit data word. See section <i>DCU communication profile</i> on page 333.  |      |
| 0304           | FB STS WORD<br>2 | A 16-bit data word. See section <i>DCU communication profile</i> on page 333   |      |
| 0305           | FAULT WORD<br>1  | A 16-bit data word. For the possible causes and remedies and fieldbus equivalents, see chapter <i>Fault tracing</i> on page 351. |      |
|                |                  | Bit 0 = <i>OVERCURRENT</i>   |      |
|                |                  | Bit 1 = <i>DC OVERVOLT</i>   |      |
|                |                  | Bit 2 = <i>DEV OVERTEMP</i>  |      |
|                |                  | Bit 3 = <i>SHORT CIRC</i>  |      |
|                |                  | Bit 4 = Reserved   |      |
|                |                  | Bit 5 = <i>DC UNDERVOLT</i>  |      |
|                |                  | Bit 6 = <i>AI1 LOSS</i>  |      |
|                |                  | Bit 7 = <i>AI2 LOSS</i>  |      |
|                |                  | Bit 8 = <i>MOT OVERTEMP</i>  |      |
|                |                  | Bit 9 = <i>PANEL LOSS</i>  |      |
|                |                  | Bit 10 = <i>ID RUN FAIL</i>  |      |
|                |                  | Bit 11 = <i>MOTOR STALL</i>  |      |
|                |                  | Bit 12 = <i>CB OVERTEMP</i>  |      |
|                |                  | Bit 13 = <i>EXT FAULT 1</i>  |      |
|                |                  | Bit 14 = <i>EXT FAULT 2</i>  |      |
|                |                  | Bit 15 = <i>EARTH FAULT</i>  |      |
| 0306           | FAULT WORD<br>2  | A 16-bit data word. For the possible causes and remedies and fieldbus equivalents, see chapter <i>Fault tracing</i> on page 351. |      |
|                |                  | Bit 0 = <i>UNDERLOAD</i>   |      |
|                |                  | Bit 1 = <i>THERM FAIL</i>  |      |
|                |                  | Bit 2...3 = Reserved   |      |
|                |                  | Bit 4 = <i>CURR MEAS</i>   |      |
|                |                  | Bit 5 = <i>SUPPLY PHASE</i>  |      |
|                |                  | Bit 6 = <i>ENCODER ERR</i>   |      |
|                |                  | Bit 7 = <i>OVERSPEED</i>   |      |
|                |                  | Bit 8...9 = Reserved   |      |
|                |                  | Bit 10 = <i>CONFIG FILE</i>  |      |
|                |                  | Bit 11 = <i>SERIAL 1 ERR</i>   |      |
|                |                  | Bit 12 = <i>EFB CON FILE</i> . Configuration file reading error.   |      |
|                |                  | Bit 13 = <i>FORCE TRIP</i>   |      |

| Actual signals |                 |  |      |
|----------------|-----------------|--|------|
| No.            | Name/Value      | Description  | FbEq |
|                |                 | Bit 14 = <i>MOTOR PHASE</i>  |      |
|                |                 | Bit 15 = <i>OUTP WIRING</i>  |      |
| 0307           | FAULT WORD<br>3 | A 16-bit data word. For the possible causes and remedies and fieldbus equivalents, see chapter <i>Fault tracing</i> on page 351.   |      |
|                |                 | Bit 0...2 Reserved   |      |
|                |                 | Bit 3 = <i>INCOMPATIBLE SW</i>   |      |
|                |                 | Bit 4 = <i>SAFE TORQUE OFF</i>   |      |
|                |                 | Bit 5 = <i>STO1 LOST</i>   |      |
|                |                 | Bit 6 = <i>STO2 LOST</i>   |      |
|                |                 | Bit 7...10 Reserved  |      |
|                |                 | Bit 11 = <i>CB ID ERROR</i>  |      |
|                |                 | Bit 12 = <i>DSP STACK ERROR</i>  |      |
|                |                 | Bit 13 = <i>DSP T1 OVERLOAD...DSP T3 OVERLOAD</i>  |      |
|                |                 | Bit 14 = <i>SERF CORRUPT / SERF MACRO</i>  |      |
|                |                 | Bit 15 = <i>PAR PCU 1 / PAR PCU 2 / PAR HZRPM / PAR AI SCALE / PAR AO SCALE / PAR FBUSMISS / PAR USER U/F / PAR SETUP 1</i>  |      |
| 0308           | ALARM WORD<br>1 | A 16-bit data word. For the possible causes and remedies and fieldbus equivalents, see chapter <i>Fault tracing</i> on page 351.<br><br>An alarm can be reset by resetting the whole alarm word: Write zero to the word. |      |
|                |                 | Bit 0 = <i>OVERCURRENT</i>   |      |
|                |                 | Bit 1 = <i>OVERVOLTAGE</i>   |      |
|                |                 | Bit 2 = <i>UNDERVOLTAGE</i>  |      |
|                |                 | Bit 3 = <i>DIR LOCK</i>  |      |
|                |                 | Bit 4 = <i>IO COMM</i>   |      |
|                |                 | Bit 5 = <i>AI1 LOSS</i>  |      |
|                |                 | Bit 6 = <i>AI2 LOSS</i>  |      |
|                |                 | Bit 7 = <i>PANEL LOSS</i>  |      |
|                |                 | Bit 8 = <i>DEVICE OVERTEMP</i>   |      |
|                |                 | Bit 9 = <i>MOTOR TEMP</i>  |      |
|                |                 | Bit 10 = <i>UNDERLOAD</i>  |      |
|                |                 | Bit 11 = <i>MOTOR STALL</i>  |      |
|                |                 | Bit 12 = <i>AUTORESET</i>  |      |
|                |                 | Bit 13...15 = Reserved   |      |

| Actual signals          |                 |  |            |
|-------------------------|-----------------|--|------------|
| No.                     | Name/Value      | Description  | FbEq       |
| 0309                    | ALARM WORD<br>2 | A 16-bit data word. For the possible causes and remedies and fieldbus equivalents, see chapter <i>Fault tracing</i> on page 351.<br><br>An alarm can be reset by resetting the whole alarm word: Write zero to the word.   |            |
|                         |                 | Bit 0 = Reserved<br>Bit 1 = <i>PID SLEEP</i><br>Bit 2 = <i>ID RUN</i><br>Bit 3 = Reserved<br>Bit 4 = <i>START ENABLE 1 MISSING</i><br>Bit 5 = <i>START ENABLE 2 MISSING</i><br>Bit 6 = <i>EMERGENCY STOP</i><br>Bit 7 = <i>ENCODER ERROR</i><br>Bit 8 = <i>FIRST START</i><br>Bit 9 = <i>INPUT PHASE LOSS</i><br>Bit 10...11 = Reserved<br>Bit 12 = <i>MOTOR BACK EMF</i><br>Bit 13 = <i>SAFE TORQUE OFF</i><br>Bit 14...15 = Reserved   |            |
| <b>04 FAULT HISTORY</b> |                 | Fault history (read-only)  |            |
| 0401                    | LAST FAULT      | Code of the latest fault. See chapter <i>Fault tracing</i> on page 351 for the codes. 0 = Fault history is clear (on panel display = NO RECORD).   | 1 = 1      |
| 0402                    | FAULT TIME 1    | Day on which the latest fault occurred.<br>Format if the real time clock is operating: Date.<br>Format if the real time clock is not used, or was not set: Number of full days passed since beginning of the year 1980 after the power-on.   | 1 = 1 days |
| 0403                    | FAULT TIME 2    | Time at which the latest fault occurred.<br>Format on the assistant control panel: Real time (hh:mm:ss) if the real time clock is operating. / Time elapsed after the power-on (hh:mm:ss minus the whole days stated by signal <i>0402 FAULT TIME 1</i> ) if real time clock is not used, or was not set.<br><br>Format on the basic control panel: Time elapsed after power-on in 2 second ticks (minus the whole days stated by signal <i>0402 FAULT TIME 1</i> ). 30 ticks = 60 seconds. For example, value 514 equals 17 minutes and 8 seconds (= 514/30). | 1 = 2 s    |
| 0404                    | SPEED AT FLT    | Motor speed in rpm at the time the latest fault occurred   | 1 = 1 rpm  |
| 0405                    | FREQ AT FLT     | Frequency in Hz at the time the latest fault occurred  | 1 = 0.1 Hz |

| Actual signals |                  |   |           |
|----------------|------------------|---|-----------|
| No.            | Name/Value       | Description   | FbEq      |
| 0406           | VOLTAGE AT FLT   | Intermediate circuit voltage in V DC at the time the latest fault occurred  | 1 = 0.1 V |
| 0407           | CURRENT AT FLT   | Motor current in A at the time the latest fault occurred  | 1 = 0.1 A |
| 0408           | TORQUE AT FLT    | Motor torque as a percentage of the motor nominal torque at the time the latest fault occurred  | 1 = 0.1%  |
| 0409           | STATUS AT FLT    | Drive status in hexadecimal format at the time the latest fault occurred  |           |
| 0412           | PREVIOUS FAULT 1 | Fault code of the 2nd latest fault. See chapter <i>Fault tracing</i> on page 351 for the codes.   | 1 = 1     |
| 0413           | PREVIOUS FAULT 2 | Fault code of the 3rd latest fault. See chapter <i>Fault tracing</i> on page 351 for the codes.   | 1 = 1     |
| 0414           | DI 1-5 AT FLT    | Status of digital inputs DI1...5 at the time the latest fault occurred.<br><b>Example (panel):</b> <ul style="list-style-type: none"> <li>• 10000 = DI1 is on, DI2...DI5 are off.</li> <li>• 10010 = DI1 and DI4 are on, DI2, DI3 and DI5 are off.</li> </ul> <b>Example (DWL2):</b> <ul style="list-style-type: none"> <li>• 16 (decimal) = DI1 is on, DI2...DI5 are off.</li> <li>• 18 (decimal) = DI1 and DI4 are on, DI2, DI3 and DI5 are off.</li> </ul> |           |

## Parameters

| All parameters           |                  |   |                       |
|--------------------------|------------------|---|-----------------------|
| No.                      | Name/Value       | Description   | Def/FbEq              |
| <b>10 START/STOP/DIR</b> |                  | The sources for external start, stop and direction control  |                       |
| 1001                     | EXT1<br>COMMANDS | Defines the connections and the source for the start, stop and direction commands for external control location 1 (EXT1).<br><b>Note:</b> Start signal must be reset if the drive has been stopped through STO (Safe torque off) input (see parameter <a href="#">3025 STO OPERATION</a> ) or emergency stop selection (see parameter <a href="#">2109 EMERG STOP SEL</a> ).  | <a href="#">D11,2</a> |
|                          | NOT SEL          | No start, stop and direction command source   | 0                     |
|                          | DI1              | Start and stop through digital input DI1. 0 = stop, 1 = start. Direction is fixed according to parameter <a href="#">1003 DIRECTION</a> (setting <a href="#">REQUEST = FORWARD</a> ).   | 1                     |
|                          | DI1,2            | Start and stop through digital input DI1. 0 = stop, 1 = start. Direction through digital input DI2. 0 = forward, 1 = reverse. To control direction, parameter <a href="#">1003 DIRECTION</a> setting must be <a href="#">REQUEST</a> .  | 2                     |
|                          | DI1P,2P          | Pulse start through digital input DI1. 0 -> 1: Start. (In order to start the drive, digital input DI2 must be activated prior to the pulse fed to DI1.)<br>Pulse stop through digital input DI2. 1 -> 0: Stop. Direction of rotation is fixed according to parameter <a href="#">1003 DIRECTION</a> (setting <a href="#">REQUEST = FORWARD</a> ).<br><b>Note:</b> When the stop input (DI2) is deactivated (no input), the control panel start and stop keys are disabled.  | 3                     |
|                          | DI1P,2P,3        | Pulse start through digital input DI1. 0 -> 1: Start. (In order to start the drive, digital input DI2 must be activated prior to the pulse fed to DI1.)<br>Pulse stop through digital input DI2. 1 -> 0: Stop. Direction through digital input DI3. 0 = forward, 1 = reverse. To control direction, parameter <a href="#">1003 DIRECTION</a> setting must be <a href="#">REQUEST</a> .<br><b>Note:</b> When the stop input (DI2) is deactivated (no input), the control panel start and stop keys are disabled.                             | 4                     |
|                          | DI1P,2P,3P       | Pulse start forward through digital input DI1. 0 -> 1: Start forward. Pulse start reverse through digital input DI2. 0 -> 1: Start reverse. (In order to start the drive, digital input DI3 must be activated prior to the pulse fed to DI1/DI2). Pulse stop through digital input DI3. 1 -> 0: Stop. To control the direction, parameter <a href="#">1003 DIRECTION</a> setting must be <a href="#">REQUEST</a> .<br><b>Note:</b> When the stop input (DI3) is deactivated (no input), the control panel start and stop keys are disabled. | 5                     |


## All parameters

| No. | Name/Value   | Description  | Def/FbEq |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|-----|--------------|--|----------|-----|-----------|---|---|------|---|---|---------------|---|---|---------------|---|---|------|---|
|     | KEYPAD       | Start, stop and direction commands through control panel when EXT1 is active. To control the direction, parameter <b>1003 DIRECTION</b> setting must be <b>REQUEST</b> .   | 8        |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | DI1F,2R      | Start, stop and direction commands through digital inputs DI1 and DI2.<br><table border="1" data-bbox="311 363 857 497"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Stop</td> </tr> <tr> <td>1</td> <td>0</td> <td>Start forward</td> </tr> <tr> <td>0</td> <td>1</td> <td>Start reverse</td> </tr> <tr> <td>1</td> <td>1</td> <td>Stop</td> </tr> </tbody> </table> <p>Parameter <b>1003 DIRECTION</b> setting must be <b>REQUEST</b>.</p> | DI1      | DI2 | Operation | 0 | 0 | Stop | 1 | 0 | Start forward | 0 | 1 | Start reverse | 1 | 1 | Stop | 9 |
| DI1 | DI2          | Operation  |          |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
| 0   | 0            | Stop   |          |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
| 1   | 0            | Start forward  |          |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
| 0   | 1            | Start reverse  |          |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
| 1   | 1            | Stop   |          |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | COMM         | Fieldbus interface as the source for the start and stop commands, ie, Control word <b>0301 FB CMD WORD 1</b> bits 0...1. The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see section <b>DCU communication profile</b> on page 333.   | 10       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | TIMED FUNC 1 | Timed start/stop control. Timed function 1 active = start, timed function 1 inactive = stop. See parameter group <b>36 TIMED FUNCTIONS</b> .   | 11       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | TIMED FUNC 2 | See selection <b>TIMED FUNC 1</b> .  | 12       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | TIMED FUNC 3 | See selection <b>TIMED FUNC 1</b> .  | 13       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | TIMED FUNC 4 | See selection <b>TIMED FUNC 1</b> .  | 14       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | DI5          | Start and stop through digital input DI5. 0 = stop, 1 = start. Direction is fixed according to parameter <b>1003 DIRECTION</b> (setting <b>REQUEST = FORWARD</b> ).  | 20       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | DI5,4        | Start and stop through digital input DI5. 0 = stop, 1 = start. Direction through digital input DI4. 0 = forward, 1 = reverse. To control direction, parameter <b>1003 DIRECTION</b> must be <b>REQUEST</b> .   | 21       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | TIMER STOP   | Stop when timer delay defined by parameter <b>1901 TIMER DELAY</b> has passed. Start with timer start signal. Source for the signal is selected by parameter <b>1902 TIMER START</b> .   | 22       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | TIMER START  | Start when timer delay defined by parameter <b>1901 TIMER DELAY</b> has passed. Stop when timer is reset by parameter <b>1903 TIMER RESET</b> .  | 23       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |
|     | COUNTER STOP | Stop when counter limit defined by parameter <b>1905 COUNTER LIMIT</b> has been exceeded. Start with counter start signal. Source for the signal is selected by parameter <b>1911 CNTR S/S COMMAND</b> .   | 24       |     |           |   |   |      |   |   |               |   |   |               |   |   |      |   |


| All parameters |               |   |          |
|----------------|---------------|---|----------|
| No.            | Name/Value    | Description   | Def/FbEq |
|                | COUNTR START  | Start when counter limit defined by parameter <a href="#">1905 COUNTER LIMIT</a> has been exceeded. Stop with counter stop signal. Source for the signal is selected by parameter <a href="#">1911 CNTR S/S COMMAND</a> .   | 25       |
|                | SEQ PROG      | Start, stop and direction commands through Sequence programming. See parameter group <a href="#">84 SEQUENCE PROG</a> .   | 26       |
| 1002           | EXT2 COMMANDS | Defines the connections and the source for the start, stop and direction commands for external control location 2 (EXT2).<br><br>See parameter <a href="#">1001 EXT1 COMMANDS</a> .   | NOT SEL  |
| 1003           | DIRECTION     | Enables the control of rotation direction of the motor, or fixes the direction.   | REQUEST  |
|                | FORWARD       | Fixed to forward  | 1        |
|                | REVERSE       | Fixed to reverse  | 2        |
|                | REQUEST       | Control of rotation direction allowed   | 3        |
| 1010           | JOGGING SEL   | Defines the signal that activates the jogging function. See section <a href="#">Control of a mechanical brake</a> on page <a href="#">159</a> .   | NOT SEL  |
|                | DI1           | Digital input DI1. 0 = jogging inactive, 1 = jogging active.  | 1        |
|                | DI2           | See selection <a href="#">DI1</a> .   | 2        |
|                | DI3           | See selection <a href="#">DI1</a> .   | 3        |
|                | DI4           | See selection <a href="#">DI1</a> .   | 4        |
|                | DI5           | See selection <a href="#">DI1</a> .   | 5        |
|                | COMM          | Fieldbus interface as the source for jogging 1 or 2 activation, ie, Control word <a href="#">0302 FB CMD WORD 2</a> bits 20 and 21. The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see section <a href="#">DCU communication profile</a> on page <a href="#">333</a> . | 6        |
|                | NOT SEL       | Not selected  | 0        |
|                | DI1(INV)      | Inverted digital input DI1. 1 = jogging inactive, 0 = jogging active.   | -1       |
|                | DI2(INV)      | See selection <a href="#">DI1(INV)</a> .  | -2       |
|                | DI3(INV)      | See selection <a href="#">DI1(INV)</a> .  | -3       |
|                | DI4(INV)      | See selection <a href="#">DI1(INV)</a> .  | -4       |
|                | DI5(INV)      | See selection <a href="#">DI1(INV)</a> .  | -5       |



| All parameters |                         |  |                      |
|----------------|-------------------------|--|----------------------|
| No.            | Name/Value              | Description  | Def/FbEq             |
| <b>11</b>      | <b>REFERENCE SELECT</b> | Panel reference type, external control location selection and external reference sources and limits  |                      |
| 1101           | KEYPAD REF SEL          | Selects the type of the reference in local control mode.   | <i>REF1</i> (Hz/rpm) |
|                | REF1(Hz/rpm)            | Speed reference in rpm. Frequency reference (Hz) if parameter <i>9904 MOTOR CTRL MODE</i> setting is <i>SCALAR: FREQ.</i>  | 1                    |
|                | REF2(%)                 | %-reference  | 2                    |
| 1102           | EXT1/EXT2 SEL           | Defines the source from which the drive reads the signal that selects between the two external control locations, EXT1 or EXT2.  | <i>EXT1</i>          |
|                | EXT1                    | EXT1 active. The control signal sources are defined by parameters <i>1001 EXT1 COMMANDS</i> and <i>1103 REF1 SELECT.</i>   | 0                    |
|                | DI1                     | Digital input DI1. 0 = EXT1, 1 = EXT2.   | 1                    |
|                | DI2                     | See selection <i>DI1.</i>  | 2                    |
|                | DI3                     | See selection <i>DI1.</i>  | 3                    |
|                | DI4                     | See selection <i>DI1.</i>  | 4                    |
|                | DI5                     | See selection <i>DI1.</i>  | 5                    |
|                | EXT2                    | EXT2 active. The control signal sources are defined by parameters <i>1002 EXT2 COMMANDS</i> and <i>1106 REF2 SELECT.</i>   | 7                    |
|                | COMM                    | Fieldbus interface as the source for EXT1/EXT2 selection, ie, Control word <i>0301 FB CMD WORD 1</i> bit 5 (with ABB drives profile <i>5319 EFB PAR 19</i> bit 11). The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see sections <i>DCU communication profile</i> on page <i>333</i> and <i>ABB drives communication profile</i> on page <i>328.</i> | 8                    |
|                | TIMED FUNC 1            | Timed EXT1/EXT2 control selection. Timed function 1 active = EXT2, timed function 1 inactive = EXT1. See parameter group <i>36 TIMED FUNCTIONS.</i>  | 9                    |
|                | TIMED FUNC 2            | See selection <i>TIMED FUNC 1.</i>   | 10                   |
|                | TIMED FUNC 3            | See selection <i>TIMED FUNC 1.</i>   | 11                   |
|                | TIMED FUNC 4            | See selection <i>TIMED FUNC 1.</i>   | 12                   |
|                | DI1(INV)                | Inverted digital input DI1. 1 = EXT1, 0 = EXT2.  | -1                   |
|                | DI2(INV)                | See selection <i>DI1(INV).</i>   | -2                   |
|                | DI3(INV)                | See selection <i>DI1(INV).</i>   | -3                   |
|                | DI4(INV)                | See selection <i>DI1(INV).</i>   | -4                   |
|                | DI5(INV)                | See selection <i>DI1(INV).</i>   | -5                   |
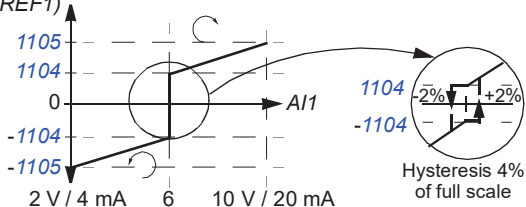
| All parameters |             |  |          |
|----------------|-------------|--|----------|
| No.            | Name/Value  | Description  | Def/FbEq |
| 1103           | REF1 SELECT | Selects the signal source for external reference REF1. See section <i>Block diagram: Reference source for EXT1</i> on page 128.  | A11      |
|                | KEYPAD      | Control panel  | 0        |
|                | AI1         | Analog input AI1   | 1        |
|                | AI2         | Analog input AI2   | 2        |
|                | AI1/JOYST   | <p>Analog input AI1 as joystick. The minimum input signal runs the motor at the maximum reference in the reverse direction, the maximum input at the maximum reference in the forward direction. Minimum and maximum references are defined by parameters <a href="#">1104 REF1 MIN</a> and <a href="#">1105 REF1 MAX</a>.</p> <p><b>Note:</b> Parameter <a href="#">1003 DIRECTION</a> must be set to <a href="#">REQUEST</a>.</p> <p>Speed ref (REF1) par. <a href="#">1301</a> = 20%, par <a href="#">1302</a> = 100%</p>  <p><b>WARNING!</b> If parameter <a href="#">1301 MINIMUM AI1</a> is set to 0 V and analog input signal is lost (ie, 0 V), the rotation of the motor is reversed to the maximum reference. Set the following parameters to activate a fault when analog input signal is lost:<br/>Set parameter <a href="#">1301 MINIMUM AI1</a> to 20% (2 V or 4 mA).<br/>Set parameter <a href="#">3021 AI1 FAULT LIMIT</a> to 5% or higher.<br/>Set parameter <a href="#">3001 AI&lt;MIN FUNCTION</a> to <a href="#">FAULT</a>.</p> | 3        |
|                | AI2/JOYST   | See selection <a href="#">AI1/JOYST</a> .  | 4        |
|                | DI3U,4D(R)  | Digital input DI3: Reference increase. Digital input DI4: Reference decrease. Stop command resets the reference to zero. Parameter <a href="#">2205 ACCELER TIME 2</a> defines the rate of the reference change.   | 5        |
|                | DI3U,4D     | Digital input DI3: Reference increase. Digital input DI4: Reference decrease. The program stores the active speed reference (not reset by a stop command). When the drive is restarted, the motor ramps up at the selected acceleration rate to the stored reference. Parameter <a href="#">2205 ACCELER TIME 2</a> defines the rate of the reference change.  | 6        |
|                | COMM        | Fieldbus reference REF1  | 8        |

| All parameters |              |  |          |
|----------------|--------------|--|----------|
| No.            | Name/Value   | Description  | Def/FbEq |
|                | COMM+AI1     | Summation of fieldbus reference REF1 and analog input AI. See section <i>Reference selection and correction</i> on page 320.   | 9        |
|                | COMM*AI1     | Multiplication of fieldbus reference REF1 and analog input AI1. See section <i>Reference selection and correction</i> on page 320.   | 10       |
|                | DI3U,4D(RNC) | Digital input DI3: Reference increase. Digital input DI4: Reference decrease. Stop command resets the reference to zero.<br>The reference is not saved if the control source is changed (from EXT1 to EXT2, from EXT2 to EXT1 or from LOC to REM). Parameter <i>2205 ACCELER TIME 2</i> defines the rate of the reference change.  | 11       |
|                | DI3U,4D(NC)  | Digital input DI3: Reference increase. Digital input DI4: Reference decrease.<br>The program stores the active speed reference (not reset by a stop command). The reference is not saved if the control source is changed (from EXT1 to EXT2, from EXT2 to EXT1 or from LOC to REM). When the drive is restarted, the motor ramps up at the selected acceleration rate to the stored reference. Parameter <i>2205 ACCELER TIME 2</i> defines the rate of the reference change. | 12       |
|                | AI1+AI2      | Reference is calculated with the following equation:<br>$REF = AI1(\%) + AI2(\%) - 50\%$   | 14       |
|                | AI1*AI2      | Reference is calculated with the following equation:<br>$REF = AI1(\%) \cdot (AI2(\%) / 50\%)$   | 15       |
|                | AI1-AI2      | Reference is calculated with the following equation:<br>$REF = AI1(\%) + 50\% - AI2(\%)$   | 16       |
|                | AI1/AI2      | Reference is calculated with the following equation:<br>$REF = AI1(\%) \cdot (50\% / AI2(\%))$   | 17       |
|                | KEYPAD(RNC)  | Defines the control panel as the reference source. Stop command resets the reference to zero (the R stands for reset). The reference is not copied if the control source is changed (from EXT1 to EXT2, from EXT2 to EXT1).  | 20       |
|                | KEYPAD(NC)   | Defines the control panel as the reference source. Stop command does not reset the reference to zero. The reference is stored. The reference is not copied if the control source is changed (from EXT1 to EXT2, from EXT2 to EXT1).  | 21       |
|                | DI4U,5D      | See selection <i>DI3U,4D</i> .   | 30       |
|                | DI4U,5D(NC)  | See selection <i>DI3U,4D(NC)</i> .   | 31       |
|                | FREQ INPUT   | Frequency input  | 32       |
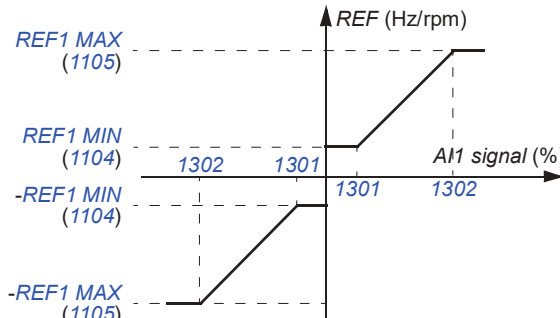
| All parameters |                                |  |                          |
|----------------|--------------------------------|--|--------------------------|
| No.            | Name/Value                     | Description  | Def/FbEq                 |
|                | SEQ PROG                       | Sequence programming output. See parameter <a href="#">8420 ST1 REF SEL.</a>   | 33                       |
|                | AI1+SEQ PROG                   | Addition of analog input AI1 and Sequence programming output   | 34                       |
|                | AI2+SEQ PROG                   | Addition of analog input AI2 and Sequence programming output   | 35                       |
|                | ODVA HZ REF                    | ODVA AC/DC profile speed reference and actual values in Hz   | 36                       |
| 1104           | REF1 MIN                       | Defines the minimum value for external reference REF1. Corresponds to the minimum setting of the used source signal.   | 0.0 Hz / 1 rpm           |
|                | 0.0...599.0 Hz / 0...30000 rpm | <p>Minimum value in rpm. Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ.</a></p> <p><b>Example:</b> Analog input AI1 is selected as the reference source (value of parameter <a href="#">1103</a> is <a href="#">AI1</a>). The reference minimum and maximum correspond to the <a href="#">1301 MINIMUM AI1</a> and <a href="#">1302 MAXIMUM AI1</a> settings as follows:</p>  | 1 = 0.1 Hz / 1 rpm       |
| 1105           | REF1 MAX                       | Defines the maximum value for external reference REF1. Corresponds to the maximum setting of the used source signal.   | E: 50.0 Hz<br>U: 60.0 Hz |
|                | 0.0...599.0 Hz / 0...30000 rpm | Maximum value in rpm. Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ.</a> See the example for parameter <a href="#">1104 REF1 MIN.</a>   | 1 = 0.1 Hz / 1 rpm       |
| 1106           | REF2 SELECT                    | Selects the signal source for external reference REF2.   | <a href="#">AI2</a>      |
|                | KEYPAD                         | See parameter <a href="#">1103 REF1 SELECT.</a>  | 0                        |
|                | AI1                            | See parameter <a href="#">1103 REF1 SELECT.</a>  | 1                        |
|                | AI2                            | See parameter <a href="#">1103 REF1 SELECT.</a>  | 2                        |
|                | AI1/JOYST                      | See parameter <a href="#">1103 REF1 SELECT.</a>  | 3                        |
|                | AI2/JOYST                      | See parameter <a href="#">1103 REF1 SELECT.</a>  | 4                        |
|                | DI3U,4D(R)                     | See parameter <a href="#">1103 REF1 SELECT.</a>  | 5                        |

| All parameters |                    |  |          |
|----------------|--------------------|--|----------|
| No.            | Name/Value         | Description  | Def/FbEq |
|                | DI3U,4D            | See parameter <a href="#">1103 REF1 SELECT</a> .   | 6        |
|                | COMM               | See parameter <a href="#">1103 REF1 SELECT</a> .   | 8        |
|                | COMM+AI1           | See parameter <a href="#">1103 REF1 SELECT</a> .   | 9        |
|                | COMM*AI1           | See parameter <a href="#">1103 REF1 SELECT</a> .   | 10       |
|                | DI3U,4D(RNC)       | See parameter <a href="#">1103 REF1 SELECT</a> .   | 11       |
|                | DI3U,4D(NC)        | See parameter <a href="#">1103 REF1 SELECT</a> .   | 12       |
|                | AI1+AI2            | See parameter <a href="#">1103 REF1 SELECT</a> .   | 14       |
|                | AI1*AI2            | See parameter <a href="#">1103 REF1 SELECT</a> .   | 15       |
|                | AI1-AI2            | See parameter <a href="#">1103 REF1 SELECT</a> .   | 16       |
|                | AI1/AI2            | See parameter <a href="#">1103 REF1 SELECT</a> .   | 17       |
|                | PID1OUT            | PID controller 1 output. See parameter groups <a href="#">40 PROCESS PID SET 1</a> and <a href="#">41 PROCESS PID SET 2</a> .  | 19       |
|                | KEYPAD(RNC)        | See parameter <a href="#">1103 REF1 SELECT</a> .   | 20       |
|                | KEYPAD(NC)         | See parameter <a href="#">1103 REF1 SELECT</a> .   | 21       |
|                | DI4U,5D            | See parameter <a href="#">1103 REF1 SELECT</a> .   | 30       |
|                | DI4U,5D(NC)        | See parameter <a href="#">1103 REF1 SELECT</a> .   | 31       |
|                | FREQ INPUT         | See parameter <a href="#">1103 REF1 SELECT</a> .   | 32       |
|                | SEQ PROG           | See parameter <a href="#">1103 REF1 SELECT</a> .   | 33       |
|                | AI1+SEQ<br>PROG    | See parameter <a href="#">1103 REF1 SELECT</a> .   | 34       |
|                | AI2+SEQ<br>PROG    | See parameter <a href="#">1103 REF1 SELECT</a> .   | 35       |
| 1107           | REF2 MIN           | Defines the minimum value for external reference REF2. Corresponds to the minimum setting of the used source signal.   | 0.0%     |
|                | 0.0...100.0%       | Value as a percentage of the maximum frequency / maximum speed / nominal torque. See the example for parameter <a href="#">1104 REF1 MIN</a> for correspondence to the source signal limits. | 1 = 0.1% |
| 1108           | REF2 MA            | Defines the maximum value for external reference REF2. Corresponds to the maximum setting of the used source signal.   | 100.0%   |
|                | 0.0...100.0%       | Value as a percentage of the maximum frequency / maximum speed / nominal torque. See the example for parameter <a href="#">1104 REF1 MIN</a> for correspondence to the source signal limits. | 1 = 0.1% |
| 1109           | ODVA HZ REF<br>SEL | Decimal point location for ODVA frequency reference values if parameter <a href="#">1103 REF1 SELECT</a> = <a href="#">ODVA HZ REF</a>   | 1        |
|                | SCALE 1            | ODVA profile Hz reference 500 equals 50.0 Hz in EXT1.  | 1        |
|                | SCALE 2            | ODVA profile Hz reference 5000 equals 50.00 Hz in EXT1.  | 2        |

| All parameters            |                 |   |   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|---------------------------|-----------------|---|---|-----|-----------|-----------|---|-------------------|---|-------------------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|----|
| No.                       | Name/Value      | Description   | Def/FbEq  |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| <b>12 CONSTANT SPEEDS</b> |                 | Constant speed selection and values. See section <i>Constant speeds</i> on page 142.  |   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 1201                      | CONST SPEED SEL | Activates the constant speeds or selects the activation signal.   | D13,4   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | NOT SEL         | No constant speed in use  | 0   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI1             | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through digital input DI1. 1 = active, 0 = inactive.  | 1   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI2             | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through digital input DI2. 1 = active, 0 = inactive.  | 2   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI3             | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through digital input DI3. 1 = active, 0 = inactive.  | 3   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI4             | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through digital input DI4. 1 = active, 0 = inactive.  | 4   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI5             | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through digital input DI5. 1 = active, 0 = inactive.  | 5   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI1,2           | Constant speed selection through digital inputs DI1 and DI2. 1 = DI active, 0 = DI inactive.<br><table border="1" data-bbox="359 738 919 874"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>No constant speed</td> </tr> <tr> <td>1</td> <td>0</td> <td>Speed defined by par. <i>1202 CONST SPEED 1</i></td> </tr> <tr> <td>0</td> <td>1</td> <td>Speed defined by par. <i>1203 CONST SPEED 2</i></td> </tr> <tr> <td>1</td> <td>1</td> <td>Speed defined by par. <i>1204 CONST SPEED 3</i></td> </tr> </tbody> </table>   | DI1   | DI2 | Operation | 0         | 0 | No constant speed | 1 | 0                 | Speed defined by par. <i>1202 CONST SPEED 1</i> | 0 | 1 | Speed defined by par. <i>1203 CONST SPEED 2</i> | 1 | 1 | Speed defined by par. <i>1204 CONST SPEED 3</i> | 7   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| DI1                       | DI2             | Operation   |   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 0                         | 0               | No constant speed   |   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 1                         | 0               | Speed defined by par. <i>1202 CONST SPEED 1</i>   |   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 0                         | 1               | Speed defined by par. <i>1203 CONST SPEED 2</i>   |   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 1                         | 1               | Speed defined by par. <i>1204 CONST SPEED 3</i>   |   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI2,3           | See selection <i>DI1,2</i> .  | 8   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI3,4           | See selection <i>DI1,2</i> .  | 9   |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI4,5           | See selection <i>DI1,2</i> .  | 10  |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI1,2,3         | Constant speed selection through digital inputs DI1, DI2 and DI3. 1 = DI active, 0 = DI inactive.<br><table border="1" data-bbox="359 1058 919 1297"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>DI3</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>No constant speed</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>Speed defined by par. <i>1202 CONST SPEED 1</i></td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>Speed defined by par. <i>1203 CONST SPEED 2</i></td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>Speed defined by par. <i>1204 CONST SPEED 3</i></td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>Speed defined by par. <i>1205 CONST SPEED 4</i></td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>Speed defined by par. <i>1206 CONST SPEED 5</i></td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>Speed defined by par. <i>1207 CONST SPEED 6</i></td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>Speed defined by par. <i>1208 CONST SPEED 7</i></td> </tr> </tbody> </table> | DI1   | DI2 | DI3       | Operation | 0 | 0                 | 0 | No constant speed | 1   | 0 | 0 | Speed defined by par. <i>1202 CONST SPEED 1</i> | 0 | 1 | 0   | Speed defined by par. <i>1203 CONST SPEED 2</i> | 1 | 1 | 0 | Speed defined by par. <i>1204 CONST SPEED 3</i> | 0 | 0 | 1 | Speed defined by par. <i>1205 CONST SPEED 4</i> | 1 | 0 | 1 | Speed defined by par. <i>1206 CONST SPEED 5</i> | 0 | 1 | 1 | Speed defined by par. <i>1207 CONST SPEED 6</i> | 1 | 1 | 1 | Speed defined by par. <i>1208 CONST SPEED 7</i> | 12 |
| DI1                       | DI2             | DI3   | Operation                                       |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 0                         | 0               | 0   | No constant speed                               |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 1                         | 0               | 0   | Speed defined by par. <i>1202 CONST SPEED 1</i> |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 0                         | 1               | 0   | Speed defined by par. <i>1203 CONST SPEED 2</i> |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 1                         | 1               | 0   | Speed defined by par. <i>1204 CONST SPEED 3</i> |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 0                         | 0               | 1   | Speed defined by par. <i>1205 CONST SPEED 4</i> |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 1                         | 0               | 1   | Speed defined by par. <i>1206 CONST SPEED 5</i> |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 0                         | 1               | 1   | Speed defined by par. <i>1207 CONST SPEED 6</i> |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
| 1                         | 1               | 1   | Speed defined by par. <i>1208 CONST SPEED 7</i> |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |
|                           | DI3,4,5         | See selection <i>DI1,2,3</i> .  | 13  |     |           |           |   |                   |   |                   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |    |


| All parameters |              |  |          |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|----------------|--------------|--|----------|-----|-----------|---|---|-------------------|---|---|---|---|---|---|---|---|---|----|
| No.            | Name/Value   | Description  | Def/FbEq |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | TIMED FUNC 1 | External speed reference, speed defined by parameter <i>1202 CONST SPEED 1</i> or speed defined by parameter <i>1203 CONST SPEED 2</i> is used, depending on the selection of parameter <i>1209 TIMED MODE SEL</i> and the state of timed function 1. See parameter group <i>36 TIMED FUNCTIONS</i> .  | 15       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | TIMED FUNC 2 | See selection <i>TIMED FUNC 1</i> .  | 16       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | TIMED FUNC 3 | See selection <i>TIMED FUNC 1</i> .  | 17       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | TIMED FUNC 4 | See selection <i>TIMED FUNC 1</i> .  | 18       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | TIMED FUN1&2 | External speed reference or speed defined by parameter <i>1202 CONST SPEED 1 ... 1205 CONST SPEED 4</i> is used, depending on the selection of parameter <i>1209 TIMED MODE SEL</i> and the state of timed functions 1 and 2. See parameter group <i>36 TIMED FUNCTIONS</i> .  | 19       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | DI1(INV)     | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through inverted digital input DI1. 0 = active, 1 = inactive.  | -1       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | DI2(INV)     | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through inverted digital input DI2. 0 = active, 1 = inactive.  | -2       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | DI3(INV)     | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through inverted digital input DI3. 0 = active, 1 = inactive.  | -3       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | DI4(INV)     | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through inverted digital input DI4. 0 = active, 1 = inactive.  | -4       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | DI5(INV)     | Speed defined by parameter <i>1202 CONST SPEED 1</i> is activated through inverted digital input DI5. 0 = active, 1 = inactive.  | -5       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | DI1,2(INV)   | Constant speed selection through inverted digital inputs DI1 and DI2. 1 = DI active, 0 = DI inactive.<br><table border="1" data-bbox="308 1129 868 1268"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>No constant speed</td> </tr> <tr> <td>0</td> <td>1</td> <td>Speed defined by par. <i>1202 CONST SPEED 1</i></td> </tr> <tr> <td>1</td> <td>0</td> <td>Speed defined by par. <i>1203 CONST SPEED 2</i></td> </tr> <tr> <td>0</td> <td>0</td> <td>Speed defined by par. <i>1204 CONST SPEED 3</i></td> </tr> </tbody> </table> | DI1      | DI2 | Operation | 1 | 1 | No constant speed | 0 | 1 | Speed defined by par. <i>1202 CONST SPEED 1</i> | 1 | 0 | Speed defined by par. <i>1203 CONST SPEED 2</i> | 0 | 0 | Speed defined by par. <i>1204 CONST SPEED 3</i> | -7 |
| DI1            | DI2          | Operation  |          |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
| 1              | 1            | No constant speed  |          |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
| 0              | 1            | Speed defined by par. <i>1202 CONST SPEED 1</i>  |          |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
| 1              | 0            | Speed defined by par. <i>1203 CONST SPEED 2</i>  |          |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
| 0              | 0            | Speed defined by par. <i>1204 CONST SPEED 3</i>  |          |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | DI2,3(INV)   | See selection <i>DI1,2(INV)</i> .  | -8       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | DI3,4(INV)   | See selection <i>DI1,2(INV)</i> .  | -9       |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |
|                | DI4,5(INV)   | See selection <i>DI1,2(INV)</i> .  | -10      |     |           |   |   |                   |   |   |   |   |   |   |   |   |   |    |

| All parameters |                                |  |  |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|----------------|--------------------------------|--|--|-----|-----|-----------|---|---|---|-------------------|---|---|---|--|---|---|---|--|---|---|---|--|---|---|---|--|---|---|---|--|---|---|---|--|---|---|---|--|--|
| No.            | Name/Value                     | Description  | Def/FbEq   |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|                | DI1,2,3(INV)                   | Constant speed selection through inverted digital inputs DI1, DI2 and DI3. 1 = DI active, 0 = DI inactive.   | -12  |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|                |                                | <table border="1"> <thead> <tr> <th>DI</th> <th>DI2</th> <th>DI3</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>1</td> <td>No constant speed</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>Speed defined by par. <a href="#">1202 CONST SPEED 1</a></td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>Speed defined by par. <a href="#">1203 CONST SPEED 2</a></td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>Speed defined by par. <a href="#">1204 CONST SPEED 3</a></td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>Speed defined by par. <a href="#">1205 CONST SPEED 4</a></td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>Speed defined by par. <a href="#">1206 CONST SPEED 5</a></td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>Speed defined by par. <a href="#">1207 CONST SPEED 6</a></td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>Speed defined by par. <a href="#">1208 CONST SPEED 7</a></td> </tr> </tbody> </table> | DI   | DI2 | DI3 | Operation | 1 | 1 | 1 | No constant speed | 0 | 1 | 1 | Speed defined by par. <a href="#">1202 CONST SPEED 1</a> | 1 | 0 | 1 | Speed defined by par. <a href="#">1203 CONST SPEED 2</a> | 0 | 0 | 1 | Speed defined by par. <a href="#">1204 CONST SPEED 3</a> | 1 | 1 | 0 | Speed defined by par. <a href="#">1205 CONST SPEED 4</a> | 0 | 1 | 0 | Speed defined by par. <a href="#">1206 CONST SPEED 5</a> | 1 | 0 | 0 | Speed defined by par. <a href="#">1207 CONST SPEED 6</a> | 0 | 0 | 0 | Speed defined by par. <a href="#">1208 CONST SPEED 7</a> |  |
| DI             | DI2                            | DI3  | Operation  |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1              | 1                              | 1  | No constant speed  |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 0              | 1                              | 1  | Speed defined by par. <a href="#">1202 CONST SPEED 1</a> |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1              | 0                              | 1  | Speed defined by par. <a href="#">1203 CONST SPEED 2</a> |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 0              | 0                              | 1  | Speed defined by par. <a href="#">1204 CONST SPEED 3</a> |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1              | 1                              | 0  | Speed defined by par. <a href="#">1205 CONST SPEED 4</a> |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 0              | 1                              | 0  | Speed defined by par. <a href="#">1206 CONST SPEED 5</a> |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1              | 0                              | 0  | Speed defined by par. <a href="#">1207 CONST SPEED 6</a> |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 0              | 0                              | 0  | Speed defined by par. <a href="#">1208 CONST SPEED 7</a> |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|                | DI3,4,5(INV)                   | See selection <a href="#">DI1,2,3(INV)</a> .   | -13  |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1202           | CONST SPEED 1                  | Defines constant speed (or drive output frequency) 1.  | E: 5.0 Hz<br>U: 6.0 Hz                                   |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|                | 0.0...599.0 Hz / 0...30000 rpm | Speed in rpm. Output frequency in Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ.</a>  | 1 = 0.1 Hz / 1 rpm                                       |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1203           | CONST SPEED 2                  | Defines constant speed (or drive output frequency) 2.  | E: 10.0 Hz<br>U: 12.0 Hz                                 |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|                | 0.0...599.0 Hz / 0...30000 rpm | Speed in rpm. Output frequency in Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ.</a>  | 1 = 0.1 Hz / 1 rpm                                       |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1204           | CONST SPEED 3                  | Defines constant speed (or drive output frequency) 3.  | E: 15.0 Hz<br>U: 18.0 Hz                                 |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|                | 0.0...599.0 Hz / 0...30000 rpm | Speed in rpm. Output frequency in Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ.</a>  | 1 = 0.1 Hz / 1 rpm                                       |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1205           | CONST SPEED 4                  | Defines constant speed (or drive output frequency) 4.  | E: 20.0 Hz<br>U: 24.0 Hz                                 |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|                | 0.0...599.0 Hz / 0...30000 rpm | Speed in rpm. Output frequency in Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ.</a>  | 1 = 0.1 Hz / 1 rpm                                       |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1206           | CONST SPEED 5                  | Defines constant speed (or drive output frequency) 5.  | E: 25.0 Hz<br>U: 30.0 Hz                                 |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|                | 0.0...599.0 Hz / 0...30000 rpm | Speed in rpm. Output frequency in Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ.</a>  | 1 = 0.1 Hz / 1 rpm                                       |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
| 1207           | CONST SPEED 6                  | Defines constant speed (or drive output frequency) 6.  | E: 40.0 Hz<br>U: 48.0 Hz                                 |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |
|                | 0.0...599.0 Hz / 0...30000 rpm | Speed in rpm. Output frequency in Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ.</a> Constant speed 6 is used also as jogging speed. See section <a href="#">Control of a mechanical brake</a> on page 159.   | 1 = 0.1 Hz / 1 rpm                                       |     |     |           |   |   |   |                   |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |   |   |   |  |  |




| All parameters       |   |  |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
|----------------------|---|--|--------------------------|------------------|-----------|--------------------|---|---|---|---|---|---|---|---|---|---|---|--|
| No.                  | Name/Value                                      | Description  | Def/FbEq                 |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
| 1208                 | CONST SPEED 7                                   | Defines constant speed (or drive output frequency) 7. Constant speed 7 is used also as jogging speed (see section <i>Control of a mechanical brake</i> on page 159) or with fault functions ( <i>3001 AI&lt;MIN FUNCTION</i> and <i>3002 PANEL COMM ERR</i> ).   | E: 50.0 Hz<br>U: 60.0 Hz |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
|                      | 0.0...599.0 Hz/<br>0...30000 rpm                | Speed in rpm. Output frequency in Hz if parameter <i>9904 MOTOR CTRL MODE</i> setting is <i>SCALAR: FREQ</i> . Constant speed 7 is used also as jogging speed. See section <i>Control of a mechanical brake</i> on page 159.   | 1 = 0.1 Hz<br>/ 1 rpm    |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
| 1209                 | TIMED MODE SEL                                  | Selects timed function activated speed. Timed function can be used to change between the external reference and constant speeds when parameter <i>1201 CONST SPEED SEL</i> selection is <i>TIMED FUNC 1 ... TIMED FUNC 4</i> or <i>TIMED FUN1&amp;2</i> .  | CS1/2/3/4                |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
|                      | EXT/CS1/2/3                                     | When parameter <i>1201 CONST SPEED SEL = TIMED FUNC 1 ... TIMED FUNC 4</i> , this timed function selects an external speed reference or constant speed. 1 = timed function active, 0 = timed function inactive.  | 1                        |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
|                      |   | <table border="1"> <thead> <tr> <th>Timed function 1...4</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>External reference</td> </tr> <tr> <td>1</td> <td>Speed defined by par. <i>1202 CONST SPEED 1</i></td> </tr> </tbody> </table>   | Timed function 1...4     | Operation        | 0         | External reference | 1 | Speed defined by par. <i>1202 CONST SPEED 1</i> |   |   |   |   |   |   |   |   |   |  |
| Timed function 1...4 | Operation                                       |  |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
| 0                    | External reference                              |  |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
| 1                    | Speed defined by par. <i>1202 CONST SPEED 1</i> |  |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
|                      |   | When parameter <i>1201 CONST SPEED SEL = TIMED FUN1&amp;2</i> , timed functions 1 and 2 select an external speed reference or constant speed. 1 = timed function active, 0 = timed function inactive.  |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
|                      |   | <table border="1"> <thead> <tr> <th>Timed function 1</th> <th>Timed function 2</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>External reference</td> </tr> <tr> <td>1</td> <td>0</td> <td>Speed defined by par. <i>1202 CONST SPEED 1</i></td> </tr> <tr> <td>0</td> <td>1</td> <td>Speed defined by par. <i>1203 CONST SPEED 2</i></td> </tr> <tr> <td>1</td> <td>1</td> <td>Speed defined by par. <i>1204 CONST SPEED 3</i></td> </tr> </tbody> </table> | Timed function 1         | Timed function 2 | Operation | 0                  | 0 | External reference                              | 1 | 0 | Speed defined by par. <i>1202 CONST SPEED 1</i> | 0 | 1 | Speed defined by par. <i>1203 CONST SPEED 2</i> | 1 | 1 | Speed defined by par. <i>1204 CONST SPEED 3</i> |  |
| Timed function 1     | Timed function 2                                | Operation  |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
| 0                    | 0   | External reference   |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
| 1                    | 0   | Speed defined by par. <i>1202 CONST SPEED 1</i>  |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
| 0                    | 1   | Speed defined by par. <i>1203 CONST SPEED 2</i>  |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |
| 1                    | 1   | Speed defined by par. <i>1204 CONST SPEED 3</i>  |                          |                  |           |                    |   |   |   |   |   |   |   |   |   |   |   |  |


| All parameters          |                  |  |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
|-------------------------|------------------|--|----------------------|--|-----------|---|--|--|---|--|--|------------------|------------------|-----------|---|---|--|---|---|--|---|---|--|---|---|--|---|
| No.                     | Name/Value       | Description  | Def/FbEq             |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
|                         | CS1/2/3/4        | <p>When parameter <i>1201 CONST SPEED SEL = TIMED FUNC 1 ... TIMED FUNC 4</i>, this timed function selects a constant speed. 1 = timed function active, 0 = timed function inactive.</p> <table border="1"> <thead> <tr> <th colspan="2">Timed function 1...4</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td></td> <td>Speed defined by parameter <i>1202 CONST SPEED 1</i></td> </tr> <tr> <td>1</td> <td></td> <td>Speed defined by parameter <i>1203 CONST SPEED 2</i></td> </tr> </tbody> </table> <p>When parameter <i>1201 CONST SPEED SEL = TIMED FUNC1&amp;2</i>, timed functions 1 and 2 select a constant speed. 1 = timed function active, 0 = timed function inactive.</p> <table border="1"> <thead> <tr> <th>Timed function 1</th> <th>Timed function 2</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Speed defined by parameter <i>1202 CONST SPEED 1</i></td> </tr> <tr> <td>1</td> <td>0</td> <td>Speed defined by parameter <i>1203 CONST SPEED 2</i></td> </tr> <tr> <td>0</td> <td>1</td> <td>Speed defined by parameter <i>1204 CONST SPEED 3</i></td> </tr> <tr> <td>1</td> <td>1</td> <td>Speed defined by parameter <i>1205 CONST SPEED 4</i></td> </tr> </tbody> </table> | Timed function 1...4 |  | Operation | 0 |  | Speed defined by parameter <i>1202 CONST SPEED 1</i> | 1 |  | Speed defined by parameter <i>1203 CONST SPEED 2</i> | Timed function 1 | Timed function 2 | Operation | 0 | 0 | Speed defined by parameter <i>1202 CONST SPEED 1</i> | 1 | 0 | Speed defined by parameter <i>1203 CONST SPEED 2</i> | 0 | 1 | Speed defined by parameter <i>1204 CONST SPEED 3</i> | 1 | 1 | Speed defined by parameter <i>1205 CONST SPEED 4</i> | 2 |
| Timed function 1...4    |                  | Operation  |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
| 0                       |                  | Speed defined by parameter <i>1202 CONST SPEED 1</i>   |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
| 1                       |                  | Speed defined by parameter <i>1203 CONST SPEED 2</i>   |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
| Timed function 1        | Timed function 2 | Operation  |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
| 0                       | 0                | Speed defined by parameter <i>1202 CONST SPEED 1</i>   |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
| 1                       | 0                | Speed defined by parameter <i>1203 CONST SPEED 2</i>   |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
| 0                       | 1                | Speed defined by parameter <i>1204 CONST SPEED 3</i>   |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
| 1                       | 1                | Speed defined by parameter <i>1205 CONST SPEED 4</i>   |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
| <b>13 ANALOG INPUTS</b> |                  |  |                      |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
|                         | 1301 MINIMUM AI1 | <p>Defines the minimum %-value that corresponds to minimum mA(V) signal for analog input AI1. When used as a reference, the value corresponds to the reference minimum setting.</p> <p>0...20 mA <math>\hat{=}</math> 0...100%<br/>           4...20 mA <math>\hat{=}</math> 20...100%<br/>           -10...10 mA <math>\hat{=}</math> -50...50%</p> <p><b>Example:</b> If AI1 is selected as the source for external reference REF1, this value corresponds to the value of parameter <i>1104 REF1 MIN</i>.</p> <p><b>Note:</b> <i>MINIMUM AI1</i> value must not exceed <i>MAXIMUM AI1</i> value.</p>  | 1.0%                 |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
|                         | -100.0...100.0%  | <p>Value as a percentage of the full signal range.</p> <p><b>Example:</b> If the minimum value for analog input is 4 mA, the percentage value for 0...20 mA range is:<br/>           (4 mA / 20 mA) · 100% = 20%</p>   | 1 = 0.1%             |  |           |   |  |  |   |  |  |                  |                  |           |   |   |  |   |   |  |   |   |  |   |   |  |   |
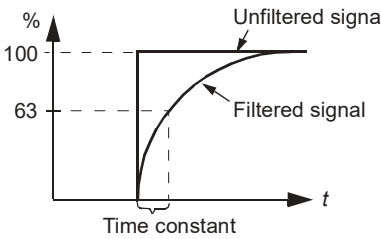
| All parameters |                 |  |           |
|----------------|-----------------|--|-----------|
| No.            | Name/Value      | Description  | Def/FbEq  |
| 1302           | MAXIMUM AI1     | <p>Defines the maximum %-value that corresponds to maximum mA(V) signal for analog input AI1. When used as a reference, the value corresponds to the reference maximum setting.</p> <p>0...20 mA <math>\hat{=}</math> 0...100%<br/>4...20 mA <math>\hat{=}</math> 20...100%<br/>-10...10 mA <math>\hat{=}</math> -50...50%</p> <p><b>Example:</b> If AI1 is selected as the source for external reference REF1, this value corresponds to the value of parameter <i>1105 REF1 MAX</i>.</p> | 100.0%    |
|                | -100.0...100.0% | <p>Value as a percentage of the full signal range.</p> <p><b>Example:</b> If the maximum value for analog input is 10 mA, the percentage value for 0...20 mA range is:<br/>(10 mA / 20 mA) · 100% = 50%</p>  | 1 = 0.1%  |
| 1303           | FILTER AI1      | <p>Defines the filter time constant for analog input AI1, ie, the time within which 63% of a step change is reached.</p>    | 0.1 s     |
|                | 0.0...10.0 s    | Filter time constant   | 1 = 0.1 s |
| 1304           | MINIMUM AI2     | <p>Defines the minimum %-value that corresponds to minimum mA(V) signal for analog input AI2. See parameter <i>1301 MINIMUM AI1</i>.</p>   | 20%       |
|                | -100.0...100.0% | See parameter <i>1301 MINIMUM AI1</i> .  | 1 = 0.1%  |
| 1305           | MAXIMUM AI2     | <p>Defines the maximum %-value that corresponds to maximum mA(V) signal for analog input AI2. See parameter <i>1302 MAXIMUM AI1</i>.</p>   | 100.0%    |
|                | -100.0...100.0% | See parameter <i>1302 MAXIMUM AI1</i> .  | 1 = 0.1%  |
| 1306           | FILTER AI2      | <p>Defines the filter time constant for analog input AI2. See parameter <i>1303 FILTER AI1</i>.</p>  | 0.1 s     |
|                | 0.0...10.0 s    | Filter time constant   | 1 = 0.1 s |

| All parameters   |                |  |                  |
|--|----------------|--|------------------|
| No.  | Name/Value     | Description  | Def/FbEq         |
| <b>14 RELAY OUTPUTS</b>  |                |  |                  |
| Status information indicated through relay output, and relay operating delays.<br><b>Note:</b> Relay outputs 2...4 are available only if the MREL-01 output relay module is connected to the drive. See <i>MREL-01 output relay module user's manual</i> (3AUA0000035974 [English]). |                |  |                  |
| 1401   | RELAY OUTPUT 1 | Selects a drive status indicated through relay output RO 1. The relay energizes when the status meets the setting.   | <i>FAULT(-1)</i> |
|  | NOT SEL        | Not used   | 0                |
|  | READY          | Ready to function: Run enable signal on, no fault, supply voltage within acceptable range and emergency stop signal off.   | 1                |
|  | RUN            | Running: Start signal on, Run enable signal on, no active fault.   | 2                |
|  | FAULT(-1)      | Inverted fault. Relay is de-energized on a fault trip.   | 3                |
|  | FAULT          | Fault  | 4                |
|  | ALARM          | Alarm  | 5                |
|  | REVERSED       | Motor rotates in reverse direction.  | 6                |
|  | STARTED        | The drive has received start command. Relay is energized even if Run enable signal is off. Relay is de-energized when drive receives a stop command or a fault occurs. | 7                |
|  | SUPRV1 OVER    | Status according to supervision parameters <a href="#">3201...3203</a> . See parameter group <a href="#">32 SUPERVISION</a> .  | 8                |
|  | SUPRV1 UNDER   | See selection <a href="#">SUPRV1 OVER</a> .  | 9                |
|  | SUPRV2 OVER    | Status according to supervision parameters <a href="#">3204...3206</a> . See parameter group <a href="#">32 SUPERVISION</a> .  | 10               |
|  | SUPRV2 UNDER   | See selection <a href="#">SUPRV2 OVER</a> .  | 11               |
|  | SUPRV3 OVER    | Status according to supervision parameters <a href="#">3207...3209</a> . See parameter group <a href="#">32 SUPERVISION</a> .  | 12               |
|  | SUPRV3 UNDER   | See selection <a href="#">SUPRV3 OVER</a> .  | 13               |
|  | AT SET POINT   | Output frequency is equal to the reference frequency.  | 14               |
|  | FAULT(RST)     | Fault. Automatic reset after the autoreset delay. See parameter group <a href="#">31 AUTOMATIC RESET</a> .   | 15               |
|  | FLT/ALARM      | Fault or alarm   | 16               |
|  | EXT CTRL       | Drive is under external control.   | 17               |
|  | REF 2 SEL      | External reference REF 2 is in use.  | 18               |
|  | CONST FREQ     | A constant speed is in use. See parameter group <a href="#">12 CONSTANT SPEEDS</a> .   | 19               |

| All parameters |              |   |            |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|----------------|--------------|---|------------|------------|------------|------------|------------|----|-----|---|-------|---|---|---|---|---|---|-------|---|---|---|---|---|---|-------|---|---|---|---|---|---|-------|---|---|---|---|---|---|-------|---|---|---|---|---|--------|-----|-----|-----|-----|-----|-----|----|-------|---|---|---|---|---|--|--|--|--|--|
| No.            | Name/Value   | Description   | Def/FbEq   |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | REF LOSS     | Reference or active control location is lost.   | 20         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | OVERCURRENT  | Alarm/Fault by overcurrent protection function  | 21         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | OVERVOLTAGE  | Alarm/Fault by overvoltage protection function  | 22         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | DRIVE TEMP   | Alarm/Fault by drive overtemperature protection function  | 23         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | UNDERVOLTAGE | Alarm/Fault by undervoltage protection function   | 24         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | AI1 LOSS     | Analog input AI1 signal is lost.  | 25         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | AI2 LOSS     | Analog input AI2 signal is lost.  | 26         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | MOTOR TEMP   | Alarm/Fault by motor overtemperature protection function. See parameter <a href="#">3005 MOT THERM PROT.</a>  | 27         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | STALL        | Alarm/Fault by stall protection function. See parameter <a href="#">3010 STALL FUNCTION.</a>  | 28         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | UNDERLOAD    | Alarm/Fault by underload protection function. See parameter <a href="#">3013 UNDERLOAD FUNC.</a>  | 29         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | PID SLEEP    | PID sleep function. See parameter group <a href="#">40 PROCESS PID SET 1 / 41 PROCESS PID SET 2.</a>  | 30         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | FLUX READY   | Motor is magnetized and able to supply nominal torque.  | 33         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | USER MACRO 2 | User macro 2 is active.   | 34         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | COMM         | Fieldbus control signal <a href="#">0134 COMM RO WORD</a> . 0 = de-energize output, 1 = energize output.  | 35         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                |              | <table border="1"> <thead> <tr> <th>0134 value</th> <th>Binary</th> <th>RO4 (MREL)</th> <th>RO3 (MREL)</th> <th>RO2 (MREL)</th> <th>DO</th> <th>RO1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>00000</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>00001</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>2</td> <td>00010</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td>3</td> <td>00011</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>4</td> <td>00100</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>5...30</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> </tr> <tr> <td>31</td> <td>11111</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> </tbody> </table> | 0134 value | Binary     | RO4 (MREL) | RO3 (MREL) | RO2 (MREL) | DO | RO1 | 0 | 00000 | 0 | 0 | 0 | 0 | 0 | 1 | 00001 | 0 | 0 | 0 | 0 | 1 | 2 | 00010 | 0 | 0 | 0 | 1 | 0 | 3 | 00011 | 0 | 0 | 0 | 1 | 1 | 4 | 00100 | 0 | 0 | 1 | 0 | 0 | 5...30 | ... | ... | ... | ... | ... | ... | 31 | 11111 | 1 | 1 | 1 | 1 | 1 |  |  |  |  |  |
| 0134 value     | Binary       | RO4 (MREL)  | RO3 (MREL) | RO2 (MREL) | DO         | RO1        |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 0              | 00000        | 0   | 0          | 0          | 0          | 0          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 1              | 00001        | 0   | 0          | 0          | 0          | 1          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 2              | 00010        | 0   | 0          | 0          | 1          | 0          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 3              | 00011        | 0   | 0          | 0          | 1          | 1          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 4              | 00100        | 0   | 0          | 1          | 0          | 0          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 5...30         | ...          | ...   | ...        | ...        | ...        | ...        |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 31             | 11111        | 1   | 1          | 1          | 1          | 1          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                | COMM(-1)     | Fieldbus control signal <a href="#">0134 COMM RO WORD</a> . 0 = de-energize output, 1 = energize output.  | 36         |            |            |            |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
|                |              | <table border="1"> <thead> <tr> <th>0134 value</th> <th>Binary</th> <th>RO4 (MREL)</th> <th>RO3 (MREL)</th> <th>RO2 (MREL)</th> <th>DO</th> <th>RO1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>00000</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>1</td> <td>00001</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>2</td> <td>00010</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>3</td> <td>00011</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>4</td> <td>00100</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>5...30</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> </tr> <tr> <td>31</td> <td>11111</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> </tbody> </table> | 0134 value | Binary     | RO4 (MREL) | RO3 (MREL) | RO2 (MREL) | DO | RO1 | 0 | 00000 | 1 | 1 | 1 | 1 | 1 | 1 | 00001 | 1 | 1 | 1 | 1 | 0 | 2 | 00010 | 1 | 1 | 1 | 0 | 1 | 3 | 00011 | 1 | 1 | 1 | 0 | 0 | 4 | 00100 | 1 | 1 | 0 | 1 | 1 | 5...30 | ... | ... | ... | ... | ... | ... | 31 | 11111 | 0 | 0 | 0 | 0 | 0 |  |  |  |  |  |
| 0134 value     | Binary       | RO4 (MREL)  | RO3 (MREL) | RO2 (MREL) | DO         | RO1        |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 0              | 00000        | 1   | 1          | 1          | 1          | 1          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 1              | 00001        | 1   | 1          | 1          | 1          | 0          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 2              | 00010        | 1   | 1          | 1          | 0          | 1          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 3              | 00011        | 1   | 1          | 1          | 0          | 0          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 4              | 00100        | 1   | 1          | 0          | 1          | 1          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 5...30         | ...          | ...   | ...        | ...        | ...        | ...        |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
| 31             | 11111        | 0   | 0          | 0          | 0          | 0          |            |    |     |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |   |       |   |   |   |   |   |        |     |     |     |     |     |     |    |       |   |   |   |   |   |  |  |  |  |  |
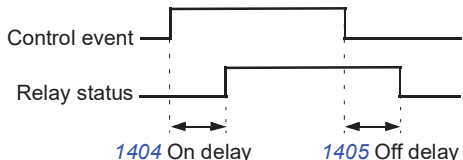
| All parameters |                |   |           |
|----------------|----------------|---|-----------|
| No.            | Name/Value     | Description   | Def/FbEq  |
|                | TIMED FUNC 1   | Timed function 1 is active. See parameter group <a href="#">36 TIMED FUNCTIONS</a> .  | 37        |
|                | TIMED FUNC 2   | Timed function 2 is active. See parameter group <a href="#">36 TIMED FUNCTIONS</a> .  | 38        |
|                | TIMED FUNC 3   | Timed function 3 is active. See parameter group <a href="#">36 TIMED FUNCTIONS</a> .  | 39        |
|                | TIMED FUNC 4   | Timed function 4 is active. See parameter group <a href="#">36 TIMED FUNCTIONS</a> .  | 40        |
|                | MNT TRIG FAN   | Cooling fan running time counter is triggered. See parameter group <a href="#">29 MAINTENANCE TRIG</a> .  | 41        |
|                | MNT TRIG REV   | Revolutions counter is triggered. See parameter group <a href="#">29 MAINTENANCE TRIG</a> .   | 42        |
|                | MNT TRIG RUN   | Run time counter is triggered. See parameter group <a href="#">29 MAINTENANCE TRIG</a> .  | 43        |
|                | MNT TRIG MWH   | MWh counter is triggered. See parameter group <a href="#">29 MAINTENANCE TRIG</a> .   | 44        |
|                | SEQ PROG       | Relay output control with Sequence programming. See parameter <a href="#">8423 ST1 OUT CONTROL</a> .  | 50        |
|                | MBRK           | On/Off control of a mechanical brake. See parameter group <a href="#">43 MECH BRK CONTROL</a> .   | 51        |
|                | JOG ACTIVE     | Jogging function active. See parameter <a href="#">1010 JOGGING SEL</a> .   | 52        |
|                | STO            | STO (Safe torque off) has been triggered.   | 57        |
|                | STO(-1)        | STO (Safe torque off) is inactive and the drive operates normally.  | 58        |
| 1402           | RELAY OUTPUT 2 | See parameter <a href="#">1401 RELAY OUTPUT 1</a> . Available only if the MREL-01 output relay module is connected to the drive. See parameter <a href="#">0181 EXTENSION</a> .   | NOT SEL   |
| 1403           | RELAY OUTPUT 3 | See parameter <a href="#">1401 RELAY OUTPUT 1</a> . Available only if the MREL-01 output relay module is connected to the drive. See parameter <a href="#">0181 EXTENSION</a> .   | NOT SEL   |
| 1404           | RO 1 ON DELAY  | Defines the operation delay for relay output RO 1.  | 0.0 s     |
|                | 0.0...3600.0 s | <p>Delay time. The figure below illustrates the operation (on) and release (off) delays for relay output RO.</p>  <p style="text-align: center;">1404 On delay                      1405 Off delay</p> | 1 = 0.1 s |
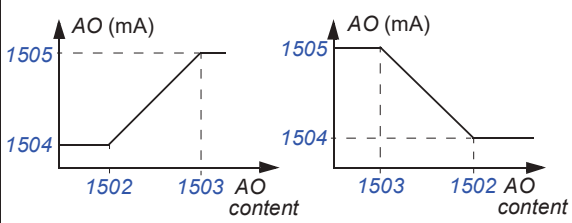
| All parameters           |                 |   |           |
|--------------------------|-----------------|---|-----------|
| No.                      | Name/Value      | Description   | Def/FbEq  |
| 1405                     | RO 1 OFF DELAY  | Defines the release delay for relay output RO 1.  | 0.0 s     |
|                          | 0.0...3600.0 s  | Delay time. See the figure for parameter <i>1404 RO 1 ON DELAY</i> .  | 1 = 0.1 s |
| 1406                     | RO 2 ON DELAY   | See parameter <i>1404 RO 1 ON DELAY</i> .   | 0.0 s     |
| 1407                     | RO 2 OFF DELAY  | See parameter <i>1405 RO 1 OFF DELAY</i> .  | 0.0 s     |
| 1408                     | RO 3 ON DELAY   | See parameter <i>1404 RO 1 ON DELAY</i> .   | 0.0 s     |
| 1409                     | RO 3 OFF DELAY  | See parameter <i>1405 RO 1 OFF DELAY</i> .  | 0.0 s     |
| 1410                     | RELAY OUTPUT 4  | See parameter <i>1401 RELAY OUTPUT 1</i> . Available only if the MREL-01 output relay extension module is connected to the drive. See parameter <i>0181 EXTENSION</i> .   | NOT SEL   |
| 1413                     | RO 4 ON DELAY   | See parameter <i>1404 RO 1 ON DELAY</i> .   | 0.0 s     |
| 1414                     | RO 4 OFF DELAY  | See parameter <i>1405 RO 1 OFF DELAY</i> .  | 0.0 s     |
| <b>15 ANALOG OUTPUTS</b> |                 | Selection of the actual signals to be indicated through analog output and output signal processing.   |           |
| 1501                     | AO1 CONTENT SEL | Connects a drive signal to analog output AO.  | 103       |
|                          | x...x           | Parameter index in group <i>01 OPERATING DATA</i> . For example, 102 = <i>0102 SPEED</i> .  |           |
| 1502                     | AO1 CONTENT MIN | Defines the minimum value for the signal selected with parameter <i>1501 AO1 CONTENT SEL</i> .<br>AO minimum and maximum correspond to the <i>1504 MINIMUM AO1</i> and <i>1505 MAXIMUM AO1</i> settings as follows: | -         |
|                          |                 |    |           |
|                          | x...x           | Setting range depends on the parameter <i>1501 AO1 CONTENT SEL</i> setting.   | -         |


| All parameters            |                       |  |                |
|---------------------------|-----------------------|--|----------------|
| No.                       | Name/Value            | Description  | Def/FbEq       |
| 1503                      | AO1<br>CONTENT<br>MAX | Defines the maximum value for the signal selected with parameter <i>1501 AO1 CONTENT SEL</i> . See the figure for parameter <i>1502 AO1 CONTENT MIN</i> .  | -              |
|                           | x...x                 | Setting range depends on the parameter <i>1501 AO1 CONTENT SEL</i> setting.  | -              |
| 1504                      | MINIMUM AO1           | Defines the minimum value for the analog output signal AO. See the figure for parameter <i>1502 AO1 CONTENT MIN</i> .  | 0.0 mA         |
|                           | 0.0...20.0 mA         | Minimum value  | 1 =<br>0.1 mA  |
| 1505                      | MAXIMUM<br>AO1        | Defines the maximum value for the analog output signal AO. See the figure for parameter <i>1502 AO1 CONTENT MIN</i> .  | 20.0 mA        |
|                           | 0.0...20.0 mA         | Maximum value  | 1 =<br>0.1 mA  |
| 1506                      | FILTER AO1            | Defines the filter time constant for analog output AO, ie, the time within which 63% of a step change is reached. See the figure for parameter <i>1303 FILTER AI1</i> .  | 0.1 s          |
|                           | 0.0...10.0 s          | Filter time constant   | 1 = 0.1 s      |
| <b>16 SYSTEM CONTROLS</b> |                       | Parameter view, Run enable, parameter lock etc.  |                |
| 1601                      | RUN ENABLE            | Selects a source for the external Run enable signal.   | <i>NOT SEL</i> |
|                           | NOT SEL               | Allows the drive to start without an external Run enable signal.   | 0              |
|                           | DI1                   | External signal required through digital input DI1. 1 = Run enable. If Run enable signal is switched off, the drive will not start or coasts to stop if it is running.   | 1              |
|                           | DI2                   | See selection <i>DI1</i> .   | 2              |
|                           | DI3                   | See selection <i>DI1</i> .   | 3              |
|                           | DI4                   | See selection <i>DI1</i> .   | 4              |
|                           | DI5                   | See selection <i>DI1</i> .   | 5              |
|                           | COMM                  | Fieldbus interface as the source for inverted Run enable signal (Run disable), ie, Control word <i>0301 FB CMD WORD 1</i> bit 6 (with ABB drives profile <i>5319 EFB PAR 19</i> bit 3). The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see sections <i>DCU communication profile</i> on page 333 and <i>ABB drives communication profile</i> on page 328. | 7              |
|                           | DI1(INV)              | External signal required through inverted digital input DI1. 0 = Run enable. If Run enable signal is switched on, the drive will not start or coasts to stop if it is running.   | -1             |
|                           | DI2(INV)              | See selection <i>DI1(INV)</i> .  | -2             |
|                           | DI3(INV)              | See selection <i>DI1(INV)</i> .  | -3             |



| All parameters |                 |   |                        |
|----------------|-----------------|---|------------------------|
| No.            | Name/Value      | Description   | Def/FbEq               |
|                | DI4(INV)        | See selection <a href="#">DI1(INV)</a> .  | -4                     |
|                | DI5(INV)        | See selection <a href="#">DI1(INV)</a> .  | -5                     |
| 1602           | PARAMETER LOCK  | Selects the state of the parameter lock. The lock prevents parameter changing from the control panel.   | <a href="#">OPEN</a>   |
|                | LOCKED          | Parameter values cannot be changed from the control panel. The lock can be opened by entering the valid code to parameter <a href="#">1603 PASS CODE</a> .<br>The lock does not prevent parameter changes made by macros or fieldbus.   | 0                      |
|                | OPEN            | The lock is open. Parameter values can be changed.  | 1                      |
|                | NOT SAVED       | Parameter changes from the control panel are not stored into the permanent memory. To store changed parameter values, set parameter <a href="#">1607 PARAM SAVE</a> value to <a href="#">SAVE....</a>   | 2                      |
| 1603           | PASS CODE       | Selects the pass code for the parameter lock (see parameter <a href="#">1602 PARAMETER LOCK</a> ).  | 0                      |
|                | 0...65535       | Pass code. Setting 358 opens the lock. The value reverts back to 0 automatically.   | 1 = 1                  |
| 1604           | FAULT RESET SEL | Selects the source for the fault reset signal. The signal resets the drive after a fault trip if the cause of the fault no longer exists.   | <a href="#">KEYPAD</a> |
|                | KEYPAD          | Fault reset only from the control panel   | 0                      |
|                | DI1             | Reset through digital input DI1 (reset on the rising edge of DI1) or from the control panel   | 1                      |
|                | DI2             | See selection <a href="#">DI1</a> .   | 2                      |
|                | DI3             | See selection <a href="#">DI1</a> .   | 3                      |
|                | DI4             | See selection <a href="#">DI1</a> .   | 4                      |
|                | DI5             | See selection <a href="#">DI1</a> .   | 5                      |
|                | START/STOP      | Reset along with the stop signal received through a digital input, or from the control panel.<br><b>Note:</b> Do not use this option when start, stop and direction commands are received through fieldbus communication.   | 7                      |
|                | COMM            | Fieldbus interface as the source for the fault reset signal, ie, Control word <a href="#">0301 FB CMD WORD 1</a> bit 4 (with ABB drives profile <a href="#">5319 EFB PAR 19</a> bit 7). The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see sections <a href="#">DCU communication profile</a> on page <a href="#">333</a> and <a href="#">ABB drives communication profile</a> on page <a href="#">328</a> . | 8                      |
|                | DI1(INV)        | Reset through inverted digital input DI1 (reset on the falling edge of DI1) or from the control panel   | -1                     |
|                | DI2(INV)        | See selection <a href="#">DI1(INV)</a> .  | -2                     |


| All parameters |                  |  |                |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|----------------|------------------|--|----------------|-----|--------------------|---|---|----------------------|---|---|----------------------|---|---|----------------------|---|
| No.            | Name/Value       | Description  | Def/FbEq       |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI3(INV)         | See selection <a href="#">DI1(INV)</a> .   | -3             |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI4(INV)         | See selection <a href="#">DI1(INV)</a> .   | -4             |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI5(INV)         | See selection <a href="#">DI1(INV)</a> .   | -5             |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
| 1605           | USER PAR SET CHG | <p>Enables the change of the User parameter set through a digital input. See parameter <a href="#">9902 APPLIC MACRO</a>. The change is only allowed when the drive is stopped. During the change, the drive will not start.</p> <p><b>Note:</b> Always save the User parameter set with parameter <a href="#">9902</a> after changing any parameter setting, or reperforming the motor identification. The last settings saved by the user are loaded into use whenever the power is switched off and on again or the parameter <a href="#">9902</a> setting is changed. Any unsaved changes will be lost.</p> <p><b>Note:</b> The value of this parameter is not included in the User parameter sets. A setting once made remains despite User parameter set change.</p> <p><b>Note:</b> Selection of User parameter set 2 can be supervised through relay outputs RO 1...4 and digital output DO. See parameters <a href="#">1401 RELAY OUTPUT 1 ... 1403 RELAY OUTPUT 3</a>, <a href="#">1410 RELAY OUTPUT 4</a> and <a href="#">1805 DO SIGNAL</a>.</p> | <i>NOT SEL</i> |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | NOT SEL          | User parameter set change is not possible through a digital input. Parameter sets can be changed only from the control panel.  | 0              |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI1              | User parameter set control through digital input DI1. Falling edge of digital input DI1: User parameter set 1 is loaded into use. Rising edge of digital input DI1: User parameter set 2 is loaded into use.   | 1              |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI2              | See selection <a href="#">DI1</a> .  | 2              |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI3              | See selection <a href="#">DI1</a> .  | 3              |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI4              | See selection <a href="#">DI1</a> .  | 4              |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI5              | See selection <a href="#">DI1</a> .  | 5              |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI1,2            | <p>User parameter set selection through digital inputs DI1 and DI2. 1 = DI active, 0 = DI inactive.</p> <table border="1" data-bbox="364 1228 848 1337"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>User parameter set</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>User parameter set 1</td> </tr> <tr> <td>1</td> <td>0</td> <td>User parameter set 2</td> </tr> <tr> <td>0</td> <td>1</td> <td>User parameter set 3</td> </tr> </tbody> </table>  | DI1            | DI2 | User parameter set | 0 | 0 | User parameter set 1 | 1 | 0 | User parameter set 2 | 0 | 1 | User parameter set 3 | 7 |
| DI1            | DI2              | User parameter set   |                |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
| 0              | 0                | User parameter set 1   |                |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
| 1              | 0                | User parameter set 2   |                |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
| 0              | 1                | User parameter set 3   |                |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI2,3            | See selection <a href="#">DI1,2</a> .  | 8              |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI3,4            | See selection <a href="#">DI1,2</a> .  | 9              |     |                    |   |   |                      |   |   |                      |   |   |                      |   |
|                | DI4,5            | See selection <a href="#">DI1,2</a> .  | 10             |     |                    |   |   |                      |   |   |                      |   |   |                      |   |

| All parameters |            |   |                |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|----------------|------------|---|----------------|-----|--------------------|---|---|----------------------|---|---|----------------------|---|---|----------------------|----|
| No.            | Name/Value | Description   | Def/FbEq       |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI1(INV)   | User parameter set control through inverted digital input DI1. Falling edge of inverted digital input DI1: User parameter set 2 is loaded into use. Rising edge of inverted digital input DI1: User parameter set 1 is loaded into use.   | -1             |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI2(INV)   | See selection <a href="#">DI1(INV)</a> .  | -2             |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI3(INV)   | See selection <a href="#">DI1(INV)</a> .  | -3             |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI4(INV)   | See selection <a href="#">DI1(INV)</a> .  | -4             |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI1,2(INV) | User parameter set selection through inverted digital inputs DI1 and DI2. 1 = DI inactive, 0 =DI active.<br><table border="1" data-bbox="311 491 796 600"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>User parameter set</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>User parameter set 1</td> </tr> <tr> <td>0</td> <td>1</td> <td>User parameter set 2</td> </tr> <tr> <td>1</td> <td>0</td> <td>User parameter set 3</td> </tr> </tbody> </table> | DI1            | DI2 | User parameter set | 1 | 1 | User parameter set 1 | 0 | 1 | User parameter set 2 | 1 | 0 | User parameter set 3 | -7 |
| DI1            | DI2        | User parameter set  |                |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
| 1              | 1          | User parameter set 1  |                |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
| 0              | 1          | User parameter set 2  |                |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
| 1              | 0          | User parameter set 3  |                |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI2,3(INV) | See selection <a href="#">DI1,2</a> .   | -8             |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI3,4(INV) | See selection <a href="#">DI1,2</a> .   | -9             |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI4,5(INV) | See selection <a href="#">DI1,2</a> .   | -10            |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
| 1606           | LOCAL LOCK | Disables entering local control mode or selects the source for the local control mode lock signal. When local lock is active, entering the local control mode is disabled (LOC/REM key of the panel).   | <b>NOT SEL</b> |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | NOT SEL    | Local control is allowed.   | 0              |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI1        | Local control mode lock signal through digital input DI1. Rising edge of digital input DI1: Local control disabled. Falling edge of digital input DI1: Local control allowed.   | 1              |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI2        | See selection <a href="#">DI1</a> .   | 2              |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI3        | See selection <a href="#">DI1</a> .   | 3              |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI4        | See selection <a href="#">DI1</a> .   | 4              |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI5        | See selection <a href="#">DI1</a> .   | 5              |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | ON         | Local control is disabled.  | 7              |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | COMM       | Fieldbus interface as the source for the local lock, ie, Control word <b>0301 FB CMD WORD 1</b> bit 14. The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see section <a href="#">DCU communication profile</a> on page <a href="#">333</a> .<br><b>Note:</b> This setting applies only for the DCU profile.  | 8              |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI1(INV)   | Local lock through inverted digital input DI1. Rising edge of inverted digital input DI1: Local control allowed. Falling edge of inverted digital input DI1: Local control disabled.  | -1             |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI2(INV)   | See selection <a href="#">DI1(INV)</a> .  | -2             |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
|                | DI3(INV)   | See selection <a href="#">DI1(INV)</a> .  | -3             |     |                    |   |   |                      |   |   |                      |   |   |                      |    |
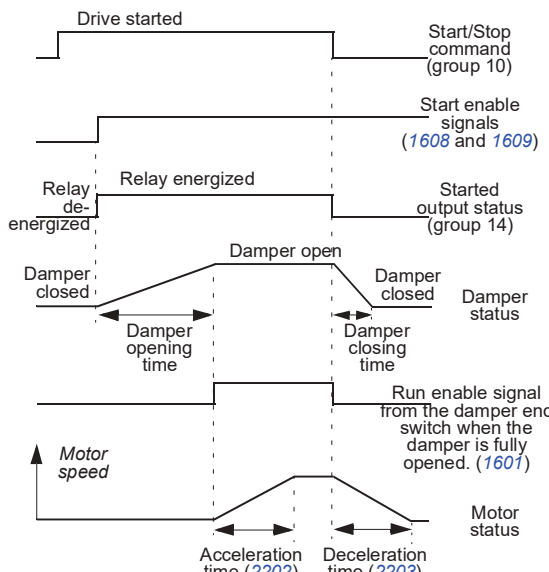
| All parameters   |                |   |                         |
|--|----------------|---|-------------------------|
| No.  | Name/Value     | Description   | Def/FbEq                |
|  | DI4(INV)       | See selection <a href="#">DI1(INV)</a> .  | -4                      |
|  | DI5(INV)       | See selection <a href="#">DI1(INV)</a> .  | -5                      |
| 1607   | PARAM SAVE     | Saves the valid parameter values to the permanent memory.<br><b>Note:</b> A new parameter value of a standard macro is saved automatically when changed from the panel but not when altered through a fieldbus connection.  | <a href="#">DONE</a>    |
|  | DONE           | Saving completed  | 0                       |
|  | SAVE...        | Saving in progress  | 1                       |
| 1608   | START ENABLE 1 | Selects the source for the Start enable 1 signal.<br><b>Note:</b> Functionality of the Start enable signal is different from the Run enable signal.<br><b>Example:</b> External damper control application using Start enable and Run enable. Motor can start only after the damper is fully open.  | <a href="#">NOT SEL</a> |
|  |                |   |                         |
|  | NOT SEL        | Start enable signal is on.  | 0                       |
|  | DI1            | External signal required through digital input DI1. 1 = Start enable. If the Start enable signal is switched off, the drive will not start or it coasts to stop if it is running and alarm <a href="#">START ENABLE 1 MISSING (2021)</a> is activated.<br>The drive can also ramp to stop depending on parameter <a href="#">2102 STOP FUNCTION</a> . | 1                       |

| All parameters |                |   |                         |
|----------------|----------------|---|-------------------------|
| No.            | Name/Value     | Description   | Def/FbEq                |
|                | DI2            | See selection <a href="#">DI1</a> .   | 2                       |
|                | DI3            | See selection <a href="#">DI1</a> .   | 3                       |
|                | DI4            | See selection <a href="#">DI1</a> .   | 4                       |
|                | DI5            | See selection <a href="#">DI1</a> .   | 5                       |
|                | COMM           | Fieldbus interface as the source for the inverted Start enable (Start disable) signal, ie, Control word <a href="#">0302 FB CMD WORD 2</a> bit 18 (bit 19 for Start enable 2). The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see section <a href="#">DCU communication profile</a> on page <a href="#">333</a> .<br><b>Note:</b> This setting applies only for the DCU profile. | 7                       |
|                | DI1(INV)       | External signal required through inverted digital input DI1. 0 = Start enable. If Start enable signal is switched off, the drive will not start or it coasts to stop if it is running and alarm <a href="#">START ENABLE 1 MISSING (2021)</a> is activated.   | -1                      |
|                | DI2(INV)       | See selection <a href="#">DI1(INV)</a> .  | -2                      |
|                | DI3(INV)       | See selection <a href="#">DI1(INV)</a> .  | -3                      |
|                | DI4(INV)       | See selection <a href="#">DI1(INV)</a> .  | -4                      |
|                | DI5(INV)       | See selection <a href="#">DI1(INV)</a> .  | -5                      |
| 1609           | START ENABLE 2 | Selects the source for the Start enable 2 signal. See parameter <a href="#">1608 START ENABLE 1</a> .<br>See parameter <a href="#">1608 START ENABLE 1</a> .  | <a href="#">NOT SEL</a> |
| 1610           | DISPLAY ALARMS | Activates/deactivates alarms <a href="#">OVERCURRENT (2001)</a> , <a href="#">OVERVOLTAGE (2002)</a> , <a href="#">PID SLEEP (2018)</a> and <a href="#">DEVICE OVERTEMP (2009)</a> . For more information, see chapter <a href="#">Fault tracing</a> on page <a href="#">351</a> .  | NO                      |
|                | NO             | Alarms are inactive.  | 0                       |
|                | YES            | Alarms are active.  | 1                       |

| All parameters                   |                |   |                |
|----------------------------------|----------------|---|----------------|
| No.                              | Name/Value     | Description   | Def/FbEq       |
| 1611                             | PARAMETER VIEW | <p>Selects the parameter view, ie, which parameters are shown.</p> <p><b>Note:</b> This parameter is visible only when it is activated by the optional FlashDrop device. FlashDrop is designed for fast copying of parameters to unpowered drives. It allows for easy customization of the parameter list, eg, selected parameters can be hidden. For more information, see <i>MFD-01 FlashDrop user's manual</i> (3AFE68591074 [English]).</p> <p>FlashDrop parameter values are activated by setting parameter <b>9902 APPLIC MACRO</b> to 31 (<b>LOAD FD SET</b>).</p> | <i>DEFAULT</i> |
|                                  | DEFAULT        | Complete long and short parameter lists   | 0              |
|                                  | FLASHDROP      | FlashDrop parameter list. Does not include short parameter list. Parameters which are hidden by the FlashDrop device are not visible.   | 1              |
| 1612                             | FAN CONTROL    | <p>Selects the fan to be switched on and off automatically or keeps the fan on all the time.</p> <p>When the drive is used in ambient temperatures of 35 °C (95 °F) and above, it is recommended to have the cooling fan always on (selection <b>ON</b>).</p>   | <i>AUTO</i>    |
|                                  | AUTO           | <p>Automatic fan control. The fan is switched on when the drive is modulating. After the drive has stopped, the fan stays on until the temperature of the drive has dropped below 55 °C (131 °F). The fan then remains switched off until either the drive is started or the temperature increases above 65 °C (149 °F).</p> <p>If the control board is powered from an external 24 V power supply, the fan is switched off.</p>  | 0              |
|                                  | ON             | Fan always on   | 1              |
| 1613                             | FAULT RESET    | Resets the current fault.   | <i>DEFAULT</i> |
|                                  | DEFAULT        | No reset done. Current status continues.  | 0              |
|                                  | RESET NOW      | Resets the current fault. After reset, the parameter value returns to DEFAULT.  | 1              |
| <b>18 FREQ IN &amp; TRAN OUT</b> |                | Frequency input and transistor output signal processing.  |                |
| 1801                             | FREQ INPUT MIN | Defines the minimum input value when DI5 is used as a frequency input. See section <i>Frequency input</i> on page 135.  | 0 Hz           |
|                                  | 0...16000 Hz   | Minimum frequency   | 1 = 1 Hz       |
| 1802                             | FREQ INPUT MAX | Defines the maximum input value when DI5 is used as a frequency input. See section <i>Frequency input</i> on page 135.  | 1000 Hz        |
|                                  | 0...16000 Hz   | Maximum frequency   | 1 = 1 Hz       |

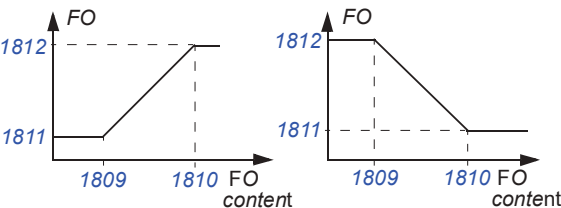
| All parameters |                |  |           |
|----------------|----------------|--|-----------|
| No.            | Name/Value     | Description  | Def/FbEq  |
| 1803           | FILTER FREQ IN | Defines the filter time constant for frequency input, ie, the time within which 63% of a step change is reached. See section <i>Frequency input</i> on page 135.   | 0.1 s     |
|                | 0.0...10.0 s   | Filter time constant   | 1 = 0.1 s |
| 1804           | TO MODE        | Selects the operation mode for the transistor output TO. See section <i>Transistor output</i> on page 136.   | DIGITAL   |
|                | DIGITAL        | Transistor output is used as a digital output DO.  | 0         |
|                | FREQUENCY      | Transistor output is used as a frequency output FO.  | 1         |
| 1805           | DO SIGNAL      | Selects a drive status indicated through digital output DO. See parameter 1401 RELAY OUTPUT 1.   | FAULT(-1) |
| 1806           | DO ON DELAY    | Defines the operation delay for digital output DO.   | 0.0 s     |
|                | 0.0...3600.0 s | Delay time   | 1 = 0.1 s |
| 1807           | DO OFF DELAY   | Defines the release delay for digital output DO.   | 0.0 s     |
|                | 0.0...3600.0 s | Delay time   | 1 = 0.1 s |
| 1808           | FO CONTENT SEL | Selects a drive signal to be connected to frequency output FO.   | 104       |
|                | x...x          | Parameter index in group 01 OPERATING DATA. For example, 102 = 0102 SPEED.   | 1 = 1     |
| 1809           | FO CONTENT MIN | Defines the minimum frequency output FO signal value. Signal is selected with parameter 1808 FO CONTENT SEL. FO minimum and maximum correspond to 1811 MINIMUM FO and 1812 MAXIMUM FO settings as follows: | -         |
|                |                |    |           |
|                | x...x          | Setting range depends on parameter 1808 FO CONTENT SEL setting.  | -         |
| 1810           | FO CONTENT MAX | Defines the maximum frequency output FO signal value. Signal is selected with parameter 1808 FO CONTENT SEL. See parameter 1809 FO CONTENT MIN.  | -         |
|                | x...x          | Setting range depends on parameter 1808 FO CONTENT SEL setting.  | -         |
| 1811           | MINIMUM FO     | Defines the minimum value for frequency output FO.   | 10 Hz     |
|                | 10...16000 Hz  | Minimum frequency. See parameter 1809 FO CONTENT MIN.  | 1 = 1 Hz  |

| All parameters                |                 |  |                |
|-------------------------------|-----------------|--|----------------|
| No.                           | Name/Value      | Description  | Def/FbEq       |
| 1812                          | MAXIMUM FO      | Defines the maximum value for frequency output FO.   | 1000 Hz        |
|                               | 10...16000 Hz   | Maximum frequency. See parameter <i>1809 FO CONTENT MIN.</i>   | 1 = 1 Hz       |
| 1813                          | FILTER FO       | Defines the filter time constant for frequency output FO, ie, the time within which 63% of a step change is reached.   | 0.1 s          |
|                               | 0.0...10.0 s    | Filter time constant   | 1 = 0.1 s      |
| <b>19 TIMER &amp; COUNTER</b> |                 |  |                |
| 1901                          | TIMER DELAY     | Defines the time delay for the timer.  | 10.00 s        |
|                               | 0.01...120.00 s | Delay time   | 1 = 0.01 s     |
| 1902                          | TIMER START     | Selects the source for the timer start signal.   | <i>NOT SEL</i> |
|                               | DI1(INV)        | Timer start through inverted digital input DI1. Timer start on the falling edge of digital input DI1.<br><b>Note:</b> Timer start is not possible when reset is active (parameter <i>1903 TIMER RESET</i> ). | -1             |
|                               | DI2(INV)        | See selection <i>DI1(INV)</i> .  | -2             |
|                               | DI3(INV)        | See selection <i>DI1(INV)</i> .  | -3             |
|                               | DI4(INV)        | See selection <i>DI1(INV)</i> .  | -4             |
|                               | DI5(INV)        | See selection <i>DI1(INV)</i> .  | -5             |
|                               | NOT SEL         | No start signal  | 0              |
|                               | DI1             | Timer start through digital input DI1. Timer start on the rising edge of digital input DI1.<br><b>Note:</b> Timer start is not possible when reset is active (parameter <i>1903 TIMER RESET</i> ).           | 1              |
|                               | DI2             | See selection <i>DI1</i> .   | 2              |
|                               | DI3             | See selection <i>DI1</i> .   | 3              |
|                               | DI4             | See selection <i>DI1</i> .   | 4              |
|                               | DI5             | See selection <i>DI1</i> .   | 5              |
|                               | START           | External start signal, eg, start signal through fieldbus   | 6              |
| 1903                          | TIMER RESET     | Selects the source for the timer reset signal.   | <i>NOT SEL</i> |
|                               | DI1(INV)        | Timer reset through inverted digital input DI1. 0 = active, 1 = inactive.  | -1             |
|                               | DI2(INV)        | See selection <i>DI1(INV)</i> .  | -2             |
|                               | DI3(INV)        | See selection <i>DI1(INV)</i> .  | -3             |
|                               | DI4(INV)        | See selection <i>DI1(INV)</i> .  | -4             |
|                               | DI5(INV)        | See selection <i>DI1(INV)</i> .  | -5             |
|                               | NOT SEL         | No reset signal  | 0              |
|                               | DI1             | Timer reset through digital input DI1. 1 = active, 0 = inactive.   | 1              |
|                               | DI2             | See selection <i>DI1</i> .   | 2              |





| All parameters |                |  |                     |
|----------------|----------------|--|---------------------|
| No.            | Name/Value     | Description  | Def/FbEq            |
|                | DI3            | See selection <i>DI1</i> .   | 3                   |
|                | DI4            | See selection <i>DI1</i> .   | 4                   |
|                | DI5            | See selection <i>DI1</i> .   | 5                   |
|                | START          | Timer reset at start. Start signal source is selected by parameter <i>1902 TIMER START</i> .   | 6                   |
|                | START (INV)    | Time reset at start (inverted), ie, timer is reset when start signal is deactivated. Start signal source is selected by parameter <i>1902 TIMER START</i> .  | 7                   |
|                | RESET          | External reset, eg, reset through fieldbus   | 8                   |
| 1904           | COUNTER ENABLE | Selects the source for the counter enable signal.  | <i>DISABLE D</i>    |
|                | DI1(INV)       | Counter enable signal through inverted digital input DI1. 0 = active, 1 = inactive.  | -1                  |
|                | DI2(INV)       | See selection <i>DI1(INV)</i> .  | -2                  |
|                | DI3(INV)       | See selection <i>DI1(INV)</i> .  | -3                  |
|                | DI4(INV)       | See selection <i>DI1(INV)</i> .  | -4                  |
|                | DI5(INV)       | See selection <i>DI1(INV)</i> .  | -5                  |
|                | DISABLED       | No counter enable  | 0                   |
|                | DI1            | Counter enable signal through digital input DI1. 1 = active, 0 = inactive.   | 1                   |
|                | DI2            | See selection <i>DI1</i> .   | 2                   |
|                | DI3            | See selection <i>DI1</i> .   | 3                   |
|                | DI4            | See selection <i>DI1</i> .   | 4                   |
|                | DI5            | See selection <i>DI1</i> .   | 5                   |
|                | ENABLED        | Counter enabled  | 6                   |
| 1905           | COUNTER LIMIT  | Defines the counter limit.   | 1000                |
|                | 0...65535      | Limit value  | 1 = 1               |
| 1906           | COUNTER INPUT  | Selects the input signal source for the counter.   | <i>PLS IN(DI 5)</i> |
|                | PLS IN(DI 5)   | Digital input DI5 pulses. When a pulse is detected, the counter value increases by 1.  | 1                   |
|                | ENC W/O DIR    | Encoder pulse edges. When a rising or a falling edge is detected, the counter value increases by 1.  | 2                   |
|                | ENC WITH DIR   | Encoder pulse edges. The direction of rotation is taken into account. When a rising or a falling edge is detected and the direction of rotation is forward, the counter value increases by 1. When the direction of rotation is reverse, the counter value decreases by 1. | 3                   |

| All parameters |               |   |                |
|----------------|---------------|---|----------------|
| No.            | Name/Value    | Description   | Def/FbEq       |
|                | FILTERED DI5  | Filtered digital input DI5 pulses. When a pulse is detected, the counter value increases by 1.<br><b>Note:</b> Due to filtering, the maximum input signal frequency is 50 Hz.       | 4              |
| 1907           | COUNTER RESET | Selects the source for the counter reset signal.  | <i>NOT SEL</i> |
|                | DI1(INV)      | Counter reset through inverted digital input DI1. 0 = active, 1 = inactive.   | -1             |
|                | DI2(INV)      | See selection <i>DI1(INV)</i> .   | -2             |
|                | DI3(INV)      | See selection <i>DI1(INV)</i> .   | -3             |
|                | DI4(INV)      | See selection <i>DI1(INV)</i> .   | -4             |
|                | DI5(INV)      | See selection <i>DI1(INV)</i> .   | -5             |
|                | NOT SEL       | No reset signal   | 0              |
|                | DI1           | Counter reset through digital input DI1. 1 = active, 0 = inactive.  | 1              |
|                | DI2           | See selection <i>DI1</i> .  | 2              |
|                | DI3           | See selection <i>DI1</i> .  | 3              |
|                | DI4           | See selection <i>DI1</i> .  | 4              |
|                | DI5           | See selection <i>DI1</i> .  | 5              |
|                | AT LIMIT      | Reset at the limit defined by parameter <i>1905 COUNTER LIMIT</i>   | 6              |
|                | STRT/STP CMD  | Counter reset at start/stop command. Source for the start/stop is selected by parameter <i>1911 CNTR S/S COMMAND</i> .  | 7              |
|                | S/S CMD(INV)  | Counter reset at start/stop command (inverted), ie, counter is reset when start/stop command is deactivated. Start signal source is selected by parameter <i>1902 TIMER START</i> . | 8              |
|                | RESET         | Reset enabled   | 9              |
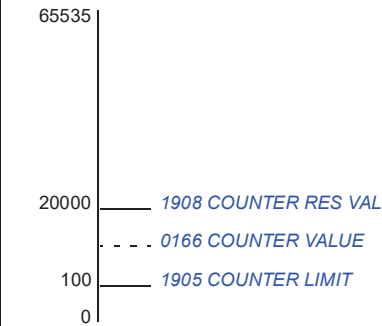
| All parameters |                 |   |          |
|----------------|-----------------|---|----------|
| No.            | Name/Value      | Description   | Def/FbEq |
|                | OVERFLOW        | <p>Counter moves between the minimum and maximum limits and rolls over to the opposite limit, when either the minimum or maximum limit is reached.</p> <p>Minimum and maximum limits are set by parameters <i>1905 COUNTER LIMIT</i> and <i>1908 COUNTER RES VAL</i>. Greater value from the two will be set as the maximum and the other as the minimum.</p> <p>When parameter <i>1909 COUNT DIVIDER</i> or either of the limits is changed so that the change causes the value of parameter <i>0166 COUNTER VALUE</i> to be outside of the min/max limits, the counter is assigned to the closest limit value.</p> <p><b>Example:</b> If the limits are set as shown in the figure below, the value of parameter <i>0166 COUNTER VALUE</i> changes as follows:</p> <ul style="list-style-type: none"> <li>Counting up: ... → 19998 → 19999 → 20000 → 100 → 101 → 102 ...</li> <li>Counting down: ... → 102 → 101 → 100 → 20000 → 19999 → 19998 ...</li> </ul>  <p>When <i>0166 COUNTER VALUE</i> is equal to <i>1905 COUNTER LIMIT</i>, the counter limit values trigger state changes.</p> | 10       |
| 1908           | COUNTER RES VAL | Defines the value for the counter after reset.  | 0        |
|                | 0...65535       | Counter value   | 1 = 1    |
| 1909           | COUNT DIVIDER   | Defines the divider for the pulse counter.  | 0        |
|                | 0...12          | Pulse counter divider N. Every 2 <sup>N</sup> bit is counted.   | 1 = 1    |
| 1910           | COUNT DIRECTION | Defines the source for the counter direction selection.   | UP       |
|                | DI1(INV)        | Counter direction selection through inverted digital input DI1. 1 = counts up, 0 = counts down.   | -1       |
|                | DI2(INV)        | See selection <i>DI1(INV)</i> .   | -2       |

| All parameters |                  |  |                |
|----------------|------------------|--|----------------|
| No.            | Name/Value       | Description  | Def/FbEq       |
|                | DI3(INV)         | See selection <a href="#">DI1(INV)</a> .   | -3             |
|                | DI4(INV)         | See selection <a href="#">DI1(INV)</a> .   | -4             |
|                | DI5(INV)         | See selection <a href="#">DI1(INV)</a> .   | -5             |
|                | UP               | Counts up  | 0              |
|                | DI1              | Counter direction selection through digital input DI1. 0 = counts up, 1 = counts down.   | 1              |
|                | DI2              | See selection <a href="#">DI1</a> .  | 2              |
|                | DI3              | See selection <a href="#">DI1</a> .  | 3              |
|                | DI4              | See selection <a href="#">DI1</a> .  | 4              |
|                | DI5              | See selection <a href="#">DI1</a> .  | 5              |
|                | DOWN             | Counts down  | 6              |
| 1911           | CNTR S/S COMMAND | Selects the source for the drive start/stop command when parameter <a href="#">1001 EXT1 COMMANDS</a> value is set to <a href="#">COUNTR START / COUNTER STOP</a> .  | <b>NOT SEL</b> |
|                | DI1(INV)         | Start/stop command through inverted digital input DI1. When parameter <a href="#">1001 EXT1 COMMANDS</a> value is <a href="#">COUNTER STOP</a> : 0 = start. Stop when counter limit defined by parameter <a href="#">1905 COUNTER LIMIT</a> has been exceeded. When parameter <a href="#">1001</a> value is <a href="#">COUNTR START</a> : 0 = stop. Start when counter limit defined by parameter <a href="#">1905</a> has been exceeded. | -1             |
|                | DI2(INV)         | See selection <a href="#">DI1(INV)</a> .   | -2             |
|                | DI3(INV)         | See selection <a href="#">DI1(INV)</a> .   | -3             |
|                | DI4(INV)         | See selection <a href="#">DI1(INV)</a> .   | -4             |
|                | DI5(INV)         | See selection <a href="#">DI1(INV)</a> .   | -5             |
|                | NOT SEL          | Not start/stop command source  | 0              |
|                | DI1              | Start/stop command through digital input DI1. When parameter <a href="#">1001 EXT1 COMMANDS</a> value is <a href="#">COUNTER STOP</a> : 1 = start. Stop when counter limit defined by parameter <a href="#">1905 COUNTER LIMIT</a> has been exceeded. When parameter <a href="#">1001</a> value is <a href="#">COUNTR START</a> : 1 = stop. Start when counter limit defined by parameter <a href="#">1905</a> has been exceeded.          | 1              |
|                | DI2              | See selection <a href="#">DI1</a> .  | 2              |
|                | DI3              | See selection <a href="#">DI1</a> .  | 3              |
|                | DI4              | See selection <a href="#">DI1</a> .  | 4              |
|                | DI5              | See selection <a href="#">DI1</a> .  | 5              |
|                | ACTIVATE         | External start/stop command, eg, through fieldbus  | 6              |
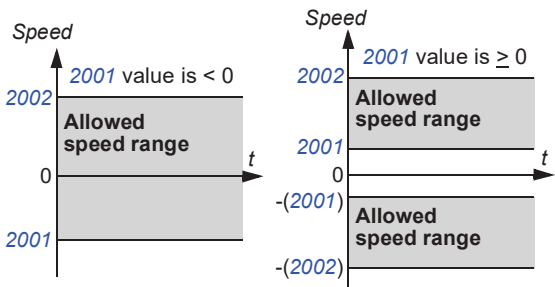
| All parameters   |                             |   |                                 |
|------------------|-----------------------------|---|---------------------------------|
| No.              | Name/Value                  | Description   | Def/FbEq                        |
| <b>20 LIMITS</b> |                             | Drive operation limits.<br>Speed values are used in vector control and frequency values are used in scalar control. The control mode is selected by parameter <i>9904 MOTOR CTRL MODE</i> .   |                                 |
| 2001             | MINIMUM SPEED               | Defines the allowed minimum speed.<br>A positive (or zero) minimum speed value defines two ranges, one positive and one negative.<br>A negative minimum speed value defines one speed range.<br><br>   | 0 rpm                           |
|                  | -30000...<br>30000 rpm      | Minimum speed   | 1 = 1 rpm                       |
| 2002             | MAXIMUM SPEED               | Defines the allowed maximum speed. See parameter <i>2001 MINIMUM SPEED</i> .  | E: 1500 rpm<br>/<br>U: 1800 rpm |
|                  | 0...30000 rpm               | Maximum speed   | 1 = 1 rpm                       |
| 2003             | MAX CURRENT                 | Defines the allowed maximum motor current.  | $1.8 \cdot I_{2N}$ A            |
|                  | 0.0... $1.8 \cdot I_{2N}$ A | Current   | 1 = 0.1 A                       |
| 2005             | OVERVOLT CTRL               | Activates or deactivates the overvoltage control of the intermediate DC link.<br><br>Fast braking of a high inertia load causes the voltage to rise to the overvoltage control limit. To prevent the DC voltage from exceeding the limit, the overvoltage controller automatically decreases the braking torque.<br><br><b>Note:</b> If a brake chopper and resistor are connected to the drive, the controller must be off (selection <i>DISABLE</i> ) to allow chopper operation. | <i>ENABLE</i>                   |
|                  | DISABLE                     | Overvoltage control deactivated   | 0                               |
|                  | ENABLE                      | Overvoltage control activated   | 1                               |
|                  | EN WITH BRCH                | Both braking chopper and overvoltage controller are enabled so that the braking chopper capability is used to its maximum and the overvoltage controller is activated above that.   | 2                               |

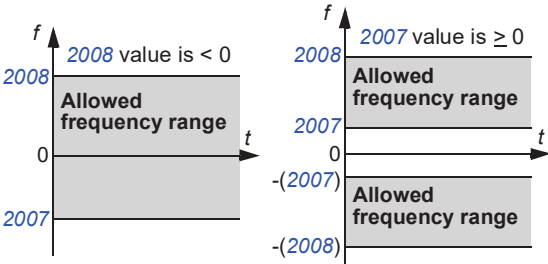

| All parameters |                   |   |                          |
|----------------|-------------------|---|--------------------------|
| No.            | Name/Value        | Description   | Def/FbEq                 |
| 2006           | UNDERVOLT CTRL    | <p>Activates or deactivates the undervoltage control of the intermediate DC link.</p> <p>If the DC voltage drops due to input power cut off, the undervoltage controller will automatically decrease the motor speed in order to keep the voltage above the lower limit. By decreasing the motor speed, the inertia of the load will cause regeneration back into the drive, keeping the DC link charged and preventing an undervoltage trip until the motor coasts to stop. This will act as a power-loss ride-through functionality in systems with a high inertia, such as a centrifuge or a fan. See section <i>Motor identification</i> on page 137.</p> | ENABLE(TIME)             |
|                | DISABLE           | Undervoltage control deactivated  | 0                        |
|                | ENABLE(TIME)      | Undervoltage control activated. After being in undervoltage control for 500 ms the drive faults and stops using an emergency ramp.  | 1                        |
|                | ENABLE            | Undervoltage control activated. No operation time limit.  | 2                        |
| 2007           | MINIMUM FREQ      | <p>Defines the minimum limit for the drive output frequency. A positive (or zero) minimum frequency value defines two ranges, one positive and one negative. A negative minimum frequency value defines one speed range.</p> <p><b>Note:</b> <math>MINIMUM\ FREQ \leq MAXIMUM\ FREQ</math>.</p>   | 0.0 Hz                   |
|                | -599.0...599.0 Hz | Minimum frequency   | 1 = 0.1 Hz               |
| 2008           | MAXIMUM FREQ      | Defines the maximum limit for the drive output frequency.   | E: 50.0 Hz<br>U: 60.0 Hz |
|                | 0.0...599.0 Hz    | Maximum frequency   | 1 = 0.1 Hz               |
| 2013           | MIN TORQUE SEL    | Selects the minimum torque limit for the drive.   | MIN TORQUE 1             |
|                | MIN TORQUE 1      | Value defined by parameter 2015 MIN TORQUE 1  | 0                        |
|                | DI1               | Digital input DI1. 0 = parameter 2015 MIN TORQUE 1 value. 1 = parameter 2016 MIN TORQUE 2 value.  | 1                        |

| All parameters |                |   |                              |
|----------------|----------------|---|------------------------------|
| No.            | Name/Value     | Description   | Def/FbEq                     |
|                | DI2            | See selection <a href="#">DI1</a> .   | 2                            |
|                | DI3            | See selection <a href="#">DI1</a> .   | 3                            |
|                | DI4            | See selection <a href="#">DI1</a> .   | 4                            |
|                | DI5            | See selection <a href="#">DI1</a> .   | 5                            |
|                | COMM           | <p>Fieldbus interface as the source for the torque limit 1/2 selection, ie, Control word <a href="#">0301 FB CMD WORD 1</a> bit 15. The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see section <a href="#">DCU communication profile</a> on page <a href="#">333</a>.</p> <p>Minimum torque limit 1 is defined by parameter <a href="#">2015 MIN TORQUE 1</a> and minimum torque limit 2 is defined by parameter <a href="#">2016 MIN TORQUE 2</a>.</p> <p><b>Note:</b> This setting applies only for the DCU profile.</p> | 7                            |
|                | EXT2           | Value of signal <a href="#">0112 EXTERNAL REF 2</a>   | 11                           |
|                | DI1(INV)       | Inverted digital input DI1. 1 = value of parameter <a href="#">2015 MIN TORQUE 1</a> 1. 0 = value of parameter <a href="#">2016 MIN TORQUE 2</a> .  | -1                           |
|                | DI2(INV)       | See selection <a href="#">DI1(INV)</a> .  | -2                           |
|                | DI3(INV)       | See selection <a href="#">DI1(INV)</a> .  | -3                           |
|                | DI4(INV)       | See selection <a href="#">DI1(INV)</a> .  | -4                           |
|                | DI5(INV)       | See selection <a href="#">DI1(INV)</a> .  | -5                           |
| 2014           | MAX TORQUE SEL | Selects the maximum torque limit for the drive.   | <a href="#">MAX TORQUE 1</a> |
|                | MAX TORQUE 1   | Value of parameter <a href="#">2017 MAX TORQUE 1</a>  |                              |
|                | DI1            | Digital input DI1. 0 = parameter <a href="#">2017 MAX TORQUE 1</a> value. 1 = parameter <a href="#">2018 MAX TORQUE 2</a> value.  | 1                            |
|                | DI2            | See selection <a href="#">DI1</a> .   | 2                            |
|                | DI3            | See selection <a href="#">DI1</a> .   | 3                            |
|                | DI4            | See selection <a href="#">DI1</a> .   | 4                            |
|                | DI5            | See selection <a href="#">DI1</a> .   | 5                            |


| All parameters |               |   |          |
|----------------|---------------|---|----------|
| No.            | Name/Value    | Description   | Def/FbEq |
|                | COMM          | <p>Fieldbus interface as the source for the torque limit 1/2 selection, ie, Control word <i>0301 FB CMD WORD 1</i> bit 15. The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see section <i>DCU communication profile</i> on page 333.</p> <p>Maximum torque limit 1 is defined by parameter <i>2017 MAX TORQUE 1</i> and maximum torque limit 2 is defined by parameter <i>2018 MAX TORQUE 2</i>.</p> <p><b>Note:</b> This setting applies only for the DCU profile.</p> | 7        |
|                | EXT2          | Value of signal <i>0112 EXTERNAL REF 2</i>  | 11       |
|                | DI1(INV)      | Inverted digital input DI1. 1 = parameter <i>2017 MAX TORQUE 1</i> value. 0 = parameter <i>2018 MAX TORQUE 2</i> value.   | -1       |
|                | DI2(INV)      | See selection <i>DI1(INV)</i> .   | -2       |
|                | DI3(INV)      | See selection <i>DI1(INV)</i> .   | -3       |
|                | DI4(INV)      | See selection <i>DI1(INV)</i> .   | -4       |
|                | DI5(INV)      | See selection <i>DI1(INV)</i> .   | -5       |
| 2015           | MIN TORQUE 1  | Defines minimum torque limit 1 for the drive. See parameter <i>2013 MIN TORQUE SEL.</i>   | -300%    |
|                | -600.0...0.0% | Value as a percentage of the motor nominal torque   | 1 = 0.1% |
| 2016           | MIN TORQUE 2  | Defines minimum torque limit 2 for the drive. See parameter <i>2013 MIN TORQUE SEL.</i>   | -300%    |
|                | -600.0...0.0% | Value as a percentage of the motor nominal torque   | 1 = 0.1% |
| 2017           | MAX TORQUE 1  | Defines maximum torque limit 1 for the drive. See parameter <i>2014 MAX TORQUE SEL.</i>   | 300%     |
|                | 0.0...600.0%  | Value as a percentage of the motor nominal torque   | 1 = 0.1% |
| 2018           | MAX TORQUE 2  | Defines maximum torque limit 2 for the drive. See parameter <i>2014 MAX TORQUE SEL.</i>   | 300%     |
|                | 0.0...600.0%  | Value as a percentage of the motor nominal torque   | 1 = 0.1% |





| All parameters       |                   |  |                 |
|----------------------|-------------------|--|-----------------|
| No.                  | Name/Value        | Description  | Def/FbEq        |
| 2020                 | BRAKE<br>CHOPPER  | Selects the brake chopper control.<br>When using the drive in a Common DC bus system, the parameter must be set to <i>EXTERNAL</i> . When in Common DC, the drive cannot feed or receive more power than $P_N$ .   | <i>INBUILT</i>  |
|                      | INBUILT           | Internal brake chopper control.<br><b>Note:</b> Ensure the brake resistor(s) is installed and the overvoltage control is switched off by setting parameter <i>2005 OVERVOLT CTRL</i> to selection <i>DISABLE</i> . See also <i>2005 OVERVOLT CTRL</i> selection <i>EN WITH BRCH</i> .  | 0               |
|                      | EXTERNAL          | External brake chopper control.<br><b>Note:</b> The drive is compatible only with ABB <i>ACS-BRK-X</i> brake units.<br><b>Note:</b> Ensure the brake unit is installed and the overvoltage control is switched off by setting parameter <i>2005 OVERVOLT CTRL</i> to selection <i>DISABLE</i> .  | 1               |
| 2021                 | MAX SPEED<br>SEL  | Maximum speed source for torque control  | <i>PAR 2002</i> |
|                      | PAR 2002          | Value of parameter <i>2002 MAXIMUM SPEED</i>   | 0               |
|                      | EXT REF 1         | Value of signal <i>0111 EXTERNAL REF 1</i>   | 1               |
| <b>21 START/STOP</b> |                   | Start and stop modes of the motor  |                 |
| 2101                 | START<br>FUNCTION | Selects the motor starting method.   | <i>AUTO</i>     |
|                      | AUTO              | The drive starts the motor instantly from zero frequency if parameter <i>9904 MOTOR CTRL MODE</i> setting is <i>SCALAR: FREQ</i> . If flying start is required use selection <i>SCAN START</i> .<br>If parameter <i>9904 MOTOR CTRL MODE</i> value is <i>VECTOR: SPEED</i> or <i>VECTOR: TORQ</i> , the drive pre-magnetizes the motor with DC current before the start. The pre-magnetizing time is defined by parameter <i>2103 DC MAGN TIME</i> . See selection <i>DC MAGN</i> .<br>For permanent magnet synchronous motors, flying start is used if the motor is rotating. | 1               |

| All parameters |            |  |          |
|----------------|------------|--|----------|
| No.            | Name/Value | Description  | Def/FbEq |
|                | DC MAGN    | <p>The drive pre-magnetizes the motor with DC current before the start. The pre-magnetizing time is defined by parameter <i>2103 DC MAGN TIME</i>.</p> <p>If parameter <i>9904 MOTOR CTRL MODE</i> value is <i>VECTOR: SPEED</i> or <i>VECTOR: TORQ</i>, DC magnetizing guarantees the highest possible break-away torque when the pre-magnetizing is set long enough.</p> <p><b>Note:</b> Starting the drive connected to a rotating motor is not possible when <i>DC MAGN</i> is selected. When a permanent magnet synchronous motor is used, alarm <i>MOTOR BACK EMF (2029)</i> is generated.</p> <p> <b>WARNING!</b> The drive will start after the set pre-magnetizing time has passed even if the motor magnetization is not completed. In applications where a full break-away torque is essential, always ensure that the constant magnetizing time is long enough to allow generation of full magnetization and torque.</p>  | 2        |
|                | TORQ BOOST | <p>Torque boost should be selected if a high break-away torque is required. Used only when parameter <i>9904 MOTOR CTRL MODE</i> setting is <i>SCALAR: FREQ</i>.</p> <p>The drive pre-magnetizes the motor with DC current before the start. The pre-magnetizing time is defined by parameter <i>2103 DC MAGN TIME</i>.</p> <p>Torque boost is applied at start. Torque boost is stopped when output frequency exceeds 20 Hz or when it is equal to the reference value. See parameter <i>2110 TORQ BOOST CURR</i>.</p> <p><b>Note:</b> Starting the drive connected to a rotating motor is not possible when <i>TORQ BOOST</i> is selected.</p> <p> <b>WARNING!</b> The drive will start after the set pre-magnetizing time has passed although the motor magnetization is not completed. In applications where a full break-away torque is essential, always ensure that the constant magnetizing time is long enough to allow generation of full magnetization and torque.</p> | 4        |
|                | SCAN START | <p>Frequency scanning flying start (starting the drive connected to a rotating motor). Based on frequency scanning (interval <i>2008 MAXIMUM FREQ...2007 MINIMUM FREQ</i>) to identify the frequency. If frequency identification fails, DC magnetization is used (see selection <i>DC MAGN</i>).<br/>Not for multimotor drives.</p>   | 6        |

| All parameters |               |   |              |
|----------------|---------------|---|--------------|
| No.            | Name/Value    | Description   | Def/FbEq     |
|                | SCAN + BOOST  | <p>Combines scanning start (starting the drive connected to a rotating motor) and torque boost. See selections <i>SCAN START</i> and <i>TORQ BOOST</i>. If frequency identification fails, torque boost is used.</p> <p>Used only when parameter <i>9904 MOTOR CTRL MODE</i> setting is <i>SCALAR: FREQ.</i></p>  | 7            |
|                | AUTO2         | <p>Effective with asynchronous motors and vector:speed and vector:torque modes. Reduces the motor bumping effect during the start. Bumping effect can be further reduced with the ramp stop and DC brake functions (operation also affected).</p> <p>Starting can further be smoothened by adjusting the DC magnetization time up to 1 s (longer times do not apply). Shorter time increases the breakaway torque but may amplify the bumping effect.</p> <p>Motor is started from the last known rotor position. This reduces the backstroke effect caused by the rotor reluctance flux.</p> <p>Used only when parameter <i>9904 MOTOR CTRL MODE</i> setting is <i>VECTOR: SPEED</i> or <i>VECTOR: TORQ.</i></p> | 9            |
| 2102           | STOP FUNCTION | Selects the motor stop function. See section <i>Speed compensated stop</i> on page 139.   | <i>COAST</i> |
|                | COAST         | Stop by cutting off the motor power supply. The motor coasts to stop.   | 1            |
|                | RAMP          | Stop along a ramp. See parameter group 22 <i>ACCEL/DECEL.</i>   | 2            |
|                | SPEED COMP    | Speed compensation is used for constant distance braking. Speed difference (between used speed and maximum speed) is compensated by running the drive with current speed before the motor is stopped along a ramp. See section <i>Acceleration and deceleration ramps</i> on page 141.  | 3            |
|                | SPD COMP FWD  | <p>Speed compensation is used for constant distance braking if the direction of rotation is forward. Speed difference (between used speed and maximum speed) is compensated by running the drive with current speed before the motor is stopped along a ramp. See section <i>Acceleration and deceleration ramps</i> on page 141.</p> <p>If the direction of rotation is reverse, the drive is stopped along a ramp.</p>  | 4            |


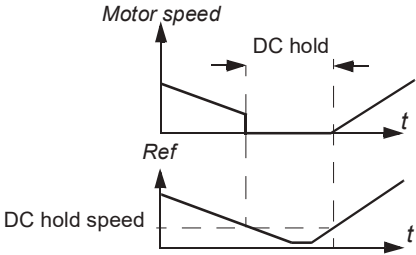
| All parameters |                |   |                         |
|----------------|----------------|---|-------------------------|
| No.            | Name/Value     | Description   | Def/FbEq                |
|                | SPD COMP REV   | Speed compensation is used for constant distance braking if the direction of rotation is reverse. Speed difference (between used speed and maximum speed) is compensated by running the drive with current speed before the motor is stopped along a ramp. See section <a href="#">Acceleration and deceleration ramps</a> on page 141.<br>If the direction of rotation is forward, the drive is stopped along a ramp.  | 5                       |
| 2103           | DC MAGN TIME   | Defines the pre-magnetizing time. See parameter <a href="#">2101 START FUNCTION</a> . After the start command, the drive automatically pre-magnetizes the motor for the defined time.   | 0.30 s                  |
|                | 0.00...10.00 s | Magnetizing time. Set this value long enough to allow full motor magnetization. Too long a time heats the motor excessively.  | 1 = 0.01 s              |
| 2104           | DC HOLD CTL    | Activates the DC hold or DC braking function.   | <a href="#">NOT SEL</a> |
|                | NOT SEL        | Inactive  | 0                       |
|                | DC HOLD        | DC hold function active. DC hold is not possible if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ</a> .<br>When both the reference and the motor speed drop below the value of parameter <a href="#">2105 DC HOLD SPEED</a> , the drive will stop generating sinusoidal current and start to inject DC into the motor. The current is set by parameter <a href="#">2106 DC CURR REF</a> . When the reference speed exceeds parameter <a href="#">2105</a> value, normal drive operation continues.<br> | 1                       |
|                |                | <b>Note:</b> DC hold has no effect if the start signal is switched off.<br><b>Note:</b> Injecting DC current into the motor causes the motor to heat up. In applications where long DC hold times are required, externally ventilated motors should be used. If the DC hold period is long, the DC hold cannot prevent the motor shaft from rotating if a constant load is applied to the motor.  |                         |

## All parameters
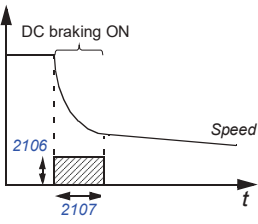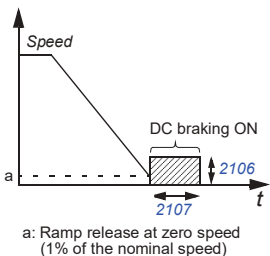
| No.  | Name/Value    | Description  | Def/FbEq  |
|------|---------------|--|-----------|
|      | DC BRAKING    | <p>DC current braking function active.</p> <p>If parameter <b>2102 STOP FUNCTION</b> is set to <b>COAST</b>, DC braking is applied after the start command is removed.</p> <p>If parameter <b>2102 STOP FUNCTION</b> is set to <b>RAMP</b>, DC braking is applied after the ramp.</p> <p><b>Coast mode</b></p>  <p><b>Ramp mode</b></p>    | 2         |
| 2105 | DC HOLD SPEED | Defines the DC hold speed. See parameter <b>2104 DC HOLD CTL.</b>  | 5 rpm     |
|      | 0...360 rpm   | Speed  | 1 = 1 rpm |
| 2106 | DC CURR REF   | Defines the DC hold current. See parameter <b>2104 DC HOLD CTL.</b>  | 30%       |
|      | 0...100%      | Value as a percentage of the nominal motor current (parameter <b>9906 MOTOR NOM CURR</b> )   | 1 = 1%    |
| 2107 | DC BRAKE TIME | Defines the DC brake time.   | 0.0 s     |
|      | 0.0...250.0 s | Time   | 1 = 0.1 s |
| 2108 | START INHIBIT | <p>Sets the Start inhibit function on or off. If the drive is not actively started and running, the Start inhibit function ignores a pending start command in any of the following situations and a new start command is required:</p> <ul style="list-style-type: none"> <li>• a fault is reset.</li> <li>• Run enable signal activates while the start command is active. See parameter <b>1601 RUN ENABLE.</b></li> <li>• control mode changes from local to remote.</li> <li>• external control mode switches from EXT1 to EXT2 or from EXT2 to EXT1.</li> <li>• the drive that is set to external pulse start (parameter <b>1001 EXT1 COMMANDS</b> is set to <b>DI1P,2P</b>; <b>DI1P,2P,3</b> or <b>DI1P,2P,3P</b>) is powered up and the corresponding digital inputs (DI1 and DI2 or DI3) are at high level during power-up.</li> </ul> | OFF       |
|      | OFF           | Disabled   | 0         |
|      | ON            | Enabled  | 1         |


| All parameters |                 |  |          |
|----------------|-----------------|--|----------|
| No.            | Name/Value      | Description  | Def/FbEq |
| 2109           | EMERG STOP SEL  | <p>Selects the source for the external emergency stop command.</p> <p>The drive cannot be restarted before the emergency stop command is reset.</p> <p><b>Note:</b> The installation must include emergency stop devices and any other safety equipment that may be needed. Pressing the stop key on the drive's control panel does NOT:</p> <ul style="list-style-type: none"> <li>• generate an emergency stop of the motor</li> <li>• separate the drive from dangerous potential.</li> </ul> | NOT SEL  |
|                | NOT SEL         | Emergency stop function is not selected  | 0        |
|                | DI1             | Digital input DI1. 1 = stop along the emergency stop ramp. See parameter <i>2208 EMERG DEC TIME</i> . 0 = emergency stop command reset.  | 1        |
|                | DI2             | See selection <i>DI1</i> .   | 2        |
|                | DI3             | See selection <i>DI1</i> .   | 3        |
|                | DI4             | See selection <i>DI1</i> .   | 4        |
|                | DI5             | See selection <i>DI1</i> .   | 5        |
|                | DI1(INV)        | Inverted digital input DI. 0 = stop along the emergency stop ramp. See parameter <i>2208 EMERG DEC TIME</i> . 1 = emergency stop command reset   | -1       |
|                | DI2(INV)        | See selection <i>DI1(INV)</i> .  | -2       |
|                | DI3(INV)        | See selection <i>DI1(INV)</i> .  | -3       |
|                | DI4(INV)        | See selection <i>DI1(INV)</i> .  | -4       |
|                | DI5(INV)        | See selection <i>DI1(INV)</i> .  | -5       |
| 2110           | TORQ BOOST CURR | Defines the maximum supplied current during torque boost. See parameter <i>2101 START FUNCTION</i> .   | 100%     |
|                | 15...300%       | Value as a percentage  | 1 = 1%   |
| 2111           | STOP SIGNAL DLY | Defines the stop signal delay time when parameter <i>2102 STOP FUNCTION</i> is set to <i>SPEED COMP</i> .  | 0 ms     |
|                | 0...10000 ms    | Delay time   | 1 = 1 ms |

**All parameters**

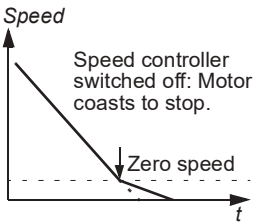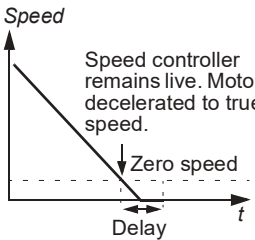
| No.                   | Name/Value                    | Description  | Def/FbEq      |
|-----------------------|-------------------------------|--|---------------|
| 2112                  | ZERO SPEED DELAY              | <p>Defines the delay for the Zero speed delay function. The function is useful in applications where a smooth and quick restarting is essential. During the delay the drive knows accurately the rotor position.</p> <p><b>No Zero speed delay</b></p>  <p><b>With Zero speed delay</b></p>  <p><b>No Zero speed delay</b></p> <p>The drive receives a stop command and decelerates along a ramp. When the motor actual speed falls below an internal limit (called Zero speed), the speed controller is switched off. The inverter modulation is stopped and the motor coasts to standstill.</p> <p><b>With Zero speed delay</b></p> <p>The drive receives a stop command and decelerates along a ramp. When the actual motor speed falls below an internal limit (called Zero speed), the zero speed delay function activates. During the delay the functions keeps the speed controller live: The inverter modulates, motor is magnetized and the drive is ready for a quick restart.</p> | 0.0 = NOT SEL |
|                       | 0.0 = NOT SEL<br>0.0...60.0 s | Delay time. If parameter value is set to zero, Zero speed delay function is disabled.  | 1 = 0.1 s     |
| <b>22 ACCEL/DECEL</b> |                               | <b>Acceleration and deceleration times</b>   |               |
| 2201                  | ACC/DEC 1/2 SEL               | <p>Defines the source from which the drive reads the signal that selects between the two ramp pairs, acceleration/deceleration pair 1 and 2.</p> <p>Ramp pair 1 is defined by parameters <a href="#">2202...2204</a>.</p> <p>Ramp pair 2 is defined by parameters <a href="#">2205...2207</a>.</p>   | DI5           |
|                       | NOT SEL                       | Ramp pair 1 is used.   | 0             |
|                       | DI1                           | Digital input DI1. 1 = ramp pair 2, 0 = ramp pair 1.   | 1             |
|                       | DI2                           | See selection <a href="#">DI1</a> .  | 2             |
|                       | DI3                           | See selection <a href="#">DI1</a> .  | 3             |
|                       | DI4                           | See selection <a href="#">DI1</a> .  | 4             |
|                       | DI5                           | See selection <a href="#">DI1</a> .  | 5             |


| All parameters |                |  |           |
|----------------|----------------|--|-----------|
| No.            | Name/Value     | Description  | Def/FbEq  |
|                | COMM           | Fieldbus interface as the source for ramp pair 1/2 selection, ie, Control word <i>0301 FB CMD WORD 1</i> bit 10. The Control word is sent by the fieldbus controller through the fieldbus adapter or embedded fieldbus (Modbus) to the drive. For the Control word bits, see section <i>DCU communication profile</i> on page 333.<br><b>Note:</b> This setting applies only for the DCU profile.  | 7         |
|                | SEQ PROG       | Sequence programming ramp defined by parameter <i>8422 ST1 RAMP</i> (or <i>8423/.../8492</i> )   | 10        |
|                | DI1(INV)       | Inverted digital input DI1. 0 = ramp pair 2, 1 = ramp pair 1.  | -1        |
|                | DI2(INV)       | See selection <i>DI1(INV)</i> .  | -2        |
|                | DI3(INV)       | See selection <i>DI1(INV)</i> .  | -3        |
|                | DI4(INV)       | See selection <i>DI1(INV)</i> .  | -4        |
|                | DI5(INV)       | See selection <i>DI1(INV)</i> .  | -5        |
| 2202           | ACCELER TIME 1 | Defines the acceleration time 1, ie, the time required for the speed to change from zero to the speed defined by parameter <i>2008 MAXIMUM FREQ</i> (in scalar control) / <i>2002 MAXIMUM SPEED</i> (in vector control). The control mode is selected by parameter <i>9904 MOTOR CTRL MODE</i> .<br><ul style="list-style-type: none"> <li>• If the speed reference increases faster than the set acceleration rate, the motor speed will follow the acceleration rate.</li> <li>• If the speed reference increases slower than the set acceleration rate, the motor speed will follow the reference signal.</li> <li>• If the acceleration time is set too short, the drive will automatically prolong the acceleration in order not to exceed the drive operating limits.</li> </ul> Actual acceleration time depends on parameter <i>2204 RAMP SHAPE 1</i> setting. | 5.0 s     |
|                | 0.0...1800.0 s | Time   | 1 = 0.1 s |

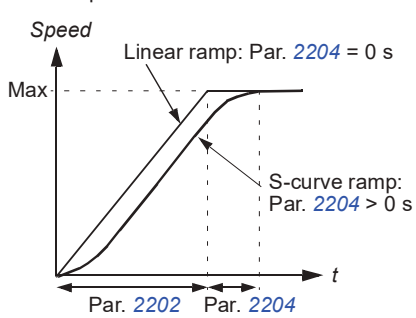


| All parameters  |                                |  |              |
|---|--------------------------------|--|--------------|
| No.   | Name/Value                     | Description  | Def/FbEq     |
| 2203  | DECELER TIME 1                 | <p>Defines the deceleration time 1, ie, the time required for the speed to change from the value defined by parameter <b>2008 MAXIMUM FREQ</b> (in scalar control) / <b>2002 MAXIMUM SPEED</b> (in vector control) to zero. The control mode is selected by parameter <b>9904 MOTOR CTRL MODE</b>.</p> <ul style="list-style-type: none"> <li>• If the speed reference decreases slower than the set deceleration rate, the motor speed will follow the reference signal.</li> <li>• If the reference changes faster than the set deceleration rate, the motor speed will follow the deceleration rate.</li> <li>• If the deceleration time is set too short, the drive will automatically prolong the deceleration in order not to exceed drive operating limits.</li> </ul> <p>If a short deceleration time is needed for a high inertia application, the drive should be equipped with a brake resistor.</p> <p>Actual deceleration time depends on parameter <b>2204 RAMP SHAPE 1</b> setting.</p> | 5.0 s        |
|   | 0.0...1800.0 s                 | Time   | 1 = 0.1 s    |
| 2204  | RAMP SHAPE 1                   | Selects the shape of the acceleration/deceleration ramp 1. The function is deactivated during emergency stop and jogging.  | 0.0 = LINEAR |
|   | 0.0 = LINEAR<br>0.1...1000.0 s | <p>0.0: Linear ramp. Suitable for steady acceleration or deceleration and for slow ramps.</p> <p>0.1...1000.0 s: S-curve ramp. S-curve ramps are ideal for conveyors carrying fragile loads, or other applications where a smooth transition is required when changing from one speed to another. The S-curve consists of symmetrical curves at both ends of the ramp and a linear part in between.</p> <p>A rule of thumb:<br/>A suitable relation between the ramp shape time and the acceleration ramp time is 1/5.</p>   | 1 = 0.1 s    |
|  |                                |  |              |


| All parameters |                                |  |                     |
|----------------|--------------------------------|--|---------------------|
| No.            | Name/Value                     | Description  | Def/FbEq            |
| 2205           | ACCELER TIME 2                 | Defines the acceleration time 2, ie, the time required for the speed to change from zero to the speed defined by parameter <i>2008 MAXIMUM FREQ</i> (in scalar control) / <i>2002 MAXIMUM SPEED</i> (in vector control). The control mode is selected by parameter <i>9904 MOTOR CTRL MODE</i> .<br>See parameter <i>2202 ACCELER TIME 1</i> .<br>Acceleration time 2 is used also as jogging acceleration time. See parameter <i>1010 JOGGING SEL</i> . | 60.0 s              |
|                | 0.0...1800.0 s                 | Time   | 1 = 0.1 s           |
| 2206           | DECELER TIME 2                 | Defines the deceleration time 2, ie, the time required for the speed to change from the value defined by parameter <i>2008 MAXIMUM FREQ</i> (in scalar control) / <i>2002 MAXIMUM SPEED</i> (in vector control) to zero. The control mode is selected by parameter <i>9904 MOTOR CTRL MODE</i> .<br>See parameter <i>2203 DECELER TIME 1</i> .<br>Deceleration time 2 is used also as jogging deceleration time. See parameter <i>1010 JOGGING SEL</i> . | 60.0 s              |
|                | 0.0...1800.0 s                 | Time   | 1 = 0.1 s           |
| 2207           | RAMP SHAPE 2                   | Selects the shape of the acceleration/deceleration ramp 2. The function is deactivated during emergency stop.<br>During jogging, parameter value is set to zero (ie, linear ramp). See <i>1010 JOGGING SEL</i> .   | <i>0.0 = LINEAR</i> |
|                | 0.0 = LINEAR<br>0.1...1000.0 s | See parameter <i>2204 RAMP SHAPE 1</i> .   | 1 = 0.1 s           |
| 2208           | EMERG DEC TIME                 | Defines the time within which the drive is stopped if an emergency stop is activated. See parameter <i>2109 EMERG STOP SEL</i> .   | 1.0 s               |
|                | 0.0...1800.0 s                 | Time   | 1 = 0.1 s           |
| 2209           | RAMP INPUT 0                   | Defines the control for forcing the speed to 0 with the currently used deceleration ramp (see parameters <i>2203 DECELER TIME 1</i> and <i>2206 DECELER TIME 2</i> ).  | <i>NOT SEL</i>      |
|                | NOT SEL                        | Not selected   | 0                   |
|                | DI1                            | Digital input DI1. Defines digital input DI1 as the control for forcing the speed to zero.<br><ul style="list-style-type: none"> <li>Activating the digital input forces the speed to zero, after which the speed will stay at zero.</li> <li>De-activating the digital input: speed control resumes normal operation.</li> </ul>  | 1                   |
|                | DI2                            | See selection <i>DI1</i> .   | 2                   |
|                | DI3                            | See selection <i>DI1</i> .   | 3                   |
|                | DI4                            | See selection <i>DI1</i> .   | 4                   |
|                | DI5                            | See selection <i>DI1</i> .   | 5                   |

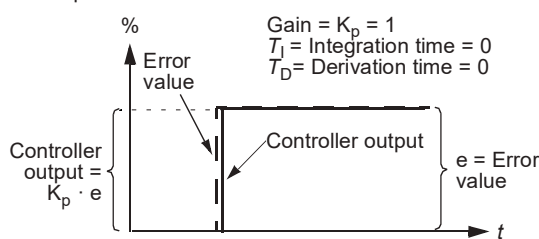
| All parameters          |               |  |          |
|-------------------------|---------------|--|----------|
| No.                     | Name/Value    | Description  | Def/FbEq |
|                         | COMM          | Defines bit 13 of Command word 1 as the control for forcing the speed to zero. The Command word 1 is supplied through fieldbus communication (parameter <i>0301</i> ).   | 7        |
|                         | DI1(INV)      | Inverted digital input DI1. Defines inverted digital input DI1 as the control for forcing the speed to zero. <ul style="list-style-type: none"> <li>De-activating the digital input forces the speed to zero.</li> <li>Activating the digital input: speed control resumes normal operation.</li> </ul>  | -1       |
|                         | DI2(INV)      | See selection <i>DI1(INV)</i> .  | -2       |
|                         | DI3(INV)      | See selection <i>DI1(INV)</i> .  | -3       |
|                         | DI4(INV)      | See selection <i>DI1(INV)</i> .  | -4       |
|                         | DI5(INV)      | See selection <i>DI1(INV)</i> .  | -5       |
| <b>23 SPEED CONTROL</b> |               | Speed controller variables. See section <i>Speed controller tuning</i> on page 144.<br><b>Note:</b> These parameters do not affect drive operation in scalar control, ie, when parameter <i>9904 MOTOR CTRL MODE</i> setting is <i>SCALAR: FREQ</i> .  |          |
| 2301                    | PROP GAIN     | Defines a relative gain for the speed controller. High gain may cause speed oscillation.<br>The figure below shows the speed controller output after an error step when the error remains constant.<br><div style="text-align: center;">  <p>Gain = <math>K_p = 1</math><br/><math>T_j</math> = Integration time = 0<br/><math>T_D</math> = Derivation time = 0</p> <p>Controller output = <math>K_p \cdot e</math></p> <p><math>e</math> = Error value</p> </div> | 5.00     |
|                         | 0.00...200.00 | Gain   | 1 = 0.01 |
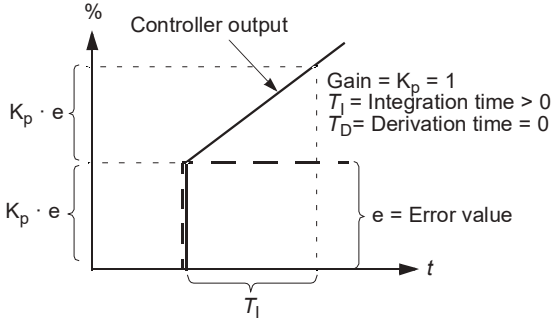
| All parameters |                  |   |            |
|----------------|------------------|---|------------|
| No.            | Name/Value       | Description   | Def/FbEq   |
| 2302           | INTEGRATION TIME | <p>Defines an integration time for the speed controller. The integration time defines the rate at which the controller output changes when the error value is constant. The shorter the integration time, the faster the continuous error value is corrected. Too short an integration time makes the control unstable.</p> <p>The figure below shows the speed controller output after an error step when the error remains constant.</p>  <p><b>Note:</b> For automatic setting of the integration time, use autotune run (parameter <a href="#">2305 AUTOTUNE RUN</a>).</p> | 0.50 s     |
|                | 0.00...600.00 s  | Time  | 1 = 0.01 s |

All parameters
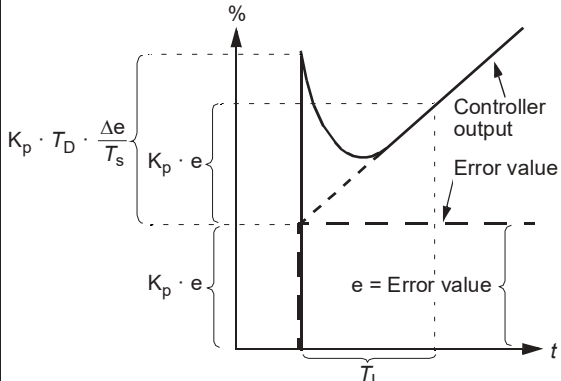
| No.  | Name/Value      | Description  | Def/FbEq |
|------|-----------------|--|----------|
| 2303 | DERIVATION TIME | <p>Defines the derivation time for the speed controller. Derivative action boosts the controller output if the error value changes. The longer the derivation time, the more the speed controller output is boosted during the change. If the derivation time is set to zero, the controller works as a PI controller, otherwise as a PID controller.</p> <p>The derivation makes the control more responsive for disturbances.</p> <p>The figure below shows the speed controller output after an error step when the error remains constant.</p>  <p>Gain = <math>K_p = 1</math><br/> <math>T_I</math> = Integration time &gt; 0<br/> <math>T_D</math> = Derivation time &gt; 0<br/> <math>T_s</math> = Sample time period = 2 ms<br/> <math>\Delta e</math> = Error value change between two samples</p> | 0 ms     |
|      | 0....10000 ms   | Time   | 1 = 1 ms |

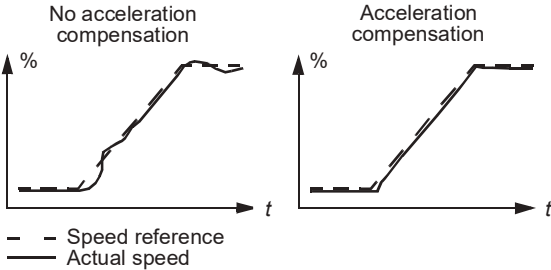
| All parameters           |                  |   |            |
|--------------------------|------------------|---|------------|
| No.                      | Name/Value       | Description   | Def/FbEq   |
| 2304                     | ACC COMPENSATION | <p>Defines the derivation time for acceleration/(deceleration) compensation. In order to compensate inertia during acceleration, a derivative of the reference is added to the output of the speed controller. The principle of a derivative action is described for parameter <a href="#">2303 DERIVATION TIME</a>.</p> <p><b>Note:</b> As a general rule, set this parameter to the value between 50 and 100% of the sum of the mechanical time constants of the motor and the driven machine. (The speed controller Autotune run does this automatically, see parameter <a href="#">2305 AUTOTUNE RUN</a>.)</p> <p>The figure below shows the speed responses when a high inertia load is accelerated along a ramp.</p>  <p style="text-align: center;"> <span style="margin-right: 100px;">— — Speed reference</span><br/> <span>———— Actual speed</span> </p> | 0.00 s     |
|                          | 0.00...600.00 s  | Time  | 1 = 0.01 s |
| 2305                     | AUTOTUNE RUN     | <p>Start automatic tuning of the speed controller. Instructions:</p> <ul style="list-style-type: none"> <li>• Run the motor at a constant speed of 20 to 40% of the rated speed.</li> <li>• Change the autotuning parameter 2305 to <b>ON</b>.</li> </ul> <p><b>Note:</b> The motor load must be connected to the motor.</p>  | <b>OFF</b> |
|                          | OFF              | No autotuning   | 0          |
|                          | ON               | <p>Activates the speed controller autotuning. The drive</p> <ul style="list-style-type: none"> <li>• accelerates the motor</li> <li>• calculates values for proportional gain, integration time and acceleration compensation (parameter <a href="#">2301 PROP GAIN</a>, <a href="#">2302 INTEGRATION TIME</a> and <a href="#">2304 ACC COMPENSATION</a> values).</li> </ul> <p>Setting is automatically reverted to <b>OFF</b>.</p>  | 1          |
| <b>24 TORQUE CONTROL</b> |                  | Torque control variables  |            |
| 2401                     | TORQ RAMP UP     | Defines the torque reference ramp up time, ie, the minimum time for the reference to increase from zero to the nominal motor torque.  | 0.00 s     |
|                          | 0.00...120.00 s  | Time  | 1 = 0.01 s |

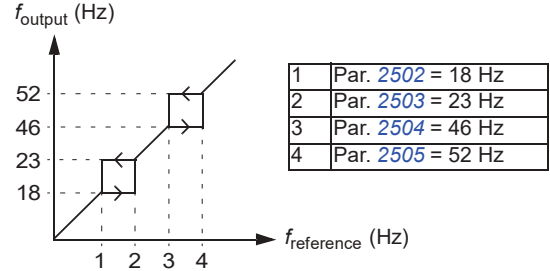
| All parameters            |                                   |   |                    |                                   |   |                                   |   |                                   |   |                                   |     |
|---------------------------|-----------------------------------|---|--------------------|-----------------------------------|---|-----------------------------------|---|-----------------------------------|---|-----------------------------------|-----|
| No.                       | Name/Value                        | Description   | Def/FbEq           |                                   |   |                                   |   |                                   |   |                                   |     |
| 2402                      | TORQ RAMP DOWN                    | Defines the torque reference ramp down time, ie, the minimum time for the reference to decrease from the nominal motor torque to zero.  | 0.00 s             |                                   |   |                                   |   |                                   |   |                                   |     |
|                           | 0.00...120.00 s                   | Time  | 1 = 0.01 s         |                                   |   |                                   |   |                                   |   |                                   |     |
| <b>25 CRITICAL SPEEDS</b> |                                   | Speed bands within which the drive is not allowed to operate.   |                    |                                   |   |                                   |   |                                   |   |                                   |     |
| 2501                      | CRIT SPEED SEL                    | <p>Activates/deactivates the critical speeds function. The critical speed function avoids specific speed ranges.</p> <p><b>Example:</b> A fan has vibrations in the range of 18 to 23 Hz and 46 to 52 Hz. To make the drive to jump over the vibration speed ranges:</p> <ul style="list-style-type: none"> <li>• Activate the critical speeds function.</li> <li>• Set the critical speed ranges as in the figure below.</li> </ul> <p><math>f_{output}</math> (Hz)</p>  <table border="1" data-bbox="599 667 860 775"> <tr> <td>1</td> <td>Par. <a href="#">2502</a> = 18 Hz</td> </tr> <tr> <td>2</td> <td>Par. <a href="#">2503</a> = 23 Hz</td> </tr> <tr> <td>3</td> <td>Par. <a href="#">2504</a> = 46 Hz</td> </tr> <tr> <td>4</td> <td>Par. <a href="#">2505</a> = 52 Hz</td> </tr> </table> <p><math>f_{reference}</math> (Hz)</p> | 1                  | Par. <a href="#">2502</a> = 18 Hz | 2 | Par. <a href="#">2503</a> = 23 Hz | 3 | Par. <a href="#">2504</a> = 46 Hz | 4 | Par. <a href="#">2505</a> = 52 Hz | OFF |
| 1                         | Par. <a href="#">2502</a> = 18 Hz |   |                    |                                   |   |                                   |   |                                   |   |                                   |     |
| 2                         | Par. <a href="#">2503</a> = 23 Hz |   |                    |                                   |   |                                   |   |                                   |   |                                   |     |
| 3                         | Par. <a href="#">2504</a> = 46 Hz |   |                    |                                   |   |                                   |   |                                   |   |                                   |     |
| 4                         | Par. <a href="#">2505</a> = 52 Hz |   |                    |                                   |   |                                   |   |                                   |   |                                   |     |
|                           | OFF                               | Inactive  | 0                  |                                   |   |                                   |   |                                   |   |                                   |     |
|                           | ON                                | Active  | 1                  |                                   |   |                                   |   |                                   |   |                                   |     |
| 2502                      | CRIT SPEED 1 LO                   | Defines the minimum limit for critical speed/frequency range 1.   | 0.0 Hz / 1 rpm     |                                   |   |                                   |   |                                   |   |                                   |     |
|                           | 0.0...599.0 Hz / 0...30000 rpm    | Limit in rpm. Limit in Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ</a> . The value cannot be above the maximum (parameter <a href="#">2503 CRIT SPEED 1 HI</a> ).  | 1 = 0.1 Hz / 1 rpm |                                   |   |                                   |   |                                   |   |                                   |     |
| 2503                      | CRIT SPEED 1 HI                   | Defines the maximum limit for critical speed/frequency range 1.   | 0.0 Hz / 1 rpm     |                                   |   |                                   |   |                                   |   |                                   |     |
|                           | 0.0...599.0 Hz / 0...30000 rpm    | Limit in rpm. Limit in Hz if parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ</a> . The value cannot be below the minimum (parameter <a href="#">2502 CRIT SPEED 1 LO</a> ).  | 1 = 0.1 Hz / 1 rpm |                                   |   |                                   |   |                                   |   |                                   |     |
| 2504                      | CRIT SPEED 2 LO                   | See parameter <a href="#">2502 CRIT SPEED 1 LO</a> .  | 0.0 Hz / 1 rpm     |                                   |   |                                   |   |                                   |   |                                   |     |
|                           | 0.0...599.0 Hz / 0...30000 rpm    | See parameter <a href="#">2502</a> .  | 1 = 0.1 Hz / 1 rpm |                                   |   |                                   |   |                                   |   |                                   |     |


| All parameters          |                                   |   |                       |
|-------------------------|-----------------------------------|---|-----------------------|
| No.                     | Name/Value                        | Description   | Def/FbEq              |
| 2505                    | CRIT SPEED 2 HI                   | See parameter <a href="#">2503 CRIT SPEED 1 HI</a> .  | 0.0 Hz /<br>1 rpm     |
|                         | 0.0...599.0 Hz /<br>0...30000 rpm | See parameter <a href="#">2503</a> .  | 1 = 0.1 Hz<br>/ 1 rpm |
| 2506                    | CRIT SPEED 3 LO                   | See parameter <a href="#">2502 CRIT SPEED 1 LO</a> .  | 0.0 Hz /<br>1 rpm     |
|                         | 0.0...599.0 Hz /<br>0...30000 rpm | See parameter <a href="#">2502</a> .  | 1 = 0.1 Hz<br>/ 1 rpm |
| 2507                    | CRIT SPEED 3 HI                   | See parameter <a href="#">2503 CRIT SPEED 1 HI</a> .  | 0.0 Hz /<br>1 rpm     |
|                         | 0.0...599.0 Hz /<br>0...30000 rpm | See parameter <a href="#">2503</a> .  | 1 = 0.1 Hz<br>/ 1 rpm |
| <b>26 MOTOR CONTROL</b> |                                   | Motor control variables   |                       |
| 2601                    | FLUX OPT ENABLE                   | Activates/deactivates the flux optimization function. Flux optimization reduces the total energy consumption and motor noise level when the drive operates below the nominal load. The total efficiency (motor and the drive) can be improved by 1% to 10%, depending on the load torque and speed. The disadvantage of this function is that the dynamic performance of the drive is weakened. | <b>OFF</b>            |
|                         | OFF                               | Inactive  | 0                     |
|                         | ON                                | Active  | 1                     |
| 2602                    | FLUX BRAKING                      | Activates/deactivates the Flux braking function. See section <a href="#">Flux braking</a> on page <a href="#">140</a> .   | <b>OFF</b>            |
|                         | OFF                               | Inactive  | 0                     |
|                         | MODERATE                          | Flux level is limited during the braking. Deceleration time is longer compared to full braking. The moderate mode is always used with permanent magnet motor selection and vector control.  | 1                     |
|                         | FULL                              | Maximum braking power. Almost all available current is used to convert the mechanical braking energy to thermal energy in the motor.  | 2                     |



**All parameters**
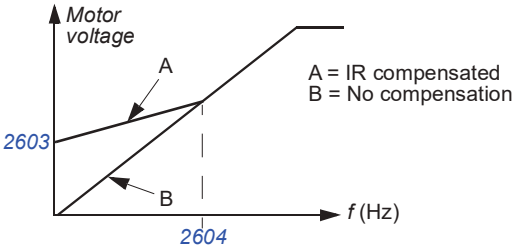
| No.                      | Name/Value    | Description   | Def/FbEq               |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
|--------------------------|---------------|---|------------------------|------|------|-----|-----|-----|--------------------------|--|--|--|--|--|-------------|-----|-----|-----|-----|-----|--------------------------|--|--|--|--|--|-------------|----|----|-----|-----|---|----------------|
| 2603                     | IR COMP VOLT  | <p>Defines the output voltage boost at zero speed (IR compensation). The function is useful in applications with a high break-away torque when vector control cannot be applied.</p> <p>To prevent overheating, set IR compensation voltage as low as possible.</p> <p><b>Note:</b> The function can be used only when parameter <a href="#">9904 MOTOR CTRL MODE</a> setting is <a href="#">SCALAR: FREQ.</a></p> <p>The figure below illustrates the IR compensation.</p> <p>Typical IR compensation values:</p> <table border="1"> <tr> <td><math>P_N</math> (kW)</td> <td>0.37</td> <td>0.75</td> <td>2.2</td> <td>4.0</td> <td>7.5</td> </tr> <tr> <td colspan="6"><b>200...240 V units</b></td> </tr> <tr> <td>IR comp (V)</td> <td>8.4</td> <td>7.7</td> <td>5.6</td> <td>8.4</td> <td>N/A</td> </tr> <tr> <td colspan="6"><b>380...480 V units</b></td> </tr> <tr> <td>IR comp (V)</td> <td>14</td> <td>14</td> <td>5.6</td> <td>8.4</td> <td>7</td> </tr> </table>  <p>A = IR compensated<br/>B = No compensation</p> | $P_N$ (kW)             | 0.37 | 0.75 | 2.2 | 4.0 | 7.5 | <b>200...240 V units</b> |  |  |  |  |  | IR comp (V) | 8.4 | 7.7 | 5.6 | 8.4 | N/A | <b>380...480 V units</b> |  |  |  |  |  | IR comp (V) | 14 | 14 | 5.6 | 8.4 | 7 | Type dependent |
| $P_N$ (kW)               | 0.37          | 0.75  | 2.2                    | 4.0  | 7.5  |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
| <b>200...240 V units</b> |               |   |                        |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
| IR comp (V)              | 8.4           | 7.7   | 5.6                    | 8.4  | N/A  |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
| <b>380...480 V units</b> |               |   |                        |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
| IR comp (V)              | 14            | 14  | 5.6                    | 8.4  | 7    |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
|                          | 0.0...100.0 V | Voltage boost   | 1 = 0.1 V              |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
| 2604                     | IR COMP FREQ  | <p>Defines the frequency at which the IR compensation is 0 V. See the figure for parameter <a href="#">2603 IR COMP VOLT</a></p> <p><b>Note:</b> If parameter <a href="#">2605 U/F RATIO</a> is set to <a href="#">USER DEFINED</a>, this parameter is not active. The IR compensation frequency is set by parameter <a href="#">2610 USER DEFINED U1</a>.</p>  | 80%                    |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
|                          | 0...100%      | Value as a percentage of the motor frequency  | 1 = 1%                 |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
| 2605                     | U/F RATIO     | Selects the voltage to frequency (U/f) ratio below the field weakening point. For scalar control only.  | <a href="#">LINEAR</a> |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
|                          | LINEAR        | Linear ratio for constant torque applications.  | 1                      |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
|                          | SQUARED       | Squared ratio for centrifugal pump and fan applications. With squared U/f ratio the noise level is lower for most operating frequencies. Not recommended for permanent magnet synchronous motors.   | 2                      |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |
|                          | USER DEFINED  | Custom ratio defined by parameters <a href="#">2610...2618</a> . See section <a href="#">Custom U/f ratio</a> on page 143.  | 3                      |      |      |     |     |     |                          |  |  |  |  |  |             |     |     |     |     |     |                          |  |  |  |  |  |             |    |    |     |     |   |                |

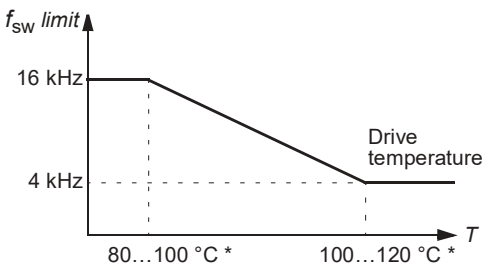
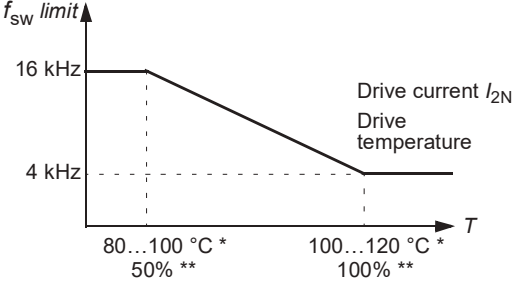
| All parameters |                 |  |           |
|----------------|-----------------|--|-----------|
| No.            | Name/Value      | Description  | Def/FbEq  |
| 2606           | SWITCHING FREQ  | Defines the switching frequency of the drive. Higher switching frequency results in lower acoustic noise.<br><br>In multimotor systems, do not change the switching frequency from the default value.<br><br>See also parameter <a href="#">2607 SWITCH FREQ CTRL</a> and section <a href="#">Switching frequency derating, I2N</a> on page <a href="#">378</a> .  | 4 kHz     |
|                | 4 kHz           | Sets the switching frequency to 4 kHz.   | 1 = 1 kHz |
|                | 8 kHz           | Sets the switching frequency to 8 kHz.   |           |
|                | 12 kHz          | Sets the switching frequency to 12 kHz.  |           |
|                | 16 kHz          | Sets the switching frequency to 16 kHz.  |           |
| 2607           | SWITCHFREQ CTRL | Selects the control method for the switching frequency. Selection has no effect if parameter <a href="#">2606 SWITCHING FREQ</a> is 4 kHz.   | ON (LOAD) |
|                | ON              | Drive maximum current is automatically derated according to the selected switching frequency (see parameter <a href="#">2607 SWITCH FREQ CTRL</a> and section <a href="#">Switching frequency derating, I2N</a> on page <a href="#">378</a> ) and adapted according to the drive temperature.<br><br>It is recommended to use this selection when a specific switching frequency is required with maximum performance. | 1         |
|                |                 |  <p>* Temperature depends on the drive output frequency.</p>   |           |



| All parameters |                 |  |          |
|----------------|-----------------|--|----------|
| No.            | Name/Value      | Description  | Def/FbEq |
|                | ON (LOAD)       | <p>The drive is started with 4 kHz switching frequency to gain maximum output during the start. After start-up, the switching frequency is controlled towards the selected value (parameter <b>2607 SWITCH FREQ CTRL</b>) if the output current or the temperature allows.</p> <p>This selection provides adaptive switching frequency control. Adaptation decreases the output performance in some cases.</p>  <p>* Temperature depends on the drive output frequency.<br/>** Short term overloading is allowed with each switching frequency depending on actual loading.</p>   | 2        |
|                | LONG CABLE      | Fixes switching frequency to 4 kHz and prolongs the minimum pulse time enabling the use of longer cables.  | 3        |
| 2608           | SLIP COMP RATIO | <p>Defines the slip gain for the motor slip compensation control. 100% means full slip compensation, 0% means no slip compensation. Other values can be used if a static speed error is detected despite the full slip compensation.</p> <p>Can be used only in scalar control (ie, when parameter <b>9904 MOTOR CTRL MODE</b> setting is <b>SCALAR: FREQ</b>).</p> <p><b>Example:</b> 35 Hz constant speed reference is given to the drive. Despite the full slip compensation (<b>SLIP COMP RATIO</b> = 100%), a manual tachometer measurement from the motor axis gives a speed value of 34 Hz. The static speed error is 35 Hz - 34 Hz = 1 Hz. To compensate the error, the slip gain should be increased.</p> | 0%       |
|                | 0...200%        | Slip gain  | 1 = 1%   |

| All parameters |                     |  |                |
|----------------|---------------------|--|----------------|
| No.            | Name/Value          | Description  | Def/FbEq       |
| 2609           | NOISE SMOOTHING     | Enables the noise smoothing function. Noise smoothing distributes the acoustic motor noise over a range of frequencies instead of a single tonal frequency resulting in lower peak noise intensity. A random component with an average of 0 Hz is added to the switching frequency set by parameter <a href="#">2606 SWITCHING FREQ.</a><br><b>Note:</b> Parameter has no effect if parameter <a href="#">2606 SWITCHING FREQ.</a> is set to 16 kHz. | <i>DISABLE</i> |
|                | DISABLE             | Disabled   | 0              |
|                | ENABLE              | Enabled  | 1              |
| 2610           | USER DEFINED U1     | Defines the first voltage point of the custom U/f curve at the frequency defined by parameter <a href="#">2611 USER DEFINED F1.</a> See section <a href="#">Custom U/f ratio</a> on page <a href="#">143.</a>  | 19% of $U_N$   |
|                | 0...120% of $U_N$ V | Voltage  | 1 = 1 V        |
| 2611           | USER DEFINED F1     | Defines the first frequency point of the custom U/f curve.   | 10.0 Hz        |
|                | 0.0...599.0 Hz      | Frequency  | 1 = 0.1 Hz     |
| 2612           | USER DEFINED U2     | Defines the second voltage point of the custom U/f curve at the frequency defined by parameter <a href="#">2613 USER DEFINED F2.</a> See section <a href="#">Custom U/f ratio</a> on page <a href="#">143.</a>   | 38% of $U_N$   |
|                | 0...120% of $U_N$ V | Voltage  | 1 = 1 V        |
| 2613           | USER DEFINED F2     | Defines the second frequency point of the custom U/f curve.  | 20.0 Hz        |
|                | 0.0...599.0 Hz      | Frequency  | 1 = 0.1 Hz     |
| 2614           | USER DEFINED U3     | Defines the third voltage point of the custom U/f curve at the frequency defined by parameter <a href="#">2615 USER DEFINED F3.</a> See section <a href="#">Custom U/f ratio</a> on page <a href="#">143.</a>  | 47.5% of $U_N$ |
|                | 0...120% of $U_N$ V | Voltage  | 1 = 1 V        |
| 2615           | USER DEFINED F3     | Defines the third frequency point of the custom U/f curve.   | 25.0 Hz        |
|                | 0.0...599.0 Hz      | Frequency  | 1 = 0.1 Hz     |
| 2616           | USER DEFINED U4     | Defines the fourth voltage point of the custom U/f curve at the frequency defined by parameter <a href="#">2617 USER DEFINED F4.</a> See section <a href="#">Custom U/f ratio</a> on page <a href="#">143.</a>   | 76% of $U_N$   |
|                | 0...120% of $U_N$ V | Voltage  | 1 = 1 V        |
| 2617           | USER DEFINED F4     | Defines the fourth frequency point of the custom U/f curve.  | 40.0 Hz        |
|                | 0.0...599.0 Hz      | Frequency  | 1 = 0.1 Hz     |
| 2618           | FW VOLTAGE          | Defines the voltage of the U/f curve when frequency is equal to or exceeds the motor nominal frequency ( <a href="#">9907 MOTOR NOM FREQ.</a> ). See section <a href="#">Custom U/f ratio</a> on page <a href="#">143.</a>   | 95% of $U_N$   |
|                | 0...120% of $U_N$ V | Voltage  | 1 = 1 V        |


| All parameters |                  |   |          |
|----------------|------------------|---|----------|
| No.            | Name/Value       | Description   | Def/FbEq |
| 2619           | DC STABILIZER    | Enables or disables the DC voltage stabilizer. The DC stabilizer is used to prevent possible voltage oscillations in the drive DC bus caused by motor load or weak supply network. In case of voltage variation, the drive tunes the frequency reference to stabilize the DC bus voltage and therefore the load torque oscillation.   | DISABLE  |
|                | DISABLE          | Disabled  | 0        |
|                | ENABLE           | Enabled   | 1        |
| 2621           | SMOOTH START     | Selects the forced current vector rotation mode at low speeds. When the smooth start mode is selected, the rate of acceleration is limited by the acceleration and deceleration ramp times (parameters 2202 and 2203). If the process driven by the permanent magnet synchronous motor has high inertia, slow ramp times are recommended.<br>Can be used for permanent magnet synchronous motors only (see chapter <a href="#">Appendix: Permanent magnet synchronous motors (PMSMs)</a> ). | NO       |
|                | NO               | Disabled  | 0        |
|                | YES              | Enabled always when the frequency is below the smooth start frequency (parameter 2623 SMOOTH START FRQ).  | 1        |
|                | START ONLY       | Enabled below the smooth start frequency (parameter 2623 SMOOTH START FRQ) only when starting the motor.  | 2        |
| 2622           | SMOOTH START CUR | Current used in the current vector rotation at low speeds. Increase the smooth start current if the application requires high pull-up torque. Decrease the smooth start current if motor shaft swinging needs to be minimized. Note that accurate torque control is not possible in the current vector rotation mode.<br>Can be used for permanent magnet synchronous motors only (see chapter <a href="#">Appendix: Permanent magnet synchronous motors (PMSMs)</a> ).                     | 50%      |
|                | 10...100%        | Value as a percentage of the nominal motor current  | 1 = 1%   |
| 2623           | SMOOTH START FRQ | Output frequency up to which the current vector rotation is used.<br>Can be used for permanent magnet synchronous motors only (see chapter <a href="#">Appendix: Permanent magnet synchronous motors (PMSMs)</a> ).   | 10%      |
|                | 2...100%         | Value as a percentage of the motor nominal frequency  | 1 = 1%   |
| 2624           | SMOOTH STRT TIME | The maximum time the smooth start feature is active. When value is set to 0 (default), the smooth start time limitation is not activated.   | 0 s      |
|                | 0.0...100.0 s    | Maximum time in seconds   | 1 = 1 s  |


| All parameters             |                  |  |            |
|----------------------------|------------------|--|------------|
| No.                        | Name/Value       | Description  | Def/FbEq   |
| 2626                       | SPD EST BW TRIM  | Speed estimation bandwidth trimming.<br>Effective only in vector:speed and vector:torque modes. Speed estimation is trimmed to be very dynamic. When the drive is used with non-dynamic loads such as compressors, pumps and fans, this variable can be trimmed to a higher value.   | 0%         |
|                            | 0...20%          | Speed estimation bandwidth   | 1 = 1%     |
| <b>29 MAINTENANCE TRIG</b> |                  | Maintenance triggers   |            |
| 2901                       | COOLING FAN TRIG | Defines the trigger point for the drive cooling fan run time counter. Value is compared to parameter <a href="#">2902 COOLING FAN ACT</a> value.   | 0.0 kh     |
|                            | 0.0...6553.5 kh  | Time. If parameter value is set to zero, the trigger is disabled.  | 1 = 0.1 kh |
| 2902                       | COOLING FAN ACT  | Defines the actual value for the cooling fan run time counter. When parameter <a href="#">2901 COOLING FAN TRIG</a> has been set to a non zero value, the counter starts. When the actual value of the counter exceeds the value defined by parameter <a href="#">2901</a> , a maintenance notice is displayed on the panel. | 0.0 kh     |
|                            | 0.0...6553.5 kh  | Time. Parameter is reset by setting it to zero.  | 1 = 0.1 kh |
| 2903                       | REVOLUTION TRIG  | Defines the trigger point for the motor revolution counter. Value is compared to parameter <a href="#">2904 REVOLUTION ACT</a> value.  | 0 Mrev     |
|                            | 0...65535 Mrev   | Millions of revolutions. If parameter value is set to zero, the trigger is disabled.   | 1 = 1 Mrev |
| 2904                       | REVOLUTION ACT   | Defines the actual value for the motor revolution counter. When parameter <a href="#">2903 REVOLUTION TRIG</a> has been set to a non zero value, the counter starts. When the actual value of the counter exceeds the value defined by parameter <a href="#">2903</a> , a maintenance notice is displayed on the panel.      | 0 Mrev     |
|                            | 0...65535 Mrev   | Millions of revolutions. Parameter is reset by setting it to zero.   | 1 = 1 Mrev |
| 2905                       | RUN TIME TRIG    | Defines the trigger point for the drive run time counter. Value is compared to parameter <a href="#">2906 RUN TIME ACT</a> value.  | 0.0 kh     |
|                            | 0.0...6553.5 kh  | Time. If parameter value is set to zero, the trigger is disabled.  | 1 = 0.1 kh |
| 2906                       | RUN TIME ACT     | Defines the actual value for the drive run time counter. When parameter <a href="#">2905 RUN TIME TRIG</a> has been set to a non zero value, the counter starts. When the actual value of the counter exceeds the value defined by parameter <a href="#">2905</a> , a maintenance notice is displayed on the panel.          | 0.0 kh     |
|                            | 0.0...6553.5 kh  | Time. Parameter is reset by setting it to zero.  | 1 = 0.1 kh |


| All parameters            |                       |  |                |
|---------------------------|-----------------------|--|----------------|
| No.                       | Name/Value            | Description  | Def/FbEq       |
| 2907                      | USER MWh TRIG         | Defines the trigger point for the drive power consumption counter. Value is compared to parameter <i>2908 USER MWh ACT</i> value.  | 0.0 MWh        |
|                           | 0.0...<br>6553.5 MWh  | Megawatt hours. If parameter value is set to zero, the trigger is disabled.  | 1 =<br>0.1 MWh |
| 2908                      | USER MWh ACT          | Defines the actual value of the drive power consumption counter. When parameter <i>2907 USER MWh TRIG</i> has been set to a non zero value, the counter starts. When the actual value of the counter exceeds the value defined by parameter <i>2907</i> , a maintenance notice is displayed on the panel.  | 0.0 MWh        |
|                           | 00.0...<br>6553.5 MWh | Megawatt hours. Parameter is reset by setting it to zero.  | 1 =<br>0.1 MWh |
| <b>30 FAULT FUNCTIONS</b> |                       | Programmable protection functions  |                |
| 3001                      | AI<MIN FUNCTION       | Defines the drive response if the analog input (AI) signal drops below the fault limits and AI is used <ul style="list-style-type: none"> <li>as the active reference source (group <i>11 REFERENCE SELECT</i>)</li> <li>as the process or external PID controllers' feedback or setpoint source (group <i>40 PROCESS PID SET 1</i>, <i>41 PROCESS PID SET 2</i> or <i>42 EXT / TRIM PID</i>) and the corresponding PID controller is active.</li> </ul> <i>3021 AI1 FAULT LIMIT</i> and <i>3022 AI2 FAULT LIMIT</i> set the fault limits. | <i>NOT SEL</i> |
|                           | NOT SEL               | Protection is inactive.  | 0              |
|                           | FAULT                 | The drive trips on fault <i>AI1 LOSS (0007) / AI2 LOSS (0008)</i> and the motor coasts to stop. Fault limit is defined by parameter <i>3021 AI1 FAULT LIMIT / 3022 AI2 FAULT LIMIT</i> .   | 1              |
|                           | CONST SP 7            | The drive generates alarm <i>AI1 LOSS (2006) / AI2 LOSS (2007)</i> and sets the speed to the value defined by parameter <i>1208 CONST SPEED 7</i> . Alarm limit is defined by parameter <i>3021 AI1 FAULT LIMIT / 3022 AI2 FAULT LIMIT</i> .<br> <b>WARNING!</b> Make sure that it is safe to continue operation in case the analog input signal is lost.   | 2              |
|                           | LAST SPEED            | The drive generates alarm <i>AI1 LOSS (2006) / AI2 LOSS (2007)</i> and freezes the speed to the level the drive was operating at. The speed is determined by the average speed over the previous 10 seconds. Alarm limit is defined by parameter <i>3021 AI1 FAULT LIMIT / 3022 AI2 FAULT LIMIT</i> .<br> <b>WARNING!</b> Make sure that it is safe to continue operation in case the analog input signal is lost.                                      | 3              |


| All parameters |                  |  |                |
|----------------|------------------|--|----------------|
| No.            | Name/Value       | Description  | Def/FbEq       |
| 3002           | PANEL COMM ERR   | <p>Selects how the drive reacts to a control panel communication break.</p> <p><b>Note:</b> When either of the two external control locations are active, and start, stop and/or direction are through the control panel – <i>1001 EXT1 COMMANDS / 1002 EXT2 COMMANDS</i> = 8 (<i>KEYPAD</i>) – the drive follows the speed reference according to the configuration of the external control locations, instead of the value of the last speed or parameter <i>1208 CONST SPEED 7</i>.</p> | <i>FAULT</i>   |
|                | FAULT            | Drive trips on fault <i>PANEL LOSS (0010)</i> and the motor coasts to stop.  | 1              |
|                | CONST SP 7       | <p>The drive generates alarm <i>PANEL LOSS (2008)</i> and sets the speed to the speed defined by parameter <i>1208 CONST SPEED 7</i>.</p> <p> <b>WARNING!</b> Make sure that it is safe to continue operation in case of a panel communication break.</p>   | 2              |
|                | LAST SPEED       | <p>The drive generates alarm <i>PANEL LOSS (2008)</i> and freezes the speed to the level the drive was operating at. The speed is determined by the average speed over the previous 10 seconds.</p> <p> <b>WARNING!</b> Make sure that it is safe to continue operation in case of a panel communication break.</p>   | 3              |
| 3003           | EXTERNAL FAULT 1 | Selects an interface for an external fault 1 signal.   | <i>NOT SEL</i> |
|                | NOT SEL          | Not selected   | 0              |
|                | DI1              | External fault indication through digital input DI1.<br>1 = Fault trip on <i>EXT FAULT 1 (0014)</i> . Motor coasts to stop.<br>0 = No external fault.  | 1              |
|                | DI2              | See selection <i>DI1</i> .   | 2              |
|                | DI3              | See selection <i>DI1</i> .   | 3              |
|                | DI4              | See selection <i>DI1</i> .   | 4              |
|                | DI5              | See selection <i>DI1</i> .   | 5              |
|                | DI1(INV)         | External fault indication through inverted digital input DI1.<br>0 = Fault trip on <i>EXT FAULT 1 (0014)</i> . Motor coasts to stop.<br>1 = No external fault.   | -1             |
|                | DI2(INV)         | See selection <i>DI1(INV)</i> .  | -2             |
|                | DI3(INV)         | See selection <i>DI1(INV)</i> .  | -3             |
|                | DI4(INV)         | See selection <i>DI1(INV)</i> .  | -4             |
|                | DI5(INV)         | See selection <i>DI1(INV)</i> .  | -5             |
| 3004           | EXTERNAL FAULT 2 | Selects an interface for an external fault 2 signal.   | <i>NOT SEL</i> |
|                |                  | See parameter <i>3003 EXTERNAL FAULT 1</i> .   |                |




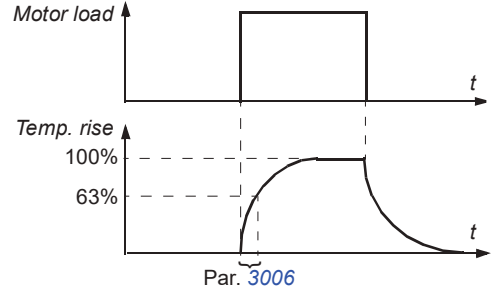
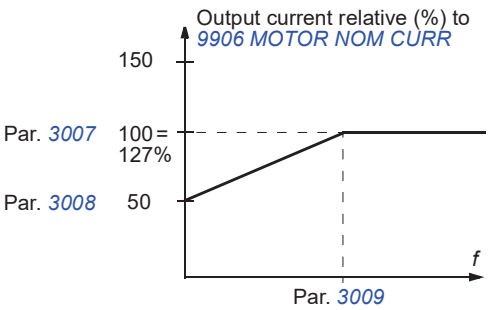
| All parameters |                |   |          |
|----------------|----------------|---|----------|
| No.            | Name/Value     | Description   | Def/FbEq |
| 3005           | MOT THERM PROT | Selects how the drive reacts when the motor overtemperature is detected.  | FAULT    |
|                | NOT SEL        | Protection is inactive.   | 0        |
|                | FAULT          | The drive trips on fault <i>MOT OVERTEMP (0009)</i> when the temperature exceeds 110 °C, and the motor coasts to stop.  | 1        |
|                | ALARM          | The drive generates alarm <i>MOTOR TEMP (2010)</i> when the motor temperature exceeds 90 °C.  | 2        |
| 3006           | MOT THERM TIME | <p>Defines the thermal time constant for the motor thermal model, ie, the time within which the motor temperature has reached 63% of the nominal temperature with steady load.</p> <p>For thermal protection according to UL requirements for NEMA class motors, use the rule of thumb: Motor thermal time = 35 · t<sub>6</sub>. t<sub>6</sub> (in seconds) is specified by the motor manufacturer as the time the motor can safely operate at six times its rated current.</p> <p>Thermal time for a Class 10 trip curve is 350 s, for a Class 20 trip curve 700 s, and for a Class 30 trip curve 1050 s.</p>  | 500 s    |
|                | 256...9999 s   | Time constant   | 1 = 1 s  |
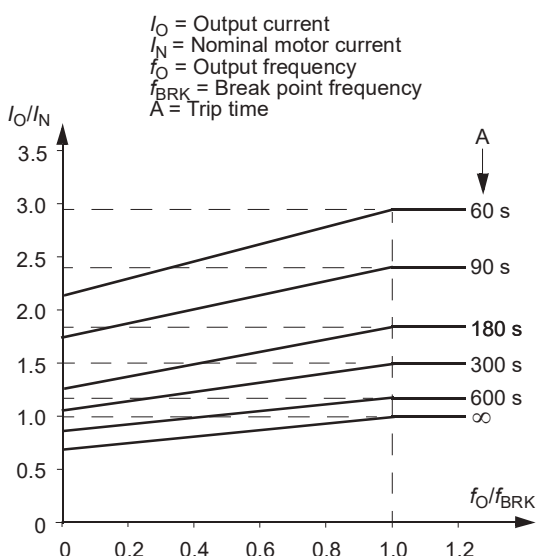
| All parameters |                 |   |          |
|----------------|-----------------|---|----------|
| No.            | Name/Value      | Description   | Def/FbEq |
| 3007           | MOT LOAD CURVE  | <p>Defines the load curve together with parameters <b>3008 ZERO SPEED LOAD</b> and <b>3009 BREAK POINT FREQ.</b></p> <p>With the default value 100%, motor overload protection is functioning when the constant current exceeds 127% of the parameter <b>9906 MOTOR NOM CURR</b> value.</p> <p>The default overloadability is at the same level as what motor manufacturers typically allow below 30 °C (86 °F) ambient temperature and below 1000 m (3300 ft) altitude. When the ambient temperature exceeds 30 °C (86 °F) or the installation altitude is over 1000 m (3300 ft), decrease the parameter <b>3007</b> value according to the motor manufacturer's recommendation.</p> <p><b>Example:</b> If the constant protection level needs to be 115% of the nominal motor current, set parameter <b>3007</b> value to 91% (= 115/127·100%).</p>  | 100%     |
|                | 50....150%      | Allowed continuous motor load relative to the nominal motor current   | 1 = 1%   |
| 3008           | ZERO SPEED LOAD | Defines the load curve together with parameters <b>3007 MOT LOAD CURVE</b> and <b>3009 BREAK POINT FREQ.</b>  | 70%      |
|                | 25....150%      | Allowed continuous motor load at zero speed as a percentage of the nominal motor current  | 1 = 1%   |

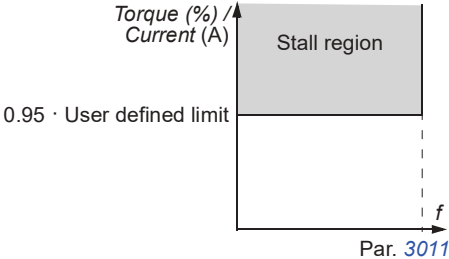
| All parameters |                  |  |          |
|----------------|------------------|--|----------|
| No.            | Name/Value       | Description  | Def/FbEq |
| 3009           | BREAK POINT FREQ | <p>Defines the load curve together with parameters <i>3007 MOT LOAD CURVE</i> and <i>3008 ZERO SPEED LOAD</i>.</p> <p><b>Example:</b> Thermal protection trip times when parameters <i>3006...3008</i> have default values.</p> <p> <math>I_O</math> = Output current<br/> <math>I_N</math> = Nominal motor current<br/> <math>f_O</math> = Output frequency<br/> <math>f_{BRK}</math> = Break point frequency<br/>                     A = Trip time                 </p>  | 35 Hz    |
|                | 1...250 Hz       | Drive output frequency at 100% load  | 1 = 1 Hz |
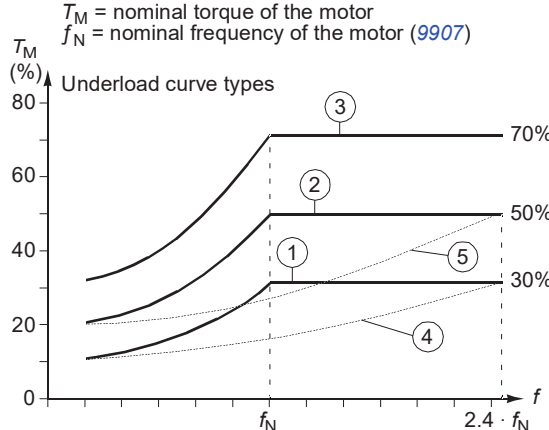
| All parameters |                 |   |            |
|----------------|-----------------|---|------------|
| No.            | Name/Value      | Description   | Def/FbEq   |
| 3010           | STALL FUNCTION  | <p>Selects how the drive reacts to a motor stall condition. The protection wakes up if the drive has operated in a stall region (see the figure below) longer than the time set by parameter <b>3012 STALL TIME</b>.</p> <p>In vector control the user defined limit = <b>2017 MAX TORQUE 1 / 2018 MAX TORQUE 2</b> (applies for positive and negative torques).</p> <p>In scalar control the user defined limit = <b>2003 MAX CURRENT</b>.</p> <p>The control mode is selected by parameter <b>9904 MOTOR CTRL MODE</b>.</p>  | NOT SEL    |
|                | NOT SEL         | Protection is inactive.   | 0          |
|                | FAULT           | The drive trips on fault <b>MOTOR STALL (0012)</b> and the motor coasts to stop.  | 1          |
|                | ALARM           | The drive generates alarm <b>MOTOR STALL (2012)</b> .   | 2          |
| 3011           | STALL FREQUENCY | Defines the frequency limit for the stall function. See parameter <b>3010 STALL FUNCTION</b> .  | 20.0 Hz    |
|                | 0.5...50.0 Hz   | Frequency   | 1 = 0.1 Hz |
| 3012           | STALL TIME      | Defines the time for the stall function. See parameter <b>3010 STALL FUNCTION</b> .   | 20 s       |
|                | 1...400 s       | Time  | 1 = 1 s    |
| 3013           | UNDERLOAD FUNC  | <p>Selects how the drive reacts to underload. The protection wakes up if:</p> <ul style="list-style-type: none"> <li>the motor torque falls below the curve selected by parameter <b>3015 UNDERLOAD CURVE</b>,</li> <li>output frequency is higher than 10% of the nominal motor frequency and</li> <li>the above conditions have been valid longer than the time set by parameter <b>3014 UNDERLOAD TIME</b>.</li> </ul>   | NOT SEL    |
|                | NOT SEL         | Protection is inactive.   | 0          |


| All parameters |                 |  |              |
|----------------|-----------------|--|--------------|
| No.            | Name/Value      | Description  | Def/FbEq     |
|                | FAULT           | The drive trips on fault <b>UNDERLOAD (0017)</b> and the motor coasts to stop.<br><b>Note:</b> Set parameter value to <b>FAULT</b> only after the drive ID run is performed! If <b>FAULT</b> is selected, the drive may generate an <b>UNDERLOAD</b> fault during ID run.  | 1            |
|                | ALARM           | The drive generates alarm <b>UNDERLOAD (2011)</b> .  | 2            |
| 3014           | UNDERLOAD TIME  | Defines the time limit for the underload function. See parameter <b>3013 UNDERLOAD FUNC.</b>   | 20 s         |
|                | 10...400 s      | Time limit   | 1 = 1 s      |
| 3015           | UNDERLOAD CURVE | Selects the load curve for the underload function. See parameter <b>3013 UNDERLOAD FUNC.</b><br><br>$T_M$ = nominal torque of the motor<br>$f_N$ = nominal frequency of the motor ( <b>9907</b> )<br><br> <p>Underload curve types</p> <p>80<br/>60<br/>40<br/>20<br/>0</p> <p>70%<br/>50%<br/>30%</p> <p><math>f_N</math> <math>2.4 \cdot f_N</math></p> | 1            |
|                | 1...5           | Number of the load curve type in the figure  | 1 = 1        |
| 3016           | SUPPLY PHASE    | Selects how the drive reacts to supply phase loss, ie, when DC voltage ripple is excessive.  | <b>FAULT</b> |
|                | FAULT           | The drive trips on fault <b>SUPPLY PHASE (0022)</b> and the motor coasts to stop when the DC voltage ripple exceeds 14% of the nominal DC voltage.   | 0            |
|                | LIMIT/ALARM     | Drive output current is limited and alarm <b>INPUT PHASE LOSS (2026)</b> is generated when the DC voltage ripple exceeds 14% of the nominal DC voltage.<br><br>There is a 10 s delay between the activation of the alarm and the output current limitation. The current is limited until the ripple drops under the minimum limit, $0.3 \cdot I_{hd}$ .  | 1            |
|                | ALARM           | The drive generates alarm <b>INPUT PHASE LOSS (2026)</b> when the DC ripple exceeds 14% of the nominal DC voltage.   | 2            |


| All parameters |                 |  |                |
|----------------|-----------------|--|----------------|
| No.            | Name/Value      | Description  | Def/FbEq       |
| 3017           | EARTH FAULT     | Selects how the drive reacts when an earth (ground) fault is detected in the motor or the motor cable.<br><b>Note:</b> Disabling earth (ground) fault may void the warranty.   | <i>ENABLE</i>  |
|                | DISABLE         | No action  | 0              |
|                | ENABLE          | The drive trips on fault <i>EARTH FAULT (0016)</i> when the earth fault is detected during run.  | 1              |
|                | START ONLY      | The drive trips on fault <i>EARTH FAULT (0016)</i> when the earth fault is detected before run.  | 2              |
| 3018           | COMM FAULT FUNC | Selects how the drive reacts in a fieldbus communication break. The time delay is defined by parameter <i>3019 COMM FAULT TIME</i> .<br>After a start-up, the protection is inactive for 60 seconds.   | <i>NOT SEL</i> |
|                | NOT SEL         | Protection is inactive.  | 0              |
|                | FAULT           | Protection is active. The drive trips on fault <i>SERIAL 1 ERR (0028)</i> and coasts to stop.  | 1              |
|                | CONST SP 7      | Protection is active. The drive generates alarm <i>IO COMM (2005)</i> and sets the speed to the value defined by parameter <i>1208 CONST SPEED 7</i> .<br> <b>WARNING!</b> Make sure that it is safe to continue operation in case of a communication break.  | 2              |
|                | LAST SPEED      | Protection is active. The drive generates alarm <i>IO COMM (2005)</i> and freezes the speed to the level the drive was operating at. The speed is determined by the average speed over the previous 10 seconds.<br> <b>WARNING!</b> Make sure that it is safe to continue operation in case of a communication break. | 3              |
| 3019           | COMM FAULT TIME | Defines the time delay for the fieldbus communication break supervision. See parameter <i>3018 COMM FAULT FUNC</i> .   | 3.0 s          |
|                | 0.0...600.0 s   | Delay time   | 1 = 0.1 s      |
| 3021           | AI1 FAULT LIMIT | Defines a fault level for analog input AI1. If parameter <i>3001 AI&lt;MIN&gt;FUNCTION</i> is set to <i>FAULT</i> , the drive trips on fault <i>AI1 LOSS (0007)</i> when the analog input signal falls below the set level.<br>Do not set this limit below the level defined by parameter <i>1301 MINIMUM AI1</i> .  | 0.0%           |
|                | 0.0...100.0%    | Value as a percentage of the full signal range   | 1 = 0.1%       |

| All parameters |                  |  |                   |
|----------------|------------------|--|-------------------|
| No.            | Name/Value       | Description  | Def/FbEq          |
| 3022           | AI2 FAULT LIMIT  | Defines a fault level for analog input AI2. If parameter <b>3001 AI&lt;MIN FUNCTION</b> is set to <b>FAULT</b> , the drive trips on fault <b>AI2 LOSS (0008)</b> when the analog input signal falls below the set level.<br><br>Do not set this limit below the level defined by parameter <b>1304 MINIMUM AI2</b> . | 0.0%              |
|                | 0.0...100.0%     | Value as a percentage of the full signal range   | 1 = 0.1%          |
| 3023           | WIRING FAULT     | Selects how the drive reacts when incorrect input power and motor cable connection is detected (ie, the input power cable is connected to the motor connection of the drive).<br><b>Note:</b> Disabling wiring fault (ground fault) may void the warranty.   | <b>ENABLE</b>     |
|                | DISABLE          | No action  | 0                 |
|                | ENABLE           | The drive trips on fault <b>OUTP WIRING (0035)</b> .   | 1                 |
| 3024           | CB TEMP FAULT    | Selects how the drive reacts when the measured temperature of the control board reaches 95 °C for an IP20 drive or 102 °C for an IP66 drive (ACS355-...+B063).   | <b>ENABLE</b>     |
|                | DISABLE          | No action  | 0                 |
|                | ENABLE           | The drive trips on fault <b>CB OVERTEMP (0037)</b> .   | 1                 |
| 3025           | STO OPERATION    | Selects how the drive reacts when the drive detects that the STO (Safe torque off) function is active.   | <b>ONLY ALARM</b> |
|                | ONLY FAULT       | The drive trips on fault <b>SAFE TORQUE OFF (0044)</b> .   | 1                 |
|                | ALARM&FAULT      | The drive generates alarm <b>SAFE TORQUE OFF (2035)</b> when stopped and trips on fault <b>SAFE TORQUE OFF (0044)</b> when running.  | 2                 |
|                | NO & FAULT       | The drive gives no indication to the user when stopped and trips on fault <b>SAFE TORQUE OFF (0044)</b> when running.  | 3                 |
|                | ONLY ALARM       | The drive generates alarm <b>SAFE TORQUE OFF (2035)</b> .<br><b>Note:</b> The start signal must be reset (toggled to 0) if STO (Safe torque off) has been used while the drive has been running.   | 4                 |
| 3026           | POWER FAIL START | Selects how the drive reacts when the control board is externally powered by the MPOW-01 auxiliary power extension module (see <b>Appendix: Extension modules</b> on page <b>413</b> ) and start is requested by the user.   | <b>ALARM</b>      |
|                | ALARM            | The drive generates alarm <b>UNDERVOLTAGE (2003)</b> .   | 1                 |
|                | FAULT            | The drive trips on fault <b>DC UNDERVOLT (0006)</b> .  | 2                 |
|                | NO               | The drive gives no indication to the user.   | 3                 |
| 3027           | OPTION COM LOSS  | Selects how the drive reacts when the MREL-01 output relay module is removed from the drive, and parameters <b>1402 RELAY OUTPUT 2</b> , <b>1403 RELAY OUTPUT 3</b> or <b>1410 RELAY OUTPUT 4</b> have non-zero values.  | 1                 |

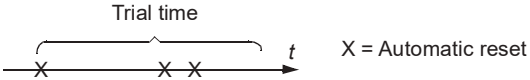

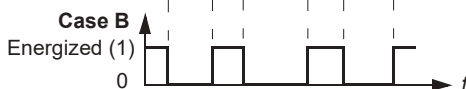
| All parameters |                        |  |           |
|----------------|------------------------|--|-----------|
| No.            | Name/Value             | Description  | Def/FbEq  |
|                | DISABLE                | No action.   | 0         |
|                | ENABLE                 | The drive trips on fault <a href="#">1006 PAR EXT RO</a> .   | 1         |
| 3029           | FAULT RAMP STOP        | Enables the emergency ramp stop when the drive faults.   | 0         |
|                | DISABLE                | Coast stop used.   | 0         |
|                | ENABLE                 | Fault ramp stop enabled. The drive stops using an emergency ramp when a non-critical fault occurs.<br>The following critical faults will always cause the coast stop regardless of the value of this parameter: <ul style="list-style-type: none"> <li>• 0001 OVERCURRENT</li> <li>• 0002 DC OVERVOLT</li> <li>• 0004 SHORT CIRC</li> <li>• 0044 SAFE TORQUE OFF</li> <li>• 0045 STO1 LOST</li> <li>• 0046 STO2 LOST.</li> </ul>   | 1         |
| <b>31</b>      | <b>AUTOMATIC RESET</b> | Automatic fault reset. Automatic resets are possible only for certain fault types and when the automatic reset function is activated for that fault type.  |           |
| 3101           | NUMBER OF TRIALS       | Defines the number of automatic fault resets the drive performs within the time defined by parameter <a href="#">3102 TRIAL TIME</a> .<br>If the number of automatic resets exceeds the set number (within the trial time), the drive prevents additional automatic resets and remains stopped. The drive must be reset from the control panel or from a source selected by parameter <a href="#">1604 FAULT RESET SEL</a> .<br><b>Example:</b> Three faults have occurred during the trial time defined by parameter <a href="#">3102</a> . Last fault is reset only if the number defined by parameter <a href="#">3101</a> is 3 or more.<br> | 0         |
|                | 0...5                  | Number of the automatic resets   | 1 = 1     |
| 3102           | TRIAL TIME             | Defines the time for the automatic fault reset function. See parameter <a href="#">3101 NUMBER OF TRIALS</a> .   | 30.0 s    |
|                | 1.0...600.0 s          | Time   | 1 = 0.1 s |
| 3103           | DELAY TIME             | Defines the time that the drive will wait after a fault before attempting an automatic reset. See parameter <a href="#">3101 NUMBER OF TRIALS</a> . If delay time is set to zero, the drive resets immediately.  | 0.0 s     |
|                | 0.0...120.0 s          | Time   | 1 = 0.1 s |





| All parameters |                 |  |                |
|----------------|-----------------|--|----------------|
| No.            | Name/Value      | Description  | Def/FbEq       |
| 3104           | AR OVERCURRENT  | Activates/deactivates the automatic reset for the overcurrent fault. Automatically resets fault <i>OVERCURRENT (0001)</i> after the delay set by parameter <i>3103 DELAY TIME</i> .  | <i>DISABLE</i> |
|                | DISABLE         | Inactive   | 0              |
|                | ENABLE          | Active   | 1              |
| 3105           | AR OVERVOLTAGE  | Activates/deactivates the automatic reset for the intermediate link overvoltage fault. Automatically resets fault <i>DC OVERVOLT (0002)</i> after the delay set by parameter <i>3103 DELAY TIME</i> .  | <i>DISABLE</i> |
|                | DISABLE         | Inactive   | 0              |
|                | ENABLE          | Active   | 1              |
| 3106           | AR UNDERVOLTAGE | Activates/deactivates the automatic reset for the intermediate link undervoltage fault. Automatically resets fault <i>DC UNDERVOLT (0006)</i> after the delay set by parameter <i>3103 DELAY TIME</i> .  | <i>DISABLE</i> |
|                | DISABLE         | Inactive   | 0              |
|                | ENABLE          | Active   | 1              |
| 3107           | AR AI<MIN       | Activates/deactivates the automatic reset for AI<MIN (analog input signal under the allowed minimum level) faults <i>AI1 LOSS (0007)</i> and <i>AI2 LOSS (0008)</i> . Automatically resets the fault after the delay set by parameter <i>3103 DELAY TIME</i> . | <i>DISABLE</i> |
|                | DISABLE         | Inactive   | 0              |
|                | ENABLE          | Active<br> <b>WARNING!</b> The drive may restart even after a long stop if the analog input signal is restored. Ensure that the use of this feature will not cause danger.   | 1              |
| 3108           | AREXTERNALFLT   | Activates/deactivates the automatic reset for faults <i>EXT FAULT 1 (0014)</i> and <i>EXT FAULT 2 (0015)</i> . Automatically resets the fault after the delay set by parameter <i>3103 DELAY TIME</i> .  | <i>DISABLE</i> |
|                | DISABLE         | Inactive   | 0              |
|                | ENABLE          | Active   | 1              |
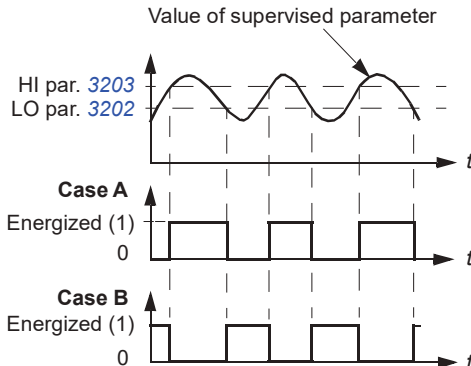
| All parameters   |                   |  |          |
|--|-------------------|--|----------|
| No.  | Name/Value        | Description  | Def/FbEq |
| <b>32 SUPERVISION</b>  |                   |  |          |
| 3201   | SUPERV 1<br>PARAM | <p>Signal supervision. Supervision status can be monitored with relay or transistor output. See parameter groups <b>14 RELAY OUTPUTS</b> and <b>18 FREQ IN &amp; TRAN OUT</b>.</p> <p>Selects the first supervised signal. Supervision limits are defined by parameters <b>3202 SUPERV 1 LIM LO</b> and <b>3203 SUPERV 1 LIM HI</b>.</p> <p><b>Example 1:</b> If <math>3202 \text{ SUPERV 1 LIM LO} \leq 3203 \text{ SUPERV 1 LIM HI}</math></p> <p><b>Case A = 1401 RELAY OUTPUT 1</b> value is set to <b>SUPERV 1 OVER</b>. Relay energizes when value of the signal selected with <b>3201 SUPERV 1 PARAM</b> exceeds the supervision limit defined by <b>3203 SUPERV 1 LIM HI</b>. The relay remains active until the supervised value drops below the low limit defined by <b>3202 SUPERV 1 LIM LO</b>.</p> <p><b>Case B = 1401 RELAY OUTPUT 1</b> value is set to <b>SUPERV 1 UNDER</b>. Relay energizes when value of the signal selected with <b>3201 SUPERV 1 PARAM</b> drops below the supervision limit defined by <b>3202 SUPERV 1 LIM LO</b>. The relay remains active until the supervised value rises above the high limit defined by <b>3203 SUPERV 1 LIM HI</b>.</p> | 103      |
| <p style="text-align: center;">Value of supervised parameter</p>  <p>HI par. 3203<br/>LO par. 3202</p> <p><b>Case A</b><br/>Energized (1)<br/>0</p> <p><b>Case B</b><br/>Energized (1)<br/>0</p> |                   |  |          |

All parameters
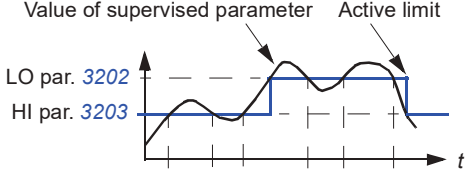
| No.      | Name/Value      | Description   | Def/FbEq |
|----------|-----------------|---|----------|
|          |                 | <p><b>Example 2:</b> If <i>3202 SUPERV 1 LIM LO</i> &gt; <i>3203 SUPERV 1 LIM HI</i></p> <p>The lower limit <i>3203 SUPERV 1 LIM HI</i> remains active until the supervised signal exceeds the higher limit <i>3202 SUPERV 1 LIM LO</i>, making it the active limit. The new limit remains active until the supervised signal drops below the lower limit <i>3203 SUPERV 1 LIM HI</i>, making it the active limit.</p> <p><b>Case A</b> = <i>1401 RELAY OUTPUT 1</i> value is set to <i>SUPRV1 OVER</i>. Relay is energized whenever the supervised signal exceeds the active limit.</p> <p><b>Case B</b> = <i>1401 RELAY OUTPUT 1</i> value is set to <i>SUPRV1 UNDER</i>. Relay is de-energized whenever the supervised signal drops below the active limit.</p> <p style="text-align: center;">Value of supervised parameter      Active limit</p>  <p style="text-align: center;"><b>Case A</b></p>  <p style="text-align: center;"><b>Case B</b></p>  |          |
| 0, x...x |                 | Parameter index in group <i>01 OPERATING DATA</i> . For example, 102 = <i>0102 SPEED</i> . 0 = not selected.  | 1 = 1    |
| 3202     | SUPERV 1 LIM LO | Defines the low limit for the first supervised signal selected by parameter <i>3201 SUPERV 1 PARAM</i> . Supervision wakes up if the value is below the limit.  | -        |
| x...x    |                 | Setting range depends on parameter <i>3201</i> setting.   | -        |
| 3203     | SUPERV 1 LIM HI | Defines the high limit for the first supervised signal selected by parameter <i>3201 SUPERV 1 PARAM</i> . Supervision wakes up if the value is above the limit.   | -        |
| x...x    |                 | Setting range depends on parameter <i>3201</i> setting.   | -        |
| 3204     | SUPERV 2 PARAM  | Selects the second supervised signal. Supervision limits are defined by parameters <i>3205 SUPERV 2 LIM LO</i> and <i>3206 SUPERV 2 LIM HI</i> . See parameter <i>3201 SUPERV 1 PARAM</i> .   | 104      |
| x...x    |                 | Parameter index in group <i>01 OPERATING DATA</i> . For example, 102 = <i>0102 SPEED</i> .  | 1 = 1    |

| All parameters |                    |  |                |
|----------------|--------------------|--|----------------|
| No.            | Name/Value         | Description  | Def/FbEq       |
| 3205           | SUPERV 2 LIM LO    | Defines the low limit for the second supervised signal selected by parameter <i>3204 SUPERV 2 PARAM</i> . Supervision wakes up if the value is below the limit.  | -              |
|                | x...x              | Setting range depends on parameter <i>3204</i> setting.  | -              |
| 3206           | SUPERV 2 LIM HI    | Defines the high limit for the second supervised signal selected by parameter <i>3204 SUPERV 2 PARAM</i> . Supervision wakes up if the value is above the limit.   | -              |
|                | x...x              | Setting range depends on parameter <i>3204</i> setting.  | -              |
| 3207           | SUPERV 3 PARAM     | Selects the third supervised signal. Supervision limits are defined by parameters <i>3208 SUPERV 3 LIM LO</i> and <i>3209 SUPERV 3 LIM HI</i> . See parameter <i>3201 SUPERV 1 PARAM</i> .   | 105            |
|                | x...x              | Parameter index in group <i>01 OPERATING DATA</i> . For example, 102 = <i>0102 SPEED</i> .   | 1 = 1          |
| 3208           | SUPERV 3 LIM LO    | Defines the low limit for the third supervised signal selected by parameter <i>3207 SUPERV 3 PARAM</i> . Supervision wakes up if the value is below the limit.   | -              |
|                | x...x              | Setting range depends on parameter <i>3207</i> setting.  | -              |
| 3209           | SUPERV 3 LIM HI    | Defines the high limit for the third supervised signal selected by parameter <i>3207 SUPERV 3 PARAM</i> . Supervision wakes up if the value is above the limit.  | -              |
|                | x...x              | Setting range depends on parameter <i>3207</i> setting.  | -              |
| <b>33</b>      | <b>INFORMATION</b> | Firmware package version, test date etc.   |                |
| 3301           | FIRMWARE           | Displays the version of the firmware package.  |                |
|                | 0000...FFFF hex    | For example, 241A hex  |                |
| 3302           | LOADING PACKAGE    | Displays the version of the loading package.   | type dependent |
|                | 2201...22FF hex    | 2201 hex = ACS355-0nE-<br>2202 hex = ACS355-0nU-   |                |
| 3303           | TEST DATE          | Displays the test date.  | 00.00          |
|                |                    | Date value in format YY.WW (year, week)  |                |
| 3304           | DRIVE RATING       | Displays the drive current and voltage ratings.  | 0000 hex       |
|                | 0000...FFFF hex    | Value in format XXXY hex:<br>XXX = Nominal current of the drive in amperes. An "A" indicates decimal point. For example if XXX is 9A8, nominal current is 9.8 A.<br>Y = Nominal voltage of the drive:<br>1 = 1-phase 200...240 V<br>2 = 3-phase 200...240 V<br>4 = 3-phase 380...480 V |                |
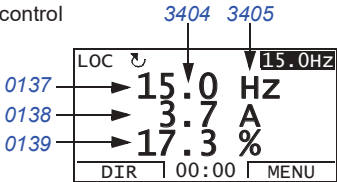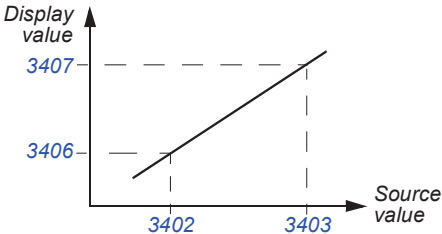
| All parameters                |                 |  |          |
|-------------------------------|-----------------|--|----------|
| No.                           | Name/Value      | Description  | Def/FbEq |
| 3305                          | PARAMETER TABLE | Displays the version of the parameter table used in the drive.   |          |
|                               | 0000...FFFF hex | For example, 400E hex  |          |
| <b>34 PANEL DISPLAY</b>       |                 | Selection of actual signals to be displayed on the panel   |          |
| 3401                          | SIGNAL1 PARAM   | <p>Selects the first signal to be displayed on the control panel in the Output mode.</p> <p>Assistant control panel</p>   | 103      |
| 0 = NOT SELECTED<br>101...181 |                 | Parameter index in group <b>01 OPERATING DATA</b> . For example, 102 = <b>0102 SPEED</b> . If value is set to 0, no signal is selected.  | 1 = 1    |
| 3402                          | SIGNAL1 MIN     | <p>Defines the minimum value for the signal selected by parameter <b>3401 SIGNAL1 PARAM</b>.</p>  <p><b>Note:</b> Parameter is not effective if parameter <b>3404 OUTPUT1 DSP FORM</b> setting is <b>DIRECT</b>.</p> | -        |
| x...x                         |                 | Setting range depends on parameter <b>3401</b> setting.  | -        |
| 3403                          | SIGNAL1 MAX     | <p>Defines the maximum value for the signal selected by parameter <b>3401 SIGNAL1 PARAM</b>. See the figure for parameter <b>3402 SIGNAL1 MIN</b>.</p> <p><b>Note:</b> Parameter is not effective if parameter <b>3404 OUTPUT1 DSP FORM</b> setting is <b>DIRECT</b>.</p>                              | -        |
| x...x                         |                 | Setting range depends on parameter <b>3401</b> setting.  | -        |

| All parameters    |                  |   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|-------------------|------------------|---|-------------------|---------|-------|------|---------|-----------------|--------|-----------|---------|------------|----------|-------------|----|---|-----------|------|-----|-------|------|--------|-------|--|
| No.               | Name/Value       | Description   | Def/FbEq          |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| 3404              | OUTPUT1 DSP FORM | Defines the format for the displayed signal (selected by parameter <i>3401 SIGNAL1 PARAM.</i> ).  | <i>DIRECT</i>     |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | +/-0             | Signed/Unsigned value. Unit is selected by parameter <i>3405 OUTPUT1 UNIT.</i>  | 0                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | +/-0.0           |   | 1                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | +/-0.00          | <b>Example:</b> PI (3.14159)  | 2                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | +/-0.000         |   | 3                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | +0               |   | 4                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | +0.0             |   | 5                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | +0.00            |   | 6                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | +0.000           |   | 7                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   |                  | <table border="1"> <thead> <tr> <th><i>3404</i> value</th> <th>Display</th> <th>Range</th> </tr> </thead> <tbody> <tr> <td>+/-0</td> <td><math>\pm 3</math></td> <td rowspan="4">-32768...+32767</td> </tr> <tr> <td>+/-0.0</td> <td><math>\pm 3.1</math></td> </tr> <tr> <td>+/-0.00</td> <td><math>\pm 3.14</math></td> </tr> <tr> <td>+/-0.000</td> <td><math>\pm 3.142</math></td> </tr> <tr> <td>+0</td> <td>3</td> <td rowspan="4">0...65535</td> </tr> <tr> <td>+0.0</td> <td>3.1</td> </tr> <tr> <td>+0.00</td> <td>3.14</td> </tr> <tr> <td>+0.000</td> <td>3.142</td> </tr> </tbody> </table> | <i>3404</i> value | Display | Range | +/-0 | $\pm 3$ | -32768...+32767 | +/-0.0 | $\pm 3.1$ | +/-0.00 | $\pm 3.14$ | +/-0.000 | $\pm 3.142$ | +0 | 3 | 0...65535 | +0.0 | 3.1 | +0.00 | 3.14 | +0.000 | 3.142 |  |
| <i>3404</i> value | Display          | Range   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| +/-0              | $\pm 3$          | -32768...+32767   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| +/-0.0            | $\pm 3.1$        |   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| +/-0.00           | $\pm 3.14$       |   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| +/-0.000          | $\pm 3.142$      |   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| +0                | 3                | 0...65535   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| +0.0              | 3.1              |   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| +0.00             | 3.14             |   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| +0.000            | 3.142            |   |                   |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | BAR METER        | Bar graph   | 8                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | DIRECT           | Direct value. Decimal point location and units of measure are the same as for the source signal.<br><b>Note:</b> Parameters <i>3402, 3403</i> and <i>3405...3407</i> are not effective.   | 9                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
| 3405              | OUTPUT1 UNIT     | Selects the unit for the displayed signal selected by parameter <i>3401 SIGNAL1 PARAM.</i><br><b>Note:</b> Parameter is not effective if parameter <i>3404 OUTPUT1 DSP FORM</i> setting is <i>DIRECT</i> .<br><b>Note:</b> Unit selection does not convert values.  | <i>Hz</i>         |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | NO UNIT          | No unit selected  | 0                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | A                | ampere  | 1                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | V                | volt  | 2                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | Hz               | hertz   | 3                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | %                | percentage  | 4                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | s                | second  | 5                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | h                | hour  | 6                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | rpm              | revolutions per minute  | 7                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | kh               | kilohour  | 8                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | °C               | celsius   | 9                 |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | lb ft            | pounds per foot   | 10                |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | mA               | milliampere   | 11                |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | mV               | millivolt   | 12                |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | kW               | kilowatt  | 13                |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | W                | watt  | 14                |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |
|                   | kWh              | kilowatt hour   | 15                |         |       |      |         |                 |        |           |         |            |          |             |    |   |           |      |     |       |      |        |       |  |

| All parameters |                    |                             |          |
|----------------|--------------------|-----------------------------|----------|
| No.            | Name/Value         | Description                 | Def/FbEq |
|                | °F                 | fahrenheit                  | 16       |
|                | hp                 | horsepower                  | 17       |
|                | MWh                | megawatt hour               | 18       |
|                | m/s                | meters per second           | 19       |
|                | m <sup>3</sup> /h  | cubic meters per hour       | 20       |
|                | dm <sup>3</sup> /s | cubic decimeters per second | 21       |
|                | bar                | bar                         | 22       |
|                | kPa                | kilopascal                  | 23       |
|                | GPM                | gallons per minute          | 24       |
|                | PSI                | pounds per square inch      | 25       |
|                | CFM                | cubic feet per minute       | 26       |
|                | ft                 | foot                        | 27       |
|                | MGD                | millions of gallons per day | 28       |
|                | inHg               | inches of mercury           | 29       |
|                | FPM                | feet per minute             | 30       |
|                | kb/s               | kilobytes per second        | 31       |
|                | kHz                | kilohertz                   | 32       |
|                | ohm                | ohm                         | 33       |
|                | ppm                | pulses per minute           | 34       |
|                | pps                | pulses per second           | 35       |
|                | l/s                | liters per second           | 36       |
|                | l/min              | liters per minute           | 37       |
|                | l/h                | liters per hour             | 38       |
|                | m <sup>3</sup> /s  | cubic meters per second     | 39       |
|                | m <sup>3</sup> /m  | cubic meters per minute     | 40       |
|                | kg/s               | kilograms per second        | 41       |
|                | kg/m               | kilograms per minute        | 42       |
|                | kg/h               | kilograms per hour          | 43       |
|                | mbar               | millibar                    | 44       |
|                | Pa                 | pascal                      | 45       |
|                | GPS                | gallons per second          | 46       |
|                | gal/s              | gallons per second          | 47       |
|                | gal/m              | gallons per minute          | 48       |
|                | gal/h              | gallons per hour            | 49       |
|                | ft <sup>3</sup> /s | cubic feet per second       | 50       |
|                | ft <sup>3</sup> /m | cubic feet per minute       | 51       |
|                | ft <sup>3</sup> /h | cubic feet per hour         | 52       |


| All parameters |             |   |          |
|----------------|-------------|---|----------|
| No.            | Name/Value  | Description   | Def/FbEq |
|                | lb/s        | pounds per second   | 53       |
|                | lb/m        | pounds per minute   | 54       |
|                | lb/h        | pounds per hour   | 55       |
|                | FPS         | feet per second   | 56       |
|                | ft/s        | feet per second   | 57       |
|                | inH2O       | inches of water   | 58       |
|                | in wg       | inches of water gauge   | 59       |
|                | ft wg       | feet on water gauge   | 60       |
|                | lbsi        | pounds per squared inch   | 61       |
|                | ms          | millisecond   | 62       |
|                | Mrev        | millions of revolutions   | 63       |
|                | d           | days  | 64       |
|                | inWC        | inches of water column  | 65       |
|                | m/min       | meters per minute   | 66       |
|                | Nm          | Newton meter  | 67       |
|                | Km3/h       | thousand cubic meters per hour  | 68       |
|                | min         | Reserved for solar pumps  | 69       |
|                | m3          |   | 70       |
|                | m6          |   | 71       |
|                | Reserved    |   | 72...116 |
|                | %ref        | reference as a percentage   | 117      |
|                | %act        | actual value as a percentage  | 118      |
|                | %dev        | deviation as a percentage   | 119      |
|                | % LD        | load as a percentage  | 120      |
|                | % SP        | set point as a percentage   | 121      |
|                | %FBK        | feedback as a percentage  | 122      |
|                | Iout        | output current (as a percentage)  | 123      |
|                | Vout        | output voltage  | 124      |
|                | Fout        | output frequency  | 125      |
|                | Tout        | output torque   | 126      |
|                | Vdc         | DC voltage  | 127      |
| 3406           | OUTPUT1 MIN | Sets the minimum display value for the signal selected by parameter <i>3401 SIGNAL1 PARAM</i> . See parameter <i>3402 SIGNAL1 MIN</i> .<br><b>Note:</b> Parameter is not effective if parameter <i>3404 OUTPUT1 DSP FORM</i> setting is <i>DIRECT</i> . | -        |
|                | x...x       | Setting range depends on parameter <i>3401</i> setting.   | -        |



| All parameters |                                  |   |               |
|----------------|----------------------------------|---|---------------|
| No.            | Name/Value                       | Description   | Def/FbEq      |
| 3407           | OUTPUT1<br>MAX                   | Sets the maximum display value for the signal selected by parameter <i>3401 SIGNAL1 PARAM</i> . See parameter <i>3402 SIGNAL1 MIN</i> .<br><b>Note:</b> Parameter is not effective if parameter <i>3404 OUTPUT1 DSP FORM</i> setting is <i>DIRECT</i> . | -             |
|                | x...x                            | Setting range depends on parameter <i>3401</i> setting.   | -             |
| 3408           | SIGNAL2<br>PARAM                 | Selects the second signal to be displayed on the control panel in the Output mode. See parameter <i>3401 SIGNAL1 PARAM</i> .  | 104           |
|                | 0 = NOT<br>SELECTED<br>101...181 | Parameter index in group <i>01 OPERATING DATA</i> . For example, 102 = <i>0102 SPEED</i> . If value is set to 0, no signal is selected.   | 1 = 1         |
| 3409           | SIGNAL2 MIN                      | Defines the minimum value for the signal selected by parameter <i>3408 SIGNAL2 PARAM</i> . See parameter <i>3402 SIGNAL1 MIN</i> .  | -             |
|                | x...x                            | Setting range depends on parameter <i>3408</i> setting.   | -             |
| 3410           | SIGNAL2 MAX                      | Defines the maximum value for the signal selected by parameter <i>3408 SIGNAL2 PARAM</i> . See parameter <i>3402 SIGNAL1 MIN</i> .  | -             |
|                | x...x                            | Setting range depends on parameter <i>3408</i> setting.   | -             |
| 3411           | OUTPUT2 DSP<br>FORM              | Defines the format for the displayed signal selected by parameter <i>3408 SIGNAL2 PARAM</i> .   | <i>DIRECT</i> |
|                |                                  | See parameter <i>3404 OUTPUT1 DSP FORM</i> .  | -             |
| 3412           | OUTPUT2<br>UNIT                  | Selects the unit for the displayed signal selected by parameter <i>3408 SIGNAL2 PARAM</i> .   | -             |
|                |                                  | See parameter <i>3405 OUTPUT1 UNIT</i> .  | -             |
| 3413           | OUTPUT2 MIN                      | Sets the minimum display value for the signal selected by parameter <i>3408 SIGNAL2 PARAM</i> . See parameter <i>3402 SIGNAL1 MIN</i> .   | -             |
|                | x...x                            | Setting range depends on parameter <i>3408</i> setting.   | -             |
| 3414           | OUTPUT2<br>MAX                   | Sets the maximum display value for the signal selected by parameter <i>3408 SIGNAL2 PARAM</i> . See parameter <i>3402 SIGNAL1 MIN</i> .   | -             |
|                | x...x                            | Setting range depends on parameter <i>3408</i> setting.   | -             |
| 3415           | SIGNAL3<br>PARAM                 | Selects the third signal to be displayed on the control panel in the Output mode. See parameter <i>3401 SIGNAL1 PARAM</i> .   | 105           |
|                | 0 = NOT<br>SELECTED<br>101...181 | Parameter index in group <i>01 OPERATING DATA</i> . For example, 102 = <i>0102 SPEED</i> . If value is set to 0, no signal is selected.   | 1 = 1         |


| All parameters |                        |  |               |
|----------------|------------------------|--|---------------|
| No.            | Name/Value             | Description  | Def/FbEq      |
| 3416           | SIGNAL3 MIN            | Defines the minimum value for the signal selected by parameter <i>3415</i> . See parameter <i>3402 SIGNAL1 MIN</i> .   | -             |
|                | x...x                  | Setting range depends on parameter <i>3415 SIGNAL3 PARAM</i> setting.  | -             |
| 3417           | SIGNAL3 MAX            | Defines the maximum value for the signal selected by parameter <i>3415 SIGNAL3 PARAM</i> . See parameter <i>3402 SIGNAL1 MIN</i> .   | -             |
|                | x...x                  | Setting range depends on parameter <i>3415 SIGNAL3 PARAM</i> setting.  | -             |
| 3418           | OUTPUT3 DSP FORM       | Defines the format for the displayed signal selected by parameter <i>3415 SIGNAL3 PARAM</i> .  | <i>DIRECT</i> |
|                |                        | See parameter <i>3404 OUTPUT1 DSP FORM</i> .   | -             |
| 3419           | OUTPUT3 UNIT           | Selects the unit for the displayed signal selected by parameter <i>3415 SIGNAL3 PARAM</i> .  | -             |
|                |                        | See parameter <i>3405 OUTPUT1 UNIT</i> .   | -             |
| 3420           | OUTPUT3 MIN            | Sets the minimum display value for the signal selected by parameter <i>3415 SIGNAL3 PARAM</i> . See parameter <i>3402 SIGNAL1 MIN</i> .  | -             |
|                | x...x                  | Setting range depends on parameter <i>3415 SIGNAL3 PARAM</i> setting.  | -             |
| 3421           | OUTPUT3 MAX            | Sets the maximum display value for the signal selected by parameter <i>3415 SIGNAL3 PARAM</i> . See parameter <i>3402 SIGNAL1 MIN</i> .  | -             |
|                | x...x                  | Setting range depends on parameter <i>3415</i> setting.  | -             |
| <b>35</b>      | <b>MOTOR TEMP MEAS</b> | Motor temperature measurement. See section <i>Motor temperature measurement through the standard I/O</i> on page <i>157</i> .  |               |
| 3501           | SENSOR TYPE            | Activates the motor temperature measurement function and selects the sensor type. See also parameter group <i>15 ANALOG OUTPUTS</i> .  | <i>NONE</i>   |
|                | NONE                   | The function is inactive.  | 0             |
|                | 1 x PT100              | The function is active. The temperature is measured with one Pt100 sensor. Analog output AO feeds constant current through the sensor. The sensor resistance increases as the motor temperature rises, as does the voltage over the sensor. The temperature measurement function reads the voltage through analog input AI1/2 and converts it to degrees centigrade. | 1             |
|                | 2 x PT100              | The function is active. Temperature is measured using two Pt100 sensors. See selection <i>1 x PT100</i> .  | 2             |
|                | 3 x PT100              | The function is active. Temperature is measured using three Pt100 sensors. See selection <i>1 x PT100</i> .  | 3             |

All parameters

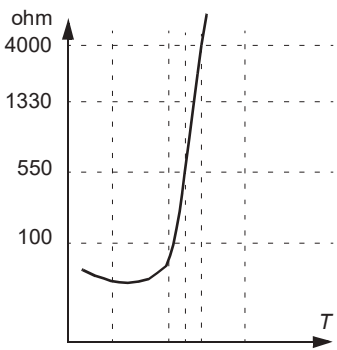
| No.         | Name/Value      | Description   | Def/FbEq    |            |        |               |           |          |   |
|-------------|-----------------|---|-------------|------------|--------|---------------|-----------|----------|---|
|             | PTC             | <p>The function is active. The temperature is supervised using one PTC sensor. Analog output AO feeds constant current through the sensor. The resistance of the sensor increases sharply as the motor temperature rises over the PTC reference temperature (Tref), as does the voltage over the resistor. The temperature measurement function reads the voltage through analog input AI1/2 and converts it into ohms. The figure below shows typical PTC sensor resistance values as a function of the motor operating temperature.</p> <table border="1" data-bbox="356 486 815 571"> <thead> <tr> <th>Temperature</th> <th>Resistance</th> </tr> </thead> <tbody> <tr> <td>Normal</td> <td>0... 1.5 kohm</td> </tr> <tr> <td>Excessive</td> <td>≥ 4 kohm</td> </tr> </tbody> </table>  | Temperature | Resistance | Normal | 0... 1.5 kohm | Excessive | ≥ 4 kohm | 4 |
| Temperature | Resistance      |   |             |            |        |               |           |          |   |
| Normal      | 0... 1.5 kohm   |   |             |            |        |               |           |          |   |
| Excessive   | ≥ 4 kohm        |   |             |            |        |               |           |          |   |
|             | THERM(0)        | The function is active. Motor temperature is monitored using a PTC sensor (see selection <i>PTC</i> ) connected to drive through a normally closed thermistor relay connected to a digital input. 0 = motor overtemperature.  | 5           |            |        |               |           |          |   |
|             | THERM(1)        | The function is active. Motor temperature is monitored using a PTC sensor (see selection <i>PTC</i> ) connected to drive through a normally open thermistor relay connected to a digital input. 1 = motor overtemperature.  | 6           |            |        |               |           |          |   |
| 3502        | INPUT SELECTION | Selects the source for the motor temperature measurement signal.  | <i>AI1</i>  |            |        |               |           |          |   |
|             | AI1             | Analog input AI1. Used when Pt100 or PTC sensor is selected for the temperature measurement.  | 1           |            |        |               |           |          |   |
|             | AI2             | Analog input AI2. Used when Pt100 or PTC sensor is selected for the temperature measurement   | 2           |            |        |               |           |          |   |
|             | DI1             | Digital input DI1. Used when parameter <i>3501 SENSOR TYPE</i> value is set to <i>THERM(0)/THERM(1)</i> .   | 3           |            |        |               |           |          |   |
|             | DI2             | Digital input DI2. Used when parameter <i>3501 SENSOR TYPE</i> value is set to <i>THERM(0)/THERM(1)</i> .   | 4           |            |        |               |           |          |   |

| All parameters |                        |  |                |
|----------------|------------------------|--|----------------|
| No.            | Name/Value             | Description  | Def/FbEq       |
|                | DI3                    | Digital input DI3. Used when parameter <i>3501 SENSOR TYPE</i> value is set to <i>THERM(0)/THERM(1)</i> .  | 5              |
|                | DI4                    | Digital input DI4. Used when parameter <i>3501 SENSOR TYPE</i> value is set to <i>THERM(0)/THERM(1)</i> .  | 6              |
|                | DI5                    | Digital input DI5. Used when parameter <i>3501 SENSOR TYPE</i> value is set to <i>THERM(0)/THERM(1)</i> .  | 7              |
| 3503           | ALARM LIMIT            | Defines the alarm limit for motor temperature measurement. Alarm <i>MOTOR TEMP (2010)</i> indication is given when the limit is exceeded. When parameter <i>3501 SENSOR TYPE</i> value is set to <i>THERM(0)/THERM(1)</i> : 1 = alarm.       | 0              |
|                | x...x                  | Alarm limit  | -              |
| 3504           | FAULT LIMIT            | Defines the fault trip limit for motor temperature measurement. The drive trips on fault <i>MOT OVERTEMP (0009)</i> when the limit is exceeded. When parameter <i>3501 SENSOR TYPE</i> value is set to <i>THERM(0)/THERM(1)</i> : 1 = fault. | 0              |
|                | x...x                  | Fault limit  | -              |
| 3505           | AO EXCITATION          | Enables current feed from analog output AO. Parameter setting overrides parameter group <i>15 ANALOG OUTPUTS</i> settings.<br><br>With PTC the output current is 1.6 mA.<br>With Pt 100 the output current is 9.1 mA.                        | <i>DISABLE</i> |
|                | DISABLE                | Disabled   | 0              |
|                | ENABLE                 | Enabled  | 1              |
| <b>36</b>      | <b>TIMED FUNCTIONS</b> | Time periods 1 to 4 and booster signal. See section <i>Real-time clock and timed functions</i> on page 165.  |                |
| 3601           | TIMERS ENABLE          | Selects the source for the timed function enable signal.   | <i>NOT SEL</i> |
|                | NOT SEL                | Timed function is not selected.  | 0              |
|                | DI1                    | Digital input DI. Timed function enable on the rising edge of DI1.   | 1              |
|                | DI2                    | See selection <i>DI1</i> .   | 2              |
|                | DI3                    | See selection <i>DI1</i> .   | 3              |
|                | DI4                    | See selection <i>DI1</i> .   | 4              |
|                | DI5                    | See selection <i>DI1</i> .   | 5              |
|                | ACTIVE                 | Timed function is always enabled.  | 7              |
|                | DI1(INV)               | Inverted digital input DI1. Timed function enable on the falling edge of DI1.  | -1             |
|                | DI2(INV)               | See selection <i>DI1(INV)</i> .  | -2             |
|                | DI3(INV)               | See selection <i>DI1(INV)</i> .  | -3             |


| All parameters |                         |  |                         |
|----------------|-------------------------|--|-------------------------|
| No.            | Name/Value              | Description  | Def/FbEq                |
|                | DI4(INV)                | See selection <a href="#">DI1(INV)</a> .   | -4                      |
|                | DI5(INV)                | See selection <a href="#">DI1(INV)</a> .   | -5                      |
| 3602           | START TIME 1            | Defines the daily start time 1. The time can be changed in 2-second steps.   | 00:00:00                |
|                | 00:00:00...<br>23:59:58 | hours:minutes:seconds.<br><b>Example:</b> If parameter value is set to 07:00:00, timed function 1 is activated at 7:00 (7 a.m).  |                         |
| 3603           | STOP TIME 1             | Defines the daily stop time 1. The time can be changed in 2-second steps.  | 00:00:00                |
|                | 00:00:00...<br>23:59:58 | hours:minutes:seconds.<br><b>Example:</b> If parameter value is set to 18:00:00, timed function 1 is deactivated at 18:00 (6 p.m).   |                         |
| 3604           | START DAY 1             | Defines the start day 1.   | <a href="#">MONDAY</a>  |
|                | MONDAY                  | <b>Example:</b> If parameter value is set to <a href="#">MONDAY</a> , timed function 1 is active from Monday midnight (00:00:00).  | 1                       |
|                | TUESDAY                 |  | 2                       |
|                | WEDNESDAY               |  | 3                       |
|                | THURSDAY                |  | 4                       |
|                | FRIDAY                  |  | 5                       |
|                | SATURDAY                |  | 6                       |
|                | SUNDAY                  |  | 7                       |
| 3605           | STOP DAY 1              |  | Defines the stop day 1. |
|                |                         | See parameter <a href="#">3604 START DAY 1</a> .<br><b>Example:</b> If parameter is set to <a href="#">FRIDAY</a> , timed function 1 is deactivated on Friday midnight (23:59:58). |                         |
| 3606           | START TIME 2            | See parameter <a href="#">3602 START TIME 1</a> .  |                         |
|                |                         | See parameter <a href="#">3602 START TIME 1</a> .  |                         |
| 3607           | STOP TIME 2             | See parameter <a href="#">3603 STOP TIME 1</a> .   |                         |
|                |                         | See parameter <a href="#">3603 STOP TIME 1</a> .   |                         |
| 3608           | START DAY 2             | See parameter <a href="#">3604 START DAY 1</a> .   |                         |
|                |                         | See parameter <a href="#">3604 START DAY 1</a> .   |                         |
| 3609           | STOP DAY 2              | See parameter <a href="#">3605 STOP DAY 1</a> .  |                         |
|                |                         | See parameter <a href="#">3605 STOP DAY 1</a> .  |                         |
| 3610           | START TIME 3            | See parameter <a href="#">3602 START TIME 1</a> .  |                         |
|                |                         | See parameter <a href="#">3602 START TIME 1</a> .  |                         |
| 3611           | STOP TIME 3             | See parameter <a href="#">3603 STOP TIME 1</a> .   |                         |
|                |                         | See parameter <a href="#">3603 STOP TIME 1</a> .   |                         |
| 3612           | START DAY 3             | See parameter <a href="#">3604 START DAY 1</a> .   |                         |
|                |                         | See parameter <a href="#">3604 START DAY 1</a> .   |                         |

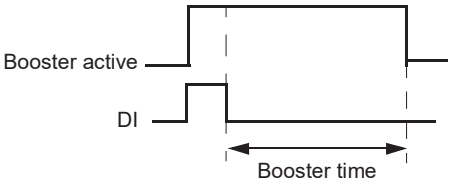
| All parameters |                         |   |                |
|----------------|-------------------------|---|----------------|
| No.            | Name/Value              | Description   | Def/FbEq       |
| 3613           | STOP DAY 3              | See parameter <a href="#">3605 STOP DAY 1</a> .   |                |
|                |                         | See parameter <a href="#">3605 STOP DAY 1</a> .   |                |
| 3614           | START TIME 4            | See parameter <a href="#">3602 START TIME 1</a> .   |                |
|                |                         | See parameter <a href="#">3602 START TIME 1</a> .   |                |
| 3615           | STOP TIME 4             | See parameter <a href="#">3603 STOP TIME 1</a> .  |                |
|                |                         | See parameter <a href="#">3603 STOP TIME 1</a> .  |                |
| 3616           | START DAY 4             | See parameter <a href="#">3604 START DAY 1</a> .  |                |
|                |                         | See parameter <a href="#">3604 START DAY 1</a> .  |                |
| 3617           | STOP DAY 4              | See parameter <a href="#">3605 STOP DAY 1</a> .   |                |
|                |                         | See parameter <a href="#">3605 STOP DAY 1</a> .   |                |
| 3622           | BOOSTER SEL             | Selects the source for the booster activation signal.   | <i>NOT SEL</i> |
|                | NOT SEL                 | No booster activation signal  | 0              |
|                | DI1                     | Digital input DI1. 1 = active, 0 = inactive.  | 1              |
|                | DI2                     | See selection <a href="#">DI1</a> .   | 2              |
|                | DI3                     | See selection <a href="#">DI1</a> .   | 3              |
|                | DI4                     | See selection <a href="#">DI1</a> .   | 4              |
|                | DI5                     | See selection <a href="#">DI1</a> .   | 5              |
|                | DI1(INV)                | Inverted digital input DI1. 0 = active, 1 = inactive.   | -1             |
|                | DI2(INV)                | See selection <a href="#">DI1(INV)</a> .  | -2             |
|                | DI3(INV)                | See selection <a href="#">DI1(INV)</a> .  | -3             |
|                | DI4(INV)                | See selection <a href="#">DI1(INV)</a> .  | -4             |
|                | DI5(INV)                | See selection <a href="#">DI1(INV)</a> .  | -5             |
| 3623           | BOOSTER TIME            | Defines the time inside which the booster is deactivated after the booster activation signal is switched off.   | 00:00:00       |
|                | 00:00:00...<br>23:59:58 | hours:minutes:seconds<br><b>Example:</b> If parameter <a href="#">3622 BOOSTER SEL</a> is set to <a href="#">DI1</a> and <a href="#">3623 BOOSTER TIME</a> is set to 01:30:00, the booster is active for 1 hour and 30 minutes after digital input DI is deactivated. |                |
|                |                         |    |                |

| All parameters |                  |  |          |
|----------------|------------------|--|----------|
| No.            | Name/Value       | Description  | Def/FbEq |
| 3626           | TIMED FUNC 1 SRC | Selects the time periods for <i>TIMED FUNC 1 SRC</i> . Timed function can consist of 0...4 time periods and a booster. | NOT SEL  |
|                | NOT SEL          | No time periods selected   | 0        |
|                | T1               | Time period 1  | 1        |
|                | T2               | Time period 2  | 2        |
|                | T1+T2            | Time periods 1 and 2   | 3        |
|                | T3               | Time period 3  | 4        |
|                | T1+T3            | Time periods 1 and 3   | 5        |
|                | T2+T3            | Time periods 2 and 3   | 6        |
|                | T1+T2+T3         | Time periods 1, 2 and 3  | 7        |
|                | T4               | Time period 4  | 8        |
|                | T1+T4            | Time periods 1 and 4   | 9        |
|                | T2+T4            | Time periods 2 and 4   | 10       |
|                | T1+T2+T4         | Time periods 1, 2 and 4  | 11       |
|                | T3+T4            | Time periods 4 and 3   | 12       |
|                | T1+T3+T4         | Time periods 1, 3 and 4  | 13       |
|                | T2+T3+T4         | Time periods 2, 3 and 4  | 14       |
|                | T1+T2+T3+T4      | Time periods 1, 2, 3 and 4   | 15       |
|                | BOOSTER          | Booster  | 16       |
|                | T1+B             | Booster and time period 1  | 17       |
|                | T2+B             | Booster and time period 2  | 18       |
|                | T1+T2+B          | Booster and time periods 1 and 2   | 19       |
|                | T3+B             | Booster and time period 3  | 20       |
|                | T1+T3+B          | Booster and time periods 1 and 3   | 21       |
|                | T2+T3+B          | Booster and time periods 2 and 3   | 22       |
|                | T1+T2+T3+B       | Booster and time periods 1, 2 and 3  | 23       |
|                | T4+B             | Booster and time period 4  | 24       |
|                | T1+T4+B          | Booster and time periods 1 and 4   | 25       |
|                | T2+T4+B          | Booster and time periods 2 and 4   | 26       |
|                | T1+T2+T4+B       | Booster and time periods 1, 2 and 4  | 27       |
|                | T3+T4+B          | Booster and time periods 3 and 4   | 28       |
|                | T1+T3+T4+B       | Booster and time periods 1, 3 and 4  | 29       |
|                | T2+T3+T4+B       | Booster and time periods 2, 3 and 4  | 30       |
|                | T1+2+3+4+B       | Booster and time periods 1, 2, 3 and 4   | 31       |
| 3627           | TIMED FUNC 2 SRC | See parameter <i>3626 TIMED FUNC 1 SRC</i> .   |          |
|                |                  | See parameter <i>3626 TIMED FUNC 1 SRC</i> .   |          |

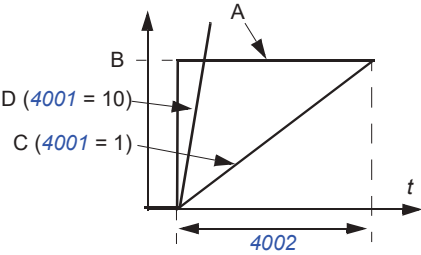
| All parameters |                                 |  |           |
|----------------|---------------------------------|--|-----------|
| No.            | Name/Value                      | Description  | Def/FbEq  |
| 3628           | TIMED FUNC 3 SRC                | See parameter <a href="#">3626 TIMED FUNC 1 SRC</a> .  |           |
|                |                                 | See parameter <a href="#">3626 TIMED FUNC 1 SRC</a> .  |           |
| 3629           | TIMED FUNC 4 SRC                | See parameter <a href="#">3626 TIMED FUNC 1 SRC</a> .  |           |
|                |                                 | See parameter <a href="#">3626 TIMED FUNC 1 SRC</a> .  |           |
| <b>40</b>      | <b>PROCESS PID SET 1</b>        | Process PID (PID1) control parameter set 1. See section <a href="#">PID control</a> on page <a href="#">151</a> .  |           |
| 4001           | GAIN                            | Defines the gain for the process PID controller. High gain may cause speed oscillation.  | 1.0       |
|                | 0.1...100.0                     | Gain. When value is set to 0.1, the PID controller output changes one-tenth as much as the error value. When value is set to 100, the PID controller output changes one hundred times as much as the error value.  | 1 = 0.1   |
| 4002           | INTEGRATION TIME                | Defines the integration time for the process PID1 controller. The integration time defines the rate at which the controller output changes when the error value is constant. The shorter the integration time, the faster the continuous error value is corrected. Too short an integration time makes the control unstable.<br><br>A = Error<br>B = Error value step<br>C = Controller output with gain = 1<br>D = Controller output with gain = 10<br><br> | 10.0 s    |
|                | 0.0 = NOT SEL<br>0.1...3600.0 s | Integration time. If parameter value is set to zero, integration (I-part of the PID controller) is disabled.   | 1 = 0.1 s |

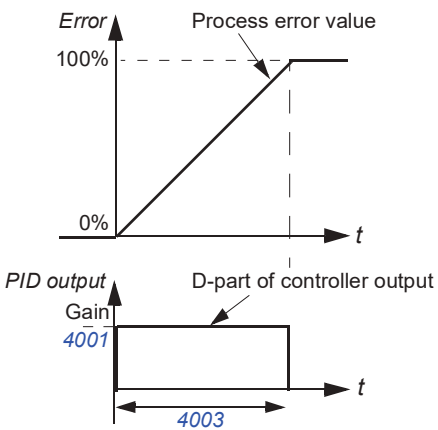

| All parameters |                  |  |           |
|----------------|------------------|--|-----------|
| No.            | Name/Value       | Description  | Def/FbEq  |
| 4003           | DERIVATION TIME  | <p>Defines the derivation time for the process PID controller. Derivative action boosts the controller output if the error value changes. The longer the derivation time, the more the speed controller output is boosted during the change. If the derivation time is set to zero, the controller works as a PI controller, otherwise as a PID controller.</p> <p>The derivation makes the control more responsive for disturbances.</p> <p>The derivative is filtered with a 1-pole filter. Filter time constant is defined by parameter <i>4004 PID DERIV FILTER</i>.</p>  | 0.0 s     |
|                | 0.0...10.0 s     | Derivation time. If parameter value is set to zero, the derivative part of the PID controller is disabled.   | 1 = 0.1 s |
| 4004           | PID DERIV FILTER | Defines the filter time constant for the derivative part of the process PID controller. Increasing the filter time smooths the derivative and reduces noise.   | 1.0 s     |
|                | 0.0...10.0 s     | Filter time constant. If parameter value is set to zero, the derivative filter is disabled.  | 1 = 0.1 s |
| 4005           | ERROR VALUE INV  | Selects the relationship between the feedback signal and drive speed.  | NO        |
|                | NO               | Normal: A decrease in feedback signal increases drive speed. Error = Reference - Feedback  | 0         |
|                | YES              | Inverted: A decrease in feedback signal decreases drive speed. Error = Feedback - Reference  | 1         |
| 4006           | UNITS            | Selects the unit for PID controller actual values.   | %         |
|                | 0...127          | See parameter <i>3405 OUTPUT1 UNIT</i> selections in the given range.  |           |

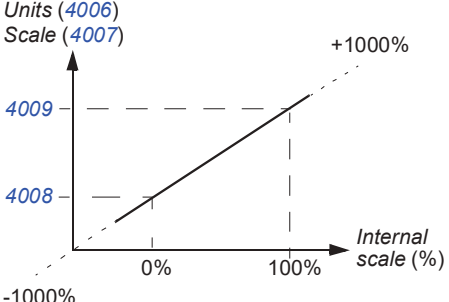
| All parameters |               |   |                 |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|----------------|---------------|---|-----------------|-------|---------|---|-------|---|---|-------|-----|---|-------|------|---|-------|-------|---|-------|--------|-------|
| No.            | Name/Value    | Description   | Def/FbEq        |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
| 4007           | UNIT SCALE    | Defines the decimal point location for PID controller actual values.  | 1               |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|                | 0...4         | <p><b>Example:</b> PI (3.141593)</p> <table border="1" data-bbox="403 311 871 470"> <thead> <tr> <th>4007 value</th> <th>Entry</th> <th>Display</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>00003</td> <td>3</td> </tr> <tr> <td>1</td> <td>00031</td> <td>3.1</td> </tr> <tr> <td>2</td> <td>00314</td> <td>3.14</td> </tr> <tr> <td>3</td> <td>03142</td> <td>3.142</td> </tr> <tr> <td>4</td> <td>31416</td> <td>3.1416</td> </tr> </tbody> </table> | 4007 value      | Entry | Display | 0 | 00003 | 3 | 1 | 00031 | 3.1 | 2 | 00314 | 3.14 | 3 | 03142 | 3.142 | 4 | 31416 | 3.1416 | 1 = 1 |
| 4007 value     | Entry         | Display   |                 |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
| 0              | 00003         | 3   |                 |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
| 1              | 00031         | 3.1   |                 |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
| 2              | 00314         | 3.14  |                 |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
| 3              | 03142         | 3.142   |                 |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
| 4              | 31416         | 3.1416  |                 |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
| 4008           | 0% VALUE      | <p>Defines together with parameter <b>4009 100% VALUE</b> the scaling applied to the PID controller's actual values.</p>   | 0.0             |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|                | x...x         | Unit and range depend on the unit and scale defined by parameters <b>4006 UNITS</b> and <b>4007 UNIT SCALE</b> .  |                 |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
| 4009           | 100% VALUE    | Defines together with parameter <b>4008 0% VALUE</b> the scaling applied to the PID controller's actual values.   | 100.0           |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|                | x...x         | Unit and range depend on the unit and scale defined by parameters <b>4006 UNITS</b> and <b>4007 UNIT SCALE</b> .  |                 |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
| 4010           | SET POINT SEL | Selects the source for the process PID controller reference signal.   | <i>INTERNAL</i> |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|                | KEYPAD        | Control panel   | 0               |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|                | AI1           | Analog input AI1  | 1               |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|                | AI2           | Analog input AI2  | 2               |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|                | COMM          | Fieldbus reference REF2   | 8               |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|                | COMM+AI1      | Summation of fieldbus reference REF2 and analog input AI1. See section <i>Reference selection and correction</i> on page 320.   | 9               |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |
|                | COMM*AI1      | Multiplication of fieldbus reference REF2 and analog input AI1. See section <i>Reference selection and correction</i> on page 320.  | 10              |       |         |   |       |   |   |       |     |   |       |      |   |       |       |   |       |        |       |


| All parameters |                 |   |          |
|----------------|-----------------|---|----------|
| No.            | Name/Value      | Description   | Def/FbEq |
|                | DI3U,4D(RNC)    | Digital input DI3: Reference increase. Digital input DI4: Reference decrease. Stop command resets the reference to zero. The reference is not saved if the control source is changed from EXT1 to EXT2, from EXT2 to EXT1 or from LOC to REM.                             | 11       |
|                | DI3U,4D(NC)     | Digital input DI3: Reference increase. Digital input DI4: Reference decrease. The program stores the active reference (not reset by a stop command). The reference is not saved if the control source is changed from EXT1 to EXT2, from EXT2 to EXT1 or from LOC to REM. | 12       |
|                | AI1+AI2         | Reference is calculated with the following equation:<br>$REF = AI1(\%) + AI2(\%) - 50\%$  | 14       |
|                | AI1*AI2         | Reference is calculated with the following equation:<br>$REF = AI1(\%) \cdot (AI2(\%) / 50\%)$  | 15       |
|                | AI1-AI2         | Reference is calculated with the following equation:<br>$REF = AI1(\%) + 50\% - AI2(\%)$  | 16       |
|                | AI1/AI2         | Reference is calculated with the following equation:<br>$REF = AI1(\%) \cdot (50\% / AI2(\%))$  | 17       |
|                | INTERNAL        | A constant value defined by parameter <i>4011 INTERNAL SETPNT</i> .   | 19       |
|                | DI4U,5D(NC)     | See selection <i>DI3U,4D(NC)</i> .  | 31       |
|                | FREQ INPUT      | Frequency input   | 32       |
|                | SEQ PROG OUT    | Sequence programming output. See parameter group <i>84 SEQUENCE PROG</i> .  | 33       |
| 4011           | INTERNAL SETPNT | Selects a constant value as process PID controller reference, when parameter <i>4010 SET POINT SEL</i> value is set to <i>INTERNAL</i> .  | 40       |
|                | x...x           | Unit and range depend on the unit and scale defined by parameters <i>4006 UNITS</i> and <i>4007 UNIT SCALE</i> .  |          |
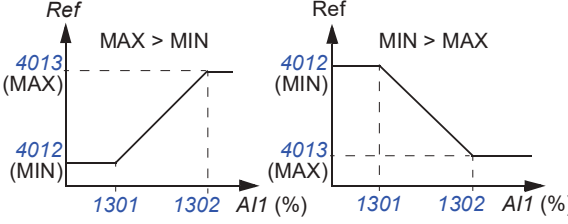
| All parameters |                 |   |             |
|----------------|-----------------|---|-------------|
| No.            | Name/Value      | Description   | Def/FbEq    |
| 4012           | SETPOINT MIN    | Defines the minimum value for the selected PID reference signal source. See parameter <i>4010 SET POINT SEL</i> .   | 0.0%        |
|                | -500.0...500.0% | Value as a percentage.<br><b>Example:</b> Analog input AI1 is selected as the PID reference source (value of parameter <i>4010</i> is <i>AI1</i> ). The reference minimum and maximum correspond to the <i>1301 MINIMUM AI1</i> and <i>1302 MAXIMUM AI1</i> settings as follows:<br> | 1 = 0.1%    |
| 4013           | SETPOINT MAX    | Defines the maximum value for the selected PID reference signal source. See parameters <i>4010 SET POINT SEL</i> and <i>4012 SETPOINT MIN</i> .   | 100.0%      |
|                | -500.0...500.0% | Value as a percentage   | 1 = 0.1%    |
| 4014           | FBK SEL         | Selects the process actual value (feedback signal) for the process PID controller: The sources for the variables ACT1 and ACT2 are further defined by parameters <i>4016 ACT1 INPUT</i> and <i>4017 ACT2 INPUT</i> .  | <i>ACT1</i> |
|                | ACT1            | ACT1  | 1           |
|                | ACT1-ACT2       | Subtraction of ACT1 and ACT2  | 2           |
|                | ACT1+ACT2       | Addition of ACT1 and ACT2   | 3           |
|                | ACT1*ACT2       | Multiplication of ACT1 and ACT2   | 4           |
|                | ACT1/ACT2       | Division of ACT1 and ACT2   | 5           |
|                | MIN(ACT1,2)     | Selects the smaller of ACT1 and ACT2  | 6           |
|                | MAX(ACT1,2)     | Selects the higher of ACT1 and ACT2   | 7           |
|                | sqrt(ACT1-2)    | Square root of the subtraction of ACT1 and ACT2   | 8           |
|                | sqA1+sqA2       | Addition of the square root of ACT1 and the square root of ACT2   | 9           |
|                | sqrt(ACT1)      | Square root of ACT1   | 10          |
|                | COMM FBK 1      | Signal <i>0158 PID COMM VALUE 1</i> value   | 11          |
|                | COMM FBK 2      | Signal <i>0159 PID COMM VALUE 2</i> value   | 12          |

| All parameters |                      |  |                         |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|----------------|----------------------|--|-------------------------|--------|-------------|-------------|-------------|--|--|--|---|----------------|-------------------------|-------------------------|---|----------------|-------------------------|-------------------------|---|---------|---|---------------------|---|--------|---------------------|--------------------|---|-------|--------------------|-------------------|----|
| No.            | Name/Value           | Description  | Def/FbEq                |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| 4015           | FBK MULTIPLIER       | Defines an extra multiplier for the value defined by parameter <b>4014 FBK SEL</b> . Parameter is used mainly in applications where feedback value is calculated from another variable (eg, flow from pressure difference).  | 0.000                   |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | -32.768...<br>32.767 | Multiplier. If parameter value is set to zero, no multiplier is used.  | 1 = 0.001               |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| 4016           | ACT1 INPUT           | Defines the source for actual value 1 (ACT1). See also parameter <b>4018 ACT1 MINIMUM</b> .  | <i>A</i> / <i>I</i> 2   |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | AI1                  | Uses analog input 1 for ACT1   | 1                       |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | AI2                  | Uses analog input 2 for ACT1   | 2                       |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | CURRENT              | Uses current for ACT1  | 3                       |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | TORQUE               | Uses torque for ACT1   | 4                       |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | POWER                | Uses power for ACT1  | 5                       |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | COMM ACT 1           | Uses value of signal <b>0158 PID COMM VALUE 1</b> for ACT1   | 6                       |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | COMM ACT 2           | Uses value of signal <b>0159 PID COMM VALUE 2</b> for ACT1   | 7                       |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | FREQ INPUT           | Frequency input  | 8                       |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| 4017           | ACT2 INPUT           | Defines the source for actual value ACT2. See also parameter <b>4020 ACT2 MINIMUM</b> .  | <i>A</i> / <i>I</i> 2   |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                |                      | See parameter <b>4016 ACT1 INPUT</b> .   |                         |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| 4018           | ACT1 MINIMUM         | <p>Sets the minimum value for ACT1.</p> <p>Scales the source signal used as the actual value ACT1 (defined by parameter <b>4016 ACT1 INPUT</b>). For parameter <b>4016</b> values 6 (<b>COMM ACT 1</b>) and 7 (<b>COMM ACT 2</b>) scaling is not done.</p> <table border="1" data-bbox="311 970 868 1145"> <thead> <tr> <th>Par</th> <th>Source</th> <th>Source min.</th> <th>Source max.</th> </tr> </thead> <tbody> <tr> <td><b>4016</b></td> <td></td> <td></td> <td></td> </tr> <tr> <td>1</td> <td>Analog input 1</td> <td><b>1301 MINIMUM AI1</b></td> <td><b>1302 MAXIMUM AI1</b></td> </tr> <tr> <td>2</td> <td>Analog input 2</td> <td><b>1304 MINIMUM AI2</b></td> <td><b>1305 MAXIMUM AI2</b></td> </tr> <tr> <td>3</td> <td>Current</td> <td>0</td> <td>2 · nominal current</td> </tr> <tr> <td>4</td> <td>Torque</td> <td>-2 · nominal torque</td> <td>2 · nominal torque</td> </tr> <tr> <td>5</td> <td>Power</td> <td>-2 · nominal power</td> <td>2 · nominal power</td> </tr> </tbody> </table> <p>A = Normal; B = Inversion (ACT1 minimum &gt; ACT1 maximum)</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="330 1225 599 1449"> <p>ACT1 (%)</p> <p>4019</p> <p>4018</p> <p>Source min. Source max.</p> <p>Source signal</p> <p>A</p> </div> <div data-bbox="604 1225 868 1449"> <p>ACT1 (%)</p> <p>4018</p> <p>4019</p> <p>Source min. Source max.</p> <p>Source signal</p> <p>B</p> </div> </div> | Par                     | Source | Source min. | Source max. | <b>4016</b> |  |  |  | 1 | Analog input 1 | <b>1301 MINIMUM AI1</b> | <b>1302 MAXIMUM AI1</b> | 2 | Analog input 2 | <b>1304 MINIMUM AI2</b> | <b>1305 MAXIMUM AI2</b> | 3 | Current | 0 | 2 · nominal current | 4 | Torque | -2 · nominal torque | 2 · nominal torque | 5 | Power | -2 · nominal power | 2 · nominal power | 0% |
| Par            | Source               | Source min.  | Source max.             |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| <b>4016</b>    |                      |  |                         |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| 1              | Analog input 1       | <b>1301 MINIMUM AI1</b>  | <b>1302 MAXIMUM AI1</b> |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| 2              | Analog input 2       | <b>1304 MINIMUM AI2</b>  | <b>1305 MAXIMUM AI2</b> |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| 3              | Current              | 0  | 2 · nominal current     |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| 4              | Torque               | -2 · nominal torque  | 2 · nominal torque      |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
| 5              | Power                | -2 · nominal power   | 2 · nominal power       |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |
|                | -1000...1000%        | Value as a percentage  | 1 = 1%                  |        |             |             |             |  |  |  |   |                |                         |                         |   |                |                         |                         |   |         |   |                     |   |        |                     |                    |   |       |                    |                   |    |

| All parameters |                    |   |          |
|----------------|--------------------|---|----------|
| No.            | Name/Value         | Description   | Def/FbEq |
| 4019           | ACT1<br>MAXIMUM    | Defines the maximum value for variable ACT1 if an analog input is selected as a source for ACT1. See parameter <a href="#">4016 ACT1 INPUT</a> . The minimum ( <a href="#">4018 ACT1 MINIMUM</a> ) and maximum settings of ACT1 define how the voltage/current signal received from the measuring device is converted to a percentage value used by the process PID controller. See parameter <a href="#">4018 ACT1 MINIMUM</a> . | 100%     |
|                | -1000...1000%      | Value as a percentage   | 1 = 1%   |
| 4020           | ACT2<br>MINIMUM    | See parameter <a href="#">4018 ACT1 MINIMUM</a> .   | 0%       |
|                | -1000...1000%      | See parameter <a href="#">4018</a> .  | 1 = 1%   |
| 4021           | ACT2<br>MAXIMUM    | See parameter <a href="#">4019 ACT1 MAXIMUM</a> .   | 100%     |
|                | -1000...1000%      | See parameter <a href="#">4019</a> .  | 1 = 1%   |
| 4022           | SLEEP<br>SELECTION | Activates the sleep function and selects the source for the activation input. See section <a href="#">Sleep function for the process PID (PID1) control</a> on page 155.  | NOT SEL  |
|                | NOT SEL            | No sleep function selected  | 0        |
|                | DI1                | The function is activated/deactivated through digital input DI1. 1 = activation, 0 = deactivation.<br><br>The internal sleep criteria set by parameters <a href="#">4023 PID SLEEP LEVEL</a> and <a href="#">4025 WAKE-UP DEV</a> are not effective. The sleep start and stop delay parameters <a href="#">4024 PID SLEEP DELAY</a> and <a href="#">4026 WAKE-UP DELAY</a> are effective.   | 1        |
|                | DI2                | See selection <a href="#">DI1</a> .   | 2        |
|                | DI3                | See selection <a href="#">DI1</a> .   | 3        |
|                | DI4                | See selection <a href="#">DI1</a> .   | 4        |
|                | DI5                | See selection <a href="#">DI1</a> .   | 5        |
|                | INTERNAL           | Activated and deactivated automatically as defined by parameters <a href="#">4023 PID SLEEP LEVEL</a> and <a href="#">4025 WAKE-UP DEV</a> .  | 7        |
|                | DI1(INV)           | The function is activated/deactivated through inverted digital input DI1. 1 = deactivation, 0 = activation.<br><br>The internal sleep criteria set by parameters <a href="#">4023 PID SLEEP LEVEL</a> and <a href="#">4025 WAKE-UP DEV</a> are not effective. The sleep start and stop delay parameters <a href="#">4024 PID SLEEP DELAY</a> and <a href="#">4026 WAKE-UP DELAY</a> are effective.                                | -1       |
|                | DI2(INV)           | See selection <a href="#">DI1(INV)</a> .  | -2       |
|                | DI3(INV)           | See selection <a href="#">DI1(INV)</a> .  | -3       |
|                | DI4(INV)           | See selection <a href="#">DI1(INV)</a> .  | -4       |
|                | DI5(INV)           | See selection <a href="#">DI1(INV)</a> .  | -5       |
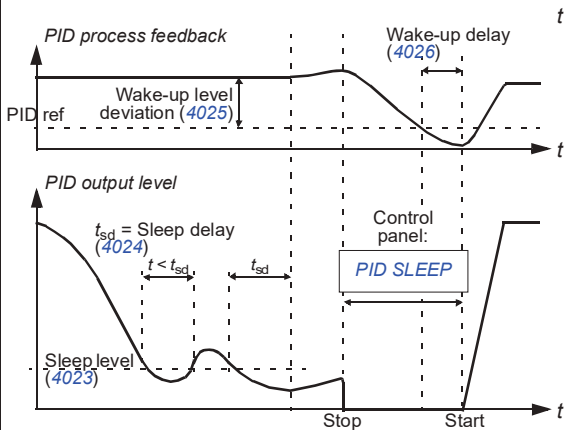
| All parameters |                                |   |                    |
|----------------|--------------------------------|---|--------------------|
| No.            | Name/Value                     | Description   | Def/FbEq           |
| 4023           | PID SLEEP LEVEL                | <p>Defines the start limit for the sleep function. If the motor speed is below a set level (4023) longer than the sleep delay (4024), the drive shifts to the sleeping mode: The motor is stopped and the control panel shows alarm message <i>PID SLEEP</i> (2018).</p> <p>Parameter 4022 <i>SLEEP SELECTION</i> must be set to <i>INTERNAL</i>.</p>  | 0.0 Hz / 0 rpm     |
|                | 0.0...599.0 Hz / 0...30000 rpm | Sleep start level   | 1 = 0.1 Hz / 1 rpm |
| 4024           | PID SLEEP DELAY                | <p>Defines the delay for the sleep start function. See parameter 4023 <i>PID SLEEP LEVEL</i>. When the motor speed falls below the sleep level, the counter starts. When the motor speed exceeds the sleep level, the counter is reset.</p>   | 60.0 s             |
|                | 0.0...3600.0 s                 | Sleep start delay   | 1 = 0.1 s          |
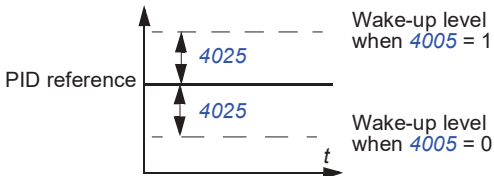
| All parameters |                 |  |            |
|----------------|-----------------|--|------------|
| No.            | Name/Value      | Description  | Def/FbEq   |
| 4025           | WAKE-UP DEV     | <p>Defines the wake-up deviation for the sleep function. The drive wakes up if the process actual value deviation from the PID reference value exceeds the set wake-up deviation (4025) longer than the wake-up delay (4026). Wake-up level depends on parameter 4005 ERROR VALUE INV settings.</p> <p>If parameter 4005 is set to 0:<br/>Wake-up level = PID reference (4010) - Wake-up deviation (4025).</p> <p>If parameter 4005 is set to 1:<br/>Wake-up level = PID reference (4010) + Wake-up deviation (4025)</p>  <p>See also figures for parameter 4023 PID SLEEP LEVEL.</p> | 0          |
| x...x          |                 | Unit and range depend on the unit and scale defined by parameters 4026 WAKE-UP DELAY and 4007 UNIT SCALE.  |            |
| 4026           | WAKE-UP DELAY   | Defines the wake-up delay for the sleep function. See parameter 4023 PID SLEEP LEVEL.  | 0.50 s     |
|                | 0.00...60.00 s  | Wake-up delay  | 1 = 0.01 s |
| 4027           | PID 1 PARAM SET | Defines the source from which the drive reads the signal that selects between PID parameter set 1 and 2.<br>PID parameter set 1 is defined by parameters 4001...4026.<br>PID parameter set 2 is defined by parameters 4101...4126.   | SET 1      |
|                | SET 1           | PID SET 1 is active.   | 0          |
|                | DI1             | Digital input DI1. 1 = PID SET 2, 0 = PID SET 1.   | 1          |
|                | DI2             | See selection DI1.   | 2          |
|                | DI3             | See selection DI1.   | 3          |
|                | DI4             | See selection DI1.   | 4          |
|                | DI5             | See selection DI1.   | 5          |
|                | SET 2           | PID SET 2 is active.   | 7          |
|                | TIMED FUNC 1    | Timed PID SET 1/2 control. Timed function 1 inactive = PID SET 1, timed function 1 active = PID SET 2. See parameter group 36 TIMED FUNCTIONS.   | 8          |
|                | TIMED FUNC 2    | See selection TIMED FUNC 1.  | 9          |
|                | TIMED FUNC 3    | See selection TIMED FUNC 1.  | 10         |
|                | TIMED FUNC 4    | See selection TIMED FUNC 1.  | 11         |



| All parameters              |                  |  |          |
|-----------------------------|------------------|--|----------|
| No.                         | Name/Value       | Description  | Def/FbEq |
|                             | DI1(INV)         | Inverted digital input DI1. 0 = PID SET 2, 1 = PID SET 1.  | -1       |
|                             | DI2(INV)         | See selection <a href="#">DI1(INV)</a> .   | -2       |
|                             | DI3(INV)         | See selection <a href="#">DI1(INV)</a> .   | -3       |
|                             | DI4(INV)         | See selection <a href="#">DI1(INV)</a> .   | -4       |
|                             | DI5(INV)         | See selection <a href="#">DI1(INV)</a> .   | -5       |
| <b>41 PROCESS PID SET 2</b> |                  | Process PID (PID1) control parameter set 2. See section <a href="#">PID control</a> on page 151. |          |
| 4101                        | GAIN             | See parameter <a href="#">4001 GAIN</a> .  |          |
| 4102                        | INTEGRATION TIME | See parameter <a href="#">4002 INTEGRATION TIME</a> .  |          |
| 4103                        | DERIVATION TIME  | See parameter <a href="#">4003 DERIVATION TIME</a> .   |          |
| 4104                        | PID DERIV FILTER | See parameter <a href="#">4004 PID DERIV FILTER</a> .  |          |
| 4105                        | ERROR VALUE INV  | See parameter <a href="#">4005 ERROR VALUE INV</a> .   |          |
| 4106                        | UNITS            | See parameter <a href="#">4006 UNITS</a> .   |          |
| 4107                        | UNIT SCALE       | See parameter <a href="#">4007 UNIT SCALE</a> .  |          |
| 4108                        | 0% VALUE         | See parameter <a href="#">4008 0% VALUE</a> .  |          |
| 4109                        | 100% VALUE       | See parameter <a href="#">4009 100% VALUE</a> .  |          |
| 4110                        | SET POINT SEL    | See parameter <a href="#">4010 SET POINT SEL</a> .   |          |
| 4111                        | INTERNAL SETPNT  | See parameter <a href="#">4011 INTERNAL SETPNT</a> .   |          |
| 4112                        | SETPOINT MIN     | See parameter <a href="#">4012 SETPOINT MIN</a> .  |          |
| 4113                        | SETPOINT MAX     | See parameter <a href="#">4013 SETPOINT MAX</a> .  |          |
| 4114                        | FBK SEL          | See parameter <a href="#">4014 FBK SEL</a> .   |          |
| 4115                        | FBK MULTIPLIER   | See parameter <a href="#">4015 FBK MULTIPLIER</a> .  |          |
| 4116                        | ACT1 INPUT       | See parameter <a href="#">4016 ACT1 INPUT</a> .  |          |
| 4117                        | ACT2 INPUT       | See parameter <a href="#">4017 ACT2 INPUT</a> .  |          |
| 4118                        | ACT1 MINIMUM     | See parameter <a href="#">4018 ACT1 MINIMUM</a> .  |          |
| 4119                        | ACT1 MAXIMUM     | See parameter <a href="#">4019 ACT1 MAXIMUM</a> .  |          |
| 4120                        | ACT2 MINIMUM     | See parameter <a href="#">4020 ACT2 MINIMUM</a> .  |          |
| 4121                        | ACT2 MAXIMUM     | See parameter <a href="#">4021 ACT2 MAXIMUM</a> .  |          |

| All parameters           |                  |   |          |
|--------------------------|------------------|---|----------|
| No.                      | Name/Value       | Description   | Def/FbEq |
| 4122                     | SLEEP SELECTION  | See parameter <a href="#">4022 SLEEP SELECTION</a> .  |          |
| 4123                     | PID SLEEP LEVEL  | See parameter <a href="#">4023 PID SLEEP LEVEL</a> .  |          |
| 4124                     | PID SLEEP DELAY  | See parameter <a href="#">4024 PID SLEEP DELAY</a> .  |          |
| 4125                     | WAKE-UP DEV      | See parameter <a href="#">4025 WAKE-UP DEV</a> .  |          |
| 4126                     | WAKE-UP DELAY    | See parameter <a href="#">4026 WAKE-UP DELAY</a> .  |          |
| <b>42 EXT / TRIM PID</b> |                  | External/Trim PID (PID2) control. See section <a href="#">PID control</a> on page <a href="#">151</a> . |          |
| 4201                     | GAIN             | See parameter <a href="#">4001 GAIN</a> .   |          |
| 4202                     | INTEGRATION TIME | See parameter <a href="#">4002 INTEGRATION TIME</a> .   |          |
| 4203                     | DERIVATION TIME  | See parameter <a href="#">4003 DERIVATION TIME</a> .  |          |
| 4204                     | PID DERIV FILTER | See parameter <a href="#">4004 PID DERIV FILTER</a> .   |          |
| 4205                     | ERROR VALUE INV  | See parameter <a href="#">4005 ERROR VALUE INV</a> .  |          |
| 4206                     | UNITS            | See parameter <a href="#">4006 UNITS</a> .  |          |
| 4207                     | UNIT SCALE       | See parameter <a href="#">4007 UNIT SCALE</a> .   |          |
| 4208                     | 0% VALUE         | See parameter <a href="#">4008 0% VALUE</a> .   |          |
| 4209                     | 100% VALUE       | See parameter <a href="#">4009 100% VALUE</a> .   |          |
| 4210                     | SET POINT SEL    | See parameter <a href="#">4010 SET POINT SEL</a> .  |          |
| 4211                     | INTERNAL SETPNT  | See parameter <a href="#">4011 INTERNAL SETPNT</a> .  |          |
| 4212                     | SETPOINT MIN     | See parameter <a href="#">4012 SETPOINT MIN</a> .   |          |
| 4213                     | SETPOINT MAX     | See parameter <a href="#">4013 SETPOINT MAX</a> .   |          |
| 4214                     | FBK SEL          | See parameter <a href="#">4014 FBK SEL</a> .  |          |
| 4215                     | FBK MULTIPLIER   | See parameter <a href="#">4015 FBK MULTIPLIER</a> .   |          |
| 4216                     | ACT1 INPUT       | See parameter <a href="#">4016 ACT1 INPUT</a> .   |          |
| 4217                     | ACT2 INPUT       | See parameter <a href="#">4017 ACT2 INPUT</a> .   |          |
| 4218                     | ACT1 MINIMUM     | See parameter <a href="#">4018 ACT1 MINIMUM</a> .   |          |
| 4219                     | ACT1 MAXIMUM     | See parameter <a href="#">4019 ACT1 MAXIMUM</a> .   |          |
| 4220                     | ACT2 MINIMUM     | See parameter <a href="#">4020 ACT2 MINIMUM</a> .   |          |

| All parameters |                  |  |                         |
|----------------|------------------|--|-------------------------|
| No.            | Name/Value       | Description  | Def/FbEq                |
| 4221           | ACT2<br>MAXIMUM  | See parameter <a href="#">4021 ACT2 MAXIMUM</a> .  |                         |
| 4228           | ACTIVATE         | Selects the source for the external PID function activation signal. Parameter <a href="#">4230 TRIM MODE</a> must be set to <a href="#">NOT SEL</a> .  | <a href="#">NOT SEL</a> |
|                | NOT SEL          | No external PID control activation selected  | 0                       |
|                | DI1              | Digital input DI1. 1 = active, 0 = inactive.   | 1                       |
|                | DI2              | See selection <a href="#">DI1</a> .  | 2                       |
|                | DI3              | See selection <a href="#">DI1</a> .  | 3                       |
|                | DI4              | See selection <a href="#">DI1</a> .  | 4                       |
|                | DI5              | See selection <a href="#">DI1</a> .  | 5                       |
|                | DRIVE RUN        | Activation at drive start. Start (drive running) = active.   | 7                       |
|                | ON               | Activation at drive power-up. Power-up (drive powered) = active.   | 8                       |
|                | TIMED FUNC 1     | Activation by a timed function. Timed function 1 active = PID control active. See parameter group <a href="#">36 TIMED FUNCTIONS</a> .   | 9                       |
|                | TIMED FUNC 2     | See selection <a href="#">TIMED FUNC 1</a> .   | 10                      |
|                | TIMED FUNC 3     | See selection <a href="#">TIMED FUNC 1</a> .   | 11                      |
|                | TIMED FUNC 4     | See selection <a href="#">TIMED FUNC 1</a> .   | 12                      |
|                | DI1(INV)         | Inverted digital input DI1. 0 = active, 1 = inactive.  | -1                      |
|                | DI2(INV)         | See selection <a href="#">DI1(INV)</a> .   | -2                      |
|                | DI3(INV)         | See selection <a href="#">DI1(INV)</a> .   | -3                      |
|                | DI4(INV)         | See selection <a href="#">DI1(INV)</a> .   | -4                      |
|                | DI5(INV)         | See selection <a href="#">DI1(INV)</a> .   | -5                      |
| 4229           | OFFSET           | Defines the offset for the external PID controller output. When PID controller is activated, controller output starts from the offset value. When PID controller is deactivated, controller output is reset to the offset value. Parameter <a href="#">4230 TRIM MODE</a> must be set to <a href="#">NOT SEL</a> . | 0.0%                    |
|                | 0.0...100.0%     | Value as a percentage  | 1 = 0.1%                |
| 4230           | TRIM MODE        | Activates the trim function and selects between the direct and proportional trimming. With trimming it is possible to combine a corrective factor to the drive reference. See section <a href="#">Reference trimming</a> on page <a href="#">130</a> .   | <a href="#">NOT SEL</a> |
|                | NOT SEL          | No trim function selected  | 0                       |
|                | PROPORTION<br>AL | Active. The trimming factor is proportional to the rpm/Hz reference before trimming (REF1).  | 1                       |
|                | DIRECT           | Active. The trimming factor is relative to a fixed maximum limit used in the reference control loop (maximum speed, frequency or torque).  | 2                       |

| All parameters             |                 |   |            |
|----------------------------|-----------------|---|------------|
| No.                        | Name/Value      | Description   | Def/FbEq   |
| 4231                       | TRIM SCALE      | Defines the multiplier for the trimming function. See section <a href="#">Reference trimming</a> on page 130.   | 0.0%       |
|                            | -100.0...100.0% | Multiplier  | 1 = 0.1%   |
| 4232                       | CORRECTION SRC  | Selects the trim reference. See section <a href="#">Reference trimming</a> on page 130.   | PID2REF    |
|                            | PID2REF         | PID2 reference selected by parameter 4210 (ie, signal 0129 PID 2 SETPNT value)  | 1          |
|                            | PID2OUTPUT      | PID2 output, ie, signal 0127 PID 2 OUTPUT value   | 2          |
| 4233                       | TRIM SELECTION  | Selects whether the trimming is used for correcting the speed or torque reference. See section <a href="#">Reference trimming</a> on page 130.  | SPEED/FREQ |
|                            | SPEED/FREQ      | Speed reference trimming  | 0          |
|                            | TORQUE          | Torque reference trimming (only for REF2 (%))   | 1          |
| <b>43 MECH BRK CONTROL</b> |                 | Control of a mechanical brake. See section <a href="#">Control of a mechanical brake</a> on page 159.   |            |
| 4301                       | BRAKE OPEN DLY  | Defines the brake open delay (= the delay between the internal open brake command and the release of the motor speed control). The delay counter starts when the motor current/torque/speed has risen to the level required at brake release (parameter 4302 BRAKE OPEN LVL or 4304 FORCED OPEN LVL) and the motor has been magnetized. Simultaneously with the start of the counter, the brake function energizes the relay output controlling the brake and the brake starts opening. | 0.20 s     |
|                            | 0.00...2.50 s   | Delay time  | 1 = 0.01 s |
| 4302                       | BRAKE OPEN LVL  | Defines the motor starting torque/current at brake release. After start the drive current/torque is frozen to the set value, until the motor is magnetized.   | 100%       |
|                            | 0.0...180.0%    | Value as a percentage of the nominal torque $T_N$ (in vector control) or the nominal current $I_{2N}$ (in scalar control). The control mode is selected by parameter 9904 MOTOR CTRL MODE.  | 1 = 0.1%   |
| 4303                       | BRAKE CLOSE LVL | Defines the brake close speed. After stop the brake is closed when drive speed falls below the set value.   | 4.0%       |
|                            | 0.0...100.0%    | Value as a percentage of the nominal speed (in vector control) or the nominal frequency (in scalar control). The control mode is selected by parameter 9904 MOTOR CTRL MODE.  | 1 = 0.1%   |

| All parameters    |                               |   |                      |
|-------------------|-------------------------------|---|----------------------|
| No.               | Name/Value                    | Description   | Def/FbEq             |
| 4304              | FORCED OPEN LVL               | Defines the speed at brake release. Parameter setting overrides parameter <i>4302 BRAKE OPEN LVL</i> setting. After start, the drive speed is frozen to the set value, until the motor is magnetized.<br><br>The purpose of this parameter is to generate enough start torque to prevent the motor rotating into the wrong direction because of the motor load. | <i>0.0 = NOT SEL</i> |
|                   | 0.0 = NOT SEL<br>0.0...100.0% | Value as a percentage of the maximum frequency (in scalar control) or the maximum speed (in vector control). If parameter value is set to zero, the function is disabled. The control mode is selected by parameter <i>9904 MOTOR CTRL MODE</i> .   | 1 = 0.1%             |
| 4305              | BRAKE MAGN DELAY              | Defines motor magnetizing time. After start drive current/torque/speed is frozen to the value defined by parameter <i>4302 BRAKE OPEN LVL</i> or <i>4304 FORCED OPEN LVL</i> for the set time.  | <i>0 = NOT SEL</i>   |
|                   | 0 = NOT SEL<br>0...10000 ms   | magnetizing time. If parameter value is set to zero, the function is disabled.  | 1 = 1 ms             |
| 4306              | RUNTIME FREQ LVL              | Defines the brake close speed. When frequency falls below the set level during run, the brake is closed. The brake is re-opened when the requirements set by parameters <i>4301...4305</i> are met.   | <i>0.0 = NOT SEL</i> |
|                   | 0.0 = NOT SEL<br>0.0...100.0% | Value as a percentage of the maximum frequency (in scalar control) or the maximum speed (in vector control). If parameter value is set to zero, the function is disabled. The control mode is selected by parameter <i>9904 MOTOR CTRL MODE</i> .   | 1 = 0.1%             |
| 4307              | BRK OPEN LVL SEL              | Selects the torque (in vector control) or current (in scalar control) applied at brake release.   | <i>PAR 4302</i>      |
|                   | PAR 4302                      | Value of parameter <i>4302 BRAKE OPEN LVL</i> used.   | 1                    |
|                   | MEMORY                        | Torque value (in vector control) or current value (in scalar control) saved in parameter <i>0179 BRAKE TORQ MEM</i> used.<br><br>Useful in applications where initial torque is needed to prevent unintended movement when the mechanical brake is released.  | 2                    |
| <b>50 ENCODER</b> |                               | Encoder connection.<br><br>For more information, see <i>MTAC-01 pulse encoder interface module user's manual</i> (3AFE68591091 [English]).  |                      |
| 5001              | PULSE NR                      | States the number of encoder pulses per one revolution.   | 1024 ppr             |
|                   | 32...16384 ppr                | Pulse number in pulses per round (ppr)  | 1 = 1 ppr            |

| All parameters            |                   |  |                |
|---------------------------|-------------------|--|----------------|
| No.                       | Name/Value        | Description  | Def/FbEq       |
| 5002                      | ENCODER ENABLE    | Enables the encoder.   | <i>DISABLE</i> |
|                           | DISABLE           | Disabled   | 0              |
|                           | ENABLE            | Enabled  | 1              |
| 5003                      | ENCODER FAULT     | Defines the operation of the drive if a failure is detected in communication between the pulse encoder and the pulse encoder interface module, or between the module and the drive.  | <i>FAULT</i>   |
|                           | FAULT             | The drive trips on fault <i>ENCODER ERR (0023)</i> .   | 1              |
|                           | ALARM             | The drive generates alarm <i>ENCODER ERROR (2024)</i> .  | 2              |
| 5010                      | Z PLS ENABLE      | Enables the encoder zero (Z) pulse. Zero pulse is used for position reset.   | <i>DISABLE</i> |
|                           | DISABLE           | Disabled   | 0              |
|                           | ENABLE            | Enabled  | 1              |
| 5011                      | POSITION RESET    | Enables the position reset.  | <i>DISABLE</i> |
|                           | DISABLE           | Disabled   | 0              |
|                           | ENABLE            | Enabled  | 1              |
| <b>51 EXT COMM MODULE</b> |                   | The parameters need to be adjusted only when a fieldbus adapter module (optional) is installed and activated by parameter <i>9802 COMM PROT SEL</i> . For more details on the parameters, refer to the manual of the fieldbus module and chapter <i>Fieldbus control with fieldbus adapter</i> on page 339. These parameter settings will remain the same even though the macro is changed.<br><br><b>Note:</b> In adapter module the parameter group number is 1. |                |
| 5101                      | FBA TYPE          | Displays the type of the connected fieldbus adapter module.  |                |
|                           | NOT_DEFINE D      | Fieldbus module is not found, or it is not properly connected, or parameter <i>9802 COMM PROT SEL</i> setting is not <i>EXT FBA</i> .  | 0              |
|                           | PROFIBUS_D P      | FPBA-01 PROFIBUS DP adapter module, FPBA-01 PROFIBUS DP adapter module   | 1              |
|                           | LONWORKS          | FLON-01 LonWorks® adapter module   | 21             |
|                           | CANOPEN           | FCAN-01 CANopen adapter module, FCAN-01 CANopen adapter module   | 32             |
|                           | DEVICENET         | FDNA-01 DeviceNet adapter module   | 37             |
|                           | CONTROLNET        | FCNA-01 ControlNet adapter module  | 101            |
|                           | ETHERNET          | FENA-01/-11/-21 Ethernet adapter module  | 128            |
|                           | ETHERCAT          | FECA-01 EtherCAT adapter module  | 135            |
|                           | ETHERN_PO WERLINK | FEPL-02 Ethernet POWERLINK adapter module  | 136            |

| All parameters |                 |   |          |
|----------------|-----------------|---|----------|
| No.            | Name/Value      | Description   | Def/FbEq |
|                | RS-485          | FSCA-01 RS-485 adapter module   | 485      |
| 5102           | FB PAR 2        | These parameters are adapter module-specific. For more information, see the module manual. Note that not all of these parameters are necessarily visible.   |          |
| ...            | ...             |   |          |
| 5126           | FB PAR 26       |   |          |
| 5127           | FBA PAR REFRESH | Validates any changed adapter module configuration parameter settings. After refreshing, the value reverts automatically to <i>DONE</i> .   |          |
|                | DONE            | Refreshing done   | 0        |
|                | REFRESH         | Refreshing  | 1        |
| 5128           | FILE CPI FW REV | Displays the parameter table revision of the fieldbus adapter module mapping file stored in the memory of the drive.<br>Format is xyz where: <ul style="list-style-type: none"> <li>• x = major revision number</li> <li>• y = minor revision number</li> <li>• x = correction letter.</li> </ul> |          |
|                | 0000...FFFF hex | Parameter table revision  | 1 = 1    |
| 5129           | FILE CONFIG ID  | Displays the drive type code of the fieldbus adapter module mapping file stored in the memory of the drive.   |          |
|                | 0000...FFFF hex | Drive type code of fieldbus adapter module mapping file   | 1 = 1    |
| 5130           | FILE CONFIG REV | Displays the fieldbus adapter module mapping file revision stored in the memory of the drive in decimal format.<br><b>Example:</b> 1 = revision 1.  |          |
|                | 0000...FFFF hex | Mapping file revision   | 1 = 1    |
| 5131           | FBA STATUS      | Displays the status of the fieldbus adapter module communication.   |          |
|                | IDLE            | Adapter is not configured.  | 0        |
|                | EXECUT INIT     | Adapter is initializing.  | 1        |
|                | TIME OUT        | A time-out has occurred in the communication between the adapter and the drive.   | 2        |
|                | CONFIG ERROR    | Adapter configuration error: The major or minor revision code of the common program revision in the fieldbus adapter module is not the revision required by the module (see parameter <i>5132 FBA CPI FW REV</i> ) or mapping file upload has failed more than three times.                       | 3        |
|                | OFF-LINE        | Adapter is off-line.  | 4        |
|                | ON-LINE         | Adapter is on-line.   | 5        |
|                | RESET           | Adapter is performing a hardware reset.   | 6        |

| All parameters       |                 |   |            |
|----------------------|-----------------|---|------------|
| No.                  | Name/Value      | Description   | Def/FbEq   |
| 5132                 | FBA CPI FW REV  | Displays the common program revision of the adapter module in format axyz, where: <ul style="list-style-type: none"> <li>• a = major revision number</li> <li>• xy = minor revision numbers</li> <li>• z = correction letter.</li> </ul> <b>Example:</b> 190A = revision 1.90A      |            |
|                      |                 | Common program revision of the adapter module   | 1 = 1      |
| 5133                 | FBA APPL FW REV | Displays the application program revision of the adapter module in format axyz, where: <ul style="list-style-type: none"> <li>• a = major revision number</li> <li>• xy = minor revision numbers</li> <li>• z = correction letter.</li> </ul> <b>Example:</b> 190A = revision 1.90A |            |
|                      |                 | Application program revision of the adapter module  | 1 = 1      |
| <b>52 PANEL COMM</b> |                 | Communication settings for the control panel port on the drive  |            |
| 5201                 | STATION ID      | Defines the address of the drive. Two units with the same address are not allowed on-line.  | 1          |
|                      | 1...247         | Address   | 1 = 1      |
| 5202                 | BAUD RATE       | Defines the transfer rate of the link.  | 9.6 kb/s   |
|                      | 1.2 kb/s        | 1.2 kbit/s  | 1 =        |
|                      | 2.4 kb/s        | 2.4 kbit/s  | 0.1 kbit/s |
|                      | 4.8 kb/s        | 4.8 kbit/s  |            |
|                      | 9.6 kb/s        | 9.6 kbit/s  |            |
|                      | 19.2 kb/s       | 19.2 kbit/s   |            |
|                      | 38.4 kb/s       | 38.4 kbit/s   |            |
|                      | 57.6 kb/s       | 57.6 kbit/s   |            |
|                      | 115.2 kb/s      | 115.2 kbit/s  |            |
| 5203                 | PARITY          | Defines the use of parity and stop bit(s). The same setting must be used in all on-line stations.   | 8 NONE 1   |
|                      | 8 NONE 1        | 8 data bits, no parity bit, one stop bit  | 0          |
|                      | 8 NONE 2        | 8 data bits, no parity bit, two stop bits   | 1          |
|                      | 8 EVEN 1        | 8 data bits, even parity indication bit, one stop bit   | 2          |
|                      | 8 ODD 1         | 8 data bits, odd parity indication bit, one stop bit  | 3          |
| 5204                 | OK MESSAGES     | Number of valid messages received by the drive. During normal operation, this number increases constantly.  | 0          |
|                      | 0...65535       | Number of messages  | 1 = 1      |



| All parameters         |                 |  |                   |
|------------------------|-----------------|--|-------------------|
| No.                    | Name/Value      | Description  | Def/FbEq          |
| 5205                   | PARITY ERRORS   | Number of characters with a parity error received from the Modbus link. If the number is high, check that the parity settings of the devices connected on the bus are the same.<br><b>Note:</b> High electromagnetic noise levels generate errors.             | 0                 |
|                        | 0...65535       | Number of characters   | 1 = 1             |
| 5206                   | FRAME ERRORS    | Number of characters with a framing error received by the Modbus link. If the number is high, check that the communication speed settings of the devices connected on the bus are the same.<br><b>Note:</b> High electromagnetic noise levels generate errors. | 0                 |
|                        | 0...65535       | Number of characters   | 1 = 1             |
| 5207                   | BUFFER OVERRUNS | Number of characters which overflow the buffer, ie, number of characters which exceed the maximum message length, 128 bytes.   | 0                 |
|                        | 0...65535       | Number of characters   | 1 = 1             |
| 5208                   | CRC ERRORS      | Number of messages with an CRC (cyclic redundancy check) error received by the drive. If the number is high, check CRC calculation for possible errors.<br><b>Note:</b> High electromagnetic noise levels generate errors.                                     | 0                 |
|                        | 0...65535       | Number of messages   | 1 = 1             |
| <b>53 EFB PROTOCOL</b> |                 | Embedded fieldbus link settings. See chapter <a href="#">Fieldbus control with embedded fieldbus</a> on page 313.  |                   |
| 5302                   | EFB STATION ID  | Defines the address of the device. Two units with the same address are not allowed on-line.  | 1                 |
|                        | 0...247         | Address  | 1 = 1             |
| 5303                   | EFB BAUD RATE   | Defines the transfer rate of the link.   | 9.6 kb/s          |
|                        | 1.2 kb/s        | 1.2 kbit/s   | 1 =<br>0.1 kbit/s |
|                        | 2.4 kb/s        | 2.4 kbit/s   |                   |
|                        | 4.8 kb/s        | 4.8 kbit/s   |                   |
|                        | 9.6 kb/s        | 9.6 kbit/s   |                   |
|                        | 19.2 kb/s       | 19.2 kbit/s  |                   |
|                        | 38.4 kb/s       | 38.4 kbit/s  |                   |
|                        | 57.6 kb/s       | 57.6 kbit/s  |                   |
|                        | 115.2 kb/s      | 115.2 kbit/s   |                   |
| 5304                   | EFB PARITY      | Defines the use of parity and stop bit(s) and the data length. The same setting must be used in all on-line stations.  | 8 NONE 1          |
|                        | 8 NONE 1        | No parity bit, one stop bit, 8 data bits   | 0                 |
|                        | 8 NONE 2        | No parity bit, two stop bits, 8 data bits  | 1                 |

| All parameters |                  |  |                             |
|----------------|------------------|--|-----------------------------|
| No.            | Name/Value       | Description  | Def/FbEq                    |
|                | 8 EVEN 1         | Even parity indication bit, one stop bit, 8 data bits  | 2                           |
|                | 8 ODD 1          | Odd parity indication bit, one stop bit, 8 data bits   | 3                           |
| 5305           | EFB CTRL PROFILE | Selects the communication profile. See section <a href="#">Communication profiles</a> on page 328.   | <a href="#">ABB DRV LIM</a> |
|                | ABB DRV LIM      | ABB drives limited profile   | 0                           |
|                | DCU PROFILE      | DCU profile  | 1                           |
|                | ABB DRV FULL     | ABB drives profile   | 2                           |
| 5306           | EFB OK MESSAGES  | Number of valid messages received by the drive. During normal operation, this number increases constantly.   | 0                           |
|                | 0...65535        | Number of messages   | 1 = 1                       |
| 5307           | EFB CRC ERRORS   | Number of messages with an CRC (cyclic redundancy check) error received by the drive. If the number is high, check CRC calculation for possible errors.<br><b>Note:</b> High electromagnetic noise levels generate errors. | 0                           |
|                | 0...65535        | Number of messages   | 1 = 1                       |
| 5310           | EFB PAR 10       | Selects an actual value to be mapped to Modbus register 40005.   | 103                         |
|                | 0...65535        | Parameter index  | 1 = 1                       |
| 5311           | EFB PAR 11       | Selects an actual value to be mapped to Modbus register 40006.   | 104                         |
|                | 0...65535        | Parameter index  | 1 = 1                       |
| 5312           | EFB PAR 12       | Selects an actual value to be mapped to Modbus register 40007.   | 0                           |
|                | 0...65535        | Parameter index  | 1 = 1                       |
| 5313           | EFB PAR 13       | Selects an actual value to be mapped to Modbus register 40008.   | 0                           |
|                | 0...65535        | Parameter index  | 1 = 1                       |
| 5314           | EFB PAR 14       | Selects an actual value to be mapped to Modbus register 40009.   | 0                           |
|                | 0...65535        | Parameter index  | 1 = 1                       |
| 5315           | EFB PAR 15       | Selects an actual value to be mapped to Modbus register 40010.   | 0                           |
|                | 0...65535        | Parameter index  | 1 = 1                       |
| 5316           | EFB PAR 16       | Selects an actual value to be mapped to Modbus register 40011.   | 0                           |
|                | 0...65535        | Parameter index  | 1 = 1                       |
| 5317           | EFB PAR 17       | Selects an actual value to be mapped to Modbus register 40012.   | 0                           |
|                | 0...65535        | Parameter index  | 1 = 1                       |

| All parameters        |                 |   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|-----------------------|-----------------|---|--------------|-----------|---|--------------|---|------|---|------|---|-------------|---|----------------|---|----------------|--|
| No.                   | Name/Value      | Description   | Def/FbEq     |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5318                  | EFB PAR 18      | For Modbus: Sets an additional delay before the drive begins transmitting response to the master request.   | 0            |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                       | 0...65535       | Delay in milliseconds   | 1 = 1        |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5319                  | EFB PAR 19      | ABB drives profile ( <i>ABB DRV LIM</i> or <i>ABB DRV FULL</i> ) Control word.  | 0000 hex     |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                       | 0000...FFFF hex | Control word  |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5320                  | EFB PAR 20      | ABB drives profile ( <i>ABB DRV LIM</i> or <i>ABB DRV FULL</i> ) Status word.   | 0000 hex     |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                       | 0000...FFFF hex | Status word   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| <b>54 FBA DATA IN</b> |                 | Data from the drive to the fieldbus controller through a fieldbus adapter. See chapter <i>Fieldbus control with fieldbus adapter</i> on page 339.<br><b>Note:</b> In adapter module the parameter group number is 3.  |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5401                  | FBA DATA IN 1   | Selects data to be transferred from the drive to the fieldbus controller.   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                       | 0               | Not in use  |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                       | 1...6           | Control and status data words <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>5401 setting</th> <th>Data word</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Control word</td> </tr> <tr> <td>2</td> <td>REF1</td> </tr> <tr> <td>3</td> <td>REF2</td> </tr> <tr> <td>4</td> <td>Status word</td> </tr> <tr> <td>5</td> <td>Actual value 1</td> </tr> <tr> <td>6</td> <td>Actual value 2</td> </tr> </tbody> </table> | 5401 setting | Data word | 1 | Control word | 2 | REF1 | 3 | REF2 | 4 | Status word | 5 | Actual value 1 | 6 | Actual value 2 |  |
| 5401 setting          | Data word       |   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 1                     | Control word    |   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 2                     | REF1            |   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 3                     | REF2            |   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 4                     | Status word     |   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5                     | Actual value 1  |   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 6                     | Actual value 2  |   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                       | 101...9999      | Parameter index   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5402                  | FBA DATA IN 2   | See <i>5401 FBA DATA IN 1</i> .   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| ...                   | ...             | ...   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5410                  | FBA DATA IN 10  | See <i>5401 FBA DATA IN 1</i> .   |              |           |   |              |   |      |   |      |   |             |   |                |   |                |  |

| All parameters |                      |  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|----------------|----------------------|--|------------------|-----------|---|--------------|---|------|---|------|---|-------------|---|----------------|---|----------------|--|
| No.            | Name/Value           | Description  | Def/FbEq         |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| <b>55</b>      | <b>FBA DATA OUT</b>  | Data from the fieldbus controller to the drive through a fieldbus adapter. See chapter <i>Fieldbus control with fieldbus adapter</i> on page 339.<br><b>Note:</b> In adapter module the parameter group number is 2.   |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5501           | FBA DATA OUT 1       | Selects data to be transferred from the fieldbus controller to the drive.  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                | 0                    | Not in use   |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                | 1...6                | Control and status data words <table border="1" data-bbox="367 464 908 655"> <thead> <tr> <th>5501 setting</th> <th>Data word</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Control word</td> </tr> <tr> <td>2</td> <td>REF1</td> </tr> <tr> <td>3</td> <td>REF2</td> </tr> <tr> <td>4</td> <td>Status word</td> </tr> <tr> <td>5</td> <td>Actual value 1</td> </tr> <tr> <td>6</td> <td>Actual value 2</td> </tr> </tbody> </table> | 5501 setting     | Data word | 1 | Control word | 2 | REF1 | 3 | REF2 | 4 | Status word | 5 | Actual value 1 | 6 | Actual value 2 |  |
| 5501 setting   | Data word            |  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 1              | Control word         |  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 2              | REF1                 |  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 3              | REF2                 |  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 4              | Status word          |  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5              | Actual value 1       |  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 6              | Actual value 2       |  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                | 101...9999           | Drive parameter  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5502           | FBA DATA OUT 2       | See <i>5501 FBA DATA OUT 1</i> .   |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| ...            | ...                  | ...  |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 5510           | FBA DATA OUT 10      | See <i>5501 FBA DATA OUT 1</i> .   |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| <b>84</b>      | <b>SEQUENCE PROG</b> | Sequence programming. See section <i>Sequence programming</i> on page 169.   |                  |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
| 8401           | SEQ PROG ENABLE      | Enables Sequence programming.<br>If Sequence programming enable signal is lost, the Sequence programming is stopped, Sequence programming state ( <i>0168 SEQ PROG STATE</i> ) is set to 1 and all timers and outputs (RO/TO/AO) are set to zero.  | <i>DISABLE D</i> |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                | DISABLED             | Disabled   | 0                |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                | EXT2                 | Enabled in external control location 2 (EXT2)  | 1                |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                | EXT1                 | Enabled in external control location 1 (EXT1)  | 2                |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                | EXT1&EXT2            | Enabled in external control locations 1 and 2 (EXT1 and EXT2)  | 3                |           |   |              |   |      |   |      |   |             |   |                |   |                |  |
|                | ALWAYS               | Enabled in external control locations 1 and 2 (EXT1 and EXT2) and in local control (LOCAL)   | 4                |           |   |              |   |      |   |      |   |             |   |                |   |                |  |

| All parameters |                |  |                |
|----------------|----------------|--|----------------|
| No.            | Name/Value     | Description  | Def/FbEq       |
| 8402           | SEQ PROG START | <p>Selects the source for the Sequence programming activation signal.</p> <p>When Sequence programming is activated, the programming starts from the previously used state.</p> <p>If Sequence programming activation signal is lost, the Sequence programming is stopped and all timers and outputs (RO/TO/AO) are set to zero. Sequence programming state (<i>0168 SEQ PROG STATE</i>) remains unchanged.</p> <p>If start from the first Sequence programming state is required, the Sequence programming must be reset by parameter <i>8404 SEQ PROG RESET</i>. If start from the first Sequence programming state is always required, reset and start signal sources (<i>8404</i> and <i>8402 SEQ PROG START</i>) must be through the same digital input.</p> <p><b>Note:</b> The drive will not start if no Run enable signal is received (<i>1601 RUN ENABLE</i>).</p> | <i>NOT SEL</i> |
|                | DI1(INV)       | Sequence programming activation through inverted digital input DI1. 0 = active, 1 = inactive.  | -1             |
|                | DI2(INV)       | See selection <i>DI1(INV)</i> .  | -2             |
|                | DI3(INV)       | See selection <i>DI1(INV)</i> .  | -3             |
|                | DI4(INV)       | See selection <i>DI1(INV)</i> .  | -4             |
|                | DI5(INV)       | See selection <i>DI1(INV)</i> .  | -5             |
|                | NOT SEL        | No Sequence programming activation signal  | 0              |
|                | DI1            | Sequence programming activation through digital input DI1. 1 = active, 0 = inactive.   | 1              |
|                | DI2            | See selection <i>DI1</i> .   | 2              |
|                | DI3            | See selection <i>DI1</i> .   | 3              |
|                | DI4            | See selection <i>DI1</i> .   | 4              |
|                | DI5            | See selection <i>DI1</i> .   | 5              |
|                | DRIVE START    | Sequence programming activation at drive start   | 6              |
|                | TIMED FUNC 1   | Sequence programming is activated by timed function 1. See parameter group <i>36 TIMED FUNCTIONS</i> .   | 7              |
|                | TIMED FUNC 2   | See selection <i>TIMED FUNC 1</i> .  | 8              |
|                | TIMED FUNC 3   | See selection <i>TIMED FUNC 1</i> .  | 9              |
|                | TIMED FUNC 4   | See selection <i>TIMED FUNC 1</i> .  | 10             |
|                | RUNNING        | Sequence programming is always active.   | 11             |

| All parameters |                |   |                |
|----------------|----------------|---|----------------|
| No.            | Name/Value     | Description   | Def/FbEq       |
| 8403           | SEQ PROG PAUSE | Selects the source for the Sequence programming pause signal. When Sequence programming pause is activated, all timers and outputs (RO/TO/AO) are frozen. Sequence programming state transition is possible only by parameter <a href="#">8405 SEQ ST FORCE</a> .                 | <i>NOT SEL</i> |
|                | DI1(INV)       | Pause signal through inverted digital input DI1. 0 = active, 1 = inactive.  | -1             |
|                | DI2(INV)       | See selection <a href="#">DI1(INV)</a> .  | -2             |
|                | DI3(INV)       | See selection <a href="#">DI1(INV)</a> .  | -3             |
|                | DI4(INV)       | See selection <a href="#">DI1(INV)</a> .  | -4             |
|                | DI5(INV)       | See selection <a href="#">DI1(INV)</a> .  | -5             |
|                | NOT SEL        | No pause signal   | 0              |
|                | DI1            | Pause signal through digital input DI1. 1 = active, 0 = inactive.   | 1              |
|                | DI2            | See selection <a href="#">DI1</a> .   | 2              |
|                | DI3            | See selection <a href="#">DI1</a> .   | 3              |
|                | DI4            | See selection <a href="#">DI1</a> .   | 4              |
|                | DI5            | See selection <a href="#">DI1</a> .   | 5              |
|                | PAUSED         | Sequence programming pause enabled  | 6              |
| 8404           | SEQ PROG RESET | Selects the source for the Sequence programming reset signal. Sequence programming state ( <a href="#">0168 SEQ PROG STATE</a> ) is set to the first state and all timers and outputs (RO/TO/AO) are set to zero.<br>Reset is possible only when Sequence programming is stopped. | <i>NOT SEL</i> |
|                | DI1(INV)       | Reset through inverted digital input DI1. 0 = active, 1 = inactive.   | -1             |
|                | DI2(INV)       | See selection <a href="#">DI1(INV)</a> .  | -2             |
|                | DI3(INV)       | See selection <a href="#">DI1(INV)</a> .  | -3             |
|                | DI4(INV)       | See selection <a href="#">DI1(INV)</a> .  | -4             |
|                | DI5(INV)       | See selection <a href="#">DI1(INV)</a> .  | -5             |
|                | NOT SEL        | No reset signal   | 0              |
|                | DI1            | Reset through digital input DI1. 1 = active, 0 = inactive.  | 1              |
|                | DI2            | See selection <a href="#">DI1</a> .   | 2              |
|                | DI3            | See selection <a href="#">DI1</a> .   | 3              |
|                | DI4            | See selection <a href="#">DI1</a> .   | 4              |
|                | DI5            | See selection <a href="#">DI1</a> .   | 5              |
|                | RESET          | Reset. After reset parameter value is automatically set to <i>NOT SEL</i> .   | 6              |

| All parameters |                 |  |                |
|----------------|-----------------|--|----------------|
| No.            | Name/Value      | Description  | Def/FbEq       |
| 8405           | SEQ ST FORCE    | Forces the Sequence programming to a selected state.<br><b>Note:</b> State is changed only when Sequence programming is paused by parameter <i>8403 SEQ PROG PAUSE</i> and this parameter is set to the selected state.  | <i>STATE 1</i> |
|                | STATE 1         | State is forced to state 1.  | 1              |
|                | STATE 2         | State is forced to state 2.  | 2              |
|                | STATE 3         | State is forced to state 3.  | 3              |
|                | STATE 4         | State is forced to state 4.  | 4              |
|                | STATE 5         | State is forced to state 5.  | 5              |
|                | STATE 6         | State is forced to state 6.  | 6              |
|                | STATE 7         | State is forced to state 7.  | 7              |
|                | STATE 8         | State is forced to state 8.  | 8              |
| 8406           | SEQ LOGIC VAL 1 | Defines the source for the logic value 1. Logic value 1 is compared to logic value 2 as defined by parameter <i>8407 SEQ LOGIC OPER 1</i> .<br>Logic operation values are used in state transitions. See parameter <i>8425 ST1 TRIG TO ST 2 / 8426 ST1 TRIG TO ST N</i> selection <i>LOGIC VAL</i> . | <i>NOT SEL</i> |
|                | DI1(INV)        | Logic value 1 through inverted digital input DI1   | -1             |
|                | DI2(INV)        | See selection <i>DI1(INV)</i> .  | -2             |
|                | DI3(INV)        | See selection <i>DI1(INV)</i> .  | -3             |
|                | DI4(INV)        | See selection <i>DI1(INV)</i> .  | -4             |
|                | DI5(INV)        | See selection <i>DI1(INV)</i> .  | -5             |
|                | NOT SEL         | No logic value   | 0              |
|                | DI1             | Logic value 1 through digital input DI1  | 1              |
|                | DI2             | See selection <i>DI1</i> .   | 2              |
|                | DI3             | See selection <i>DI1</i> .   | 3              |
|                | DI4             | See selection <i>DI1</i> .   | 4              |
|                | DI5             | See selection <i>DI1</i> .   | 5              |
|                | SUPRV1 OVER     | Logic value according to supervision parameters <i>3201...3203</i> . See parameter group <i>32 SUPERVISION</i> .   | 6              |
|                | SUPRV2 OVER     | Logic value according to supervision parameters <i>3204...3206</i> . See parameter group <i>32 SUPERVISION</i> .   | 7              |
|                | SUPRV3 OVER     | Logic value according to supervision parameters <i>3207...3209</i> . See parameter group <i>32 SUPERVISION</i> .   | 8              |
|                | SUPRV1 UNDER    | See selection <i>SUPRV1 OVER</i> .   | 9              |
|                | SUPRV2 UNDER    | See selection <i>SUPRV2 OVER</i> .   | 10             |

| All parameters |                  |  |                |
|----------------|------------------|--|----------------|
| No.            | Name/Value       | Description  | Def/FbEq       |
|                | SUPRV3 UNDER     | See selection <i>SUPRV3 OVER</i> .   | 11             |
|                | TIMED FUNC 1     | Logic value 1 is activated by timed function 1. See parameter group <i>36 TIMED FUNCTIONS</i> . 1 = timed function active.   | 12             |
|                | TIMED FUNC 2     | See selection <i>TIMED FUNC 1</i> .  | 13             |
|                | TIMED FUNC 3     | See selection <i>TIMED FUNC 1</i> .  | 14             |
|                | TIMED FUNC 4     | See selection <i>TIMED FUNC 1</i> .  | 15             |
| 8407           | SEQ LOGIC OPER 1 | Selects the operation between logic value 1 and 2. Logic operation values are used in state transitions. See parameter <i>8425 ST1 TRIG TO ST 2 / 8426 ST1 TRIG TO ST N</i> selection <i>LOGIC VAL</i> . | <i>NOT SEL</i> |
|                | NOT SEL          | Logic value 1 (no logic comparison)  | 0              |
|                | AND              | Logic function: AND  | 1              |
|                | OR               | Logic function: OR   | 2              |
|                | XOR              | Logic function: XOR  | 3              |
| 8408           | SEQ LOGIC VAL 2  | See parameter <i>8406 SEQ LOGIC VAL 1</i> .  | <i>NOT SEL</i> |
|                |                  | See parameter <i>8406</i> .  |                |
| 8409           | SEQ LOGIC OPER 2 | Selects the operation between logic value 3 and the result of the first logic operation defined by parameter <i>8407 SEQ LOGIC OPER 1</i> .  | <i>NOT SEL</i> |
|                | NOT SEL          | Logic value 2 (no logic comparison)  | 0              |
|                | AND              | Logic function: AND  | 1              |
|                | OR               | Logic function: OR   | 2              |
|                | XOR              | Logic function: XOR  | 3              |
| 8410           | SEQ LOGIC VAL 3  | See parameter <i>8406 SEQ LOGIC VAL 1</i> .  | <i>NOT SEL</i> |
|                |                  | See parameter <i>8406</i> .  |                |
| 8411           | SEQ VAL 1 HIGH   | Defines the high limit for the state change when parameter <i>8425 ST1 TRIG TO ST 2</i> is set to, eg, <i>AI 1 HIGH 1</i> .  | 0.0%           |
|                | 0.0...100.0%     | Value as a percentage  | 1 = 0.1%       |
| 8412           | SEQ VAL 1 LOW    | Defines the low limit for the state change when parameter <i>8425 ST1 TRIG TO ST 2</i> is set to, eg, <i>AI 1 LOW 1</i> .  | 0.0%           |
|                | 0.0...100.0%     | Value as a percentage  | 1 = 0.1%       |
| 8413           | SEQ VAL 2 HIGH   | Defines the high limit for the state change when parameter <i>8425 ST1 TRIG TO ST 2</i> is set to, eg, <i>AI 2 HIGH 1</i> .  | 0.0%           |
|                | 0.0...100.0%     | Value as a percentage  | 1 = 0.1%       |



| All parameters |                  |   |                |
|----------------|------------------|---|----------------|
| No.            | Name/Value       | Description   | Def/FbEq       |
| 8414           | SEQ VAL 2<br>LOW | Defines the low limit for the state change when parameter <i>8425 ST1 TRIG TO ST 2</i> is set to, eg, <i>AI 2 LOW 1</i> .   | 0.0%           |
|                | 0.0...100.0%     | Value as a percentage   | 1 = 0.1%       |
| 8415           | CYCLE CNT<br>LOC | Activates the cycle counter for Sequence programming.<br><b>Example:</b> When parameter is set to <i>ST6 TO NEXT</i> , the cycle count ( <i>0171 SEQ CYCLE CNTR</i> ) increases every time the state changes from state 6 to state 7. | <i>NOT SEL</i> |
|                | NOT SEL          | Disabled  | 0              |
|                | ST1 TO NEXT      | From state 1 to state 2   | 1              |
|                | ST2 TO NEXT      | From state 2 to state 3   | 2              |
|                | ST3 TO NEXT      | From state 3 to state 4   | 3              |
|                | ST4 TO NEXT      | From state 4 to state 5   | 4              |
|                | ST5 TO NEXT      | From state 5 to state 6   | 5              |
|                | ST6 TO NEXT      | From state 6 to state 7   | 6              |
|                | ST7 TO NEXT      | From state 7 to state 8   | 7              |
|                | ST8 TO NEXT      | From state 8 to state 1   | 8              |
|                | ST1 TO N         | From state 1 to state n. State n is defined by parameter <i>8427 ST1 STATE N</i> .  | 9              |
|                | ST2 TO N         | From state 2 to state n. State n is defined by parameter <i>8427 ST1 STATE N</i> .  | 10             |
|                | ST3 TO N         | From state 3 to state n. State n is defined by parameter <i>8427 ST1 STATE N</i> .  | 11             |
|                | ST4 TO N         | From state 4 to state n. State n is defined by parameter <i>8427 ST1 STATE N</i> .  | 12             |
|                | ST5 TO N         | From state 5 to state n. State n is defined by parameter <i>8427 ST1 STATE N</i> .  | 13             |
|                | ST6 TO N         | From state 6 to state n. State n is defined by parameter <i>8427 ST1 STATE N</i> .  | 14             |
|                | ST7 TO N         | From state 7 to state n. State n is defined by parameter <i>8427 ST1 STATE N</i> .  | 15             |
|                | ST8 TO N         | From state 8 to state n. State n is defined by parameter <i>8427 ST1 STATE N</i> .  | 16             |
| 8416           | CYCLE CNT<br>RST | Selects the source for the cycle counter reset signal ( <i>0171 SEQ CYCLE CNTR</i> ).   | <i>NOT SEL</i> |
|                | DI1(INV)         | Reset through inverted digital input DI1. 0 = active, 1 = inactive.   | -1             |
|                | DI2(INV)         | See selection <i>DI1(INV)</i> .   | -2             |
|                | DI3(INV)         | See selection <i>DI1(INV)</i> .   | -3             |
|                | DI4(INV)         | See selection <i>DI1(INV)</i> .   | -4             |
|                | DI5(INV)         | See selection <i>DI1(INV)</i> .   | -5             |

| All parameters |              |  |          |
|----------------|--------------|--|----------|
| No.            | Name/Value   | Description  | Def/FbEq |
|                | NOT SEL      | No reset signal  | 0        |
|                | DI1          | Reset through digital input DI1. 1 = active, 0 = inactive.   | 1        |
|                | DI2          | See selection <i>DI1</i> .   | 2        |
|                | DI3          | See selection <i>DI1</i> .   | 3        |
|                | DI4          | See selection <i>DI1</i> .   | 4        |
|                | DI5          | See selection <i>DI1</i> .   | 5        |
|                | STATE 1      | Reset during state transition to state 1. Counter is reset, when the state has been reached.   | 6        |
|                | STATE 2      | Reset during state transition to state 2. Counter is reset, when the state has been reached.   | 7        |
|                | STATE 3      | Reset during state transition to state 3. Counter is reset, when the state has been reached.   | 8        |
|                | STATE 4      | Reset during state transition to state 4. Counter is reset, when the state has been reached.   | 9        |
|                | STATE 5      | Reset during state transition to state 5. Counter is reset, when the state has been reached.   | 10       |
|                | STATE 6      | Reset during state transition to state 6. Counter is reset, when the state has been reached.   | 11       |
|                | STATE 7      | Reset during state transition to state 7. Counter is reset, when the state has been reached.   | 12       |
|                | STATE 8      | Reset during state transition to state 8. Counter is reset, when the state has been reached.   | 13       |
|                | SEQ PROG RST | Reset signal source defined by parameter <i>8404 SEQ PROG RESET</i>  | 14       |
| 8420           | ST1 REF SEL  | Selects the source for the Sequence programming state 1 reference. Parameter is used when parameter <i>1103 REF1 SELECT</i> or <i>1106 REF2 SELECT</i> is set to <i>SEQ PROG / AI1+SEQ PROG / AI2+SEQ PROG</i> .<br><b>Note:</b> Constant speeds in group <i>12 CONSTANT SPEEDS</i> overwrite the selected Sequence programming reference. | 0.0%     |
|                | COMM         | <i>0136 COMM VALUE 2</i> . For scaling, see <i>Fieldbus reference scaling</i> on page <i>322</i> .   | -1.3     |
|                | AI1/AI2      | Reference is calculated with the following equation:<br>$REF = AI1(\%) \cdot (50\% / AI2(\%))$   | -1.2     |
|                | AI1-AI2      | Reference is calculated with the following equation:<br>$REF = AI1(\%) + 50\% - AI2(\%)$   | -1.1     |
|                | AI1*AI2      | Reference is calculated with the following equation:<br>$REF = AI1(\%) \cdot (AI2(\%) / 50\%)$   | -1.0     |
|                | AI1+AI2      | Reference is calculated with the following equation:<br>$REF = AI1(\%) + AI2(\%) - 50\%$   | -0.9     |

| All parameters |                              |   |                            |
|----------------|------------------------------|---|----------------------------|
| No.            | Name/Value                   | Description   | Def/FbEq                   |
|                | DI4U,5D                      | Digital input DI4: Reference increase. Digital input DI5: Reference decrease.   | -0.8                       |
|                | DI3U,4D                      | Digital input DI3: Reference increase. Digital input DI4: Reference decrease.   | -0.7                       |
|                | DI3U,4D(R)                   | Digital input DI3: Reference increase. Digital input DI4: Reference decrease.   | -0.6                       |
|                | AI2 JOY                      | Analog input AI2 as joystick. The minimum input signal runs the motor at the maximum reference in the reverse direction, the maximum input at the maximum reference in the forward direction. Minimum and maximum references are defined by parameters <a href="#">1104 REF1 MIN</a> and <a href="#">1105 REF1 MAX</a> . See parameter <a href="#">1103 REF1 SELECT</a> selection <a href="#">AI1/JOYST</a> for more information. | -0.5                       |
|                | AI1 JOY                      | See selection <a href="#">AI2 JOY</a> .   | -0.4                       |
|                | AI2                          | Analog input AI2  | -0.3                       |
|                | AI1                          | Analog input AI1  | -0.2                       |
|                | KEYPAD                       | Control panel   | -0.1                       |
|                | 0.0 ...100.0%                | Constant speed  | 1 = 0.1%                   |
| 8421           | ST1 COMMANDS                 | Selects the start, stop and direction for state 1. Parameter <a href="#">1002 EXT2 COMMANDS</a> must be set to <a href="#">SEQ PROG</a> .<br><b>Note:</b> If change of direction of rotation is required, parameter <a href="#">1003 DIRECTION</a> must be set to <a href="#">REQUEST</a> .   | <a href="#">DRIVE STOP</a> |
|                | DRIVE STOP                   | Drive coast or ramps to stop depending on parameter <a href="#">2102 STOP FUNCTION</a> setting.   | 0                          |
|                | START FRW                    | Direction or rotation is fixed to forward. If the drive is not already running, it is started according to parameter <a href="#">2101 START FUNCTION</a> settings.  | 1                          |
|                | START REV                    | Direction or rotation is fixed to reverse. If the drive is not already running, it is started according to parameter <a href="#">2101 START FUNCTION</a> settings.  | 2                          |
| 8422           | ST1 RAMP                     | Selects the acceleration/deceleration ramp time for Sequence programming state 1, ie, defines the rate of the reference change.   | 0.0 s                      |
|                | -0.2/-0.1/<br>0.0...1800.0 s | Time<br>When value is set to -0.2, ramp pair 2 is used. Ramp pair 2 is defined by parameters <a href="#">2205...2207</a> .<br>When value is set to -0.1, ramp pair 1 is used. Ramp pair 1 is defined by parameters <a href="#">2202...2204</a> .<br>With ramp pair 1/2, parameter <a href="#">2201 ACC/DEC 1/2 SEL</a> must be set to <a href="#">SEQ PROG</a> . See also parameters <a href="#">2202...2207</a> .                | 1 = 0.1 s                  |

| All parameters |                   |   |          |
|----------------|-------------------|---|----------|
| No.            | Name/Value        | Description   | Def/FbEq |
| 8423           | ST1 OUT CONTROL   | <p>Selects the relay, transistor and analog output control for Sequence programming state 1.</p> <p>The relay/transistor output control must be activated by setting parameter <i>1401 RELAY OUTPUT 1 / 1805 DO SIGNAL</i> to <i>SEQ PROG</i>. Analog output control must be activated by parameter group <i>15 ANALOG OUTPUTS</i>.</p> <p>Analog output control values can be monitored with signal <i>0170 SEQ PROG AO VAL</i>.</p> | AO=0     |
|                | RO2=RO3<br>=RO4=1 | Relay outputs are energized (closed). Effective only with the MREL-01 option.   | -1.5     |
|                | RO2=1, RO3=1      | Relay outputs are energized (closed). Effective only with the MREL-01 option.   | -1.4     |
|                | RO4 = 1           | Relay output is energized (closed). Effective only with the MREL-01 option.   | -1.3     |
|                | RO3 = 1           | Relay output is energized (closed). Effective only with the MREL-01 option.   | -1.2     |
|                | RO2 = 1           | Relay output is energized (closed). Effective only with the MREL-01 option.   | -1.1     |
|                | RST CNT NEXT      | Reserved for Enhanced Sequence Program (ESP).   | -1.0     |
|                | RST CNT ENT       | Reserved for ESP.   | -0.8     |
|                | RST CNT STNX      | Reserved for ESP.   | -0.9     |
|                | R=0,D=1,AO=0      | Relay output is de-energized (opened), transistor output is energized and analog output is cleared.   | -0.7     |
|                | R=1,D=0,AO=0      | Relay output is energized (closed), transistor output is de-energized and analog output is cleared.   | -0.6     |
|                | R=0,D=0,AO=0      | Relay and transistor outputs are de-energized (opened) and analog output value is set to zero.  | -0.5     |
|                | RO=0,DO=0         | Relay and transistor outputs are de-energized (opened) and analog output control is frozen to the previously set value.   | -0.4     |
|                | RO=1,DO=1         | Relay and transistor outputs are energized (closed) and analog output control is frozen to the previously set value.  | -0.3     |
|                | DO=1              | Transistor output is energized (closed) and relay output is de-energized. Analog output control is frozen to the previously set value.  | -0.2     |
|                | RO=1              | Transistor output is de-energized (opened) and relay output is energized. Analog output control is frozen to the previously set value.  | -0.1     |

| All parameters |                  |  |                |
|----------------|------------------|--|----------------|
| No.            | Name/Value       | Description  | Def/FbEq       |
|                | AO=0             | Analog output value is set to zero. Relay and transistor outputs are frozen to the previously set value.   | 0.0            |
|                | 0.1...100.0%     | Value written to signal <i>0170 SEQ PROG AO VAL</i> . Value can be connected to control analog output AO by setting parameter <i>1501 AO1 CONTENT SEL</i> value to 170 (ie, signal <i>0170 SEQ PROG AO VAL</i> ). AO value is frozen to this value until it is zeroed. |                |
| 8424           | ST1 CHANGE DLY   | Defines the delay time for state 1. When delay has elapsed, state transition is allowed. See parameters <i>8425 ST1 TRIG TO ST 2</i> and <i>8426 ST1 TRIG TO ST N</i> .  | 0.0 s          |
|                | 0.0...6553.5 s   | Delay time   | 1 = 0.1 s      |
| 8425           | ST1 TRIG TO ST 2 | Selects the source for the trigger signal which changes the state from state 1 to state 2.<br><b>Note:</b> State change to state N ( <i>8426 ST1 TRIG TO ST N</i> ) has a higher priority than state change to the next state ( <i>8425 ST1 TRIG TO ST 2</i> ).        | <i>NOT SEL</i> |
|                | DI1(INV)         | Trigger through inverted digital input DI1. 0 = active, 1 = inactive.  | -1             |
|                | DI2(INV)         | See selection <i>DI1(INV)</i> .  | -2             |
|                | DI3(INV)         | See selection <i>DI1(INV)</i> .  | -3             |
|                | DI4(INV)         | See selection <i>DI1(INV)</i> .  | -4             |
|                | DI5(INV)         | See selection <i>DI1(INV)</i> .  | -5             |
|                | NOT SEL          | No trigger signal. If parameter <i>8426 ST1 TRIG TO ST N</i> setting is also <i>NOT SEL</i> , the state is frozen and can be reset only with parameter <i>8402 SEQ PROG START</i> .  | 0              |
|                | DI1              | Trigger through digital input DI1. 1 = active, 0 = inactive.   | 1              |
|                | DI2              | See selection <i>DI1</i> .   | 2              |
|                | DI3              | See selection <i>DI1</i> .   | 3              |
|                | DI4              | See selection <i>DI1</i> .   | 4              |
|                | DI5              | See selection <i>DI1</i> .   | 5              |
|                | AI 1 LOW 1       | State change when AI1 value < par. <i>8412 SEQ VAL 1 LOW</i> value.  | 6              |
|                | AI 1 HIGH 1      | State change when AI1 value > par. <i>8411 SEQ VAL 1 HIGH</i> value.   | 7              |
|                | AI 2 LOW 1       | State change when AI2 value < par. <i>8412 SEQ VAL 1 LOW</i> value.  | 8              |
|                | AI 2 HIGH 1      | State change when AI2 value > par. <i>8411 SEQ VAL 1 HIGH</i> value.   | 9              |
|                | AI1 OR 2 LO1     | State change when AI1 or AI2 value < par. <i>8412 SEQ VAL 1 LOW</i> value.   | 10             |

| All parameters |              |  |          |
|----------------|--------------|--|----------|
| No.            | Name/Value   | Description  | Def/FbEq |
|                | AI1LO1AI2HI1 | State change when AI1 value < par. <i>8412 SEQ VAL 1 LOW</i> value and AI2 value > par. <i>8411 SEQ VAL 1 HIGH</i> value.                            | 11       |
|                | AI1LO1 ORDI5 | State change when AI1 value < par. <i>8412 SEQ VAL 1 LOW</i> value or when DI5 is active.  | 12       |
|                | AI2HI1 ORDI5 | State change when AI2 value > par. <i>8411 SEQ VAL 1 HIGH</i> value or when DI5 is active.   | 13       |
|                | AI 1 LOW 2   | State change when AI1 value < par. <i>8414 SEQ VAL 2 LOW</i> value.  | 14       |
|                | AI 1 HIGH 2  | State change when AI1 value > par. <i>8413 SEQ VAL 2 HIGH</i> value.   | 15       |
|                | AI 2 LOW 2   | State change when AI2 value < par. <i>8414 SEQ VAL 2 LOW</i> value.  | 16       |
|                | AI 2 HIGH 2  | State change when AI2 value > par. <i>8413 SEQ VAL 2 HIGH</i> value.   | 17       |
|                | AI1 OR 2 LO2 | State change when AI1 or AI2 value < par. <i>8414 SEQ VAL 2 LOW</i> value.   | 18       |
|                | AI1LO2AI2HI2 | State change when AI1 value < par. <i>8414 SEQ VAL 2 LOW</i> value and AI2 value > par. <i>8413 SEQ VAL 2 HIGH</i> value.                            | 19       |
|                | AI1LO2 ORDI5 | State change when AI1 value < par. <i>8414 SEQ VAL 2 LOW</i> value or when DI5 is active.  | 20       |
|                | AI2HI2 ORDI5 | State change when AI2 value > par. <i>8413 SEQ VAL 2 HIGH</i> value or when DI5 is active.   | 21       |
|                | TIMED FUNC 1 | Trigger with timed function 1. See parameter group <i>36 TIMED FUNCTIONS</i> .   | 22       |
|                | TIMED FUNC 2 | See selection <i>TIMED FUNC 1</i> .  | 23       |
|                | TIMED FUNC 3 | See selection <i>TIMED FUNC 1</i> .  | 24       |
|                | TIMED FUNC 4 | See selection <i>TIMED FUNC 1</i> .  | 25       |
|                | CHANGE DLY   | State change after delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed.   | 26       |
|                | DI1 OR DELAY | State change after DI1 activation or after delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed.                                   | 27       |
|                | DI2 OR DELAY | See selection <i>DI1 OR DELAY</i> .  | 28       |
|                | DI3 OR DELAY | See selection <i>DI1 OR DELAY</i> .  | 29       |
|                | DI4 OR DELAY | See selection <i>DI1 OR DELAY</i> .  | 30       |
|                | DI5 OR DELAY | See selection <i>DI1 OR DELAY</i> .  | 31       |
|                | AI1HI1 ORDLY | State change when AI1 value > par. <i>8411 SEQ VAL 1 HIGH</i> value or after delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed. | 32       |
|                | AI2LO1 ORDLY | State change when AI1 value < par. <i>8412 SEQ VAL 1 LOW</i> value or after delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed.  | 33       |

| All parameters |              |  |          |
|----------------|--------------|--|----------|
| No.            | Name/Value   | Description  | Def/FbEq |
|                | AI1HI2 ORDLY | State change when AI1 value > par. <a href="#">8413 SEQ VAL 2 HIGH</a> value or after delay time defined by parameter <a href="#">8424 ST1 CHANGE DLY</a> has elapsed.   | 34       |
|                | AI2LO2 ORDLY | State change when AI2 value < par. <a href="#">8414 SEQ VAL 2 LOW</a> value or after delay time defined by parameter <a href="#">8424 ST1 CHANGE DLY</a> has elapsed.  | 35       |
|                | SUPRV1 OVER  | Logic value according to supervision parameters <a href="#">3201...3203</a> . See parameter group <a href="#">32 SUPERVISION</a> .   | 36       |
|                | SUPRV2 OVER  | Logic value according to supervision parameters <a href="#">3204...3206</a> . See parameter group <a href="#">32 SUPERVISION</a> .   | 37       |
|                | SUPRV3 OVER  | Logic value according to supervision parameters <a href="#">3207...3209</a> . See parameter group <a href="#">32 SUPERVISION</a> .   | 38       |
|                | SUPRV1 UNDER | See selection <a href="#">SUPRV1 OVER</a> .  | 39       |
|                | SUPRV2 UNDER | See selection <a href="#">SUPRV2 OVER</a> .  | 40       |
|                | SUPRV3 UNDER | See selection <a href="#">SUPRV3 OVER</a> .  | 41       |
|                | SPV1OVRORDLY | State change according to supervision parameters <a href="#">3201...3203</a> or when delay time defined by parameter <a href="#">8424 ST1 CHANGE DLY</a> has elapsed. See parameter group <a href="#">32 SUPERVISION</a> . | 42       |
|                | SPV2OVRORDLY | State change according to supervision parameters <a href="#">3204...3206</a> or when delay time defined by parameter <a href="#">8424 ST1 CHANGE DLY</a> has elapsed. See parameter group <a href="#">32 SUPERVISION</a> . | 43       |
|                | SPV3OVRORDLY | State change according to supervision parameters <a href="#">3207...3209</a> or when delay time defined by parameter <a href="#">8424 ST1 CHANGE DLY</a> has elapsed. See parameter group <a href="#">32 SUPERVISION</a> . | 44       |
|                | SPV1UNDORDLY | See selection <a href="#">SPV1OVRORDLY</a> .   | 45       |
|                | SPV2UNDORDLY | See selection <a href="#">SPV2OVRORDLY</a> .   | 46       |
|                | SPV3UNDORDLY | See selection <a href="#">SPV3OVRORDLY</a> .   | 47       |
|                | CNTR OVER    | State change when counter value exceeds the limit defined by par. <a href="#">1905 COUNTER LIMIT</a> . See parameters <a href="#">1904...1911</a> .  | 48       |
|                | CNTR UNDER   | State change when counter value is below the limit defined by par. <a href="#">1905 COUNTER LIMIT</a> . See parameters <a href="#">1904...1911</a> .   | 49       |
|                | LOGIC VAL    | State change according to logic operation defined by parameters <a href="#">8406...8410</a>  | 50       |

| All parameters |              |   |          |
|----------------|--------------|---|----------|
| No.            | Name/Value   | Description   | Def/FbEq |
|                | ENTER SETPNT | State change when drive output frequency/speed enters the reference area (ie, the difference is less than or equal to 4% of the maximum reference).                           | 51       |
|                | AT SETPOINT  | State change when drive output frequency/speed equals the reference value (= is within tolerance limits, ie, the error is less than or equal to 1% of the maximum reference). | 52       |
|                | AI1 L1 & DI5 | State change when AI1 value < par. <i>8412 SEQ VAL 1 LOW</i> and when DI5 is active.  | 53       |
|                | AI2 L2 & DI5 | State change when AI2 value < par. <i>8414 SEQ VAL 2 LOW</i> value and when DI5 is active.  | 54       |
|                | AI1 H1 & DI5 | State change when AI1 value > par. <i>8411 SEQ VAL 1 HIGH</i> value and when DI5 is active.   | 55       |
|                | AI2 H2 & DI5 | State change when AI2 value > par. <i>8413 SEQ VAL 2 HIGH</i> value and when DI5 is active.   | 56       |
|                | AI1 L1 & DI4 | State change when AI1 value < par. <i>8412 SEQ VAL 1 LOW</i> value and when DI4 is active.  | 57       |
|                | AI2 L2 & DI4 | State change when AI2 value < par. <i>8414 SEQ VAL 2 LOW</i> value and when DI4 is active.  | 58       |
|                | AI1 H1 & DI4 | State change when AI1 value > par. <i>8411 SEQ VAL 1 HIGH</i> value and when DI4 is active.   | 59       |
|                | AI2 H2 & DI4 | State change when AI2 value > par. <i>8413 SEQ VAL 2 HIGH</i> value and when DI4 is active.   | 60       |
|                | DLY AND DI1  | State change when delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed and DI1 is active.   | 61       |
|                | DLY AND DI2  | State change when delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed and DI2 is active.   | 62       |
|                | DLY AND DI3  | State change when delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed and DI3 is active.   | 63       |
|                | DLY AND DI4  | State change when delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed and DI4 is active.   | 64       |
|                | DLY AND DI5  | State change when delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed and DI5 is active.   | 65       |
|                | DLY & AI2 H2 | State change when delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed and AI2 value > par. <i>8413 SEQ VAL 2 HIGH</i> value.                               | 66       |
|                | DLY & AI2 L2 | State change when delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed and AI2 value < par. <i>8414 SEQ VAL 2 LOW</i> value.                                | 67       |
|                | DLY & AI1 H1 | State change when delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed and AI1 value > par. <i>8411 SEQ VAL 1 HIGH</i> value.                               | 68       |




| All parameters |                  |   |                |
|----------------|------------------|---|----------------|
| No.            | Name/Value       | Description   | Def/FbEq       |
|                | DLY & AI1 L1     | State change when delay time defined by parameter <i>8424 ST1 CHANGE DLY</i> has elapsed and AI1 value < par. <i>8412 SEQ VAL 1 LOW</i> value.  | 69             |
|                | COMM VAL1 #0     | <i>0135 COMM VALUE 1</i> bit 0. 1 = state change.   | 70             |
|                | COMM VAL1 #1     | <i>0135 COMM VALUE 1</i> bit 1. 1 = state change.   | 71             |
|                | COMM VAL1 #2     | <i>0135 COMM VALUE 1</i> bit 2. 1 = state change.   | 72             |
|                | COMM VAL1 #3     | <i>0135 COMM VALUE 1</i> bit 3. 1 = state change.   | 73             |
|                | COMM VAL1 #4     | <i>0135 COMM VALUE 1</i> bit 4. 1 = state change.   | 74             |
|                | COMM VAL1 #5     | <i>0135 COMM VALUE 1</i> bit 5. 1 = state change.   | 75             |
|                | COMM VAL1 #6     | <i>0135 COMM VALUE 1</i> bit 6. 1 = state change.   | 76             |
|                | COMM VAL1 #7     | <i>0135 COMM VALUE 1</i> bit 7. 1 = state change.   | 77             |
|                | AI2H2DI4SV10     | State change according to supervision parameters <i>3201...3203</i> when AI2 value > par. <i>8413 SEQ VAL 2 HIGH</i> value and DI4 is active.   | 78             |
|                | AI2H2DI5SV10     | State change according to supervision parameters <i>3201...3203</i> when AI2 value > par. <i>8413 SEQ VAL 2 HIGH</i> value and DI5 is active.   | 79             |
|                | STO              | State change when STO (Safe torque off) has been triggered.   | 80             |
|                | STO(-1)          | State change when STO (Safe torque off) becomes inactive and the drive operates normally.   | 81             |
| 8426           | ST1 TRIG TO ST N | Selects the source for the trigger signal which changes the state from state 1 to state N. State N is defined with parameter <i>8427 ST1 STATE N</i> .<br><b>Note:</b> State change to state N ( <i>8426 ST1 TRIG TO ST N</i> ) has a higher priority than state change to the next state ( <i>8425 ST1 TRIG TO ST 2</i> ). | <i>NOT SEL</i> |
|                |                  | See parameter <i>8425 ST1 TRIG TO ST 2</i> .  |                |
| 8427           | ST1 STATE N      | Defines the state N. See parameter <i>8426 ST1 TRIG TO ST N</i> .   | <i>STATE 1</i> |
|                | STATE 1          | State 1   | 1              |
|                | STATE 2          | State 2   | 2              |
|                | STATE 3          | State 3   | 3              |
|                | STATE 4          | State 4   | 4              |
|                | STATE 5          | State 5   | 5              |


| All parameters          |               |   |                |
|-------------------------|---------------|---|----------------|
| No.                     | Name/Value    | Description   | Def/FbEq       |
|                         | STATE 6       | State 6   | 6              |
|                         | STATE 7       | State 7   | 7              |
|                         | STATE 8       | State 8   | 8              |
| 8430                    | ST2 REF SEL   | See parameters <a href="#">8420...8427</a> .  |                |
| ...                     |               |   |                |
| 8497                    | ST8 STATE N   |   |                |
| <b>98 OPTIONS</b>       |               | External serial communication activation  |                |
| 9802                    | COMM PROT SEL | Activates the external serial communication and selects the interface.  | <i>NOT SEL</i> |
|                         | NOT SEL       | No communication  | 0              |
|                         | STD MODBUS    | Embedded fieldbus. Interface: EIA-485 provided by optional FMBA-01 Modbus adapter connected to drive terminal X3. See chapter <a href="#">Fieldbus control with embedded fieldbus</a> on page <a href="#">313</a> .                                     | 1              |
|                         | EXT FBA       | The drive communicates through a fieldbus adapter module connected to drive terminal X3. See also parameter group <a href="#">51 EXT COMM MODULE</a> . See chapter <a href="#">Fieldbus control with fieldbus adapter</a> on page <a href="#">339</a> . | 4              |
|                         | MODBUS RS232  | Embedded fieldbus. Interface: RS-232 (ie, control panel connector). See chapter <a href="#">Fieldbus control with fieldbus adapter</a> on page <a href="#">339</a> .  | 10             |
| <b>99 START-UP DATA</b> |               | Language selection. Definition of motor set-up data.  |                |
| 9901                    | LANGUAGE      | Selects the display language used on the assistant control panel.<br><b>Note:</b> With the ACS-CP-D assistant control panel, the following languages are available: English (0), Chinese (1), Korean (2) and Japanese (3).                              | <i>ENGLISH</i> |
|                         | ENGLISH       | British English   | 0              |
|                         | ENGLISH (AM)  | American English  | 1              |
|                         | DEUTSCH       | German  | 2              |
|                         | ITALIANO      | Italian   | 3              |
|                         | ESPAÑOL       | Spanish   | 4              |
|                         | PORTUGUES     | Portuguese  | 5              |
|                         | NEDERLANDS    | Dutch   | 6              |
|                         | FRANÇAIS      | French  | 7              |
|                         | DANSK         | Danish  | 8              |
|                         | SUOMI         | Finnish   | 9              |
|                         | SVENSKA       | Swedish   | 10             |
|                         | RUSSKI        | Russian   | 11             |

| All parameters |              |   |               |
|----------------|--------------|---|---------------|
| No.            | Name/Value   | Description   | Def/FbEq      |
|                | POLSKI       | Polish  | 12            |
|                | TÜRKÇE       | Turkish   | 13            |
|                | CZECH        | Czech   | 14            |
|                | MAGYAR       | Hungarian   | 15            |
|                | ELLINIKA     | Greek   | 16            |
|                | CHINESE      | Chinese   | 17            |
|                | KOREAN       | Korean  | 18            |
|                | JAPANESE     | Japanese  | 19            |
| 9902           | APPLIC MACRO | Selects the application macro. See chapter <i>Application macros</i> on page 107.   | ABB STANDAR D |
|                | ABB STANDARD | Standard macro for constant speed applications  | 1             |
|                | 3-WIRE       | 3-wire macro for constant speed applications  | 2             |
|                | ALTERNATE    | Alternate macro for start forward and start reverse applications  | 3             |
|                | MOTOR POT    | Motor potentiometer macro for digital signal speed control applications   | 4             |
|                | HAND/AUTO    | Hand/Auto macro to be used when two control devices are connected to the drive: <ul style="list-style-type: none"> <li>• Device 1 communicates through the interface defined by external control location EXT1.</li> <li>• Device 2 communicates through the interface defined by external control location EXT2.</li> </ul> EXT1 or EXT2 is active at a time. Switching between EXT1/2 through digital input.        | 5             |
|                | PID CONTROL  | PID control. For applications in which the drive controls a process value, eg, pressure control by the drive running the pressure boost pump. Measured pressure and the pressure reference are connected to the drive.  | 6             |
|                | TORQUE CTRL  | Torque control macro  | 8             |
|                | AC500 MODBUS | AC500 PLC macro. See section <i>AC500 Modbus macro</i> on page 117.   | 10            |
|                | LOAD FD SET  | FlashDrop parameter values as defined by the FlashDrop file. Parameter view is selected by parameter 1611 <i>PARAMETER VIEW</i> .<br>FlashDrop is an optional device for fast copying of parameters to unpowered drives. FlashDrop allows easy customization of the parameter list, eg, selected parameters can be hidden. For more information, see <i>MFDT-01 FlashDrop user's manual</i> (3AFE68591074 [English]). | 31            |

| All parameters |                    |   |                 |
|----------------|--------------------|---|-----------------|
| No.            | Name/Value         | Description   | Def/FbEq        |
|                | USER S1<br>LOAD    | User 1 macro loaded into use. Before loading, check that the saved parameter settings and the motor model are suitable for the application.   | 0               |
|                | USER S1<br>SAVE    | Save User 1 macro. Stores the current parameter settings and the motor model.   | -1              |
|                | USER S2<br>LOAD    | User 2 macro loaded into use. Before loading, check that the saved parameter settings and the motor model are suitable for the application.   | -2              |
|                | USER S2<br>SAVE    | Save User 2 macro. Stores the current parameter settings and the motor model.   | -3              |
|                | USER S3<br>LOAD    | User 3 macro loaded into use. Before loading, check that the saved parameter settings and the motor model are suitable for the application.   | -4              |
|                | USER S3<br>SAVE    | Save User 3 macro. Stores the current parameter settings and the motor model.   | -5              |
| 9903           | MOTOR TYPE         | Selects the motor type.<br>Cannot be changed while the drive is running.  | AM              |
|                | AM                 | Asynchronous motor. Three-phase AC voltage-supplied induction motor with squirrel cage rotor.   | 1               |
|                | PMSM               | Permanent magnet synchronous motor. Three-phase AC voltage-supplied synchronous motor with permanent magnet rotor and sinusoidal back emf voltage.  | 2               |
| 9904           | MOTOR CTRL<br>MODE | Selects the motor control mode.   | SCALAR:<br>FREQ |
|                | VECTOR:<br>SPEED   | Sensorless vector control mode.<br>Reference 1 = speed reference in rpm.<br>Reference 2 = speed reference as a percentage. 100% is the absolute maximum speed, equal to the value of parameter <i>2002 MAXIMUM SPEED</i> (or <i>2001 MINIMUM SPEED</i> if the absolute value of the minimum speed is greater than the maximum speed value). | 1               |
|                | VECTOR:<br>TORQ    | Vector control mode.<br>Reference 1 = speed reference in rpm.<br>Reference 2 = torque reference as a percentage. 100% equals nominal torque.  | 2               |
|                | SCALAR:<br>FREQ    | Scalar control mode.<br>Reference 1 = frequency reference in Hz.<br>Reference 2 = frequency reference as a percentage. 100% is the absolute maximum frequency, equal to the value of parameter <i>2008 MAXIMUM FREQ</i> (or <i>2007 MINIMUM FREQ</i> if the absolute value of the minimum speed is greater than the maximum speed value).   | 3               |

### All parameters
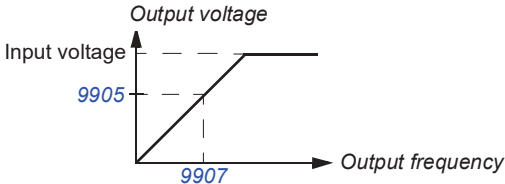
| No.  | Name/Value   | Description   | Def/FbEq  |
|------|--|---|---|
| 9905 | MOTOR NOM VOLT   | <p>Defines the nominal motor voltage. For asynchronous motors, must be equal to the value on the motor rating plate.</p> <p>For permanent magnet synchronous motors, the nominal voltage is the back emf voltage at nominal speed.</p> <p>If the voltage is given as voltage per rpm, eg, 60 V per 1000 rpm, the voltage for 3000 rpm nominal speed is <math>3 \cdot 60 \text{ V} = 180 \text{ V}</math>.</p> <p>The drive cannot supply the motor with a voltage greater than the input power voltage.</p> <p>Note that the output voltage is not limited by the nominal motor voltage but increased linearly up to the value of the input voltage.</p> <div style="text-align: center;">  </div> <p><b>⚠ WARNING!</b> The stress on the motor insulations depends on the drive supply voltage. This applies also when the motor voltage rating is lower than the rating of the drive and the supply voltage of the drive. The rms voltage can be limited to motor nominal voltage by setting the maximum frequency of the drive (parameter 2008) to the motor nominal frequency.</p> | <p>200 V units:<br/>230 V<br/>400 V<br/>E units:<br/>400 V<br/>400 V<br/>U units:<br/>460 V</p> |
|      | <p>200 V units:<br/>46...345 V<br/>400 V E units:<br/>80...600 V<br/>400 V U units:<br/>92...690 V</p> | Voltage.  | $1 = 1 \text{ V}$   |
| 9906 | MOTOR NOM CURR   | Defines the nominal motor current. Must be equal to the value on the motor rating plate.  | $I_{2N}$  |
|      | $0.2...2.0 \cdot I_{2N}$   | Current   | $1 = 0.1 \text{ A}$   |
| 9907 | MOTOR NOM FREQ   | Defines the nominal motor frequency, ie, the frequency at which the output voltage equals the motor nominal voltage:<br>Field weakening point = Nom. frequency · Supply voltage / Motor nom. voltage  | E: 50.0 Hz<br>U: 60.0 Hz  |
|      | 0.0...599.0 Hz   | Frequency   | $1 = 0.1 \text{ Hz}$  |
| 9908 | MOTOR NOM SPEED  | Defines the nominal motor speed. Must be equal to the value on the motor rating plate.  | Type dependent  |
|      | 50...30000 rpm   | Speed   | $1 = 1 \text{ rpm}$   |

| All parameters |                         |  |                           |
|----------------|-------------------------|--|---------------------------|
| No.            | Name/Value              | Description  | Def/FbEq                  |
| 9909           | MOTOR NOM POWER         | Defines the nominal motor power. Must equal the value on the motor rating plate.   | $P_N$                     |
|                | 0.2...3.0 ·<br>$P_N$ kW | Power  | 1 =<br>0.1 kW /<br>0.1 hp |
| 9910           | ID RUN                  | This parameter controls a self-calibration process called the Motor ID run. During this process, the drive operates the motor and makes measurements to identify motor characteristics and create a model used for internal calculations.  | OFF/IDM<br>AGN            |
|                | OFF/IDMAGN              | The Motor ID run process is not run. Identification magnetization is performed, depending on parameter <b>9904 MOTOR CTRL MODE</b> . In identification magnetization, the motor model is calculated at first start by magnetizing the motor for 10 to 15 s at zero speed (motor not rotating, except that a permanent magnet synchronous motor can rotate a fraction of a revolution). The model is recalculated always at start after motor parameter changes. <ul style="list-style-type: none"> <li>Parameter <b>9904</b> = 1 (<b>VECTOR: SPEED</b>) or 2 (<b>VECTOR: TORQ</b>): Identification magnetization is performed.</li> <li>Parameter <b>9904</b> = 3 (<b>SCALAR: FREQ</b>): Identification magnetization is not performed.</li> </ul>   | 0                         |
|                | ON                      | ID run. Guarantees the best possible control accuracy. The ID run takes about one minute. An ID run is especially effective when: <ul style="list-style-type: none"> <li>vector control mode is used (parameter <b>9904</b> = 1 [<b>VECTOR: SPEED</b>] or 2 [<b>VECTOR: TORQ</b>]), and</li> <li>operation point is near zero speed and/or</li> <li>operation requires a torque range above the motor nominal torque, over a wide speed range, and without any measured speed feedback (ie, without a pulse encoder).</li> </ul> <p><b>Note:</b> The motor must be de-coupled from the driven equipment.</p> <p><b>Note:</b> Check the direction of rotation of the motor before starting the ID run. During the run, the motor will rotate in the forward direction.</p> <p><b>Note:</b> If motor parameters are changed after ID run, repeat the ID run.</p> <p> <b>WARNING!</b> The motor will run at up to approximately 50...80% of the nominal speed during the ID run. ENSURE THAT IT IS SAFE TO RUN THE MOTOR BEFORE PERFORMING THE ID RUN!</p> | 1                         |

| All parameters |                  |  |                |
|----------------|------------------|--|----------------|
| No.            | Name/Value       | Description  | Def/FbEq       |
| 9912           | MOTOR NOM TORQUE | Calculated motor nominal torque in N·m (calculation is based on parameter <i>9909 MOTOR NOM POWER</i> and <i>9908 MOTOR NOM SPEED</i> values).   | 0              |
|                | 0...3000.0 N·m   | Read-only  | 1 =<br>0.1 N·m |
| 9913           | MOTOR POLE PAIRS | Calculated motor pole pair number (calculation is based on parameter <i>9907 MOTOR NOM FREQ</i> and <i>9908 MOTOR NOM SPEED</i> values).   | 0              |
|                | -                | Read-only  | 1 = 1          |
| 9914           | PHASE INVERSION  | Inverts two phases in the motor cable. This changes the direction of the motor rotation without having to exchange the positions of two motor cable phase conductors at the drive output terminals or at the motor connection box. | <i>NO</i>      |
|                | NO               | Phases not inverted  | 0              |
|                | YES              | Phases inverted  | 1              |
| 9915           | MOTOR COS PHI    | When set to 0, an estimated cos phi value is used.   | 0              |
|                | 0 ... 0.97       | Active range of the parameter is 0.5 ... 0.97 and should be used when high efficiency motors (IE3 or IE4) are used.  | 1 = 0.01       |

# 13

## Fieldbus control with embedded fieldbus

---

### What this chapter contains

The chapter describes how the drive can be controlled by external devices over a communication network using embedded fieldbus.

### System overview

The drive can be connected to an external control system through a fieldbus adapter or embedded fieldbus. For the fieldbus adapter control, see chapter [Fieldbus control with fieldbus adapter](#) on page 339.

The embedded fieldbus supports Modbus RTU protocol. Modbus is a serial, asynchronous protocol. Transaction is half-duplex.

The embedded fieldbus can be connected with either EIA-485 (terminal X1 of the optional FMBA-01 Modbus adapter connected to drive terminal X3) or RS-232 (control panel connector X2).



EIA-485 is designed for a multipoint application (a single master controlling one or more slaves). RS-232 is designed for a point-to-point application (a single master controlling one slave).

For more information on the FMBA-01 Modbus adapter module, see *FMBA-01 Modbus adapter module user's manual* (3AFE68586704 [English]).

---



The pin configuration of the RS-232 connector is shown below. The maximum length of the communication cable with RS-232 is restricted to 3 meters (9.8 ft).

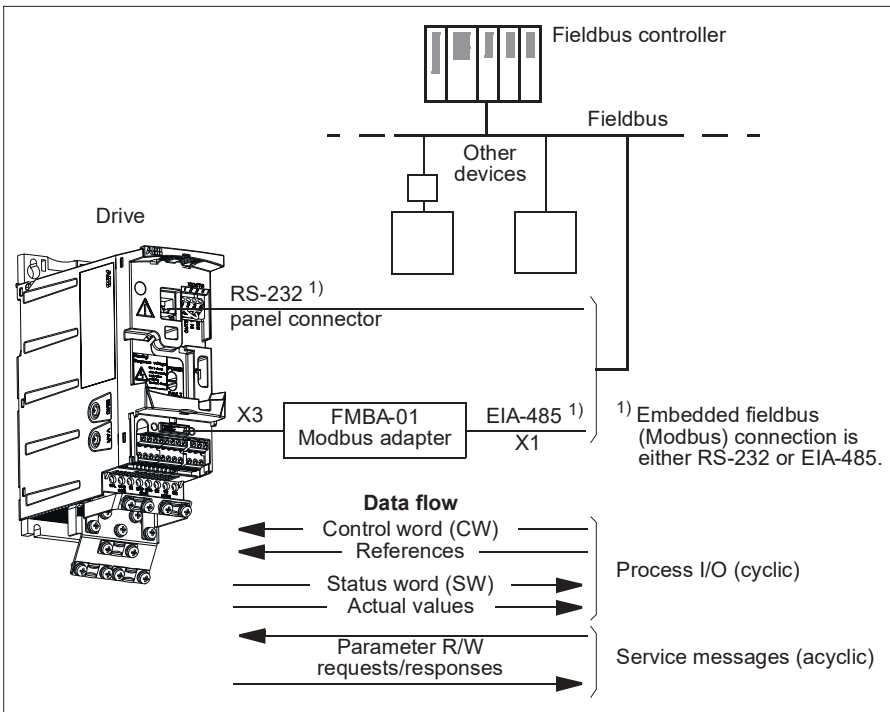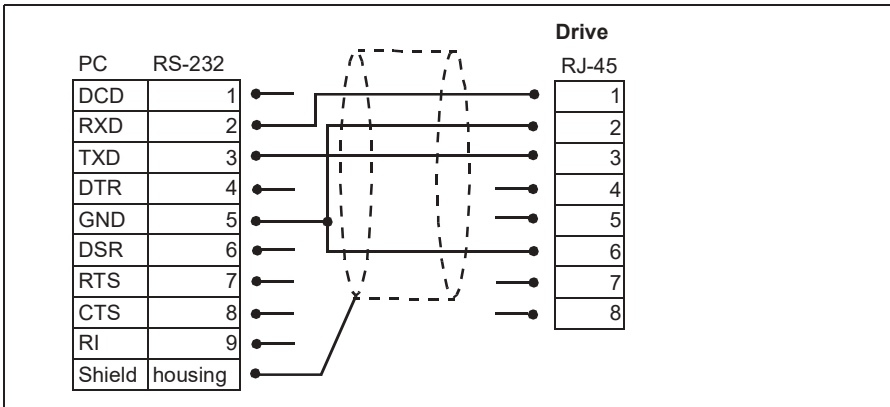

The drive can be set to receive all of its control information through the fieldbus interface, or the control can be distributed between the fieldbus interface and other available sources, for example, digital and analog inputs.

## Setting up communication through the embedded Modbus

Before configuring the drive for fieldbus control, the FMBA-01 Modbus adapter (if used) must be mechanically and electrically installed according to the instructions given in section [Attach the optional fieldbus module](#) on page 38, and the module manual.

The communication through the fieldbus link is initialized by setting parameter [9802 COMM PROT SEL](#) to [STD MODBUS](#) or [MODBUS RS232](#). The communication parameters in group [53 EFB PROTOCOL](#) must also be adjusted. See the table below.

| Parameter   | Alternative settings  | Setting for fieldbus control  | Function/Information   |
|---|---|---|--|
| <b>COMMUNICATION INITIALIZATION</b>                                       |   |   |  |
| <a href="#">9802 COMM PROT SEL</a>  | <a href="#">NOT SEL</a><br><a href="#">STD MODBUS</a><br><a href="#">EXT FBA</a><br><a href="#">MODBUS RS232</a>  | <a href="#">STD MODBUS</a> (with EIA-485)<br><a href="#">MODBUS RS232</a> (with RS-232) | Initializes embedded fieldbus communication.   |
| <b>ADAPTER MODULE CONFIGURATION</b>                                       |   |   |  |
| <a href="#">5302 EFB STATION ID</a>                                       | 0...247   | Any   | Defines the station ID address of the RS-232/EIA-485 link. No two stations on line may have the same address.        |
| <a href="#">5303 EFB BAUD RATE</a>  | 1.2 kbit/s<br>2.4 kbit/s<br>4.8 kbit/s<br>9.6 kbit/s<br>19.2 kbit/s<br>38.4 kbit/s<br>57.6 kbit/s<br>115.2 kbit/s |   | Defines the communication speed of the RS-232/EIA-485 link.  |
| <a href="#">5304 EFB PARITY</a>   | <a href="#">8 NONE 1</a><br><a href="#">8 NONE 2</a><br><a href="#">8 EVEN 1</a><br><a href="#">8 ODD 1</a>       |   | Selects the parity setting. The same settings must be used in all on-line stations.                                  |
| <a href="#">5305 EFB CTRL PROFILE</a>                                     | <a href="#">ABB DRV LIM</a><br><a href="#">DCU PROFILE</a><br><a href="#">ABB DRV FULL</a>                        | Any   | Selects the communication profile used by the drive. See section <a href="#">Communication profiles</a> on page 328. |
| <a href="#">5310 EFB PAR 10</a><br>...<br><a href="#">5317 EFB PAR 17</a> | 0...65535   | Any   | Selects an actual value to be mapped to Modbus register 400xx.   |

After the configuration parameters in group [53 EFB PROTOCOL](#) have been set, the drive control parameters (shown in section [Drive control parameters](#) on page 316) must be checked and adjusted when necessary.

The new settings will take effect when the drive is next powered up, or when parameter *5302 EFB STATION ID* setting is cleared and reset.

## Drive control parameters

After the Modbus communication has been set up, the drive control parameters listed in the table below should be checked and adjusted when necessary.

The **Setting for fieldbus control** column gives the value to use when the Modbus interface is the desired source or destination for that particular signal. The **Function/Information** column gives a description of the parameter.

| Parameter                        | Setting for fieldbus control               | Function/Information   | Modbus register address |                    |
|----------------------------------|--|--|-------------------------|--------------------|
| CONTROL COMMAND SOURCE SELECTION |  |  | ABB<br>DRV              | DCU                |
| <i>1001 EXT1 COMMAND S</i>       | <i>COMM</i>                                | Enables <i>0301 FB CMD WORD 1</i> bits 0...1 ( <i>STOP/START</i> ) when EXT1 is selected as the active control location.   |                         | 40031 bits 0...1   |
| <i>1002 EXT2 COMMAND S</i>       | <i>COMM</i>                                | Enables <i>0301 FB CMD WORD 1</i> bits 0...1 ( <i>STOP/START</i> ) when EXT2 is selected as the active control location.   |                         | 40031 bits 0...1   |
| <i>1003 DIRECTION</i>            | <i>FORWARD<br/>REVERSE<br/>REQUEST</i>     | Enables the rotation direction control as defined by parameters <i>1001</i> and <i>1002</i> . The direction control is explained in section <i>Reference handling</i> on page <i>323</i> .   |                         | 40031 bit 2        |
| <i>1010 JOGGING SEL</i>          | <i>COMM</i>                                | Enables jogging 1 or 2 activation through <i>0302 FB CMD WORD 2</i> bits 20...21 ( <i>JOGGING 1 / JOGGING 2</i> ).   |                         | 40032 bits 20...21 |
| <i>1102 EXT1/EXT2 SEL</i>        | <i>COMM</i>                                | Enables EXT1/EXT2 selection through <i>0301 FB CMD WORD 1</i> bit 5 ( <i>EXT2</i> ); with the ABB drives profile <i>5319 EFB PAR 19</i> bit 11 ( <i>EXT CTRL LOC</i> ).                      | 40001 bit 11            | 40031 bit 5        |
| <i>1103 REF1 SELECT</i>          | <i>COMM<br/>COMM+AI<br/>1<br/>COMM*AI1</i> | Fieldbus reference REF1 is used when EXT1 is selected as the active control location. See section <i>Fieldbus references</i> on page <i>320</i> for information on the alternative settings. | 40002 for REF1          |                    |

| Parameter                      | Setting for fieldbus control     | Function/Information   | Modbus register address      |                 |
|--------------------------------|----------------------------------|--|------------------------------|-----------------|
| 1106 REF2 SELECT               | COMM<br>COMM+AI<br>1<br>COMM*AI1 | Fieldbus reference REF2 is used when EXT2 is selected as the active control location. See section <i>Fieldbus references</i> on page 320 for information on the alternative settings.                                      | 40003 for REF2               |                 |
| OUTPUT SIGNAL SOURCE SELECTION |                                  |  | ABB<br>DRV                   | DCU             |
| 1401 RELAY OUTPUT 1            | COMM<br>COMM(-1)                 | Enables relay output RO control by signal <i>0134 COMM RO WORD</i> .   | 40134 for signal <i>0134</i> |                 |
| 1501 AO1 CONTENT SEL           | 135                              | Directs the contents of the fieldbus reference <i>0135 COMM VALUE 1</i> to analog output AO.   | 40135 for signal <i>0135</i> |                 |
| SYSTEM CONTROL INPUTS          |                                  |  | ABB<br>DRV                   | DCU             |
| 1601 RUN ENABLE                | COMM                             | Enables the control of the inverted Run enable signal (Run disable) through <i>0301 FB CMD WORD 1</i> bit 6 ( <i>RUN_DISABLE</i> ); with the ABB drives profile <i>5319 EFB PAR 19</i> bit 3 ( <i>INHIBIT OPERATION</i> ). | 40001<br>bit 3               | 40031<br>bit 6  |
| 1604 FAULT RESET SEL           | COMM                             | Enables fault reset through the fieldbus <i>0301 FB CMD WORD 1</i> bit 4 ( <i>RESET</i> ); with the ABB drives profile <i>5319 EFB PAR 19</i> bit 7 ( <i>RESET</i> ).  | 40001<br>bit 7               | 40031<br>bit 4  |
| 1606 LOCAL LOCK                | COMM                             | Local control mode lock signal through <i>0301 FB CMD WORD 1</i> bit 14 ( <i>REQ_LOCALLOC</i> )  | -                            | 40031<br>bit 14 |
| 1607 PARAM SAVE                | DONE<br>SAVE...                  | Saves parameter value changes (including those made through fieldbus control) to permanent memory.   | 41607                        |                 |
| 1608 START ENABLE 1            | COMM                             | Inverted Start enable 1 (Start disable) through <i>0302 FB CMD WORD 2</i> bit 18 ( <i>START_DISABLE1</i> )   | -                            | 40032<br>bit 18 |
| 1609 START ENABLE 2            | COMM                             | Inverted Start enable 2 (Start disable) through <i>0302 FB CMD WORD 2</i> bit 19 ( <i>START_DISABLE2</i> )   | -                            | 40032<br>bit 19 |

| Parameter  | Setting for fieldbus control                       | Function/Information   | Modbus register address |              |
|--|--|--|-------------------------|--------------|
| LIMITS   |  |  | ABB DRV                 | DCU          |
| 2013 MIN TORQUE SEL                              | COMM   | Minimum torque limit 1/2 selection through 0301 FB CMD WORD 1 bit 15 (TORQLIM2)  | -                       | 40031 bit 15 |
| 2014 MAX TORQUE SEL                              | COMM   | Maximum torque limit 1/2 selection through 0301 FB CMD WORD 1 bit 15 (TORQLIM2)  | -                       | 40031 bit 15 |
| 2201 ACC/DEC 1/2 SEL                             | COMM   | Acceleration/deceleration ramp pair selection through 0301 FB CMD WORD 1 bit 10 (RAMP_2)   | -                       | 40031 bit 10 |
| 2209 RAMP INPUT 0                                | COMM   | Ramp input to zero through 0301 FB CMD WORD 1 bit 13 (RAMP_IN_0); with the ABB drives profile 5319 EFB PAR 19 bit 6 (RAMP_IN_ZERO) | 40001 bit 6             | 40031 bit 13 |
| COMMUNICATION FAULT FUNCTIONS                    |  |  | ABB DRV                 | DCU          |
| 3018 COMM FAULT FUNC                             | NOT SEL<br>FAULT<br>CONST SP<br>7<br>LAST<br>SPEED | Determines the drive action in case the fieldbus communication is lost.  | 43018                   |              |
| 3019 COMM FAULT TIME                             | 0.1...<br>600.0 s                                  | Defines the time between the communication loss detection and the action selected with parameter 3018 COMM FAULT FUNC.             | 43019                   |              |
| PID CONTROLLER REFERENCE SIGNAL SOURCE SELECTION |  |  | ABB DRV                 | DCU          |
| 4010/ SET POINT<br>4110/ SEL<br>4210             | COMM<br>COMM+AI<br>1<br>COMM*AI1                   | PID control reference (REF2)   | 40003 for REF2          |              |

## Fieldbus control interface

The communication between a fieldbus system and the drive consists of 16-bit input and output data words (with the ABB drives profile) and 32-bit input and output words (with the DCU profile).

### ■ Control word and Status word

The Control word (CW) is the principal means of controlling the drive from a fieldbus system. The Control word is sent by the fieldbus controller to the drive. The drive switches between its states according to the bit-coded instructions of the Control word.

The Status word (SW) is a word containing status information, sent by the drive to the fieldbus controller.

### ■ References

References (REF) are 16-bit signed integers. A negative reference (eg, reverse direction of rotation) is formed by calculating the two's complement from the corresponding positive reference value. The contents of each reference word can be used as the speed, frequency, torque or process reference.

### ■ Actual values





Actual values (ACT) are 16-bit words containing selected values of the drive.





---

## Fieldbus references

### Reference selection and correction

Fieldbus reference (called COMM in signal selection contexts) is selected by setting a reference selection parameter – *1103 REF1 SELECT* or *1106 REF2 SELECT* – to *COMM*, *COMM+AI1* or *COMM\*AI1*. When parameter *1103* or *1106* is set to *COMM*, the fieldbus reference is forwarded as such without correction. When parameter *1103* or *1106* is set to *COMM+AI1* or *COMM\*AI1*, the fieldbus reference is corrected using analog input AI1 as shown in the following examples for the ABB drives profile.
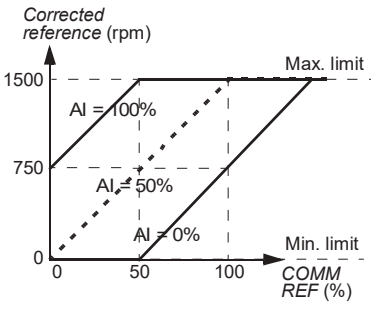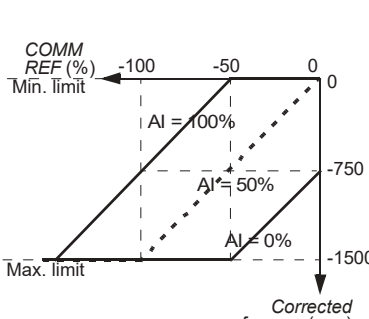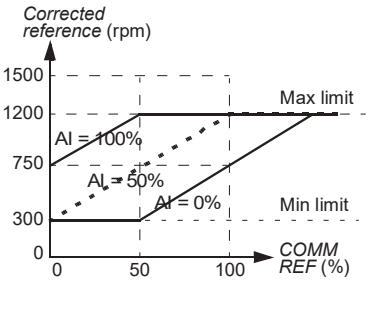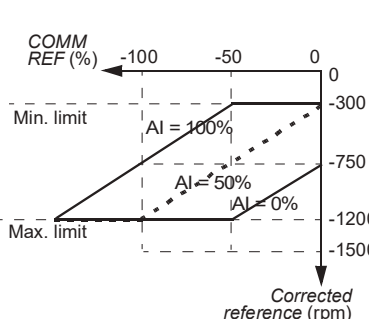
| Setting                    | When $COMM \geq 0$  | When $COMM \leq 0$   |
|----------------------------|---|--|
| <i>COM</i><br><i>M+AI1</i> | $COMM(\%) \cdot (MAX-MIN) + MIN$ $+ (AI(\%) - 50\%) \cdot (MAX-MIN)$  | $COMM(\%) \cdot (MAX-MIN) - MIN$ $+ (AI(\%) - 50\%) \cdot (MAX-MIN)$               |
|                            |    |   |
|                            |   |  |
|                            | <p>Maximum limit is defined by parameter <i>1105 REF1 MAX</i> / <i>1108 REF2 MA</i>.<br/>Minimum limit is defined by parameter <i>1104 REF1 MIN</i> / <i>1107 REF2 MIN</i>.</p> |  |
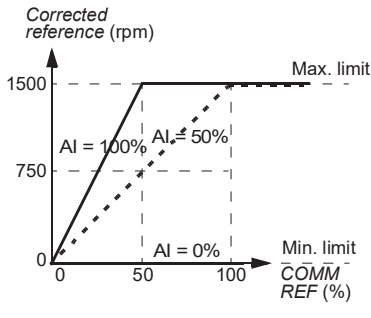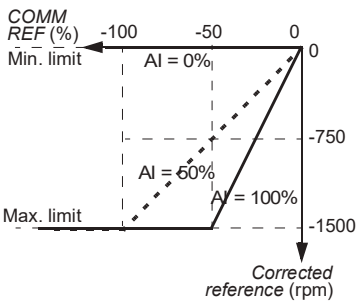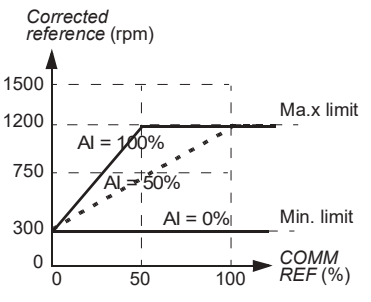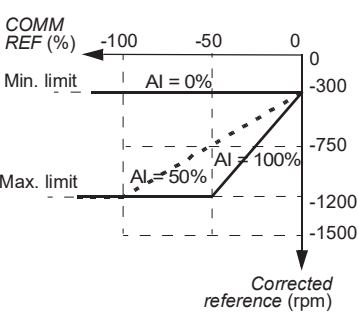
| Setting                    | When $COMM \geq 0$   | When $COMM \leq 0$   |
|----------------------------|--|--|
| <b>COM</b><br><b>M*AI1</b> | $COMM(\%) \cdot (AI(\%) / 50\%) \cdot (MAX-MIN) + MIN$   | $COMM(\%) \cdot (AI(\%) / 50\%) \cdot (MAX-MIN) - MIN$                             |
|                            |   |  |
|                            |   |  |
|                            | <p>Maximum limit is defined by parameter <b>1105 REF1 MAX / 1108 REF2 MA.</b><br/>                     Minimum limit is defined by parameter <b>1104 REF1 MIN / 1107 REF2 MIN.</b></p> |  |



## ■ Fieldbus reference scaling

Fieldbus references REF1 and REF2 are scaled for the ABB drives profile as shown in the following table.







**Note:** Any correction of the reference (see section [Reference selection and correction](#) on page [322](#)) is applied before scaling.

| Reference | Range                   | Reference type     | Scaling   | Remarks  |
|-----------|-------------------------|--------------------|---|--|
| REF1      | -32767<br>...<br>+32767 | Speed or frequency | -20000 = <b>-(par. 1105)</b><br>0 = 0<br>+20000 = <b>(par. 1105)</b><br>(20000 corresponds to 100%) | Final reference limited by <a href="#">1104/1105</a> . Actual motor speed limited by <a href="#">2001/2002</a> (speed) or <a href="#">2007/2008</a> (frequency). |
| REF2      | -32767<br>...<br>+32767 | Speed or frequency | -10000 = <b>-(par. 1108)</b><br>0 = 0<br>+10000 = <b>(par. 1108)</b><br>(10000 corresponds to 100%) | Final reference limited by <a href="#">1107/1108</a> . Actual motor speed limited by <a href="#">2001/2002</a> (speed) or <a href="#">2007/2008</a> (frequency). |
|           |                         | Torque             | -10000 = <b>-(par. 1108)</b><br>0 = 0<br>+10000 = <b>(par. 1108)</b><br>(10000 corresponds to 100%) | Final reference limited by <a href="#">2015/2017</a> (torque 1) or <a href="#">2016/2018</a> (torque 2).   |
|           |                         | PID reference      | -10000 = <b>-(par. 1108)</b><br>0 = 0<br>+10000 = <b>(par. 1108)</b><br>(10000 corresponds to 100%) | Final reference limited by <a href="#">4012/4013</a> (PID set 1) or <a href="#">4112/4113</a> (PID set 2).   |

**Note:** The settings of parameters [1104 REF1 MIN](#) and [1107 REF2 MIN](#) have no effect on the reference scaling.

## Reference handling

The control of rotation direction is configured for each control location (EXT1 and EXT2) using the parameters in group **10 START/STOP/DIR**. Fieldbus references are bipolar, ie, they can be negative or positive. The following diagrams illustrate how group 10 parameters and the sign of the fieldbus reference interact to produce the reference REF1/REF2.
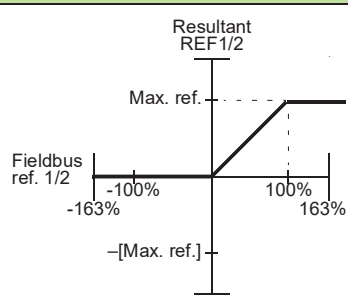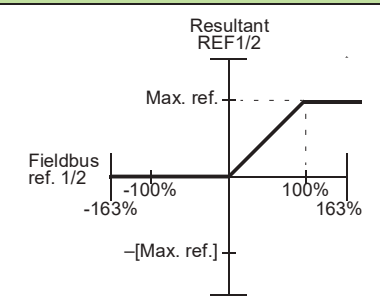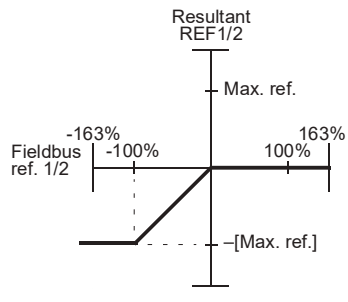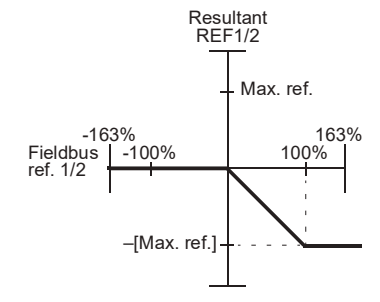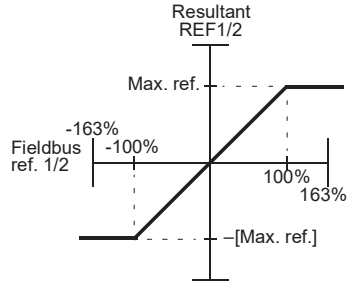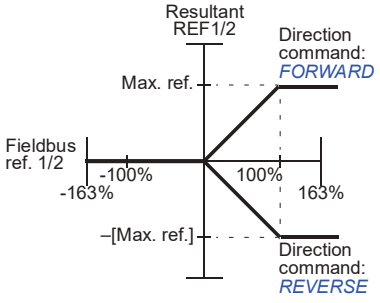
|                                     | Direction determined by the sign of COMM   | Direction determined by digital command, eg, digital input, control panel   |
|-------------------------------------|--|---|
| Par. 1003<br>DIRECTION<br>= FORWARD |  <p>Resultant REF1/2</p> <p>Max. ref.</p> <p>Fieldbus ref. 1/2</p> <p>-163% -100% 100% 163%</p> <p>-[Max. ref.]</p>   |  <p>Resultant REF1/2</p> <p>Max. ref.</p> <p>Fieldbus ref. 1/2</p> <p>-163% -100% 100% 163%</p> <p>-[Max. ref.]</p>   |
| Par. 1003<br>DIRECTION<br>= REVERSE |  <p>Resultant REF1/2</p> <p>Max. ref.</p> <p>Fieldbus ref. 1/2</p> <p>-163% -100% 100% 163%</p> <p>-[Max. ref.]</p>  |  <p>Resultant REF1/2</p> <p>Max. ref.</p> <p>Fieldbus ref. 1/2</p> <p>-163% -100% 100% 163%</p> <p>-[Max. ref.]</p>  |
| Par. 1003<br>DIRECTION<br>= REQUEST |  <p>Resultant REF1/2</p> <p>Max. ref.</p> <p>Fieldbus ref. 1/2</p> <p>-163% -100% 100% 163%</p> <p>-[Max. ref.]</p> |  <p>Resultant REF1/2</p> <p>Max. ref.</p> <p>Fieldbus ref. 1/2</p> <p>-163% -100% 100% 163%</p> <p>-[Max. ref.]</p> <p>Direction command: FORWARD</p> <p>Direction command: REVERSE</p> |

## ■ Actual value scaling

The scaling of the integers sent to the master as Actual values depends on the selected function. See chapter *Actual signals and parameters* on page 179.

## Modbus mapping

The following Modbus function codes are supported by the drive.

| Function                              | Code hex (dec) | Additional information  |
|---------------------------------------|----------------|---|
| Read Multiple Holding Registers       | 03 (03)        | Reads the contents of registers in a slave device.<br>Parameter sets, control, status and reference values are mapped as holding registers.   |
| Write Single Holding Register         | 06 (06)        | Writes to a single register in a slave device.<br>Parameter sets, control, status and reference values are mapped as holding registers.   |
| Diagnostics                           | 08 (08)        | Provides a series of tests for checking the communication between the master and the slave devices, or for checking various internal error conditions within the slave.<br>The following subcodes are supported:<br><u>00 Return Query Data</u> : The data passed in the request data field is to be returned in the response. The entire response message should be identical to the request.<br><u>01 Restart Communications Option</u> : The slave device serial line port must be initialized and restarted, and all of its communication event counters cleared. If the port is currently in Listen Only Mode, no response is returned. If the port is not currently in Listen Only Mode, a normal response is returned before the restart.<br><u>04 Force Listen Only Mode</u> : Forces the addressed slave device to Listen Only Mode. This isolates it from the other devices on the network, allowing them to continue communicating without interruption from the addressed remote device. No response is returned. The only function that will be processed after this mode is entered is the Restart Communications Option function (subcode 01). |
| Write Multiple Holding Registers      | 10 (16)        | Writes to the registers (1 to approximately 120 registers) in a slave device.<br>Parameter sets, control, status and reference values are mapped as holding registers.  |
| Read/Write Multiple Holding Registers | 17 (23)        | Performs a combination of one read operation and one write operation (function codes 03 and 10) in a single Modbus transaction. The write operation is performed before the read operation.   |

## ■ Register mapping

The drive parameters, Control/Status word, references and actual values are mapped to the area 4xxxx so that:

- 40001...40099 are reserved for drive control/status, reference and actual values.
- 40101...49999 are reserved for drive parameters *0101*...9999 (eg, 40102 is parameter *0102*). In this mapping, the thousands and hundreds correspond to the group number, while the tens and ones correspond to the parameter number within a group.

The register addresses that do not correspond with drive parameters are invalid. If there is an attempt to read or write invalid addresses, the Modbus interface returns an exception code to the controller. See [Exception codes](#) on page 327.

The following table gives information on the contents of the Modbus addresses 40001...40012 and 40031...40034.

| Modbus register       | Access           | Information |   |
|-----------------------|------------------|-------------|---|
| 40001                 | Control word     | R/W         | Control word. Supported only by the ABB drives profile, ie, when <i>5305 EFB CTRL PROFILE</i> setting is <i>ABB DRV LIM</i> or <i>ABB DRV FULL</i> . Parameter <i>5319 EFB PAR 19</i> shows a copy of the Control word in hexadecimal format. |
| 40002                 | Reference 1      | R/W         | External reference REF1. See section <a href="#">Fieldbus references</a> on page 320.   |
| 40003                 | Reference 2      | R/W         | External reference REF2. See section <a href="#">Fieldbus references</a> on page 320.   |
| 40004                 | Status word      | R           | Status word. Supported only by the ABB drives profile, ie, when <i>5305 EFB CTRL PROFILE</i> setting is <i>ABB DRV LIM</i> or <i>ABB DRV FULL</i> . Parameter <i>5320 EFB PAR 20</i> shows a copy of the Control word in hexadecimal format.  |
| 40005<br>...<br>40012 | Actual 1...8     | R           | Actual value 1...8. Use parameter <i>5310</i> ... <i>5317</i> to select an actual value to be mapped to Modbus register 40005...40012.  |
| 40031                 | Control word LSW | R/W         | <i>0301 FB CMD WORD 1</i> , ie, the least significant word of the DCU profile 32-bit Control word. Supported only by the DCU profile, ie, when <i>5305 EFB CTRL PROFILE</i> setting is <i>DCU PROFILE</i> .                                   |
| 40032                 | Control word MSW | R/W         | <i>0302 FB CMD WORD 2</i> , ie, the most significant word of the DCU profile 32-bit Control word. Supported only by the DCU profile, ie, when <i>5305 EFB CTRL PROFILE</i> setting is <i>DCU PROFILE</i> .                                    |
| 40033                 | Status word LSW  | R           | <i>0303 FB STS WORD 1</i> , ie, the least significant word of the DCU profile 32-bit Status word. Supported only by the DCU profile, ie, when <i>5305 EFB CTRL PROFILE</i> setting is <i>DCU PROFILE</i> .                                    |

| Modbus register |                        | Access | Information  |
|-----------------|------------------------|--------|--|
| 40034           | ACS355 Status word MSW | R      | <i>0304 FB STS WORD 2</i> , ie, the most significant word of the DCU profile 32-bit Status word.<br>Supported only by the DCU profile, ie, when <i>5305 EFB CTRL PROFILE</i> setting is <i>DCU PROFILE</i> . |

**Note:** Parameter writes through standard Modbus are always volatile, ie, modified values are not automatically stored to the permanent memory. Use parameter *1607 PARAM SAVE* to save all changed values.

## ■ Function codes

Supported function codes for the holding 4xxxx register:

| Code hex (dec) | Function name                | Additional information  |
|----------------|------------------------------|---|
| 03 (03)        | Read 4X Register             | Reads the binary contents of registers (4X references) in a slave device.   |
| 06 (06)        | Preset single 4X register    | Presets a value into a single register (4X reference). When broadcast, the function presets the same register reference in all attached slaves.   |
| 10 (16)        | Preset multiple 4X registers | Presets values into a sequence of registers (4X references). When broadcast, the function presets the same register references in all attached slaves.                                  |
| 17 (23)        | Read/Write 4X registers      | Performs a combination of one read operation and one write operation (function codes 03 and 10) in a single Modbus transaction. Write operation is performed before the read operation. |

**Note:** In the Modbus data message, register 4xxxx is addressed as xxxx -1. For example, register 40002 is addressed as 0001.

## ■ Exception codes

Exception codes are serial communication responses from the drive. The drive supports the standard Modbus exception codes listed in the following table.

| Code | Name                 | Description   |
|------|----------------------|---|
| 01   | Illegal Function     | Unsupported command   |
| 02   | Illegal Data Address | Address does not exist or is read/write protected.  |
| 03   | Illegal Data Value   | Incorrect value for the drive: <ul style="list-style-type: none"><li>• Value is outside minimum or maximum limits.</li><li>• Parameter is read-only.</li><li>• Message is too long.</li><li>• Parameter write is not allowed when start is active.</li><li>• Parameter write is not allowed when factory macro is selected.</li></ul> |

Drive parameter *5318 EFB PAR 18* holds the most recent exception code.


---

## Communication profiles

The embedded fieldbus supports three communication profiles:

- DCU communication profile (*DCU PROFILE*)
- ABB drives limited communication profile (*ABB DRV LIM*)
- ABB drives full communication profile (*ABB DRV FULL*).

The DCU profile extends the control and status interface to 32 bits, and it is the internal interface between the main drive application and the embedded fieldbus environment. The ABB drives limited profile is based on the PROFIBUS interface. The ABB drives full profile (*ABB DRV FULL*) supports two Control word bits not supported by the *ABB DRV LIM* implementation.

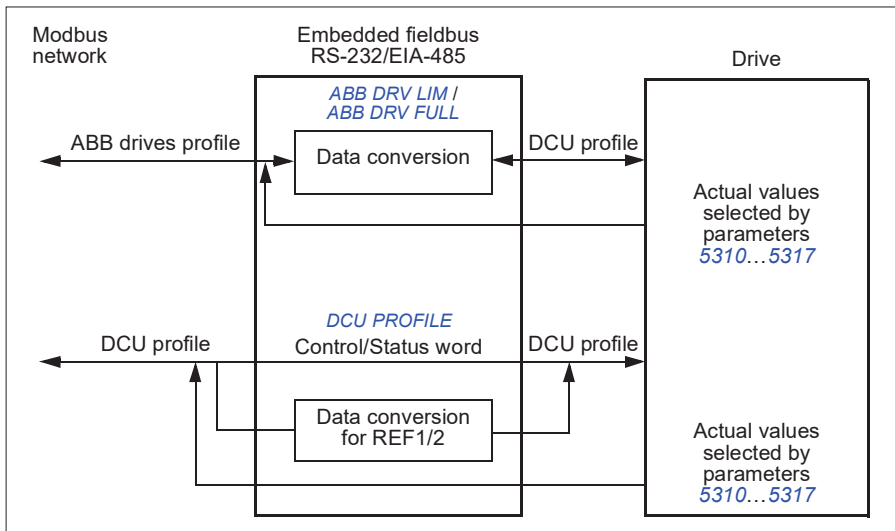

### ■ ABB drives communication profile

Two implementations of the ABB drives communication profile are available: ABB drives full and ABB drives limited. The ABB drives communication profile is active when parameter **5305 EFB CTRL PROFILE** is set to *ABB DRV FULL* or *ABB DRV LIM*. The Control word and Status word for the profile are described below.

The ABB drives communication profiles can be used through both EXT1 and EXT2. The Control word commands are in effect when parameter **1001 EXT1 COMMANDS** or **1002 EXT2 COMMANDS** (whichever control location is active) is set to *COMM*.

## Control word

The table below and the state diagram on page 332 describe the Control word content for the ABB drives profile. The upper case boldface text refers to the states shown in the diagram.

| ABB drives profile Control word, parameter 5319 EFB PAR 19 |  |       |  |
|--|--|-------|--|
| Bit  | Name   | Value | Comments   |
| 0  | OFF1 CONTROL   | 1     | Enter <b>READY TO OPERATE</b> .  |
|  |  | 0     | Stop along currently active deceleration ramp (2203/2206). Enter OFF1 ACTIVE; proceed to <b>READY TO SWITCH ON</b> unless other interlocks (OFF2, OFF3) are active.  |
| 1  | OFF2 CONTROL   | 1     | Continue operation (OFF2 inactive).  |
|  |  | 0     | Emergency OFF, drive coast to stop. Enter <b>OFF2 ACTIVE</b> ; proceed to <b>SWITCH-ON INHIBITED</b> .   |
| 2  | OFF3 CONTROL   | 1     | Continue operation (OFF3 inactive).  |
|  |  | 0     | Emergency stop, drive stops within time defined by par. 2208. Enter <b>OFF3 ACTIVE</b> ; proceed to <b>SWITCH-ON INHIBITED</b> .<br><b>WARNING!</b> Ensure motor and driven machine can be stopped using this stop mode. |
| 3  | INHIBIT OPERATION  | 1     | Enter <b>OPERATION ENABLED</b> . (Note: The Run enable signal must be active; see parameter 1601. If par. 1601 is set to COMM, this bit also activates the Run enable signal.)   |
|  |  | 0     | Inhibit operation. Enter <b>OPERATION INHIBITED</b> .  |
| 4  | <b>Note:</b> Bit 4 is supported only by <i>ABB DRV FULL</i> profile. |       |  |
|  | RAMP_OUT_ZERO<br>(ABB DRV FULL)                                      | 1     | Enter <b>RAMP FUNCTION GENERATOR: OUTPUT ENABLED</b> .   |
|  |  | 0     | Force Ramp function generator output to zero. Drive ramps to stop (current and DC voltage limits in force).  |
| 5  | RAMP_HOLD  | 1     | Enable ramp function. Enter <b>RAMP FUNCTION GENERATOR: ACCELERATOR ENABLED</b> .  |
|  |  | 0     | Halt ramping (Ramp function generator output held).  |
| 6  | RAMP_IN_ZERO   | 1     | Normal operation. Enter <b>OPERATING</b> .   |
|  |  | 0     | Force Ramp function generator input to zero.   |
| 7  | RESET  | 0=>1  | Fault reset if an active fault exists. Enter <b>SWITCH-ON INHIBITED</b> . Effective if par. 1604 is set to COMM.   |
|  |  | 0     | Continue normal operation.   |
| 8...<br>9  | Not in use   |       |  |



**ABB drives profile Control word, parameter 5319 EFB PAR 19**

| Bit | Name   | Value | Comments   |
|-----|--|-------|--|
| 10  | <b>Note:</b> Bit 10 is supported only by <i>ABB DRV FULL</i> . | 1     | Fieldbus control enabled.  |
|     |  | 0     | Control word $\neq 0$ or reference $\neq 0$ : Retain last Control word and reference.<br>Control word = 0 and reference = 0: Fieldbus control enabled.<br>Reference and deceleration/acceleration ramp are locked. |
| 11  | EXT CTRL LOC   | 1     | Select external control location EXT2. Effective if par. 1102 is set to <i>COMM</i> .  |
|     |  | 0     | Select external control location EXT1. Effective if par. 1102 is set to <i>COMM</i> .  |
| 12  | Reserved   |       |  |
| ... |  |       |  |
| 15  |  |       |  |

**Status word**

The table below and the state diagram on page 332 describe the Status word content for the ABB drives profile. The upper case boldface text refers to the states shown in the diagram.


**ABB drives profile (EFB) Status word, parameter 5320 EFB PAR 20**

| Bit | Name         | Value | STATE/Description<br>(Correspond to states/boxes in the state diagram) |
|-----|--------------|-------|--|
| 0   | RDY_ON       | 1     | <b>READY TO SWITCH ON</b>  |
|     |              | 0     | <b>NOT READY TO SWITCH ON</b>  |
| 1   | RDY_RUN      | 1     | <b>READY TO OPERATE</b>  |
|     |              | 0     | <b>OFF1 ACTIVE</b>   |
| 2   | RDY_REF      | 1     | <b>OPERATION ENABLED</b>   |
|     |              | 0     | <b>OPERATION INHIBITED</b>   |
| 3   | TRIPPED      | 1     | <b>FAULT</b> . See chapter <i>Fault tracing</i> on page 351.           |
|     |              | 0     | No fault   |
| 4   | OFF_2_STA    | 1     | OFF2 inactive  |
|     |              | 0     | <b>OFF2 ACTIVE</b>   |
| 5   | OFF_3_STA    | 1     | OFF3 inactive  |
|     |              | 0     | <b>OFF3 ACTIVE</b>   |
| 6   | SWC_ON_INHIB | 1     | <b>SWITCH-ON INHIBITED</b>   |
|     |              | 0     | Switch-on inhibit not active   |
| 7   | ALARM        | 1     | Alarm. See chapter <i>Fault tracing</i> on page 351.                   |
|     |              | 0     | No alarm   |

| ABB drives profile (EFB) Status word, parameter <i>5320 EFB PAR 20</i> |                |       |  |
|--|----------------|-------|--|
| Bit  | Name           | Value | STATE/Description<br>(Correspond to states/boxes in the state diagram)   |
| 8  | AT_SETPOINT    | 1     | <b>OPERATING.</b> Actual value equals reference value (= is within tolerance limits, ie, in speed control the difference between the output speed and the speed reference is less than or equal to 4/1%* of the nominal motor speed).<br>* Asymmetric hysteresis: 4% when speed exits the reference area, 1% when speed enters the reference area. |
|  |                | 0     | Actual value differs from reference value (= is outside tolerance limits).   |
| 9  | REMOTE         | 1     | Drive control location: REMOTE (EXT1 or EXT2)  |
|  |                | 0     | Drive control location: LOCAL  |
| 10   | ABOVE_LIMIT    | 1     | Supervised parameter value exceeds the supervision high limit. Bit value is 1 until the supervised parameter value falls below the supervision low limit. See parameter group <a href="#">32 SUPERVISION</a> , parameter <a href="#">3201 SUPERV 1 PARAM.</a>  |
|  |                | 0     | Supervised parameter value falls below the supervision low limit. Bit value is 0 until the supervised parameter value exceeds the supervision high limit. See parameter group <a href="#">32 SUPERVISION</a> , parameter <a href="#">3201 SUPERV 1 PARAM.</a>  |
| 11   | EXT CTRL LOC   | 1     | External control location EXT2 selected  |
|  |                | 0     | External control location EXT1 selected  |
| 12   | EXT RUN ENABLE | 1     | External Run enable signal received  |
|  |                | 0     | No external Run enable received  |
| 13   | Reserved       |       |  |
| ...  |                |       |  |
| 15   |                |       |  |

## State diagram

The state diagram below describes the start-stop function of Control word (CW) and Status word (SW) bits for the ABB drives profile.

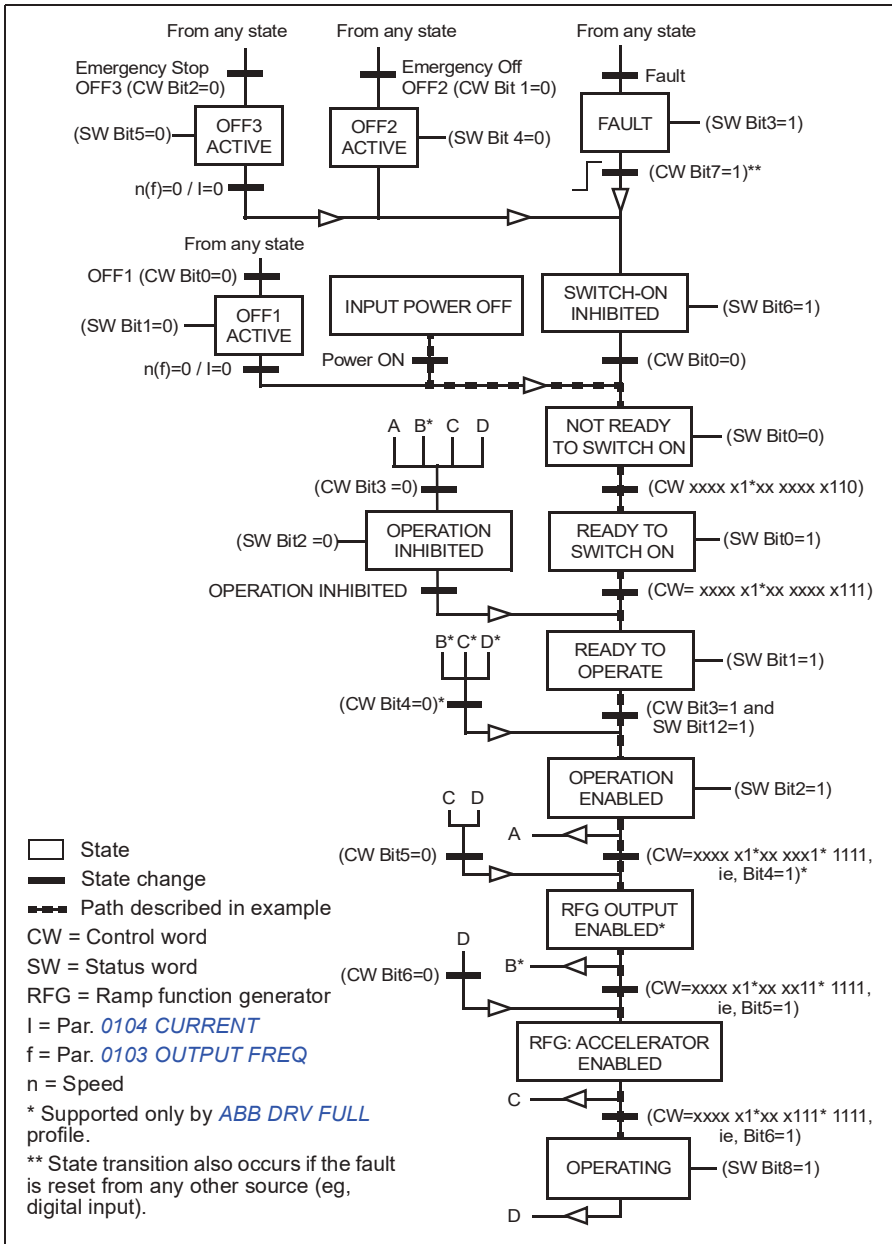

## ■ DCU communication profile

Because the DCU profile extends the control and status interface to 32 bits, two different signals are needed for both the Control words (*0301* and *0302*) and Status words (*0303* and *0304*).

### Control words

The following tables describe the Control word content for the DCU profile.

| DCU profile Control word, parameter <i>0301 FB CMD WORD 1</i> |             |       |  |
|---|-------------|-------|--|
| Bit   | Name        | Value | Information  |
| 0   | STOP        | 1     | Stop according to either the stop mode parameter ( <i>2102</i> ) or the stop mode requests (bits 7, 8 and 9).<br><b>Note:</b> Simultaneous STOP and START commands result in a stop command. |
|   |             | 0     | No operation   |
| 1   | START       | 1     | Start<br><b>Note:</b> Simultaneous STOP and START commands result in a stop command.   |
|   |             | 0     | No operation   |
| 2   | REVERSE     | 1     | Reverse direction. The direction is defined by using the XOR operation on bit 2 and 31 (= sign of the reference) values.   |
|   |             | 0     | Forward direction  |
| 3   | LOCAL       | 1     | Enter local control mode.  |
|   |             | 0     | Enter external control mode.   |
| 4   | RESET       | -> 1  | Reset.   |
|   |             | other | No operation   |
| 5   | EXT2        | 1     | Switch to external control EXT2.   |
|   |             | 0     | Switch to external control EXT1.   |
| 6   | RUN_DISABLE | 1     | Activate Run disable.  |
|   |             | 0     | Activate Run enable.   |
| 7   | STPMODE_R   | 1     | Stop along currently active deceleration ramp (bit 10). Bit 0 value must be 1 ( <i>STOP</i> ).   |
|   |             | 0     | No operation   |
| 8   | STPMODE_EM  | 1     | Emergency stop. Bit 0 value must be 1 ( <i>STOP</i> ).   |
|   |             | 0     | No operation   |
| 9   | STPMODE_C   | 1     | Coast to stop. Bit 0 value must be 1 ( <i>STOP</i> ).  |
|   |             | 0     | No operation   |
| 10  | RAMP_2      | 1     | Use acceleration/deceleration ramp pair 2 (defined by parameters <i>2205...2207</i> ).   |
|   |             | 0     | Use acceleration/deceleration ramp pair 1 (defined by parameters <i>2202...2204</i> ).   |

DCU profile Control word, parameter **0301 FB CMD WORD 1**

| Bit | Name             | Value | Information  |
|-----|------------------|-------|--|
| 11  | RAMP_OUT_0       | 1     | Force ramp output to zero.   |
|     |                  | 0     | No operation   |
| 12  | RAMP_HOLD        | 1     | Halt ramping (Ramp function generator output held).  |
|     |                  | 0     | No operation   |
| 13  | RAMP_IN_0        | 1     | Force ramp input to zero.  |
|     |                  | 0     | No operation   |
| 14  | REQ_LOCALLO<br>C | 1     | Enable local lock. Entering the local control mode is disabled (LOC/REM key of the panel). |
|     |                  | 0     | No operation   |
| 15  | TORQLIM2         | 1     | Use minimum/maximum torque limit 2 (defined by parameters <b>2016</b> and <b>2018</b> ).   |
|     |                  | 0     | Use minimum/maximum torque limit 1 (defined by parameters <b>2015</b> and <b>2017</b> ).   |

DCU profile Control word, parameter **0302 FB CMD WORD 2**

| Bit             | Name               | Value | Information   |
|-----------------|--------------------|-------|---|
| 16              | FBLOCAL_CTL        | 1     | Fieldbus local mode for Control word requested.<br><b>Example:</b> If the drive is in remote control and the start/stop/direction command source is DI for external control location 1 (EXT1): by setting bit 16 to value 1, the start/stop/direction is controlled by the fieldbus command word. |
|                 |                    | 0     | No fieldbus local mode  |
| 17              | FBLOCAL_REF        | 1     | Fieldbus local mode Control word for reference requested. See the example for bit 16 ( <b>FBLOCAL_CTL</b> ).  |
|                 |                    | 0     | No fieldbus local mode  |
| 18              | START_DISABL<br>E1 | 1     | No Start enable   |
|                 |                    | 0     | Enable start. Effective if parameter <b>1608</b> setting is <b>COMM</b> .   |
| 19              | START_DISABL<br>E2 | 1     | No Start enable   |
|                 |                    | 0     | Enable start. Effective if parameter <b>1609</b> setting is <b>COMM</b> .   |
| 20              | JOGGING 1          | 1     | Activate jogging 1. Effective if parameter <b>1010</b> setting is <b>COMM</b> . See section <b>Jogging</b> on page <b>162</b> .   |
|                 |                    | 0     | Jogging 1 disabled  |
| 21              | JOGGING 2          | 1     | Activate jogging 2. Effective if parameter <b>1010</b> setting is <b>COMM</b> . See section <b>Jogging</b> on page <b>162</b> .   |
|                 |                    | 0     | Jogging 2 disabled  |
| 22<br>...<br>26 | Reserved           |       |   |

| DCU profile Control word, parameter 0302 FB CMD WORD 2 |              |       |   |
|--|--------------|-------|---|
| Bit  | Name         | Value | Information   |
| 27   | REF_CONST    | 1     | Constant speed reference request.<br>This is an internal control bit. Only for supervision. |
|  |              | 0     | No operation  |
| 28   | REF_AVE      | 1     | Average speed reference request.<br>This is an internal control bit. Only for supervision.  |
|  |              | 0     | No operation  |
| 29   | LINK_ON      | 1     | Master detected on fieldbus link.<br>This is an internal control bit. Only for supervision. |
|  |              | 0     | Fieldbus link is down.  |
| 30   | REQ_STARTINH | 1     | Start inhibit   |
|  |              | 0     | No start inhibit  |
| 31   | Reserved     |       |   |

### Status words

The following tables describe the Status word content for the DCU profile.

| DCU profile Status word, parameter 0303 FB STS WORD 1 |             |       |   |
|---|-------------|-------|---|
| Bit   | Name        | Value | Status  |
| 0   | READY       | 1     | Drive is ready to receive start command.  |
|   |             | 0     | Drive is not ready.   |
| 1   | ENABLED     | 1     | External Run enable signal received.  |
|   |             | 0     | No external Run enable signal received.   |
| 2   | STARTED     | 1     | Drive has received start command.   |
|   |             | 0     | Drive has not received start command.   |
| 3   | RUNNING     | 1     | Drive is modulating and following reference.  |
|   |             | 0     | Drive is not running.   |
| 4   | ZERO_SPEED  | 1     | Drive is at zero speed.   |
|   |             | 0     | Drive has not reached zero speed.   |
| 5   | ACCELERATE  | 1     | Drive is accelerating.  |
|   |             | 0     | Drive is not accelerating.  |
| 6   | DECELERATE  | 1     | Drive is decelerating.  |
|   |             | 0     | Drive is not decelerating.  |
| 7   | AT_SETPOINT | 1     | Drive is at setpoint. Actual value equals reference value (ie, is within tolerance limits). |
|   |             | 0     | Drive has not reached setpoint.   |

DCU profile Status word, parameter **0303 FB STS WORD 1**

| Bit | Name           | Value | Status   |
|-----|----------------|-------|--|
| 8   | LIMIT          | 1     | Operation is limited by internal protection limits or group <b>20 LIMITS</b> settings (excluding speed and frequency limits).        |
|     |                | 0     | Operation is within internal protection limits and according group <b>20 LIMITS</b> settings (excluding speed and frequency limits). |
| 9   | SUPERVISION    | 1     | A supervised parameter (group <b>32 SUPERVISION</b> ) is outside its limits.   |
|     |                | 0     | All supervised parameters are within limits.   |
| 10  | REV_REF        | 1     | Drive reference is in reverse direction.   |
|     |                | 0     | Drive reference is in forward direction.   |
| 11  | REV_ACT        | 1     | Drive is running in reverse direction.   |
|     |                | 0     | Drive is running in forward direction.   |
| 12  | PANEL_LOCAL    | 1     | Control is in control panel (or PC tool) local mode.   |
|     |                | 0     | Control is not in control panel local mode.  |
| 13  | FIELDBUS_LOCAL | 1     | Control is in fieldbus local mode  |
|     |                | 0     | Control is not in fieldbus local mode.   |
| 14  | EXT2_ACT       | 1     | Control is in EXT2 mode.   |
|     |                | 0     | Control is in EXT1 mode.   |
| 15  | FAULT          | 1     | Drive is in a fault state.   |
|     |                | 0     | Drive is not in a fault state.   |

DCU profile Status word, parameter **0304 FB STS WORD 2**

| Bit | Name           | Value | Status  |
|-----|----------------|-------|---|
| 16  | ALARM          | 1     | An alarm is on.                                     |
|     |                | 0     | No alarms are on.                                   |
| 17  | NOTICE         | 1     | A maintenance request is pending.                   |
|     |                | 0     | No maintenance request                              |
| 18  | DIRLOCK        | 1     | Direction lock is ON. (Direction change is locked.) |
|     |                | 0     | Direction lock is OFF.                              |
| 19  | LOCALLOCK      | 1     | Local mode lock is ON. (Local mode is locked.)      |
|     |                | 0     | Local mode lock is OFF.                             |
| 20  | CTL_MODE       | 1     | Drive is in vector control mode.                    |
|     |                | 0     | Drive is in scalar control mode.                    |
| 21  | JOGGING ACTIVE | 1     | Jogging function is active.                         |
|     |                | 0     | Jogging function is not active.                     |

| DCU profile Status word, parameter 0304 FB STS WORD 2 |              |       |  |
|---|--------------|-------|--|
| Bit   | Name         | Value | Status   |
| 22...<br>25   | Reserved     |       |  |
| 26  | REQ_CTL      | 1     | Control word requested from fieldbus                     |
|   |              | 0     | No operation   |
| 27  | REQ_REF1     | 1     | Reference 1 requested from fieldbus                      |
|   |              | 0     | Reference 1 is not requested from fieldbus.              |
| 28  | REQ_REF2     | 1     | Reference 2 requested from fieldbus                      |
|   |              | 0     | Reference 2 is not requested from fieldbus.              |
| 29  | REQ_REF2EXT  | 1     | External PID reference 2 requested from fieldbus         |
|   |              | 0     | External PID reference 2 is not requested from fieldbus. |
| 30  | ACK_STARTINH | 1     | Start inhibit from fieldbus                              |
|   |              | 0     | No start inhibit from fieldbus                           |
| 31  | Reserved     |       |  |



[www.nicsanat.com](http://www.nicsanat.com)

021-87700210



# 14

## Fieldbus control with fieldbus adapter

---

### What this chapter contains


The chapter describes how the drive can be controlled by external devices over a communication network through a fieldbus adapter.

### System overview

The drive can be connected to an external control system through a fieldbus adapter or embedded fieldbus. For embedded fieldbus control, see chapter [Fieldbus control with embedded fieldbus](#) on page 313.

The fieldbus adapter is connected to drive terminal X3.

---

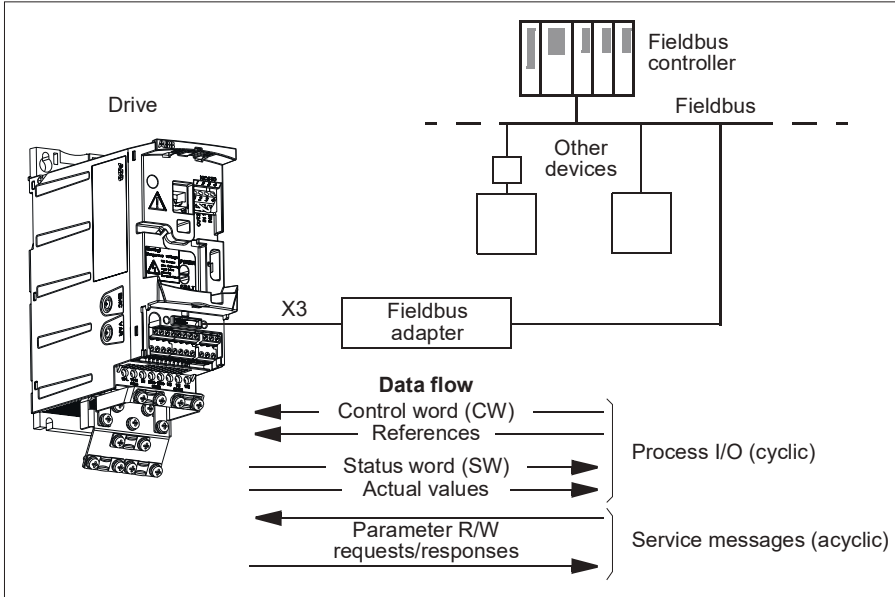

The drive can be set to receive all of its control information through the fieldbus interface, or the control can be distributed between the fieldbus interface and other available sources, eg, digital and analog inputs.

The drive can communicate to a control system through a fieldbus adapter using, for example, the following serial communication protocols. Other protocols may be available; contact your local ABB representative.

- PROFIBUS-DP (FPBA-01 adapter)
- CANopen (FCAN-01 adapter)
- ControlNet (FCNA-01 adapter)
- DeviceNet™ (FDNA-01 adapter)
- Ethernet (FENA-01 adapter)
- Modbus RTU (FMBA-01 adapter. See chapter *Fieldbus control with embedded fieldbus* on page 313.)
- RS-485 (FSCA-01 adapter)

The drive detects automatically which fieldbus adapter is connected to the drive terminal X3 (with the exception of FMBA-01). The DCU profile is always used in communication between the drive and the fieldbus adapter (see section *Fieldbus control interface* on page 345). The communication profile on the fieldbus network depends on the type and settings of the connected adapter.

The default profile settings are protocol-dependent (for example, vendor-specific profile (ABB drives) for PROFIBUS and industry-standard drive profile (AC/DC Drive) for DeviceNet).

## Setting up communication through a fieldbus adapter module

Before configuring the drive for the fieldbus control, the adapter module must be mechanically and electrically installed according to the instructions given in section [Attach the optional fieldbus module](#) on page 38, and the module manual.

The communication between the drive and the fieldbus adapter module is activated by setting parameter [9802 COMM PROT SEL](#) to [EXT FBA](#). The adapter-specific parameters in group [51 EXT COMM MODULE](#) must also be set. See the table below.

| Parameter  | Alternative settings   | Setting for fieldbus control | Function/Information   |
|--|--|------------------------------|--|
| <b>COMMUNICATION INITIALIZATION</b>  |  |                              |  |
| <a href="#">9802 COMM PROT SEL</a>   | <a href="#">NOT SEL</a><br><a href="#">STD MODBUS</a><br><a href="#">EXT FBA</a><br><a href="#">MODBUS</a><br><a href="#">RS232</a>                    | <a href="#">EXT FBA</a>      | Initializes the communication between the drive and the fieldbus adapter module. |
| <b>ADAPTER MODULE CONFIGURATION</b>  |  |                              |  |
| <a href="#">5101 FBA TYPE</a>  | -  | -                            | Displays the type of the fieldbus adapter module.                                |
| <a href="#">5102 FB PAR 2</a>  | These parameters are adapter module-specific. For more information, see the module manual. Note that not all of these parameters are necessarily used. |                              |  |
| ...  |  |                              |  |
| <a href="#">5126 FB PAR 26</a>   |  |                              |  |
| <a href="#">5127 FBA PAR REFRESH</a>   | (0) <a href="#">DONE</a><br>(1) <a href="#">REFRESH</a>  | -                            | Validates any changed adapter module configuration parameter settings.           |
| <b>Note:</b> In adapter module, the parameter group number is A (group 1) for group <a href="#">51 EXT COMM MODULE</a> . |  |                              |  |
| <b>TRANSMITTED DATA SELECTION</b>  |  |                              |  |
| <a href="#">5401 FBA DATA IN 1</a><br>...<br><a href="#">5410 FBA DATA OUT 10</a>  | 0<br>1...6<br>101...9999   |                              | Defines the data transmitted from the drive to the fieldbus controller.          |
| <a href="#">5501 FBA DATA OUT 1</a><br>...<br><a href="#">5510 FBA DATA OUT 10</a>                                       | 0<br>1...6<br>101...9999   |                              | Defines the data transmitted from the fieldbus controller to the drive.          |

| Parameter  | Alternative settings | Setting for fieldbus control | Function/Information |
|--|----------------------|------------------------------|----------------------|
| <b>Note:</b> In adapter module, the parameter group number is C (group 3) for group <i>54 FBA DATA IN</i> and B (group 2) for group <i>55 FBA DATA OUT</i> . |                      |                              |                      |

After the module configuration parameters in groups *51 EXT COMM MODULE*, *54 FBA DATA IN* and *55 FBA DATA OUT* have been set, the drive control parameters (shown in section *Drive control parameters* on page *342*) must be checked and adjusted when necessary.

The new settings will take effect when the drive is next powered up, or when parameter *5127 FBA PAR REFRESH* is activated.

## Drive control parameters

After the fieldbus communication has been set up, the drive control parameters listed in the table below should be checked and adjusted where necessary.

The **Setting for fieldbus control** column gives the value to use when the fieldbus interface is the desired source or destination for that particular signal. The **Function/Information** column gives a description of the parameter.

| Parameter                               | Setting for fieldbus control           | Function/Information   |
|---|--|--|
| <b>CONTROL COMMAND SOURCE SELECTION</b> |  |  |
| <i>1001 EXT1 COMMANDS</i>               | <i>COMM</i>                            | Selects the fieldbus as the source for the start and stop commands when EXT1 is selected as the active control location.   |
| <i>1002 EXT2 COMMANDS</i>               | <i>COMM</i>                            | Selects the fieldbus as the source for the start and stop commands when EXT2 is selected as the active control location.   |
| <i>1003 DIRECTION</i>                   | <i>FORWARD<br/>REVERSE<br/>REQUEST</i> | Enables the rotation direction control as defined by parameters <i>1001</i> and <i>1002</i> . The direction control is explained in section <i>Reference handling</i> on page <i>323</i> . |
| <i>1010 JOGGING SEL</i>                 | <i>COMM</i>                            | Enables jogging 1 or 2 activation through the fieldbus.  |
| <i>1102 EXT1/EXT2 SEL</i>               | <i>COMM</i>                            | Enables EXT1/EXT2 selection through the fieldbus.  |
| <i>1103 REF1 SELECT</i>                 | <i>COMM<br/>COMM+A11<br/>COMM*A11</i>  | Fieldbus reference REF1 is used when EXT1 is selected as the active control location. See section <i>Reference selection and correction</i> on page <i>347</i> .                           |

| Parameter        | Setting for fieldbus control | Function/Information   |
|------------------|------------------------------|--|
| 1106 REF2 SELECT | COMM<br>COMM+AI1<br>COMM*AI1 | Fieldbus reference REF2 is used when EXT2 is selected as the active control location. See section <i>Reference selection and correction</i> on page 347. |

#### OUTPUT SIGNAL SOURCE SELECTION

|                      |                             |   |
|----------------------|-----------------------------|---|
| 1401 RELAY OUTPUT 1  | COMM<br>COMM(-1)            | Enables relay output RO control by signal 0134 COMM RO WORD.                      |
| 1501 AO1 CONTENT SEL | 135 (ie, 0135 COMM VALUE 1) | Directs the contents of fieldbus reference 0135 COMM VALUE 1 to analog output AO. |

#### SYSTEM CONTROL INPUTS

|                      |                 |  |
|----------------------|-----------------|--|
| 1601 RUN ENABLE      | COMM            | Selects the fieldbus interface as the source for the inverted Run enable signal (Run disable).         |
| 1604 FAULT RESET SEL | COMM            | Selects the fieldbus interface as the source for the fault reset signal.                               |
| 1606 LOCAL LOCK      | COMM            | Selects the fieldbus interface as the source for the local lock signal.                                |
| 1607 PARAM SAVE      | DONE<br>SAVE... | Saves parameter value changes (including those made through fieldbus control) to the permanent memory. |
| 1608 START ENABLE 1  | COMM            | Selects the fieldbus interface as the source for the inverted Start enable 1 (Start disable) signal.   |
| 1609 START ENABLE 2  | COMM            | Selects the fieldbus interface as the source for the inverted Start enable 2 (Start disable) signal.   |

#### LIMITS

|                      |      |  |
|----------------------|------|--|
| 2013 MIN TORQUE SEL  | COMM | Selects the fieldbus interface as the source for the minimum torque limit 1/2 selection.           |
| 2014 MAX TORQUE SEL  | COMM | Selects the fieldbus interface as the source for the maximum torque limit 1/2 selection.           |
| 2201 ACC/DEC 1/2 SEL | COMM | Selects the fieldbus interface as the source for acceleration/deceleration ramp pair 1/2 selection |
| 2209 RAMP INPUT 0    | COMM | Selects the fieldbus interface as the source for forcing ramp input to zero.                       |

#### COMMUNICATION FAULT FUNCTIONS

|                      |  |   |
|----------------------|--|---|
| 3018 COMM FAULT FUNC | NOT SEL<br>FAULT<br>CONST SP 7<br>LAST SPEED | Determines the drive action in case the fieldbus communication is lost. |
|----------------------|--|---|


| Parameter                   | Setting for fieldbus control | Function/Information  |
|-----------------------------|------------------------------|---|
| 3019 <i>COMM FAULT TIME</i> | 0.1 ... 60.0 s               | Defines the time between the communication loss detection and the action selected with parameter 3018 <i>COMM FAULT FUNC.</i> |

| PID CONTROLLER REFERENCE SIGNAL SOURCE SELECTION       |   |                              |
|--|---|------------------------------|
| 4010 <i>SET POINT</i><br>1411 <i>SEL</i><br>0/42<br>10 | <i>COMM</i><br><i>COMM+A11</i><br><i>COMM*A11</i> | PID control reference (REF2) |

## Fieldbus control interface

The communication between a fieldbus system and the drive consists of 16-bit input and output data words. The drive supports at the maximum the use of 10 data words in each direction.

Data transformed from the drive to the fieldbus controller is defined by parameter group **54 FBA DATA IN** and data transformed from the fieldbus controller to the drive is defined by parameter group **55 FBA DATA OUT**.

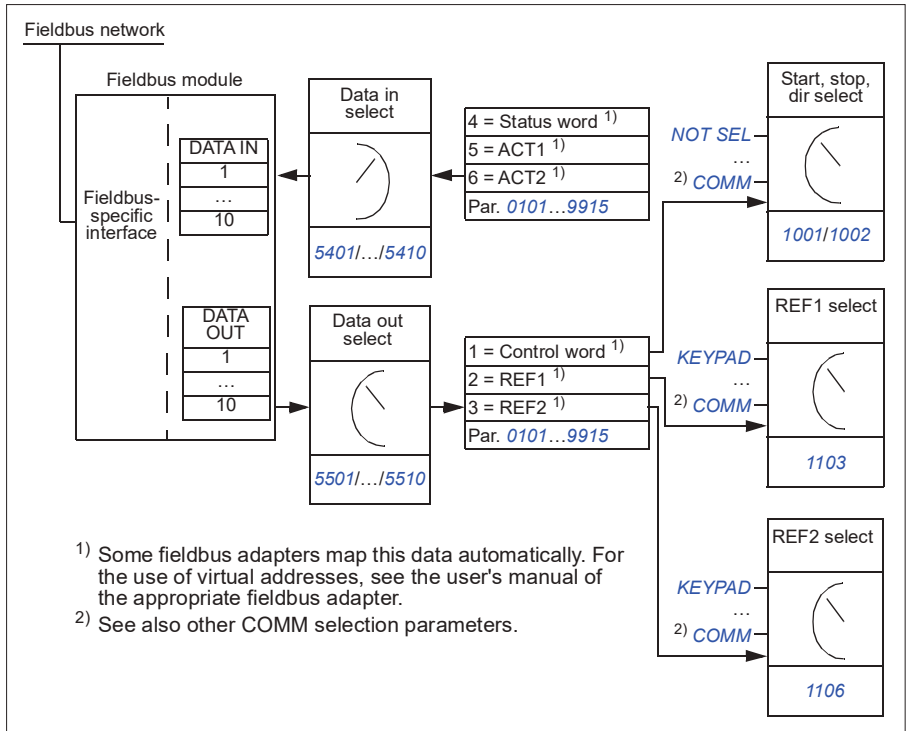

### ■ Control word and Status word

The Control word (CW) is the principal means of controlling the drive from a fieldbus system. The Control word is sent by the fieldbus controller to the drive. The drive switches between its states according to the bit-coded instructions of the Control word.

The Status word (SW) is a word containing status information, sent by the drive to the fieldbus controller.



## References


References (REF) are 16-bit signed integers. A negative reference (indicating reversed direction of rotation) is formed by calculating the two's complement from the corresponding positive reference value. The contents of each reference word can be used as speed or frequency reference.

## Actual values

Actual values (ACT) are 16-bit words containing information on selected operations of the drive.

## Communication profile

The communication between the drive and the fieldbus adapter supports the DCU communication profile. The DCU profile extends the control and status interface to 32 bits.

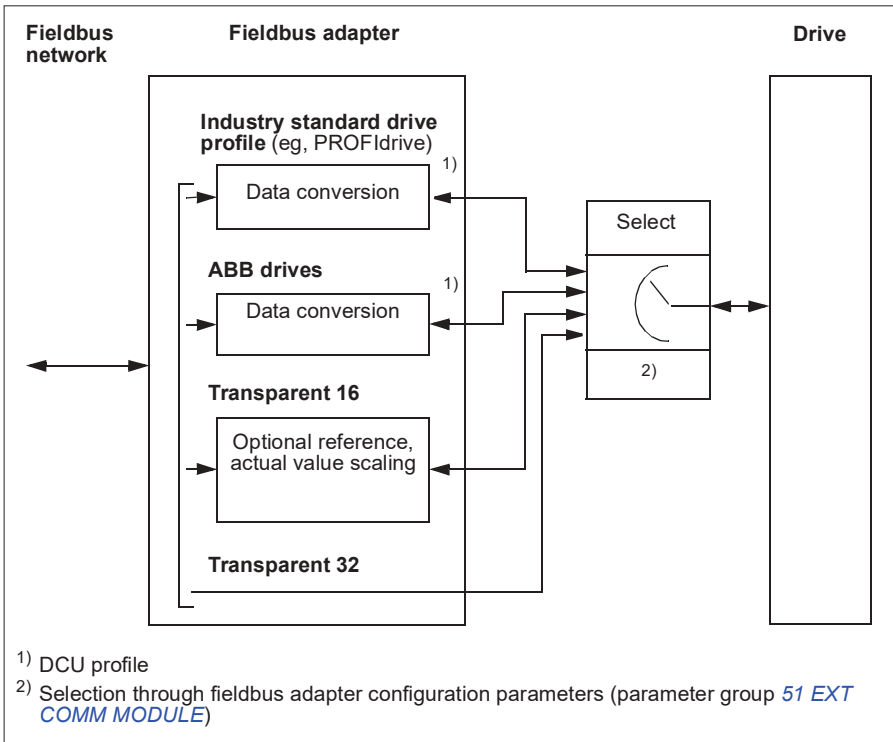





For the DCU profile Control and Status word contents, see section [DCU communication profile](#) on page 333.

## Fieldbus references

### Reference selection and correction

Fieldbus reference (called COMM in signal selection contexts) is selected by setting a reference selection parameter – **1103 REF1 SELECT** or **1106 REF2 SELECT** – to **COMM**, **COMM+AI1** or **COMM\*AI1**. When parameter **1103** or **1106** is set to **COMM**, the fieldbus reference is forwarded as such without correction. When parameter **1103** or **1106** is set to **COMM+AI1** or **COMM\*AI1**, the fieldbus reference is corrected using analog input AI1 as shown in the following examples for the DCU profile.

With the DCU profile the fieldbus reference type can be Hz, rpm or percentage. In the following examples the reference is in rpm.
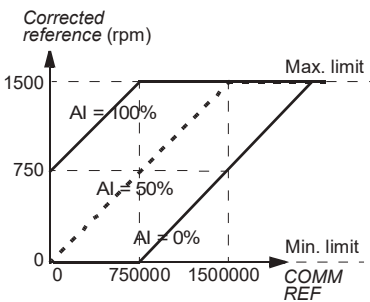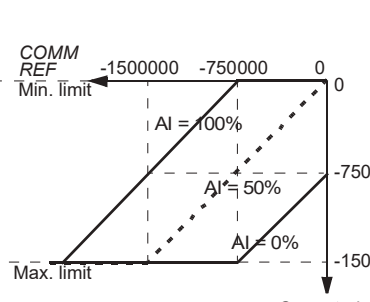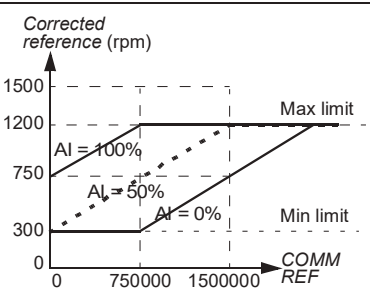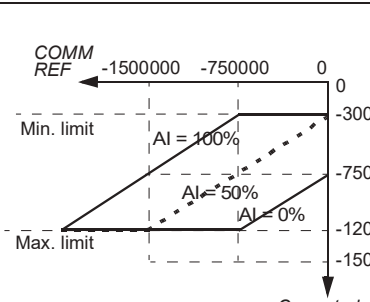
| Setting              | When COMM ≥ 0 rpm   | When COMM ≤ 0 rpm   |
|----------------------|---|---|
| <b>COM<br/>M+AI1</b> | $COMM/1000 + (AI(\%) - 50\%) \cdot (MAX-MIN)$   | $COMM/1000 + (AI(\%) - 50\%) \cdot (MAX-MIN)$                                       |
|                      |    |   |
|                      |   |  |
|                      | Maximum limit is defined by parameter <b>1105 REF1 MAX / 1108 REF2 MA</b> .<br>Minimum limit is defined by parameter <b>1104 REF1 MIN / 1107 REF2 MIN</b> . |   |

| Setting      | When COMM ≥ 0 rpm   | When COMM ≤ 0 rpm   |
|--------------|---|---|
| COM<br>M*AI1 | $(COMM/1000) \cdot (AI(\%) / 50\%)$ <p>The graph shows 'Corrected reference (rpm)' on the y-axis (0 to 1500) and 'COMM REF' on the x-axis (0 to 1500000). A solid line represents the corrected reference, which is 0 for AI=0%, increases linearly to 1500 rpm at AI=100% (COMM REF = 750000), and then remains constant at 1500 rpm up to AI=100% (COMM REF = 1500000). A dashed line shows the uncorrected reference (COMM REF / 1000). Labels include 'Max. limit', 'Min. limit', and AI values of 0%, 50%, and 100%.</p> | $(COMM/1000) \cdot (AI(\%) / 50\%)$ <p>The graph shows 'Corrected reference (rpm)' on the y-axis (0 to -1500) and 'COMM REF' on the x-axis (0 to -1500000). A solid line represents the corrected reference, which is 0 for AI=0%, decreases linearly to -1500 rpm at AI=100% (COMM REF = -750000), and then remains constant at -1500 rpm up to AI=100% (COMM REF = -1500000). A dashed line shows the uncorrected reference (COMM REF / 1000). Labels include 'Min. limit', 'Max. limit', and AI values of 0%, 60%, and 100%.</p> |
|              | <p>The graph shows 'Corrected reference (rpm)' on the y-axis (0 to 1500) and 'COMM REF' on the x-axis (0 to 1500000). A solid line represents the corrected reference, which is 300 rpm for AI=0%, increases linearly to 1200 rpm at AI=100% (COMM REF = 750000), and then remains constant at 1200 rpm up to AI=100% (COMM REF = 1500000). A dashed line shows the uncorrected reference (COMM REF / 1000). Labels include 'Max.x limit', 'Min. limit', and AI values of 0%, 50%, and 100%.</p>                              | <p>The graph shows 'Corrected reference (rpm)' on the y-axis (0 to -1500) and 'COMM REF' on the x-axis (0 to -1500000). A solid line represents the corrected reference, which is -300 rpm for AI=0%, decreases linearly to -1200 rpm at AI=100% (COMM REF = -750000), and then remains constant at -1200 rpm up to AI=100% (COMM REF = -1500000). A dashed line shows the uncorrected reference (COMM REF / 1000). Labels include 'Max. limit', 'Min. limit', and AI values of 0%, 50%, and 100%.</p>                              |
|              | Maximum limit is defined by parameter <a href="#">1105 REF1 MAX</a> / <a href="#">1108 REF2 MA</a> .<br>Minimum limit is defined by parameter <a href="#">1104 REF1 MIN</a> / <a href="#">1107 REF2 MIN</a> .   |   |

If the network employs the ODVA AC/DC drive profile and the drive is operating in the scalar mode, the fieldbus speed reference unit is always rpm. The fieldbus adapter module can provide the drive with a frequency reference, if parameter FB PAR 23 ODVA SPEED SCALE or FB PAR 10 ODVA SPEED SCALE is set, but this might not guarantee the accurate speed reference. If there is no accurate speed reference and the EXT1 reference is used, set parameter [1103 REF1 SELECT to ODVA HZ REF](#) (36) to convert the ODVA AC/DC speed reference and actual value type to Hz. In addition, you can set the decimal point location for ODVA frequency reference values by selecting the correct scaling format with parameter [1109 ODVA HZ REF SEL](#).

**Note:** The ODVA AC/DC reference conversion is available only for EXT1 in the scalar mode. The supported networks are Ethernet/IP and DeviceNet.

## Fieldbus reference scaling

Fieldbus references REF1 and REF2 are scaled for the DCU profile as shown in the following table.

**Note:** Any correction of the reference (see section [Reference selection and correction](#) on page 347) is applied before scaling.

| Reference | Range                           | Reference type     | Scaling             | Remarks  |
|-----------|---------------------------------|--------------------|---------------------|--|
| REF1      | -214783648<br>...<br>+214783647 | Speed or frequency | 1000 = 1 rpm / 1 Hz | Final reference limited by <a href="#">1104/1105</a> . Actual motor speed limited by <a href="#">2001/2002</a> (speed) or <a href="#">2007/2008</a> (frequency). |
| REF2      | -214783648<br>...<br>+214783647 | Speed or frequency | 1000 = 1%           | Final reference limited by <a href="#">1107/1108</a> . Actual motor speed limited by <a href="#">2001/2002</a> (speed) or <a href="#">2007/2008</a> (frequency). |
|           |                                 | Torque             | 1000 = 1%           | Final reference limited by <a href="#">2015/2017</a> (torque 1) or <a href="#">2016/2018</a> (torque 2).   |
|           |                                 | PID reference      | 1000 = 1%           | Final reference limited by <a href="#">4012/4013</a> (PID set 1) or <a href="#">4112/4113</a> (PID set 2).   |

**Note:** The settings of parameters [1104 REF1 MIN](#) and [1107 REF2 MIN](#) have no effect on the reference scaling.

## Reference handling

Reference handling is the same for the ABB drives profile (embedded fieldbus) and DCU profile. See section [Reference handling](#) on page 323.

## Actual value scaling

The scaling of the integers sent to the master as Actual values depends on the selected function. See chapter [Actual signals and parameters](#) on page 179.

[www.nicsanat.com](http://www.nicsanat.com)

021-87700210



# 15

## Fault tracing

---

### What this chapter contains

The chapter tells how to reset faults and view the fault history. It also lists all alarm and fault messages including the possible cause and corrective actions.

### Safety



**WARNING!** Only qualified electricians are allowed to maintain the drive. Read the safety instructions in chapter [Safety](#) on page [17](#) before you work on the drive.

---

### Alarm and fault indications

A fault is indicated with a red LED. See section [LEDs](#) on page [374](#).



An alarm or fault message on the panel display indicates an abnormal drive status. Using the information given in this chapter, most alarm and fault causes can be identified and corrected. If not, contact your local ABB representative.

To display the alarms on the control panel, set parameter [1610 DISPLAY ALARMS](#) to value 1 (YES).

The four-digit code number in parenthesis after the fault is for the fieldbus communication. See chapters [Fieldbus control with embedded fieldbus](#) on page [313](#) and [Fieldbus control with fieldbus adapter](#) on page [339](#).

---

## How to reset

The drive can be reset either by pressing the keypad key  (basic control panel) or  (assistant control panel), through digital input or fieldbus, or by switching the supply voltage off for a while. The source for the fault reset signal is selected by parameter [1604 FAULT RESET SEL](#). When the fault has been removed, the motor can be restarted.

## Fault history

When a fault is detected, it is stored in the fault history. The latest faults are stored together with the time stamp.

Parameters [0401 LAST FAULT](#), [0412 PREVIOUS FAULT 1](#) and [0413 PREVIOUS FAULT 2](#) store the most recent faults. Parameters [0404...0409](#) show drive operation data at the time the latest fault occurred. The assistant control panel provides additional information about the fault history. See section [Fault logger mode](#) on page [99](#) for more information.

## Alarm messages generated by the drive

| CODE | ALARM   | CAUSE   | WHAT TO DO   |
|------|---|---|--|
| 2001 | OVERCURRENT<br><i>0308</i> bit 0<br>(programmable fault function <i>1610</i> )    | Output current limit controller is active.<br>High ambient temperature.                           | Check ambient conditions. Load capacity decreases if installation site ambient temperature exceeds 40 °C (104 °F). See section <i>Derating</i> on page <i>378</i> .<br>For more information, see fault <i>0001</i> in <i>Fault messages generated by the drive</i> on page <i>359</i> .  |
| 2002 | OVERVOLTAGE<br><i>0308</i> bit 1<br>(programmable fault function <i>1610</i> )    | DC overvoltage controller is active.  | For more information, see fault <i>0002</i> in <i>Fault messages generated by the drive</i> on page <i>359</i> .   |
| 2003 | UNDERVOLTAGE<br><i>0308</i> bit 2   | DC undervoltage controller is active.   | For more information, see fault <i>0006</i> in <i>Fault messages generated by the drive</i> on page <i>359</i> .   |
| 2004 | DIR LOCK<br><i>0308</i> bit 3   | Change of direction is not allowed.   | Check parameter <i>1003 DIRECTION</i> settings.  |
| 2005 | IO COMM<br><i>0308</i> bit 4<br>(programmable fault function <i>3018, 3019</i> )  | Fieldbus communication break  | Check status of fieldbus communication. See chapter <i>Fieldbus control with embedded fieldbus</i> on page <i>313</i> , chapter <i>Fieldbus control with fieldbus adapter</i> on page <i>339</i> or appropriate fieldbus adapter manual.<br>Check fault function parameter settings.<br>Check connections.<br>Check if master can communicate. |
| 2006 | AI1 LOSS<br><i>0308</i> bit 5<br>(programmable fault function <i>3001, 3021</i> ) | Analog input AI1 signal has fallen below limit defined by parameter <i>3021 AI1 FAULT LIMIT</i> . | For more information, see fault <i>0007</i> in <i>Fault messages generated by the drive</i> on page <i>359</i> .   |
| 2007 | AI2 LOSS<br><i>0308</i> bit 6<br>(programmable fault function <i>3001, 3022</i> ) | Analog input AI2 signal has fallen below limit defined by parameter <i>3022 AI2 FAULT LIMIT</i> . | For more information, see fault in <i>0008 Fault messages generated by the drive</i> on page <i>359</i> .  |
| 2008 | PANEL LOSS<br><i>0308</i> bit 7<br>(programmable fault function <i>3002</i> )     | Control panel selected as active control location for drive has ceased communicating.             | For more information, see fault <i>0010</i> in <i>Fault messages generated by the drive</i> on page <i>359</i> .   |
| 2009 | DEVICE OVERTEMP<br><i>0308</i> bit 8  | Drive IGBT temperature is excessive. Alarm limit depends on the drive type and size.              | Check ambient conditions. See also section <i>Derating</i> on page <i>378</i> .<br>Check air flow and fan operation.<br>Check motor power against drive power.   |



| CODE       | ALARM  | CAUSE   | WHAT TO DO   |
|------------|--|---|--|
| 2010       | MOTOR TEMP<br><i>0308</i> bit 9<br>(programmable fault function<br><i>3005...3009 / 3503</i> ) | Motor temperature is too high (or appears to be too high) due to excessive load, insufficient motor power, inadequate cooling or incorrect start-up data. | For more information, see fault <i>0009</i> in <i>Fault messages generated by the drive</i> on page 359.                           |
|            |  | Measured motor temperature has exceeded alarm limit set by parameter <i>3503 ALARM LIMIT</i> .  |  |
| 2011       | UNDERLOAD<br><i>0308</i> bit 10<br>(programmable fault function<br><i>3013...3015</i> )        | Motor load is too low due to, eg, release mechanism in driven equipment.  | Check for problem in driven equipment.<br>Check fault function parameters.<br>Check motor power against drive power.               |
| 2012       | MOTOR STALL<br><i>0308</i> bit 11<br>(programmable fault function<br><i>3010...3012</i> )      | Motor is operating in stall region due to, eg, excessive load or insufficient motor power.  | Check motor load and drive ratings.<br>Check fault function parameters.  |
| 2013<br>1) | AUTORESET<br><i>0308</i> bit 12  | Automatic reset alarm   | Check parameter group <i>31 AUTOMATIC RESET</i> settings.  |
| 2018<br>1) | PID SLEEP<br><i>0309</i> bit 1<br>(programmable fault function <i>1610</i> )                   | Sleep function has entered sleeping mode.   | See parameter groups <i>40 PROCESS PID SET 1... 41 PROCESS PID SET 2</i> .   |
| 2019       | ID RUN<br><i>0309</i> bit 2  | Motor Identification run is on.   | This alarm belongs to normal start-up procedure. Wait until drive indicates that motor identification is completed.                |
| 2021       | START ENABLE 1 MISSING<br><i>0309</i> bit 4  | No Start enable 1 signal received   | Check parameter <i>1608 START ENABLE 1</i> settings.<br>Check digital input connections.<br>Check fieldbus communication settings. |
| 2022       | START ENABLE 2 MISSING<br><i>0309</i> bit 5  | No Start enable 2 signal received   | Check parameter <i>1609 START ENABLE 2</i> settings.<br>Check digital input connections.<br>Check fieldbus communication settings. |
| 2023       | EMERGENCY STOP<br><i>0309</i> bit 6  | Drive has received emergency stop command and ramps to stop according to ramp time defined by parameter <i>2208 EMERG DEC TIME</i> .                      | Check that it is safe to continue operation.<br>Return emergency stop push button to normal position.                              |

| CODE | ALARM   | CAUSE   | WHAT TO DO   |
|------|---|---|--|
| 2024 | ENCODER ERROR<br><i>0309</i> bit 7<br>(programmable fault function <i>5003</i> )    | Communication fault between pulse encoder and pulse encoder interface module or between module and drive.   | Check pulse encoder and its wiring, pulse encoder interface module and its wiring and parameter group <i>50 ENCODER</i> settings.  |
| 2025 | FIRST START<br><i>0309</i> bit 8  | Motor identification magnetization is on. This alarm belongs to normal start-up procedure.  | Wait until drive indicates that motor identification is completed.   |
| 2026 | INPUT PHASE LOSS<br><i>0309</i> bit 9<br>(programmable fault function <i>3016</i> ) | Intermediate circuit DC voltage is oscillating due to missing input power line phase or blown fuse.<br><br>Alarm is generated when DC voltage ripple exceeds 14% of nominal DC voltage.   | Check input power line fuses.<br>Check for input power supply imbalance.<br><br>Check fault function parameters.   |
| 2029 | MOTOR BACK EMF<br><i>0309</i> bit 12  | Permanent magnet synchronous motor is rotating, start mode 2 ( <i>DC MAGN</i> ) is selected with parameter <i>2101 START FUNCTION</i> , and run is requested. Drive warns that rotating motor cannot be magnetized with DC current. | If start to rotating motor is required, select start mode 1 ( <i>AUTO</i> ) with parameter <i>2101 START FUNCTION</i> . Otherwise drive starts after motor has stopped.  |
| 2035 | SAFE TORQUE OFF<br><i>0309</i> bit 13   | STO (Safe torque off) requested and it functions correctly.<br>Parameter <i>3025 STO OPERATION</i> is set to react with alarm.  | If this was not expected reaction to safety circuit interruption, check cabling of safety circuit connected to STO terminals X1C.<br><br>If different reaction is required, change value of parameter <i>3025 STO OPERATION</i> .<br><br><b>Note:</b> Start signal must be reset (toggled to 0) if STO has been used while drive has been running. |

<sup>1)</sup> Even when the relay output is configured to indicate alarm conditions (eg, parameter *1401 RELAY OUTPUT 1* = 5 (*ALARM*) or 16 (*FLT/ALARM*)), this alarm is not indicated by a relay output.

## Alarms generated by the basic control panel

The basic control panel indicates control panel alarms with a code, A5xxx.

| ALARM CODE | CAUSE   | WHAT TO DO   |
|------------|---|--|
| 5001       | Drive is not responding.  | Check panel connection.  |
| 5002       | Incompatible communication profile  | Contact your local ABB representative.   |
| 5010       | Corrupted panel parameter backup file   | Retry parameter upload.<br>Retry parameter download.   |
| 5011       | Drive is controlled from another source.  | Change drive control to local control mode.  |
| 5012       | Direction of rotation is locked.  | Enable change of direction. See parameter <i>1003 DIRECTION</i> .  |
| 5013       | Panel control is disabled because start inhibit is active.                      | Start from panel is not possible. Reset emergency stop command or remove 3-wire stop command before starting from panel.<br>See section <i>3-wire macro</i> on page <i>111</i> and parameters <i>1001 EXT1 COMMANDS</i> , <i>1002 EXT2 COMMANDS</i> and <i>2109 EMERG STOP SEL</i> . |
| 5014       | Panel control is disabled because of drive fault.                               | Reset drive fault and retry.   |
| 5015       | Panel control is disabled because local control mode lock is active.            | Deactivate local control mode lock and retry.<br>See parameter <i>1606 LOCAL LOCK</i> .  |
| 5018       | Parameter default value is not found.   | Contact your local ABB representative.   |
| 5019       | Writing non-zero parameter value is prohibited.                                 | Only parameter reset is allowed.   |
| 5020       | Parameter or parameter group does not exist or parameter value is inconsistent. | Contact your local ABB representative.   |
| 5021       | Parameter or parameter group is hidden.   | Contact your local ABB representative.   |
| 5022       | Parameter is write protected.   | Parameter value is read-only and cannot be changed.  |
| 5023       | Parameter change is not allowed when drive is running.                          | Stop drive and change parameter value.   |
| 5024       | Drive is executing a task.  | Wait until task is completed.  |
| 5025       | Software is being uploaded or downloaded.                                       | Wait until upload/download is complete.  |
| 5026       | Value is at or below minimum limit.   | Contact your local ABB representative.   |
| 5027       | Value is at or above maximum limit.   | Contact your local ABB representative.   |
| 5028       | Invalid value   | Contact your local ABB representative.   |

| ALARM CODE | CAUSE   | WHAT TO DO   |
|------------|---|--|
| 5029       | Memory is not ready.  | Retry.   |
| 5030       | Invalid request   | Contact your local ABB representative.   |
| 5031       | Drive is not ready for operation, eg, due to low DC voltage.                              | Check input power supply.  |
| 5032       | Parameter error   | Contact your local ABB representative.   |
| 5040       | Parameter download error. Selected parameter set is not in current parameter backup file. | Perform upload function before download.   |
| 5041       | Parameter backup file does not fit into memory.   | Contact your local ABB representative.   |
| 5042       | Parameter download error. Selected parameter set is not in current parameter backup file. | Perform upload function before download.   |
| 5043       | No start inhibit  |  |
| 5044       | Parameter backup file restoring error   | Check that file is compatible with drive.  |
| 5050       | Parameter upload aborted  | Retry parameter upload.  |
| 5051       | File error  | Contact your local ABB representative.   |
| 5052       | Parameter upload has failed.  | Retry parameter upload.  |
| 5060       | Parameter download aborted  | Retry parameter download.  |
| 5062       | Parameter download has failed.  | Retry parameter download.  |
| 5070       | Panel backup memory write error   | Contact your local ABB representative.   |
| 5071       | Panel backup memory read error  | Contact your local ABB representative.   |
| 5080       | Operation is not allowed because drive is not in local control mode.                      | Switch to local control mode.  |
| 5081       | Operation is not allowed because of active fault.   | Check cause of fault and reset fault.  |
| 5083       | Operation is not allowed because parameter lock is on.                                    | Check parameter <b>1602 PARAMETER LOCK</b> setting.  |
| 5084       | Operation is not allowed because drive is performing a task.                              | Wait until task is completed and retry.  |
| 5085       | Parameter download from source to destination drive has failed.                           | Check that source and destination drive types are same, ie, ACS355. See type designation label of the drive.       |
| 5086       | Parameter download from source to destination drive has failed.                           | Check that source and destination drive type designations are the same. See type designation labels of the drives. |

| ALARM CODE | CAUSE   | WHAT TO DO   |
|------------|---|--|
| 5087       | Parameter download from source to destination drive has failed because parameter sets are incompatible. | Check that source and destination drive information are same. See parameters in group <a href="#">33 INFORMATION</a> . |
| 5088       | Operation has failed because of drive memory error.   | Contact your local ABB representative.   |
| 5089       | Download has failed because of CRC error.   | Contact your local ABB representative.   |
| 5090       | Download has failed because of data processing error.   | Contact your local ABB representative.   |
| 5091       | Operation has failed because of parameter error.  | Contact your local ABB representative.   |
| 5092       | Parameter download from source to destination drive has failed because parameter sets are incompatible. | Check that source and destination drive information are same. See parameters in group <a href="#">33 INFORMATION</a> . |

## Fault messages generated by the drive

| CODE | FAULT                               | CAUSE  | WHAT TO DO  |
|------|-------------------------------------|--|---|
| 0001 | OVERCURRENT<br>(2310)<br>0305 bit 0 | Output current has exceeded trip level.  |   |
|      |                                     | Sudden load change or stall.   | Check motor load and mechanics.   |
|      |                                     | Insufficient acceleration time.  | Check acceleration time (2202 and 2205). Check the possibility of using vector control.                                 |
|      |                                     | Incorrect motor data.  | Check that motor data (Group 99) is equal to motor rating plate values. If using vector control, perform ID run (9910). |
|      |                                     | Motor and/or drive is too small for the application.   | Check sizing.   |
|      |                                     | Damaged motor cables, damaged motor or wrong motor connection (star/delta).  | Check motor, motor cable and connections (including phasing).   |
|      |                                     | Internal fault of the drive. Drive gives an overcurrent fault after start command even when the motor is not connected (use scalar control in this trial). | Replace the drive.  |
|      |                                     | High frequency noise in STO lines.   | Check the STO cabling and remove the noise sources nearby.  |
| 0002 | DC OVERVOLT<br>(3210)<br>0305 bit 1 | Excessive intermediate circuit DC voltage. DC overvoltage trip limit is 420 V for 200 V drives and 840 V for 400 V drives.                                 |   |
|      |                                     | Supply voltage is too high or noisy. Static or transient overvoltage in the input power supply.  | Check input voltage level and check power line for static or transient overvoltage                                      |
|      |                                     | If the drive is used in a floating network, DC overvoltage fault may appear  | In a floating network, remove the EMC screw from the drive.   |

| CODE | FAULT  | CAUSE  | WHAT TO DO   |
|------|--|--|--|
|      |  | <p>If the overvoltage fault appears during deceleration, possible causes are:</p> <ul style="list-style-type: none"> <li>• Overvoltage controller disabled.</li> <li>• Deceleration time is too short.</li> <li>• Faulty or undersized braking chopper.</li> </ul> | <ul style="list-style-type: none"> <li>• Check that overvoltage controller is on (parameter <a href="#">2005 OVERVOLT CTRL</a>).</li> <li>• Check deceleration time (<a href="#">2203</a>, <a href="#">2206</a>).</li> <li>• Check brake chopper and resistor (if used). DC overvoltage control must be deactivated when brake chopper and resistor is used (parameter <a href="#">2005 OVERVOLT CTRL</a>). Retrofit drive with brake chopper and brake resistor.</li> </ul> |
| 0003 | DEV OVERTEMP<br>(4210)<br><a href="#">0305</a> bit 2 | Drive IGBT temperature is excessive. The fault trip limit depends on the drive type and size.  |  |
|      |  | Ambient temperature is too high.   | Check ambient conditions. See also section <a href="#">Derating</a> on page <a href="#">378</a> .  |
|      |  | Airflow through the inverter is not free.  | Check air flow and free space above and below the drive (see section <a href="#">Free space around the drive</a> on page <a href="#">34</a> ).   |
|      |  | Fan is not working properly  | Check fan operation.   |
|      |  | Overloading of the drive.  | 50% overload is allowed for one minute in ten minutes. If higher switching frequency (parameter <a href="#">2606</a> ) is used, follow the <a href="#">Derating</a> rules on page <a href="#">378</a> .  |
| 0004 | SHORT CIRC<br>(2340)<br><a href="#">0305</a> bit 3   | Short-circuit in motor cable(s) or motor.  |  |
|      |  | Damaged motor or motor cable.  | Check motor and cable insulation. Check motor winding  |
|      |  | Internal fault of the drive. Drive gives an overcurrent fault after start command even when the motor is not connected (use scalar control in this trial).   | Replace the drive.   |
|      |  | High frequency noise in STO lines.   | Check the STO cabling and remove the noise sources nearby.   |
| 0006 | DC UNDERVOLT<br>(3220)<br><a href="#">0305</a> bit 5 | Intermediate circuit DC voltage is not sufficient.   | Check input power supply and fuses.  |
|      |  | Undervoltage controller disabled.  | Check that undervoltage controller is on (parameter <a href="#">2006 UNDERVOLT CTRL</a> ).   |

| CODE | FAULT   | CAUSE   | WHAT TO DO  |
|------|---|---|---|
|      |   | Missing input power line phase.   | Measure the input and DC voltage during start, stop and running by using a multimeter or check parameter <i>0107 DC BUS VOLTAGE</i> . |
|      |   | Blown fuse  | Check the condition of input fuses.   |
|      |   | Rectifier bridge internal fault.  | Replace the drive.  |
| 0007 | AI1 LOSS<br>(8110)<br><i>0305</i> bit 6<br>(programmable<br>fault function<br><i>3001, 3021</i> ) | Analog input AI1 signal has fallen below limit defined by parameter <i>3021 AI1 FAULT LIMIT</i> . |   |
|      |   | Analog input signal is weak or does not exist.  | Check the source and wire connections of the analog input.  |
|      |   | Analog input signal is lower than fault limit.  | Check parameters <i>3001 AI&lt;MIN FUNCTION</i> and <i>3021 AI1 FAULT LIMIT</i> .   |
| 0008 | AI2 LOSS<br>(8110)<br><i>0305</i> bit 7<br>(programmable<br>fault function<br><i>3001, 3022</i> ) | Analog input AI2 signal has fallen below limit defined by parameter <i>3022 AI2 FAULT LIMIT</i> . | .   |
|      |   | Analog input signal is weak or does not exist.  | Check the source and wire connections of analog input.  |
|      |   | Analog input signal is lower than fault limit.  | Check parameters <i>3001 AI&lt;MIN FUNCTION</i> and <i>3021 AI1 FAULT LIMIT</i> .   |



| CODE | FAULT   | CAUSE   | WHAT TO DO   |
|------|---|---|--|
| 0009 | MOT OVERTEMP<br>(4310)<br><i>0305</i> bit 8<br>(programmable<br>fault function<br><i>3005...3009 /</i><br><i>3504</i> ) | Motor temperature<br>estimation is too high.  |  |
|      |   | Excessive load or<br>insufficient motor power   | Check motor ratings, load and cooling.   |
|      |   | Incorrect start-up data.  | Check start-up data.<br>Check fault function parameters<br><i>3005...3009</i> .<br>Minimize IR compensation to avoid<br>heating (parameter <i>2603 IR COMP</i><br><i>VOLT</i> ).<br>Check frequency of the motor (low<br>running frequency of motor with high<br>input current can cause this fault).<br>Let the motor cool down. The<br>necessary cooling time period<br>depends on the value of parameter<br><i>3006 MOT THERM TIME</i> . Motor<br>temperature estimation is counted<br>down only when the drive is powered<br>on. |
|      |   | Measured motor<br>temperature has<br>exceeded the fault limit<br>set by parameter <i>3504</i><br><i>FAULT LIMIT</i> . | Check value of fault limit.<br>Check that actual number of sensors<br>corresponds to value set by parameter<br><i>3501 SENSOR TYPE</i> .<br>Let the motor cool down. Ensure<br>proper motor cooling: Check the<br>cooling fan, clean cooling surfaces,<br>etc.   |
| 0010 | PANEL LOSS<br>(5300)<br><i>0305</i> bit 9<br>(programmable<br>fault function<br><i>3002</i> )                           | Control panel selected<br>as active control location<br>for drive has ceased<br>communicating.                        | Check panel connection.<br>Check fault function parameters.<br>Check parameter <i>3002 PANEL</i><br><i>COMM ERR</i> .<br>Check control panel connector.<br>Refit control panel in mounting<br>platform.<br>If the drive is in external control mode<br>(REM) and is set to accept start/stop,<br>direction commands or references<br>through control panel:<br>Check group <i>10 START/STOP/DIR</i><br>and <i>11 REFERENCE SELECT</i><br>settings.   |
| 0011 | ID RUN FAIL<br>(FF84)<br><i>0305</i> bit 10   | Motor ID run is not<br>completed successfully.  | Check motor connection.<br>Check start-up data (group <i>99 START-</i><br><i>UP DATA</i> ).<br>Check maximum speed (parameter<br><i>2002</i> ). It should be at least 80% of<br>motor nominal speed (parameter<br><i>9908</i> ).<br>Ensure ID run has been performed<br>according to instructions in section <i>ID</i><br><i>run procedure</i> on page <i>71</i> .   |

| CODE | FAULT   | CAUSE   | WHAT TO DO   |
|------|---|---|--|
| 0012 | MOTOR STALL<br>(7121)<br>0305 bit 11<br>(programmable<br>fault function<br>3010...3012) | Motor is operating in stall region due to, eg, excessive load or insufficient motor power.                  | Check motor load and drive ratings.<br>Check fault function parameters 3010...3012.  |
| 0014 | EXT FAULT 1<br>(9000)<br>0305 bit 13<br>(programmable<br>fault function<br>3003)        | External fault 1  | Check external devices for faults.<br>Check parameter 3003 EXTERNAL FAULT 1 setting.   |
| 0015 | EXT FAULT 2<br>(9001)<br>0305 bit 14<br>(programmable<br>fault function<br>3004)        | External fault 2  | Check external devices for faults.<br>Check parameter 3004 EXTERNAL FAULT 2 setting.   |
| 0016 | EARTH FAULT<br>(2330)<br>0305 bit 15<br>(programmable<br>fault function<br>3017)        | Drive has detected earth (ground) fault in motor or motor cable.  | Check motor.<br>Check motor cable. Motor cable length must not exceed maximum specifications. See section <i>Motor connection data</i> on page 387.<br><b>Note:</b> Disabling earth fault (ground fault) may damage drive. |
|      |   | Drive internal fault.   | Internal short-circuit may cause earth fault indication. This has happened if fault 0001 appears after disabling the earth fault. Replace the drive.   |
| 0017 | UNDERLOAD<br>(FF6A)<br>0306 bit 0<br>(programmable<br>fault function<br>3013...3015)    | Motor load is too low due to, eg, release mechanism in driven equipment.                                    | Check for problem in driven equipment.<br>Check fault function parameters 3010...3012.<br>Check motor power against drive power.   |
| 0018 | THERM FAIL<br>(5210)<br>0306 bit 1  | Temperature of the drive exceeds the operating level of the thermistor.                                     | Check that the ambient temperature is not too low.   |
|      |   | Drive internal fault. Thermistor used for drive internal temperature measurement is open or short-circuited | Replace the drive.   |
| 0021 | CURR MEAS<br>(2211)<br>0306 bit 4   | Drive internal fault. Current measurement is out of range.  | Replace the drive.   |

| CODE | FAULT  | CAUSE  | WHAT TO DO   |
|------|--|--|--|
| 0022 | SUPPLY PHASE<br>(3130)<br><i>0306</i> bit 5<br>(programmable fault function <i>3016</i> )        | Intermediate circuit DC voltage is oscillating due to missing input power line phase or blown fuse.  | Check input power line fuses and installation.<br>Check for input power supply imbalance.<br>Check the load.   |
|      |  | Trip occurs when DC voltage ripple exceeds 14% of nominal DC voltage.  | Check fault function parameter <i>2619 DC STABILIZER</i> .   |
| 0023 | ENCODER ERR<br>(7301)<br><i>0306</i> bit 6<br>(programmable fault function <i>5003</i> )         | Communication fault between pulse encoder and pulse encoder interface module or between module and drive.  | Check pulse encoder and its wiring, pulse encoder interface module and its wiring and parameter group <i>50 ENCODER</i> settings.  |
| 0024 | OVERSPEED<br>(7310)<br><i>0306</i> bit 7   | Motor is turning faster than 120% of the highest allowed speed due to incorrectly set minimum/maximum speed, insufficient braking torque or changes in load when using torque reference.<br><br>Operating range limits are set by parameters <i>2001 MINIMUM SPEED</i> and <i>2002 MAXIMUM SPEED</i> (in vector control) or <i>2007 MINIMUM FREQ</i> and <i>2008 MAXIMUM FREQ</i> (in scalar control). | Check minimum/maximum frequency settings (parameters <i>2001 MINIMUM SPEED</i> and <i>2002 MAXIMUM SPEED</i> ).<br>Check adequacy of motor braking torque.<br>Check applicability of torque control.<br>Check need for brake chopper and resistor(s).  |
| 0027 | CONFIG FILE<br>(630F)<br><i>0306</i> bit 10  | Internal configuration file error  | Replace the drive.   |
| 0028 | SERIAL 1 ERR<br>(7510)<br><i>0306</i> bit 11<br>(programmable fault function <i>3018, 3019</i> ) | Fieldbus communication break   | Check status of fieldbus communication. See chapter <i>Fieldbus control with embedded fieldbus</i> on page 313, chapter <i>Fieldbus control with fieldbus adapter</i> on page 339 or appropriate fieldbus adapter manual.<br>Check fault function parameter <i>3018 COMM FAULT FUNC</i> and <i>3019 COMM FAULT TIME</i> settings.<br>Check connections and/or noise on the line.<br>Check if master can communicate. |
| 0029 | EFB CON FILE<br>(6306)<br><i>0306</i> bit 12   | Configuration file reading error   | Error in reading the configuration files of the embedded fieldbus. See fieldbus user's manual.   |

| CODE | FAULT   | CAUSE  | WHAT TO DO  |
|------|---|--|---|
| 0030 | FORCE TRIP<br>(FF90)<br>0306 bit 13   | Trip command received from fieldbus  | Fault trip was caused by fieldbus. See fieldbus user's manual.  |
| 0034 | MOTOR PHASE<br>(FF56)<br>0306 bit 14  | Motor circuit fault due to missing motor phase or motor thermistor relay (used in motor temperature measurement) fault.  | Check motor and motor cable.<br>Check motor thermistor relay (if used).   |
| 0035 | OUTP WIRING<br>(FF95)<br>0306 bit 15<br>(programmable fault function<br>3023) | Incorrect input power and motor cable connection (ie, input power cable is connected to drive motor connection).   | Possible power wiring error detected. Check that input power connections are not connected to drive output.<br>Fault can be declared if input power is delta grounded system and motor cable capacitance is large. This fault can be disabled by parameter 3023 <b>WIRING FAULT</b> . |
| 0036 | INCOMPATIBLE SW<br>(630F)<br>0307 bit 3                                       | Loaded software is not compatible.   | Loaded software is not compatible with the drive. Contact your local ABB representative.  |
| 0037 | CB OVERTEMP<br>(4110)<br>0305 bit 12  | Drive control board overheated. Fault given when measured temperature of the control board (indicated by signal 0150 <b>CB TEMP</b> ) reaches 95 °C for an IP20 drive or 102 °C for an IP66 drive (ACS355-...+B063).<br><br>Parameter 3024 <b>CB TEMP FAULT</b> is set to enable with fault. | Check for excessive ambient temperature.<br>Check for fan failure.<br>Check for obstructions in air flow.<br>Check the dimensioning and cooling of cabinet.   |
| 0044 | SAFE TORQUE OFF<br>(FFA0)<br>0307 bit 4                                       | STO (Safe torque off) requested and it functions correctly.<br><br>Parameter 3025 <b>STO OPERATION</b> is set to react with fault.   | If this was not expected reaction to safety circuit interruption, check cabling of safety circuit connected to STO terminals X1C.<br>If different reaction is required, change value of parameter 3025 <b>STO OPERATION</b> .<br>Reset fault before starting.                         |
| 0045 | STO1 LOST<br>(FFA1)<br>0307 bit 5   | STO (Safe torque off) input channel 1 has not de-energized, but channel 2 has. Opening contacts on channel 1 might have been damaged or there is a short-circuit.  | Check STO circuit cabling and opening of contacts in STO circuit.   |

| CODE | FAULT   | CAUSE   | WHAT TO DO   |
|------|---|---|--|
| 0046 | STO2 LOST<br>(FFA2)<br><i>0307</i> bit 6        | STO (Safe torque off) input channel 2 has not de-energized, but channel 1 has. Opening contacts on channel 2 might have been damaged or there is a short-circuit. | Check STO circuit cabling and opening of contacts in STO circuit.  |
| 0101 | SERF CORRUPT<br>(FF55)<br><i>0307</i> bit 14    | Drive internal error.   | Replace the drive.   |
| 0103 | SERF MACRO<br>(FF55)<br><i>0307</i> bit 14      |   |  |
| 0201 | DSP T1 OVERLOAD<br>(6100)<br><i>0307</i> bit 13 | Drive internal error.   | If fieldbus is in use, check the communication, settings and contacts. Write down fault code and contact your local ABB representative.  |
| 0202 | DSP T2 OVERLOAD<br>(6100)<br><i>0307</i> bit 13 |   |  |
| 0203 | DSP T3 OVERLOAD<br>(6100)<br><i>0307</i> bit 13 |   |  |
| 0204 | DSP STACK ERROR<br>(6100)<br><i>0307</i> bit 12 |   |  |
| 0206 | CB ID ERROR<br>(5000)<br><i>0307</i> bit 11     | Drive internal error.   | Replace the drive.   |
| 1000 | PAR HZRPM<br>(6320)<br><i>0307</i> bit 15       | Incorrect speed/frequency limit parameter setting   | Check parameter settings. Check that following applies: <ul style="list-style-type: none"> <li>• <i>2001 MINIMUM SPEED &lt; 2002 MAXIMUM SPEED</i></li> <li>• <i>2007 MINIMUM FREQ &lt; 2008 MAXIMUM FREQ</i></li> <li>• <i>2001 MINIMUM SPEED / 9908 MOTOR NOM SPEED, 2002 MAXIMUM SPEED / 9908 MOTOR NOM SPEED, 2007 MINIMUM FREQ / 9907 MOTOR NOM FREQ and 2008 MAXIMUM FREQ / 9907 MOTOR NOM FREQ</i> are within range.</li> </ul> |

| CODE | FAULT   | CAUSE   | WHAT TO DO   |
|------|---|---|--|
| 1003 | PAR AI SCALE<br>(6320)<br>0307 bit 15                                     | Incorrect analog input AI signal scaling        | Check parameter group <b>13 ANALOG INPUTS</b> settings. Check that following applies: <ul style="list-style-type: none"> <li>• <b>1301 MINIMUM AI1</b> &lt; <b>1302 MAXIMUM AI1</b></li> <li>• <b>1304 MINIMUM AI2</b> &lt; <b>1305 MAXIMUM AI2</b>.</li> </ul>  |
| 1004 | PAR AO SCALE<br>(6320)<br>0307 bit 15                                     | Incorrect analog output AO signal scaling       | Check parameter group <b>15 ANALOG OUTPUTS</b> settings. Check that following applies: <ul style="list-style-type: none"> <li>• <b>1504 MINIMUM AO1</b> &lt; <b>1505 MAXIMUM AO1</b>.</li> </ul>   |
| 1005 | PAR PCU 2<br>(6320)<br>0307 bit 15  | Incorrect motor nominal power setting           | Check parameter <b>9909 MOTOR NOM POWER</b> setting. Following must apply: <ul style="list-style-type: none"> <li>• <math>1.1 &lt; (9906 \text{ MOTOR NOM CURR} \cdot 9905 \text{ MOTOR NOM VOLT} \cdot 1.73 / P_N) &lt; 3.0</math></li> </ul> <p>Where <math>P_N = 1000 \cdot 9909 \text{ MOTOR NOM POWER}</math> (if units are in kW)<br/>or <math>P_N = 746 \cdot 9909 \text{ MOTOR NOM POWER}</math> (if units are in hp).</p>   |
| 1006 | PAR EXT RO<br>(6320)<br>0307 bit 15<br>(programmable fault function 3027) | Incorrect relay output extension parameters     | Check parameter settings. Check that following applies: <ul style="list-style-type: none"> <li>• Output relay module MREL-01 is connected to drive. See parameter <b>0181 EXTENSION</b>.</li> <li>• <b>1402 RELAY OUTPUT 2</b>, <b>1403 RELAY OUTPUT 3</b> and <b>1410 RELAY OUTPUT 4</b> have non-zero values.</li> </ul> <p>See <i>MREL-01 output relay module user's manual</i> (3AUA0000035974 [English]).</p>   |
| 1007 | PAR FBUSMISS<br>(6320)<br>0307 bit 15                                     | Fieldbus control has not been activated.        | Check fieldbus parameter settings. See chapter <i>Fieldbus control with fieldbus adapter</i> on page 339.  |
| 1009 | PAR PCU 1<br>(6320)<br>0307 bit 15  | Incorrect motor nominal speed/frequency setting | Check parameter settings. Following must apply for induction motor: <ul style="list-style-type: none"> <li>• <math>1 &lt; (60 \cdot 9907 \text{ MOTOR NOM FREQ} / 9908 \text{ MOTOR NOM SPEED}) &lt; 16</math></li> <li>• <math>0.8 &lt; 9908 \text{ MOTOR NOM SPEED} / (60 \cdot 9907 \text{ MOTOR NOM FREQ} / 9913 \text{ MOTOR POLE PAIRS}) &lt; 0.992</math></li> </ul> <p>Following must apply for permanent magnet synchronous motor:</p> <ul style="list-style-type: none"> <li>• <math>9908 \text{ MOTOR NOM SPEED} / (60 \cdot 9907 \text{ MOTOR NOM FREQ} / 9913 \text{ MOTOR POLE PAIRS}) = 1.0</math></li> </ul> |

| CODE | FAULT                              | CAUSE  | WHAT TO DO  |
|------|------------------------------------|--|---|
| 1015 | PAR USER U/F (6320)<br>0307 bit 15 | Incorrect voltage to frequency (U/f) ratio voltage setting.  | Check parameter <i>2610 USER DEFINED U1 ... 2617 USER DEFINED F4</i> settings.  |
| 1017 | PAR SETUP 1 (6320)<br>0307 bit 15  | Only two of the following can be used simultaneously: MTAC-01 pulse encoder interface module, frequency input signal or frequency output signal. | Disable frequency output, frequency input or encoder: <ul style="list-style-type: none"><li>• change transistor output to digital mode (value of parameter <i>1804 TO MODE = 0 [DIGITAL]</i>), or</li><li>• change frequency input selection to other value in parameter groups <i>11 REFERENCE SELECT</i>, <i>40 PROCESS PID SET 1</i>, <i>41 PROCESS PID SET 2</i> and <i>42 EXT / TRIM PID</i>, or</li><li>• disable (parameter <i>5002 ENCODER ENABLE</i>) and remove MTAC-01 pulse encoder interface module.</li></ul> |

## Embedded fieldbus faults

Embedded fieldbus faults can be traced by monitoring group *53 EFB PROTOCOL* parameters. See also fault/alarm *SERIAL 1 ERR (0028)*.

### ■ No master device

If there is no master device on line, parameter *5306 EFB OK MESSAGES* and *5307 EFB CRC ERRORS* values remain unchanged.

What to do:

- Check that the network master is connected and properly configured.
- Check the cable connection.

### ■ Same device address

If two or more devices have the same address, parameter *5307 EFB CRC ERRORS* value increases with every read/write command.

What to do:

- Check the device addresses. No two devices on line may have the same address.

### ■ Incorrect wiring

If the communication wires are swapped (terminal A on one device is connected to terminal B on another device), parameter *5306 EFB OK MESSAGES* value remains unchanged and parameter *5307 EFB CRC ERRORS* increases.

What to do:

Check the RS-232/EIA-485 interface connection.

---



[www.nicsanat.com](http://www.nicsanat.com)  
021-87700210



# 16

## Maintenance and hardware diagnostics

---

### What this chapter contains

The chapter contains preventive maintenance instructions and LED indicator descriptions.

### Maintenance intervals

If installed in an appropriate environment, the drive requires very little maintenance. The table lists the routine maintenance intervals recommended by ABB.

| Maintenance   | Interval               | Instruction   |
|---|------------------------|---|
| Reforming of capacitors                                   | Every year when stored | See <i>Capacitors</i> on page 373.  |
| Check of dustiness, corrosion and temperature             | Every year             |   |
| Replacement of the cooling fan (frame sizes R1...R4)      | Every three years      | See <i>Cooling fan</i> on page 372.   |
| Check and tightening of the power terminals               | Every six years        | See <i>Power connections</i> on page 373.                                   |
| Replacement of the battery in the assistant control panel | Every ten years        | See <i>Changing the battery in the assistant control panel</i> on page 374. |
| Testing of Safe torque off (STO) operation and reaction   | Every year             | See <i>Appendix: Safe torque off (STO)</i> on page 419.                     |

Consult your local ABB Service representative for more details on the maintenance. On the Internet, go to <http://www.abb.com/drives> and select *Drive Services – Maintenance and Field Services*.

---

## Cooling fan

The life span of the cooling fan depends on the drive usage and ambient temperature. Automatic fan on/off control increases the life span (see parameter [1612 FAN CONTROL](#)).

When the assistant control panel is in use, the Notice handler assistant informs when the definable value of the operating hour counter is reached (see parameter [2901 COOLING FAN TRIG](#)). This information can also be passed to the relay output (see group [14 RELAY OUTPUTS](#)) regardless of the used panel type.

Fan failure can be predicted by the increasing noise from the fan bearings. If the drive is operated in a critical part of a process, fan replacement is recommended once these symptoms start appearing. Replacement fans are available from ABB. Do not use other than ABB specified spare parts.


### ■ Replacing the cooling fan (frame sizes R1...R4)

Only frame sizes R1...R4 include a fan; frame size R0 has natural cooling.



**WARNING!** Read and follow the instructions in chapter [Safety](#) on page [17](#). Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the AC power source.
2. Remove the hood if the drive has the NEMA 1 option.
3. Lever the fan holder off the drive frame with, eg, a screwdriver and lift the hinged fan holder slightly upward from its front edge.
4. Free the fan cable from the clip.
5. Disconnect the fan cable.
6. Remove the fan holder from the hinges.

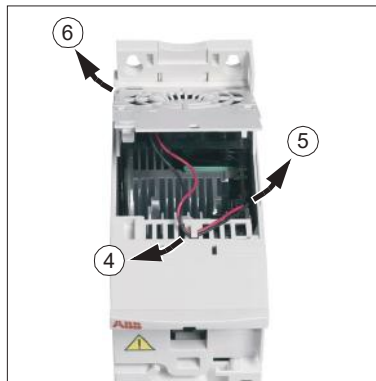

7. Install the new fan holder including the fan in reverse order.



8. Restore power.

## Capacitors

### ■ Reforming the capacitors

The capacitors must be reformed if the drive has been stored for a year. See section *Type designation label* on page 30 for how to find out the manufacturing time from the serial number. For information on reforming the capacitors, refer to *Guide for capacitor reforming in ACS50, ACS55, ACS150, ACS310, ACS350, ACS355, ACS550 and ACH550* (3AFE68735190 [English]), available on the Internet (go to <http://www.abb.com> and enter the code in the Search field).

## Power connections



**WARNING!** Read and follow the instructions in chapter *Safety* on page 17. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for five minutes to let the drive DC capacitors discharge. Ensure by measuring with a multimeter (impedance at least 1 Mohm) that there is no voltage present.
2. Check the tightness of the power cable connections. Use the tightening torques given in section *Terminal and lead-through data for the power cables* on page 386.
3. Restore power.

## Control panel

### ■ Cleaning the control panel

Use a soft damp cloth to clean the control panel. Avoid harsh cleaners which could scratch the display window.

### ■ Changing the battery in the assistant control panel

A battery is only used in assistant control panels that have the clock function available and enabled. The battery keeps the clock operating in memory during power interruptions.

The expected life for the battery is greater than ten years. To remove the battery, use a coin to rotate the battery holder on the back of the control panel. Replace the battery with type CR2032.

**Note:** The battery is NOT required for any control panel or drive functions, except the clock.

## LEDs

There is a green and a red LED on the front of the drive. They are visible through the panel cover but invisible if a control panel is attached to the drive. The assistant control panel has one LED. The table below describes the LED indications.

| Where  | LED off                                    | LED lit and steady |   | LED blinking |   |
|--|--|--------------------|---|--------------|---|
| On the front of the drive.<br>If a control panel is attached to the drive, switch to remote control (otherwise a fault will be generated), and then remove the panel to be able to see the LEDs. | No power                                   | Green              | Power supply on the board OK  | Green        | Drive in an alarm state   |
|  |  | Red                | Drive in a fault state. To reset the fault, press RESET from the control panel or switch off the drive power. | Red          | Drive in a fault state. To reset the fault, switch off the drive power. |
| At the top left corner of the assistant control panel  | Panel has no power or no drive connection. | Green              | Drive in a normal state   | Green        | Drive in an alarm state   |
|  |  | Red                | Drive in a fault state. To reset the fault, press RESET from the control panel or switch off the drive power. | Red          | -   |



# 17

## Technical data

---

### What this chapter contains

The chapter contains the technical specifications of the drive, eg, ratings, sizes and technical requirements as well as provisions for fulfilling the requirements for CE and other marks.

---

## Ratings

| Type<br>ACS355-<br><br>x = E/U <sup>1)</sup>                       | Input <sup>3)</sup> |                                      | Input with<br>choke <sup>3)</sup> |                                      | Output   |  |            |       |      | Frame<br>size |
|--|---------------------|--------------------------------------|-----------------------------------|--------------------------------------|----------|--|------------|-------|------|---------------|
|  | $I_{1N}$            | $I_{1N}$<br>(480 V)<br><sup>4)</sup> | $I_{1N}$                          | $I_{1N}$<br>(480 V)<br><sup>4)</sup> | $I_{2N}$ | $I_{2,1}$<br>min/10 min<br><sup>2)</sup> | $I_{2max}$ | $P_N$ |      |               |
|  | A                   | A                                    | A                                 | A                                    | A        | A  | A          | kW    | hp   |               |
| <b>1-phase <math>U_N = 230\text{ V}</math> (200 ... 240 V)</b>     |                     |                                      |                                   |                                      |          |  |            |       |      |               |
| 01x-02A4-2   | 6.1                 | -                                    | 4.5                               | -                                    | 2.4      | 3.6                                      | 4.2        | 0.37  | 0.5  | R0            |
| 01x-04A7-2   | 11                  | -                                    | 8.1                               | -                                    | 4.7      | 7.1                                      | 8.2        | 0.75  | 1    | R1            |
| 01x-06A7-2   | 16                  | -                                    | 11                                | -                                    | 6.7      | 10.1                                     | 11.7       | 1.1   | 1.5  | R1            |
| 01x-07A5-2   | 17                  | -                                    | 12                                | -                                    | 7.5      | 11.3                                     | 13.1       | 1.5   | 2    | R2            |
| 01x-09A8-2   | 21                  | -                                    | 15                                | -                                    | 9.8      | 14.7                                     | 17.2       | 2.2   | 3    | R2            |
| <b>3-phase <math>U_N = 230\text{ V}</math> (200 ... 240 V)</b>     |                     |                                      |                                   |                                      |          |  |            |       |      |               |
| 03x-02A4-2   | 4.3                 | -                                    | 2.2                               | -                                    | 2.4      | 3.6                                      | 4.2        | 0.37  | 0.5  | R0            |
| 03x-03A5-2   | 6.1                 | -                                    | 3.5                               | -                                    | 3.5      | 5.3                                      | 6.1        | 0.55  | 0.75 | R0            |
| 03x-04A7-2   | 7.6                 | -                                    | 4.2                               | -                                    | 4.7      | 7.1                                      | 8.2        | 0.75  | 1    | R1            |
| 03x-06A7-2   | 12                  | -                                    | 6.1                               | -                                    | 6.7      | 10.1                                     | 11.7       | 1.1   | 1.5  | R1            |
| 03x-07A5-2   | 12                  | -                                    | 6.9                               | -                                    | 7.5      | 11.3                                     | 13.1       | 1.5   | 2    | R1            |
| 03x-09A8-2   | 14                  | -                                    | 9.2                               | -                                    | 9.8      | 14.7                                     | 17.2       | 2.2   | 3    | R2            |
| 03x-13A3-2   | 22                  | -                                    | 13                                | -                                    | 13.3     | 20.0                                     | 23.3       | 3     | 3    | R2            |
| 03x-17A6-2   | 25                  | -                                    | 14                                | -                                    | 17.6     | 26.4                                     | 30.8       | 4     | 5    | R2            |
| 03x-24A4-2   | 41                  | -                                    | 21                                | -                                    | 24.4     | 36.6                                     | 42.7       | 5.5   | 7.5  | R3            |
| 03x-31A0-2   | 50                  | -                                    | 26                                | -                                    | 31       | 46.5                                     | 54.3       | 7.5   | 10   | R4            |
| 03x-46A2-2   | 69                  | -                                    | 41                                | -                                    | 46.2     | 69.3                                     | 80.9       | 11.0  | 15   | R4            |
| <b>3-phase <math>U_N = 400/480\text{ V}</math> (380 ... 480 V)</b> |                     |                                      |                                   |                                      |          |  |            |       |      |               |
| 03x-01A2-4   | 2.2                 | 1.8                                  | 1.1                               | 0.9                                  | 1.2      | 1.8                                      | 2.1        | 0.37  | 0.5  | R0            |
| 03x-01A9-4   | 3.6                 | 3.0                                  | 1.8                               | 1.5                                  | 1.9      | 2.9                                      | 3.3        | 0.55  | 0.75 | R0            |
| 03x-02A4-4   | 4.1                 | 3.4                                  | 2.3                               | 1.9                                  | 2.4      | 3.6                                      | 4.2        | 0.75  | 1    | R1            |
| 03x-03A3-4   | 6.0                 | 5.0                                  | 3.1                               | 2.6                                  | 3.3      | 5.0                                      | 5.8        | 1.1   | 1.5  | R1            |
| 03x-04A1-4   | 6.9                 | 5.8                                  | 3.5                               | 2.9                                  | 4.1      | 6.2                                      | 7.2        | 1.5   | 2    | R1            |
| 03x-05A6-4   | 9.6                 | 8.0                                  | 4.8                               | 4.0                                  | 5.6      | 8.4                                      | 9.8        | 2.2   | 3    | R1            |
| 03x-07A3-4   | 12                  | 9.7                                  | 6.1                               | 5.1                                  | 7.3      | 11.0                                     | 12.8       | 3     | 3    | R1            |
| 03x-08A8-4   | 14                  | 11                                   | 7.7                               | 6.4                                  | 8.8      | 13.2                                     | 15.4       | 4     | 5    | R1            |
| 03x-12A5-4   | 19                  | 16                                   | 11                                | 9.5                                  | 12.5     | 18.8                                     | 21.9       | 5.5   | 7.5  | R3            |
| 03x-15A6-4   | 22                  | 18                                   | 12                                | 10                                   | 15.6     | 23.4                                     | 27.3       | 7.5   | 10   | R3            |
| 03x-23A1-4   | 31                  | 26                                   | 18                                | 15                                   | 23.1     | 34.7                                     | 40.4       | 11    | 15   | R3            |
| 03x-31A0-4   | 52                  | 43                                   | 25                                | 20                                   | 31       | 46.5                                     | 54.3       | 15    | 20   | R4            |
| 03x-38A0-4   | 61                  | 51                                   | 32                                | 26                                   | 38       | 57                                       | 66.5       | 18.5  | 25   | R4            |
| 03x-44A0-4   | 67                  | 56                                   | 38                                | 32                                   | 44       | 66                                       | 77.0       | 22.0  | 30   | R4            |

- 1) E = EMC filter connected (metal EMC filter screw installed),  
U = EMC filter disconnected (plastic EMC filter screw installed), US parametrization.
- 2) Overloading not allowed through Common DC connection.
- 3) Input current is based on the rated motor nominal power ( $P_N$ ), supply network, line inductance and load motor.  
Input values with choke can be met with ABB CHK-xx or typical 5% chokes.
- 4) 480 V values are based on the fact that the motor load current is lower with the same output power.

## ■ Definitions

### Input

|                  |  |
|------------------|--|
| $I_{1N}$         | continuous rms input current (for dimensioning cables and fuses)                                     |
| $I_{1N} (480 V)$ | continuous rms input current (for dimensioning cables and fuses) for drives with 480 V input voltage |

### Output

|                                      |  |
|--------------------------------------|--|
| $I_{2N}$                             | continuous rms current. 50% overload is allowed for one minute every ten minutes.  |
| $I_{2,1 \text{ min}/10 \text{ min}}$ | maximum (50% overload) current allowed for one minute every ten minutes  |
| $I_{2\text{max}}$                    | maximum output current. Available for two seconds at start, otherwise as long as allowed by the drive temperature.   |
| $P_N$                                | typical motor power. The kilowatt ratings apply to most IEC 4-pole motors. The horsepower ratings apply to most NEMA 4-pole motors. This is also the maximum load through the Common DC connection and must not be exceeded. |
| <b>R0...R4</b>                       | ACS355 is manufactured in frame sizes R0...R4. Some instructions and other information that only concern certain frame sizes are marked with the symbol of the frame size (R0...R4).   |

## ■ Sizing

Drive sizing is based on the rated motor current and power. To achieve the rated motor power given in the table, the rated current of the drive must be higher than or equal to the rated motor current. Also the rated power of the drive must be higher than or equal to compared to the rated motor power. The power ratings are the same regardless of the supply voltage within one voltage range.

**Note 1:** The maximum allowed motor shaft power is limited to  $1.5 \cdot P_N$ . If the limit is exceeded, motor torque and current are automatically restricted. The function protects the input bridge of the drive against overload.

**Note 2:** The ratings apply at ambient temperature of 40 °C (104 °F) for  $I_{2N}$ .

**Note 3:** It is important to check that in Common DC systems the power flowing through the common DC connection does not exceed  $P_N$ .



## ■ Derating

$I_{2N}$ : The load capacity decreases if the installation site ambient temperature exceeds 40 °C (104 °F), the altitude exceeds 1000 meters (3300 ft) or the switching frequency is changed from 4 kHz to 8, 12 or 16 kHz.

### Temperature derating, $I_{2N}$

In the temperature range +40 °C...+50 °C (+104 °F...+122 °F), the rated output current ( $I_{2N}$ ) is decreased by 1% for every additional 1 °C (1.8 °F). The output current is calculated by multiplying the current given in the rating table by the derating factor.

**Example:** If the ambient temperature is 50 °C (+122 °F), the derating factor is  $100\% - 1 \frac{\%}{^{\circ}\text{C}} \cdot 10^{\circ}\text{C} = 90\%$  or 0.90. The output current is then  $0.90 \cdot I_{2N}$ .

### Altitude derating, $I_{2N}$

In altitudes 1000...2000 m (3300...6600 ft) above sea level, the derating is 1% for every 100 m (330 ft).

For 3-phase 200 V drives, the maximum altitude is 3000 m (9800 ft) above sea level. In altitudes 2000...3000 m (6600...9800 ft), the derating is 2% for every 100 m (330 ft).

### Switching frequency derating, $I_{2N}$

The drive derates itself automatically when parameter **2607 SWITCH FREQ CTRL** = 1 (ON).

| Switching frequency | Drive voltage rating        |  |
|---------------------|-----------------------------|--|
|                     | $U_N = 200...240 \text{ V}$ | $U_N = 380...480 \text{ V}$  |
| 4 kHz               | No derating                 | No derating  |
| 8 kHz               | $I_{2N}$ derated to 90%.    | $I_{2N}$ derated to 75% for R0 or to 80% for R1...R4.  |
| 12 kHz              | $I_{2N}$ derated to 80%.    | $I_{2N}$ derated to 50% for R0 or to 65% for R1...R4 and maximum ambient temperature derated to 30 °C (86 °F). |
| 16 kHz              | $I_{2N}$ derated to 75%.    | $I_{2N}$ derated to 50% and maximum ambient temperature derated to 30 °C (86 °F).                              |

When parameter **2607 SWITCH FREQ CTRL** = 2 (ON (LOAD)), the drive controls the switching frequency towards the selected switching frequency **2606 SWITCHING FREQ** if the drive's internal temperature allows.

## Power cable sizes and fuses

Cable dimensioning for rated currents ( $I_{1N}$ ) is shown in the table below together with the corresponding fuse types for short-circuit protection of the input power cable. **The rated fuse currents given in the table are the maximums for the mentioned fuse types.** If smaller fuse ratings are used, check that the fuse rms current rating is larger than the rated  $I_{1N}$  current given in section [Ratings](#) on page 376. If 150% output power is needed, multiply current  $I_{1N}$  by 1.5. See also section [Selecting the power cables](#) on page 41.

| Type<br>ACS355-<br><br>x = E/U   | Fuses               |                                | Size of copper conductor in cablings |     |                       |     |                 |     |                       |     |
|--|---------------------|--------------------------------|--------------------------------------|-----|-----------------------|-----|-----------------|-----|-----------------------|-----|
|  | gG                  | UL Class<br>T or CC<br>(600 V) | Supply<br>(U1, V1, W1)               |     | Motor<br>(U2, V2, W2) |     | PE              |     | Brake<br>(BRK+, BRK-) |     |
|  | A                   | A                              | mm <sup>2</sup>                      | AWG | mm <sup>2</sup>       | AWG | mm <sup>2</sup> | AWG | mm <sup>2</sup>       | AWG |
| <b>1-phase <math>U_N = 200...240</math> V (200, 208, 220, 230, 240 V)</b>      |                     |                                |                                      |     |                       |     |                 |     |                       |     |
| 01x-02A4-2   | 10                  | 10                             | 2.5                                  | 14  | 0.75                  | 18  | 2.5             | 14  | 2.5                   | 14  |
| 01x-04A7-2   | 16                  | 20                             | 2.5                                  | 14  | 0.75                  | 18  | 2.5             | 14  | 2.5                   | 14  |
| 01x-06A7-2   | 16/20 <sup>1)</sup> | 25                             | 2.5                                  | 10  | 1.5                   | 14  | 2.5             | 10  | 2.5                   | 12  |
| 01x-07A5-2   | 20/25 <sup>1)</sup> | 30                             | 2.5                                  | 10  | 1.5                   | 14  | 2.5             | 10  | 2.5                   | 12  |
| 01x-09A8-2   | 25/35 <sup>1)</sup> | 35                             | 6                                    | 10  | 2.5                   | 12  | 6               | 10  | 6                     | 12  |
| <b>3-phase <math>U_N = 200...240</math> V (200, 208, 220, 230, 240 V)</b>      |                     |                                |                                      |     |                       |     |                 |     |                       |     |
| 03x-02A4-2   | 10                  | 10                             | 2.5                                  | 14  | 0.75                  | 18  | 2.5             | 14  | 2.5                   | 14  |
| 03x-03A5-2   | 10                  | 10                             | 2.5                                  | 14  | 0.75                  | 18  | 2.5             | 14  | 2.5                   | 14  |
| 03x-04A7-2   | 10                  | 15                             | 2.5                                  | 14  | 0.75                  | 18  | 2.5             | 14  | 2.5                   | 14  |
| 03x-06A7-2   | 16                  | 15                             | 2.5                                  | 12  | 1.5                   | 14  | 2.5             | 12  | 2.5                   | 12  |
| 03x-07A5-2   | 16                  | 15                             | 2.5                                  | 12  | 1.5                   | 14  | 2.5             | 12  | 2.5                   | 12  |
| 03x-09A8-2   | 16                  | 20                             | 2.5                                  | 12  | 2.5                   | 12  | 2.5             | 12  | 2.5                   | 12  |
| 03x-13A3-2   | 25                  | 30                             | 6                                    | 10  | 6                     | 10  | 6               | 10  | 2.5                   | 12  |
| 03x-17A6-2   | 25                  | 35                             | 6                                    | 10  | 6                     | 10  | 6               | 10  | 2.5                   | 12  |
| 03x-24A4-2   | 63                  | 60                             | 10                                   | 8   | 10                    | 8   | 10              | 8   | 6                     | 10  |
| 03x-31A0-2   | 80                  | 80                             | 16                                   | 6   | 16                    | 6   | 16              | 6   | 10                    | 8   |
| 03x-46A2-2   | 100                 | 100                            | 25                                   | 2   | 25                    | 2   | 16              | 4   | 10                    | 8   |
| <b>3-phase <math>U_N = 380...480</math> V (380, 400, 415, 440, 460, 480 V)</b> |                     |                                |                                      |     |                       |     |                 |     |                       |     |
| 03x-01A2-4   | 10                  | 10                             | 2.5                                  | 14  | 0.75                  | 18  | 2.5             | 14  | 2.5                   | 14  |
| 03x-01A9-4   | 10                  | 10                             | 2.5                                  | 14  | 0.75                  | 18  | 2.5             | 14  | 2.5                   | 14  |
| 03x-02A4-4   | 10                  | 10                             | 2.5                                  | 14  | 0.75                  | 18  | 2.5             | 14  | 2.5                   | 14  |
| 03x-03A3-4   | 10                  | 10                             | 2.5                                  | 12  | 0.75                  | 18  | 2.5             | 12  | 2.5                   | 12  |
| 03x-04A1-4   | 16                  | 15                             | 2.5                                  | 12  | 0.75                  | 18  | 2.5             | 12  | 2.5                   | 12  |
| 03x-05A6-4   | 16                  | 15                             | 2.5                                  | 12  | 1.5                   | 14  | 2.5             | 12  | 2.5                   | 12  |
| 03x-07A3-4   | 16                  | 20                             | 2.5                                  | 12  | 1.5                   | 14  | 2.5             | 12  | 2.5                   | 12  |
| 03x-08A8-4   | 20                  | 25                             | 2.5                                  | 12  | 2.5                   | 12  | 2.5             | 12  | 2.5                   | 12  |
| 03x-12A5-4   | 25                  | 30                             | 6                                    | 10  | 6                     | 10  | 6               | 10  | 2.5                   | 12  |
| 03x-15A6-4   | 35                  | 35                             | 6                                    | 8   | 6                     | 8   | 6               | 8   | 2.5                   | 12  |
| 03x-23A1-4   | 50                  | 50                             | 10                                   | 8   | 10                    | 8   | 10              | 8   | 6                     | 10  |
| 03x-31A0-4   | 80                  | 80                             | 16                                   | 6   | 16                    | 6   | 16              | 6   | 10                    | 8   |
| 03x-38A0-4   | 100                 | 100                            | 16                                   | 4   | 16                    | 4   | 16              | 4   | 10                    | 8   |
| 03x-44A0-4   | 100                 | 100                            | 25                                   | 4   | 25                    | 4   | 16              | 4   | 10                    | 8   |

<sup>1)</sup> If 50% overload capacity is needed, use the larger fuse alternative.

## ■ Fuses (IEC)

**Check that the operating time of the fuse is below 0.5 seconds.** The operating time depends on the fuse type, the supply network impedance as well as the cross-sectional area, material and length of the supply cable. In case the 0.5 seconds operating time is exceeded with the gG fuses, ultra rapid (aR) fuses will in most cases reduce the operating time to an acceptable level.

**Note 1:** Larger fuses must not be used when the input power cable is selected according to this table.

**Note 2:** Choose the correct fuse size according to the actual input current which depends on the input line voltage and the input choke selection.

**Note 3:** Other fuse types can be used if they meet the ratings and the melting curve of the fuse does not exceed the melting curve of the fuse mentioned in this table.

## ■ Fuses (UL)

UL class T fuses for branch circuit protection per NEC are listed in the table above. Fast acting class T or faster fuses are recommended in the USA.

1. The UL listed fuses in this manual tables are the required branch circuit protection per NEC.
2. Fuses are required as part of the installation. Fuses are not included in the base drive configuration and must be provided by others.
3. Fuses with a higher current rating than specified must not be used.
4. Fuses with a lower current rating than specified may be used if they are of the same voltage and are UL 248 listed fast acting or high-speed fuses.
5. A fuse of a different class can be used at the high fault rating where the  $I_{peak}$  and  $I_{2t}$  of the new fuse is not greater than that of the specified fuse.
6. Recommended drive fuses must be used to maintain drive UL listing. Additional protection can be used. Refer to local codes and regulations.
7. When installing a drive always follow installation instructions and NEC requirements.
8. UL 248 listed, fast acting or high-speed fuses from other manufacturers can be used if they meet the rating requirements specified in the rules above.

## ■ Alternate short-circuit protection

You can use the ABB Type E manual motor protectors MS132 & S1-M3-25, MS165-xx and MS5100-100 as an alternate to the recommended fuses as a means of branch circuit protection. This is in accordance with the National Electrical Code (NEC).

When the correct ABB Type E manual motor protector is selected from the table and used for branch circuit protection, the drive is suitable for use in a circuit capable of delivering no more than 65 kA RMS symmetrical amperes at the drive's maximum rated voltage. See the following table for the appropriate ratings. See the MMP rating

---

table for the minimum enclosure volume of IP20 open type ACS355 mounted in an enclosure.

Drives with and without NEMA 1 enclosure kits are included in the UL file. The MMP selections in the table are also valid for drives having a NEMA 1 enclosure kit installed.

| Type ACS355-  | Input Amps | Frame size | MMP type E <sup>1,2)</sup>         | Min. encl. vol. <sup>5)</sup> |       |
|---|------------|------------|------------------------------------|-------------------------------|-------|
|   |            |            |                                    | dm <sup>3</sup>               | cu in |
| <b>1-phase U<sub>N</sub> = 200...240 V (200, 208, 220, 230, 240 V)</b>              |            |            |                                    |                               |       |
| 01x-02A4-2  | 6.1        | R0         | MS132-6.3 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 01x-04A7-2  | 11.0       | R1         | MS165-16                           | 18.9                          | 1152  |
| 01x-06A7-2  | 16.0       | R1         | MS165-20                           | 18.9                          | 1152  |
| 01x-07A5-2  | 17.0       | R2         | MS165-20                           | -                             | -     |
| 01x-09A8-2  | 21.0       | R2         | MS165-25                           | -                             | -     |
| <b>3-phase U<sub>N</sub> = 200...240 V (200, 208, 220, 230, 240 V)<sup>4)</sup></b> |            |            |                                    |                               |       |
| 03x-02A4-2  | 4.3        | R0         | MS132-6.3 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-03A5-2  | 6.1        | R0         | MS132-6.3 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-04A7-2  | 7.6        | R1         | MS132-10 & S1-M3-25 <sup>3)</sup>  | 18.9                          | 1152  |
| 03x-06A7-2  | 11.8       | R1         | MS165-16                           | 18.9                          | 1152  |
| 03x-07A5-2  | 12.0       | R1         | MS165-16                           | 18.9                          | 1152  |
| 03x-09A8-2  | 14.3       | R2         | MS165-16                           | -                             | -     |
| 03x-13A3-2  | 22.0       | R2         | MS165-25                           | -                             | -     |
| 03x-17A6-2  | 25.0       | R2         | MS165-32                           | -                             | -     |
| 03x-24A4-2  | 41.0       | R3         | MS165-54                           | -                             | -     |
| 03x-31A0-2  | 50.0       | R4         | MS165-65                           | -                             | -     |
| 03x-46A2-2  | 69.0       | R4         | MS5100-100                         | -                             | -     |
| <b>3-phase U<sub>N</sub> = 380, 400, 415 V<sup>4)</sup></b>                         |            |            |                                    |                               |       |
| 03x-01A2-4  | 2.2        | R0         | MS132-2.5 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-01A9-4  | 3.6        | R0         | MS132-4.0 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-02A4-4  | 4.1        | R1         | MS132-6.3 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-03A3-4  | 6.0        | R1         | MS132-6.3 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-04A1-4  | 6.9        | R1         | MS132-10 & S1-M3-25 <sup>3)</sup>  | 18.9                          | 1152  |
| 03x-05A6-4  | 9.6        | R1         | MS132-10 & S1-M3-25 <sup>3)</sup>  | 18.9                          | 1152  |
| 03x-07A3-4  | 12.0       | R1         | MS165-16                           | 18.9                          | 1152  |
| 03x-08A8-4  | 14.0       | R1         | MS165-16                           | 18.9                          | 1152  |
| 03x-12A5-4  | 19.0       | R3         | MS165-20                           | -                             | -     |
| 03x-15A6-4  | 22.0       | R3         | MS165-25                           | -                             | -     |
| 03x-23A1-4  | 31.0       | R3         | MS165-32                           | -                             | -     |
| 03x-31A0-4  | 52.0       | R4         | MS165-65                           | -                             | -     |
| 03x-38A0-4  | 61.0       | R4         | MS165-65                           | -                             | -     |
| 03x-44A0-4  | 67.0       | R4         | MS5100-100                         | -                             | -     |

| Type<br>ACS355-  | Input<br>Amps | Frame<br>size | MMP type E <sup>1,2)</sup>         | Min. encl. vol. <sup>5)</sup> |       |
|--|---------------|---------------|------------------------------------|-------------------------------|-------|
|  |               |               |                                    | dm <sup>3</sup>               | cu in |
| <b>3-phase <math>U_N = 440, 460, 480 \text{ V}^{4)}</math></b> |               |               |                                    |                               |       |
| 03x-01A2-4   | 1.8           | R0            | MS132-2.5 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-01A9-4   | 3.0           | R0            | MS132-4.0 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-02A4-4   | 3.4           | R1            | MS132-4.0 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-03A3-4   | 5.0           | R1            | MS132-6.3 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-04A1-4   | 5.8           | R1            | MS132-6.3 & S1-M3-25 <sup>3)</sup> | 18.9                          | 1152  |
| 03x-05A6-4   | 8.0           | R1            | MS132-10 & S1-M3-25 <sup>3)</sup>  | 18.9                          | 1152  |
| 03x-07A3-4   | 9.7           | R1            | MS132-10 & S1-M3-25 <sup>3)</sup>  | 18.9                          | 1152  |
| 03x-08A8-4   | 11.0          | R1            | MS165-16                           | 18.9                          | 1152  |
| 03x-12A5-4   | 16.0          | R3            | MS165-20                           | -                             | -     |
| 03x-15A6-4   | 18.0          | R3            | MS165-20                           | -                             | -     |
| 03x-23A1-4   | 26.0          | R3            | MS165-32                           | -                             | -     |
| 03x-31A0-4   | 43.0          | R4            | MS165-54                           | -                             | -     |
| 03x-38A0-4   | 51.0          | R4            | MS165-65                           | -                             | -     |
| 03x-44A0-4   | 56.0          | R4            | MS165-65                           | -                             | -     |

3AUA000173741

- 1) All manual motor protectors listed are Type E self-protected up to 65 kA. See ABB publication 2CDC131085M0201 – Manual Motor Starters – North American Applications for complete technical data on the ABB Type E manual motor protectors. In order for these manual motor protectors to be used for branch circuit protection, they must be UL listed Type E manual motor protectors, otherwise they can be used only as an At Motor Disconnect. “At Motor Disconnect” is a disconnect just ahead of the motor on the load side of the panel.
- 2) Manual motor protectors may require adjusting the trip limit from the factory setting at or above the drive input Amps to avoid nuisance tripping. If the manual motor protector is set to the maximum current trip level and nuisance tripping is occurring, select the next size MMP. (MS132-10 is the highest size in the MS132 frame size to meet Type E at 65kA; next size up is MS165-16.)
- 3) Requires the use of the S1-M3-25 line side feeder terminal with the manual motor protector to meet Type E self-protection class.
- 4) 480Y/277V delta systems only: Short-circuit protective devices with slash voltage ratings (e.g. 480Y/277 V AC) can be applied only in solidly grounded networks where the voltage from line-to-ground does not exceed the lower of the two ratings (e.g. 277 V AC), and the voltage from line-to-line does not exceed the higher of the two ratings (e.g. 480 V AC). The lower rating represents the device’s interrupting capability per pole.
- 5) For all drives, the enclosure must be sized to accommodate the specific thermal considerations of the application as well as provide free space for cooling. See section [Free space requirements](#) on page 383. For UL only: The minimum enclosure volume is specified in the UL listing when applied with the ABB Type E MMP shown in the table. ACS355 drives are intended to be mounted in an enclosure unless a NEMA-1 kit is added.

## Dimensions, weights and free space requirements

### ■ Dimensions and weights

| Frame size | Dimensions and weights   |      |     |      |     |      |     |       |     |      |        |      |
|------------|--------------------------|------|-----|------|-----|------|-----|-------|-----|------|--------|------|
|            | IP20 (cabinet) / UL open |      |     |      |     |      |     |       |     |      |        |      |
|            | H1                       |      | H2  |      | H3  |      | W   |       | D   |      | Weight |      |
|            | mm                       | in   | mm  | in   | mm  | in   | mm  | in    | mm  | in   | kg     | lb   |
| R0         | 169                      | 6.65 | 202 | 7.95 | 239 | 9.41 | 70  | 2.76  | 161 | 6.34 | 1.2    | 2.6  |
| R1         | 169                      | 6.65 | 202 | 7.95 | 239 | 9.41 | 70  | 2.76  | 161 | 6.34 | 1.4    | 3.0  |
| R2         | 169                      | 6.65 | 202 | 7.95 | 239 | 9.41 | 105 | 4.13  | 165 | 6.50 | 1.8    | 3.9  |
| R3         | 169                      | 6.65 | 202 | 7.95 | 236 | 9.29 | 169 | 6.65  | 169 | 6.65 | 3.1    | 6.9  |
| R4         | 181                      | 7.13 | 202 | 7.95 | 244 | 9.61 | 260 | 10.24 | 169 | 6.65 | 5.2    | 11.5 |

00353783.xls L

| Frame size | Dimensions and weights |       |     |       |     |       |     |      |        |      |
|------------|------------------------|-------|-----|-------|-----|-------|-----|------|--------|------|
|            | IP20 / NEMA 1          |       |     |       |     |       |     |      |        |      |
|            | H4                     |       | H5  |       | W   |       | D   |      | Weight |      |
|            | mm                     | in    | mm  | in    | mm  | in    | mm  | in   | kg     | lb   |
| R0         | 257                    | 10.12 | 280 | 11.02 | 70  | 2.76  | 169 | 6.65 | 1.6    | 3.5  |
| R1         | 257                    | 10.12 | 280 | 11.02 | 70  | 2.76  | 169 | 6.65 | 1.8    | 3.9  |
| R2         | 257                    | 10.12 | 282 | 11.10 | 105 | 4.13  | 169 | 6.65 | 2.2    | 4.8  |
| R3         | 260                    | 10.24 | 299 | 11.77 | 169 | 6.65  | 177 | 6.97 | 3.7    | 8.2  |
| R4         | 270                    | 10.63 | 320 | 12.60 | 260 | 10.24 | 177 | 6.97 | 5.8    | 12.9 |

00353783.xls L

#### Symbols

##### IP20 (cabinet) / UL open

**H1** height without fastenings and clamping plate

**H2** height with fastenings, without clamping plate

**H3** height with fastenings and clamping plate

##### IP20 / NEMA 1

**H4** height with fastenings and connection box

**H5** height with fastenings, connection box and hood

Weight is calculated as the measured drive weight + cable clamps + 50 g (for component tolerances).

### ■ Free space requirements

| Frame size | Free space required |    |       |    |              |    |
|------------|---------------------|----|-------|----|--------------|----|
|            | Above               |    | Below |    | On the sides |    |
|            | mm                  | in | mm    | in | mm           | in |
| R0...R4    | 75                  | 3  | 75    | 3  | 0            | 0  |

00353783.xls L

## Losses, cooling data and noise

### ■ Losses and cooling data

Frame size R0 has natural convection cooling. Frame sizes R1...R4 are provided with an internal fan. The air flow direction is from bottom to top.

The table below specifies the heat dissipation in the main circuit at nominal load and in the control circuit with minimum load (I/O and panel not in use) and maximum load (all digital inputs in the on state and the panel, fieldbus and fan in use). The total heat dissipation is the sum of the heat dissipation in the main and control circuits.

| Type<br>ACS355-<br>x = E/U  | Heat dissipation            |                 |      | Air flow          |                      |
|---|-----------------------------|-----------------|------|-------------------|----------------------|
|   | Main circuit                | Control circuit |      | m <sup>3</sup> /h | ft <sup>3</sup> /min |
|   | Rated $I_{1N}$ and $I_{2N}$ | Min             | Max  |                   |                      |
| W   | W                           | W               |      |                   |                      |
| <b>1-phase <math>U_N = 200...240</math> V (200, 208, 220, 230, 240 V)</b> |                             |                 |      |                   |                      |
| 01x-02A4-2  | 25                          | 6.1             | 22.7 | -                 | -                    |
| 01x-04A7-2  | 46                          | 9.5             | 26.4 | 24                | 14                   |
| 01x-06A7-2  | 71                          | 9.5             | 26.4 | 24                | 14                   |
| 01x-07A5-2  | 73                          | 10.5            | 27.5 | 21                | 12                   |
| 01x-09A8-2  | 96                          | 10.5            | 27.5 | 21                | 12                   |
| <b>3-phase <math>U_N = 200...240</math> V (200, 208, 220, 230, 240 V)</b> |                             |                 |      |                   |                      |
| 03x-02A4-2  | 19                          | 6.1             | 22.7 | -                 | -                    |
| 03x-03A5-2  | 31                          | 6.1             | 22.7 | -                 | -                    |
| 03x-04A7-2  | 38                          | 9.5             | 26.4 | 24                | 14                   |
| 03x-06A7-2  | 60                          | 9.5             | 26.4 | 24                | 14                   |
| 03x-07A5-2  | 62                          | 9.5             | 26.4 | 21                | 12                   |
| 03x-09A8-2  | 83                          | 10.5            | 27.5 | 21                | 12                   |
| 03x-13A3-2  | 112                         | 10.5            | 27.5 | 52                | 31                   |
| 03x-17A6-2  | 152                         | 10.5            | 27.5 | 52                | 31                   |
| 03x-24A4-2  | 250                         | 16.6            | 35.4 | 71                | 42                   |
| 03x-31A0-2  | 270                         | 33.4            | 57.8 | 96                | 57                   |
| 03x-46A2-2  | 430                         | 33.4            | 57.8 | 96                | 57                   |

| Type<br>ACS355-<br>x = E/U   | Heat dissipation            |                 |      | Air flow          |                      |
|--|-----------------------------|-----------------|------|-------------------|----------------------|
|  | Main circuit                | Control circuit |      |                   |                      |
|  | Rated $I_{1N}$ and $I_{2N}$ | Min             | Max  | m <sup>3</sup> /h | ft <sup>3</sup> /min |
|  | W                           | W               | W    |                   |                      |
| <b>3-phase <math>U_N = 380 \dots 480</math> V (380, 400, 415, 440, 460, 480 V)</b> |                             |                 |      |                   |                      |
| 03x-01A2-4   | 11                          | 6.6             | 24.4 | -                 | -                    |
| 03x-01A9-4   | 16                          | 6.6             | 24.4 | -                 | -                    |
| 03x-02A4-4   | 21                          | 9.8             | 28.7 | 13                | 8                    |
| 03x-03A3-4   | 31                          | 9.8             | 28.7 | 13                | 8                    |
| 03x-04A1-4   | 40                          | 9.8             | 28.7 | 13                | 8                    |
| 03x-05A6-4   | 61                          | 9.8             | 28.7 | 19                | 11                   |
| 03x-07A3-4   | 74                          | 14.1            | 32.7 | 24                | 14                   |
| 03x-08A8-4   | 94                          | 14.1            | 32.7 | 24                | 14                   |
| 03x-12A5-4   | 130                         | 12.0            | 31.2 | 52                | 31                   |
| 03x-15A6-4   | 173                         | 12.0            | 31.2 | 52                | 31                   |
| 03x-23A1-4   | 266                         | 16.6            | 35.4 | 71                | 42                   |
| 03x-31A0-4   | 350                         | 33.4            | 57.8 | 96                | 57                   |
| 03x-38A0-4   | 440                         | 33.4            | 57.8 | 96                | 57                   |
| 03x-44A0-4   | 530                         | 33.4            | 57.8 | 96                | 57                   |

00353783.xls L

## ■ Noise

| Frame size | Noise level |
|------------|-------------|
|            | dBA         |
| R0         | <30         |
| R1         | 50...62     |
| R2         | 50...62     |
| R3         | 50...62     |
| R4         | <62         |

00353783.xls L



## Terminal and lead-through data for the power cables

| Frame size | Max. cable diameter for NEMA 1 |      |               |      | U1, V1, W1, U2, V2, W2, BRK+ and BRK- |     |                   |        | PE              |     |                   |        |
|------------|--------------------------------|------|---------------|------|---------------------------------------|-----|-------------------|--------|-----------------|-----|-------------------|--------|
|            | U1, V1, W1, U2, V2, W2         |      | BRK+ and BRK- |      | Terminal size                         |     | Tightening torque |        | Clamp size      |     | Tightening torque |        |
|            | mm                             | in   | mm            | in   | mm <sup>2</sup>                       | AWG | N·m               | lbf·in | mm <sup>2</sup> | AWG | N·m               | lbf·in |
| R0         | 16                             | 0.63 | 16            | 0.63 | 4.0/6.0                               | 10  | 0.8               | 7      | 25              | 3   | 1.2               | 11     |
| R1         | 16                             | 0.63 | 16            | 0.63 | 4.0/6.0                               | 10  | 0.8               | 7      | 25              | 3   | 1.2               | 11     |
| R2         | 16                             | 0.63 | 16            | 0.63 | 4.0/6.0                               | 10  | 0.8               | 7      | 25              | 3   | 1.2               | 11     |
| R3         | 29                             | 1.14 | 16            | 0.63 | 10.0/16.0                             | 6   | 1.7               | 15     | 25              | 3   | 1.2               | 11     |
| R4         | 35                             | 1.38 | 29            | 1.14 | 25.0/35.0                             | 2   | 2.5               | 22     | 25              | 3   | 1.2               | 11     |

00353783.xls L

## Terminal and lead-through data for the control cables

| Conductor size  |         | Tightening torque |        |
|-----------------|---------|-------------------|--------|
| Min/Max         | Min/Max | N·m               | lbf·in |
| mm <sup>2</sup> | AWG     |                   |        |
| 0.25/1.5        | 24/16   | 0.5               | 4.4    |

## Electric power network specification

|                                   |   |
|-----------------------------------|---|
| <b>Voltage (<math>U_1</math>)</b> | <p>ACS355-xxxx-1 drives: 1-phase 200 ... 240 V AC <math>\pm 10\%</math>. This is indicated on the type designation label as typical input voltage level 1 ~ 230 V AC.</p> <p>ACS355-xxxx-3 drives: 3-phase 200 ... 240 V AC <math>\pm 10\%</math>. This is indicated on the type designation label as typical input voltage level 3 ~ 230 V AC.</p> <p>ACS355-xxxx-3 drives: 3-phase 380 ... 480 V AC <math>\pm 10\%</math>. This is indicated on the type designation label as typical input voltage level 3 ~ 400/480 V AC.</p> |
| <b>Short-circuit capacity</b>     | Maximum allowed prospective short-circuit current at the input power connection as defined in IEC 61439-1:2009 and UL 508C is 100 kA. The drive is suitable for use in a circuit capable of delivering not more than 100 kA rms symmetrical amperes at the drive maximum rated voltage.   |
| <b>Frequency</b>                  | 50/60 Hz $\pm 5\%$ , maximum rate of change 17%/s   |
| <b>Imbalance</b>                  | Max. $\pm 3\%$ of nominal phase-to-phase input voltage  |

## Motor connection data

|  |   |
|--|---|
| <b>Motor type</b>  | Asynchronous induction motor or permanent magnet synchronous motor          |
| <b>Voltage (<math>U_2</math>)</b>                        | 0 to $U_1$ , 3-phase symmetrical, $U_{max}$ at the field weakening point    |
| <b>Short-circuit protection (IEC 61800-5-1, UL 508C)</b> | The motor output is short-circuit proof by IEC 61800-5-1 and UL 508C.       |
| <b>Frequency</b>   | 0...599 Hz  |
| <b>Frequency resolution</b>                              | 0.01 Hz   |
| <b>Current</b>   | See section <a href="#">Ratings</a> on page 376.                            |
| <b>Power limit</b>                                       | $1.5 \cdot P_N$   |
| <b>Field weakening point</b>                             | 10...599 Hz   |
| <b>Switching frequency</b>                               | 4, 8, 12 or 16 kHz (in scalar control)                                      |
| <b>Speed control</b>                                     | See section <a href="#">Speed control performance figures</a> on page 145.  |
| <b>Torque control</b>                                    | See section <a href="#">Torque control performance figures</a> on page 146. |

## Maximum recommended motor cable length

### Operational functionality and motor cable length

The drive is designed to operate with optimum performance with the following maximum motor cable lengths. The motor cable lengths may be extended with output chokes as shown in the table.

| Frame size                                      | Maximum motor cable length |     |
|---|----------------------------|-----|
|   | m                          | ft  |
| <b>Standard drive, without external options</b> |                            |     |
| R0  | 30                         | 100 |
| R1...R4   | 50                         | 165 |
| <b>With external output chokes</b>              |                            |     |
| R0  | 60                         | 195 |
| R1...R4   | 100                        | 330 |

**Note:** In multimotor systems, the calculated sum of all motor cable lengths must not exceed the maximum motor cable length given in the table.

### EMC compatibility and motor cable length

To comply with the European EMC Directive (standard IEC/EN 61800-3), use the following maximum motor cable lengths for 4 kHz switching frequency.

| All frame sizes                                 | Maximum motor cable length, 4 kHz |                              |
|---|-----------------------------------|------------------------------|
|   | m                                 | ft                           |
| <b>With internal EMC filter</b>                 |                                   |                              |
| Second environment (category C3 <sup>1)</sup> ) | 30                                | 100                          |
| <b>With optional external EMC filter</b>        |                                   |                              |
| Second environment (category C3 <sup>1)</sup> ) | 30 (at least) <sup>2)</sup>       | 100 (at least) <sup>2)</sup> |
| First environment (category C2 <sup>1)</sup> )  | 30 (at least) <sup>2)</sup>       | 100 (at least) <sup>2)</sup> |
| First environment (category C1 <sup>1)</sup> )  | 10 (at least) <sup>2)</sup>       | 30 (at least) <sup>2)</sup>  |

<sup>1)</sup> See the terms in section [Definitions](#) on page 393.

<sup>2)</sup> Maximum motor cable length is determined by the drive's operational factors. Contact your local ABB representative for the

**Note 1:** The internal EMC filter must be disconnected by removing the EMC screw (see the figure on page 50) while using the low leakage current EMC filter (LRFI-XX).

**Note 2:** Radiated emissions are according to C2 with and without an external EMC filter.

**Note 3:** Category C1 with conducted emissions only. Radiated emissions are not compatible when measured with standard emission measurement setup and should be checked or measured on cabinet and machine installations case by case.

## Control connection data

|   |   |   |
|---|---|---|
| <b>Analog inputs</b><br><b>X1A: 2 and 5</b><br><b>(AI1 and AI2)</b> | Voltage signal, unipolar  | 0 (2)...10 V, $R_{in} = 675 \text{ kohm}$   |
|   | bipolar   | -10...10 V, $R_{in} = 675 \text{ kohm}$   |
|   | Current signal, unipolar  | 0 (4)...20 mA, $R_{in} = 100 \text{ ohm}$   |
|   | bipolar   | -20...20 mA, $R_{in} = 100 \text{ ohm}$   |
|   | Potentiometer reference value (X1A: 4)  | 10 V $\pm$ 1%, max. 10 mA, $R < 10 \text{ kohm}$  |
|   | Resolution  | 0.1%  |
|   | Accuracy  | $\pm 2\%$   |
| <b>Analog output</b><br><b>X1A: 7</b><br><b>(AO)</b>                |   | 0 (4)...20 mA, load $< 500 \text{ ohm}$   |
| <b>Auxiliary voltage</b><br><b>X1A: 9</b>                           |   | 24 V DC $\pm$ 10%, max. 200 mA  |
| <b>Digital inputs</b><br><b>X1A: 12...16</b><br><b>(DI1...DI5)</b>  | Voltage   | 12...24 V DC with internal or external supply. Max. voltage for digital inputs 30 V DC. |
|   | Type  | PNP and NPN   |
|   | Input impedance,<br>X1A: 12...15<br>X1A: 16                                   | $R_{in} = 2 \text{ kohm}$<br>$R_{in} = 4 \text{ kohm}$                                  |
| <b>Frequency input</b><br><b>X1A: 16</b><br><b>(DI5)</b>            | X1A: 16 can be used either as a digital or as a frequency input.<br>Frequency | Pulse train 0...10 kHz with 50% duty cycle. 0...16 kHz between two ACS355 drives.       |
| <b>Relay output</b><br><b>X1B: 17...19</b><br><b>(RO 1)</b>         | Type  | NO + NC   |
|   | Max. switching voltage  | 250 V AC / 30 V DC  |
|   | Max. switching current  | 0.5 A / 30 V DC; 5 A / 230 V AC   |
|   | Max. continuous current   | 2 A rms   |
| <b>Digital output</b><br><b>X1B: 20...21</b><br><b>(DO)</b>         | Type  | Transistor output PNP   |
|   | Max. switching voltage  | 30 V DC   |
|   | Max. switching current  | 100 mA / 30 V DC, short-circuit protected   |
|   | Frequency   | 10 Hz ...16 kHz   |
|   | Resolution  | 1 Hz  |
|   | Accuracy  | 0.2%  |
| <b>Frequency output</b><br><b>X1B: 20...21</b><br><b>(FO)</b>       | X1A: 20...21 can be used either as a digital or as a frequency output.        |   |
| <b>STO interface</b><br><b>X1C: 23...26</b>                         |   | See <a href="#">Appendix: Safe torque off (STO)</a> on page 419.                        |

## Clearance and creepage distance

Clearance and creepage distance between I/O connections and the main circuit is 5.5 mm (0.20 in). This meets the requirement for the reinforced insulation of overvoltage category 3 when the installation altitude is below 2000 m (6562 ft). (EC 61800-5-1).

## Brake resistor connection

---

**Short-circuit protection (IEC 61800-5-1, IEC 60439-1, UL 508C)** The brake resistor output is conditionally short-circuit proof by IEC/EN 61800-5-1 and UL 508C. For correct fuse selection, contact your local ABB representative. Rated conditional short-circuit current as defined in IEC 60439-1 and the Short-circuit test current by UL 508C is 100 kA.

## Common DC connection

---

Maximum power through common DC connection is equal to the drive nominal power. See *ACS355 Common DC application guide* (3AUA0000070130 [English]).

## Efficiency

---

Approximately 95 to 98% at nominal power level, depending on the drive size and options.

## Degrees of protection

---

IP20 (cabinet installation) / UL open: Standard enclosure. The drive must be installed in a cabinet to fulfil the requirements for shielding from contact.

IP20 / NEMA 1: Achieved with an option kit (MUL1-R1, MUL1-R3 or MUL1-R4) including a hood and a connection box.

## Ambient conditions

Environmental limits for the drive are given below. The drive is to be used in a heated indoor controlled environment.

|   | Operation<br>installed for<br>stationary use   | Storage<br>in the protective<br>package   | Transportation<br>in the protective<br>package  |
|---|--|---|---|
| <b>Installation site altitude</b>   | 0...2000 m (6600 ft)<br>above sea level<br>(above 1000 m<br>[3300 ft], see section<br><a href="#">Derating</a> on page<br>378)   | -   | -   |
| <b>Air temperature</b>  | -10 ... +50 °C<br>(14 ... 122 °F).<br>No frost allowed. See<br>section <a href="#">Derating</a> on<br>page 378.  | -40 ... +70 °C ±2%<br>(-40 ... +158 °F ±2%)   | -40 ... +70 °C ±2%<br>(-40 ... +158 °F ±2%)   |
| <b>Relative humidity</b>  | 0 ... 95%  | Max. 95%  | Max. 95%  |
|   | No condensation allowed. Maximum allowed relative humidity is 60% in the presence of corrosive gases.  |   |   |
| <b>Contamination levels<br/>(IEC 60721-3-3,<br/>IEC 60721-3-2,<br/>IEC 60721-3-1)</b> | No conductive dust allowed.  |   |   |
|   | According to<br>IEC 60721-3-3,<br>chemical gases:<br>Class 3C2<br>solid particles:<br>Class 3S2.<br><b>Note:</b> The drive must<br>be installed in clean<br>air according to<br>enclosure<br>classification.<br><b>Note:</b> Cooling air<br>must be clean, free<br>from corrosive<br>materials and<br>electrically conductive<br>dust. | According to<br>IEC 60721-3-1,<br>chemical gases:<br>Class 1C2<br>solid particles:<br>Class 1S2 | According to<br>IEC 60721-3-2,<br>chemical gases:<br>Class 2C2<br>solid particles:<br>Class 2S2 |
| <b>Sinusoidal vibration<br/>(IEC 60721-3-3)</b>                                       | Tested according to<br>IEC 60721-3-3,<br>mechanical<br>conditions: Class 3M4<br>2...9 Hz, 3.0 mm<br>(0.12 in)<br>9...200 Hz, 10 m/s <sup>2</sup><br>(33 ft/s <sup>2</sup> )  | -   | -   |

|  |             |  |  |
|--|-------------|--|--|
| <b>Shock</b><br>(IEC 60068-2-27,<br>ISTA 1A) | Not allowed | According to ISTA 1A.<br>Max. 100 m/s <sup>2</sup><br>(330 ft/s <sup>2</sup> ), 11 ms. | According to ISTA 1A.<br>Max. 100 m/s <sup>2</sup><br>(330 ft/s <sup>2</sup> ), 11 ms. |
| <b>Free fall</b>                             | Not allowed | 76 cm (30 in)  | 76 cm (30 in)  |

## Materials

|                        |   |
|------------------------|---|
| <b>Drive enclosure</b> | <ul style="list-style-type: none"> <li>PC/ABS 2 mm, PC+10%GF 2.5...3 mm and PA66+25%GF 1.5 mm, all in color NCS 1502-Y (RAL 9002 / PMS 420 C)</li> <li>hot-dip zinc coated steel sheet 1.5 mm, thickness of coating 20 micrometers</li> <li>extruded aluminum AlSi.</li> </ul>  |
| <b>Package</b>         | Corrugated cardboard.   |
| <b>Disposal</b>        | <p>The drive contains raw materials that should be recycled to preserve energy and natural resources. The package materials are environmentally compatible and recyclable. All metal parts can be recycled. The plastic parts can either be recycled or burned under controlled circumstances, according to local regulations. Most recyclable parts are marked with recycling marks.</p> <p>If recycling is not feasible, all parts excluding electrolytic capacitors and printed circuit boards can be landfilled. The DC capacitors contain electrolyte, which is classified as hazardous waste within the EU. They must be removed and handled according to local regulations.</p> <p>For further information on environmental aspects and more detailed recycling instructions, please contact your local ABB distributor.</p> |

## Applicable standards

|                                 |   |
|---------------------------------|---|
|                                 | The drive complies with the following standards:  |
| • <b>EN ISO 13849-1: 2008</b>   | Safety of machinery - Safety related parts of control systems - Part 1: general principles for design   |
| • <b>IEC/EN 60204-1: 2018</b>   | Safety of machinery. Electrical equipment of machines. Part 1: General requirements. <i>Provisions for compliance:</i> The final assembler of the machine is responsible for installing<br>- an emergency-stop device<br>- a supply disconnecting device. |
| • <b>IEC/EN 62061: 2005</b>     | Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems  |
| • <b>IEC/EN 61800-3: 2004</b>   | Adjustable speed electrical power drive systems. Part 3: EMC requirements and specific test methods   |
| • <b>IEC/EN 61800-5-1: 2007</b> | Adjustable speed electrical power drive systems – Part 5-1: Safety requirements – Electrical, thermal and energy  |
| • <b>IEC/EN 61800-5-2: 2007</b> | Adjustable speed electrical power drive systems – Part 5-2: Safety requirements. Functional.  |
| • <b>UL 508C</b>                | UL Standard for Safety, Power Conversion Equipment, third edition   |

## CE marking

The CE mark is attached to the drive to verify that the drive follows the provisions of the European Low Voltage and EMC Directives.

### ■ Compliance with the European EMC Directive

The EMC Directive defines the requirements for immunity and emissions of electrical equipment used within the European Union. The EMC product standard (EN 61800-3:2004) covers requirements stated for drives. See section [Compliance with EN 61800-3:2004](#) on page 393.

## Compliance with EN 61800-3:2004

### ■ Definitions

EMC stands for **E**lectromagnetic **C**ompatibility. It is the ability of electrical/electronic equipment to operate without problems within an electromagnetic environment. Likewise, the equipment must not disturb or interfere with any other product or system within its locality.

*First environment* includes establishments connected to a low-voltage network which supplies buildings used for domestic purposes.

*Second environment* includes establishments connected to a network not directly supplying domestic premises.

*Drive of category C1:* drive of rated voltage less than 1000 V, intended for use in the first environment.

*Drive of category C2:* drive of rated voltage less than 1000 V and intended to be installed and commissioned only by a professional when used in the first environment.

**Note:** A professional is a person or organization having necessary skills in installing and/or commissioning power drive systems, including their EMC aspects.

Category C2 has the same EMC emission limits as the earlier class first environment restricted distribution. EMC standard IEC/EN 61800-3 does not any more restrict the distribution of the drive, but the using, installation and commissioning are defined.

*Drive of category C3:* drive of rated voltage less than 1000 V, intended for use in the second environment and not intended for use in the first environment.

Category C3 has the same EMC emission limits as the earlier class second environment unrestricted distribution.

---



## ■ Category C1

The emission limits are complied with the following provisions:

1. The optional EMC filter is selected according to the ABB documentation and installed as specified in the EMC filter manual.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. For the maximum motor cable length with 4 kHz switching frequency, see page [388](#).

**WARNING!** In a domestic environment, this product may cause radio inference, in which case supplementary mitigation measures may be required.

## ■ Category C2

The emission limits are complied with the following provisions:

1. The optional EMC filter is selected according to the ABB documentation and installed as specified in the EMC filter manual.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. For the maximum motor cable length with 4 kHz switching frequency, see page [388](#).

**WARNING!** In a domestic environment, this product may cause radio inference, in which case supplementary mitigation measures may be required.

## ■ Category C3

The immunity performance of the drive complies with the demands of IEC/EN 61800-3, second environment (see page [393](#) for IEC/EN 61800-3 definitions).

The emission limits are complied with the following provisions:

1. The internal EMC filter is connected (the metal screw at EMC is in place) or the optional EMC filter is installed.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. With the internal EMC filter: motor cable length 30 m (100 ft) with 4 kHz switching frequency. For the maximum motor cable length with an optional external EMC filter, see page [388](#).

**WARNING!** A drive of category C3 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.

---

**Note:** It is not allowed to install a drive with the internal EMC filter connected on IT (ungrounded) systems. The supply network becomes connected to ground potential through the EMC filter capacitors which may cause danger or damage the drive.

**Note:** It is not allowed to install a drive with the internal EMC filter connected on a corner-grounded TN system as this would damage the drive.

## UL marking

See the type designation label for the valid markings of your drive.

The UL mark is attached to the drive to verify that it meets UL requirements.

### ■ UL checklist

**Input power connection** – See section [Electric power network specification](#) on page 387.

**Disconnecting device (disconnecting means)** – See [Selecting the supply disconnecting device \(disconnecting means\)](#) on page 40.

**Ambient conditions** – The drives are to be used in a heated indoor controlled environment. See section [Ambient conditions](#) on page 391 for specific limits.

**Input cable fuses** – For installation in the United States, branch circuit protection must be provided in accordance with the National Electrical Code (NEC) and any applicable local codes. To fulfil this requirement, use the UL classified fuses given in section [Power cable sizes and fuses](#) on page 379.

For installation in Canada, branch circuit protection must be provided in accordance with Canadian Electrical Code and any applicable provincial codes. To fulfil this requirement, use the UL classified fuses given in section [Power cable sizes and fuses](#) on page 379.

**Power cable selection** – See section [Selecting the power cables](#) on page 41.

**Power cable connections** – For the connection diagram and tightening torques, see section [Connecting the power cables](#) on page 51.

**Overload protection** – The drive provides overload protection in accordance with the National Electrical Code (US).

**Braking** – The drive has an internal brake chopper. When applied with appropriately sized brake resistors, the brake chopper will allow the drive to dissipate regenerative energy (normally associated with quickly decelerating a motor). Brake resistor selection is discussed in [Appendix: Resistor braking](#) on page 407.

---

## C-Tick marking

See the type designation label for the valid markings of your drive.

C-Tick marking is required in Australia and New Zealand. A C-Tick mark is attached to the drive to verify compliance with the relevant standard (IEC 61800-3:2004 – Adjustable speed electrical power drive systems – Part 3: EMC product standard including specific test methods), mandated by the Trans-Tasman Electromagnetic Compatibility Scheme.

The Trans-Tasman Electromagnetic Compatibility Scheme (EMCS) was introduced by the Australian Communication Authority (ACA) and the Radio Spectrum Management Group (RSM) of the New Zealand Ministry of Economic Development (NZMED) in November 2001. The aim of the scheme is to protect the radio frequency spectrum by introducing technical limits for emission from electrical/electronic products.

For fulfilling the requirements of the standard, see section [Compliance with EN 61800-3:2004](#) on page 393.

## TÜV NORD Safety Approved mark

The presence of the TÜV NORD Safety Approved mark verifies that the drive has been evaluated and certified by TÜV NORD according to the following standards for the realization of the Safe torque off function (STO): IEC 61508-1:2010, IEC 61508-2:2010; IEC/EN 62061:2005 and EN ISO 13849-1:2008. See [Appendix: Safe torque off \(STO\)](#).

## RoHS marking

The RoHS mark is attached to the drive to verify that the drive follows the provisions of the European RoHS Directive. RoHS = the restriction of the use of certain hazardous substances in electrical and electronic equipment.

## Compliance with the Machinery Directive

The drive is a machinery component that can be integrated into a wide range of machinery categories as specified in European Commission's Guide to application of the Machinery Directive 2006/42/EC 2nd Edition – June 2010.

---

# 18

## Dimension drawings

---


### What this chapter contains

This chapter contains the dimension drawings of the drive.

Dimension drawings of the ACS355 are shown below. The dimensions are given in millimeters and [inches].

## Frame sizes R0 and R1, IP20 (cabinet installation) / UL open

R1 and R0 are identical except for the fan at the top of R1.

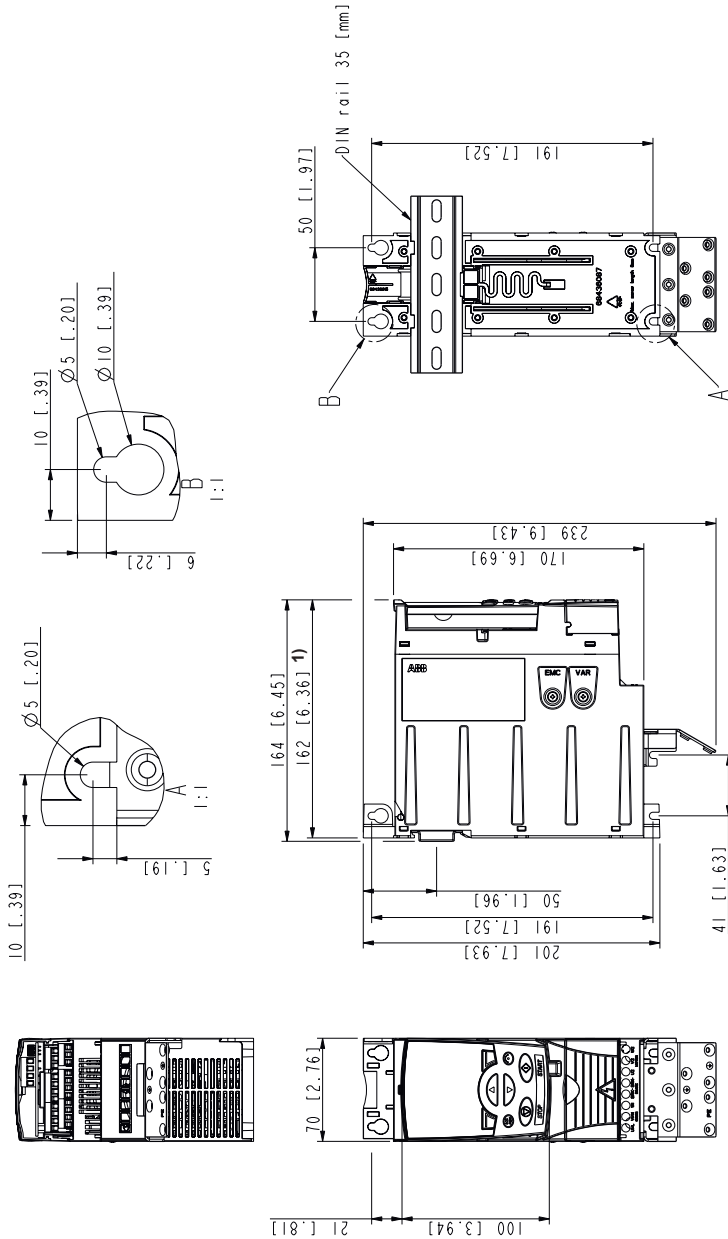


1) Extension modules add 26 mm (1.02 in) to the depth measure.

3AUA0000067784-A

Frame sizes R0 and R1, IP20 (cabinet installation) / UL open


## Frame sizes R0 and R1, IP20 / NEMA 1

R1 and R0 are identical except for the fan at the top of R1.

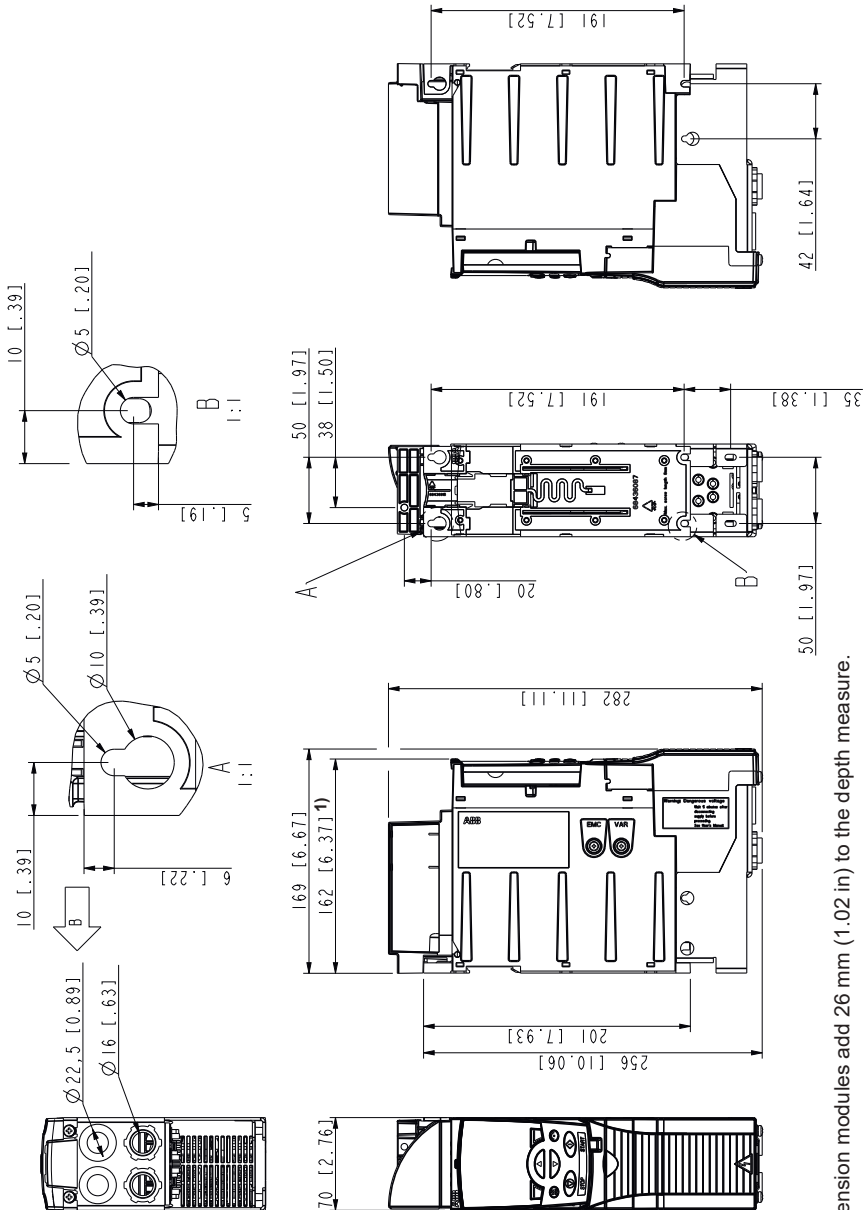

1) Extension modules add 26 mm (1.02 in) to the depth measure.

## Frame size R2, IP20 (cabinet installation) / UL open

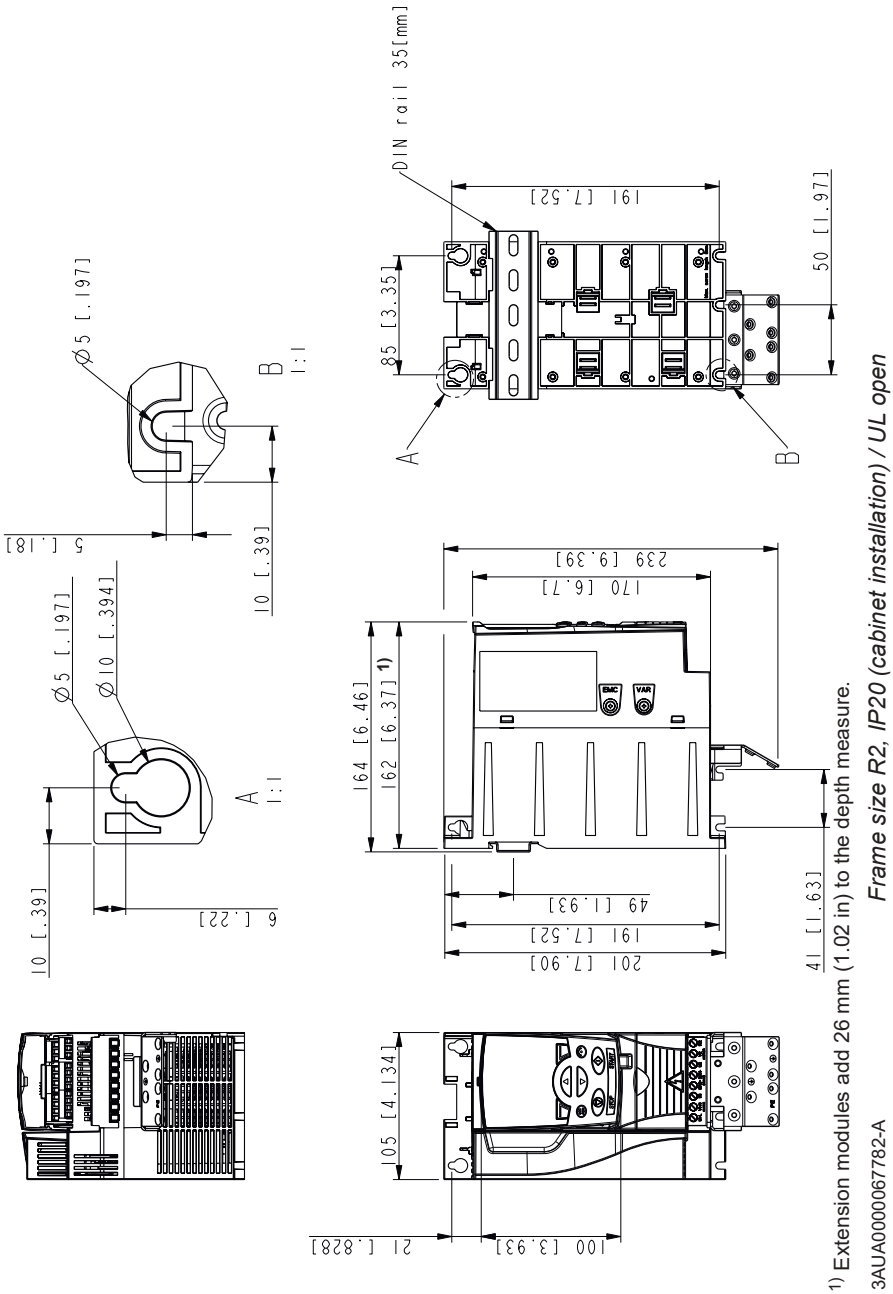


1) Extension modules add 26 mm (1.02 in) to the depth measure.

3AUA0000067782-A

Frame size R2, IP20 (cabinet installation) / UL open

# Frame size R2, IP20 / NEMA 1

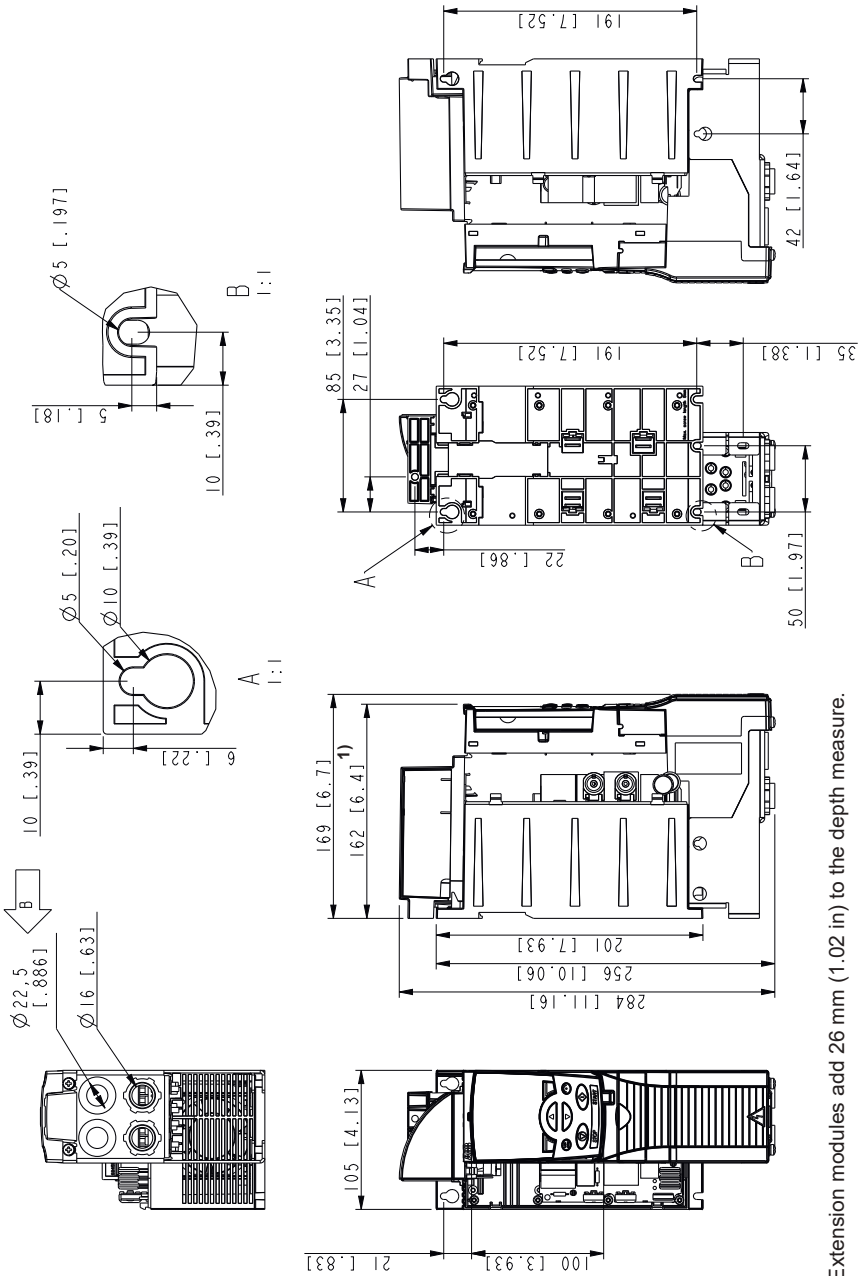


1) Extension modules add 26 mm (1.02 in) to the depth measure.

3AUA0000067783-B

Frame size R2, IP20 / NEMA 1



## Frame size R3, IP20 (cabinet installation) / UL open

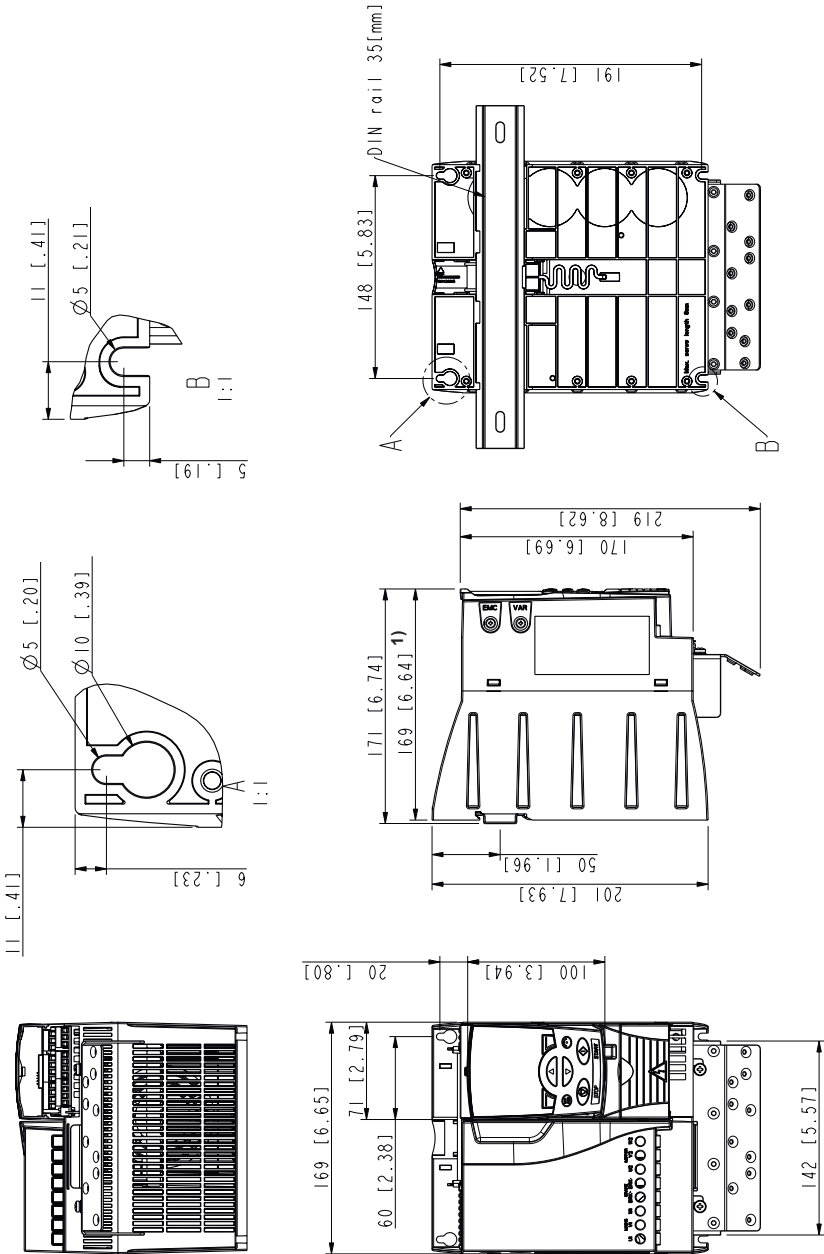


1) Extension modules add 26 mm (1.02 in) to the depth measure.

3AU0000067786-A


Frame size R3, IP20 (cabinet installation) / UL open

# Frame size R3, IP20 / NEMA 1

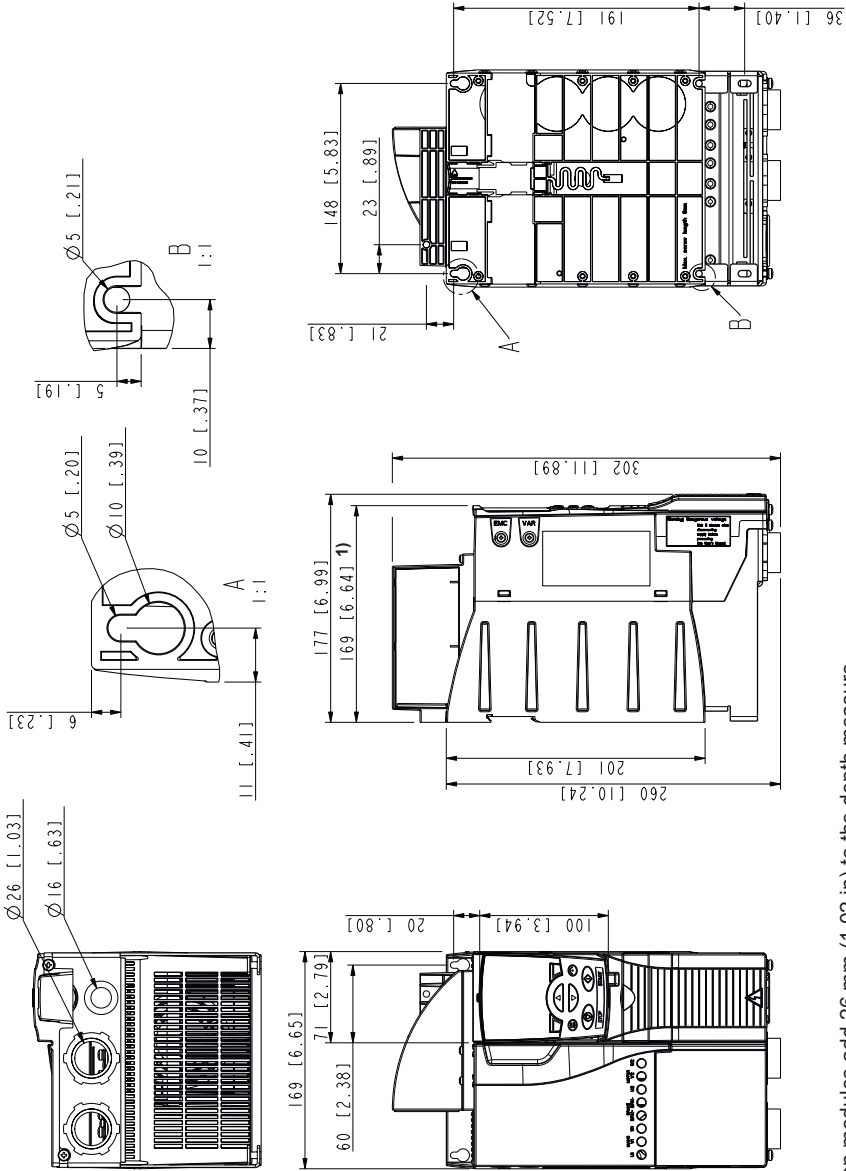

1) Extension modules add 26 mm (1.02 in) to the depth measure.

## Frame size R4, IP20 (cabinet installation) / UL open

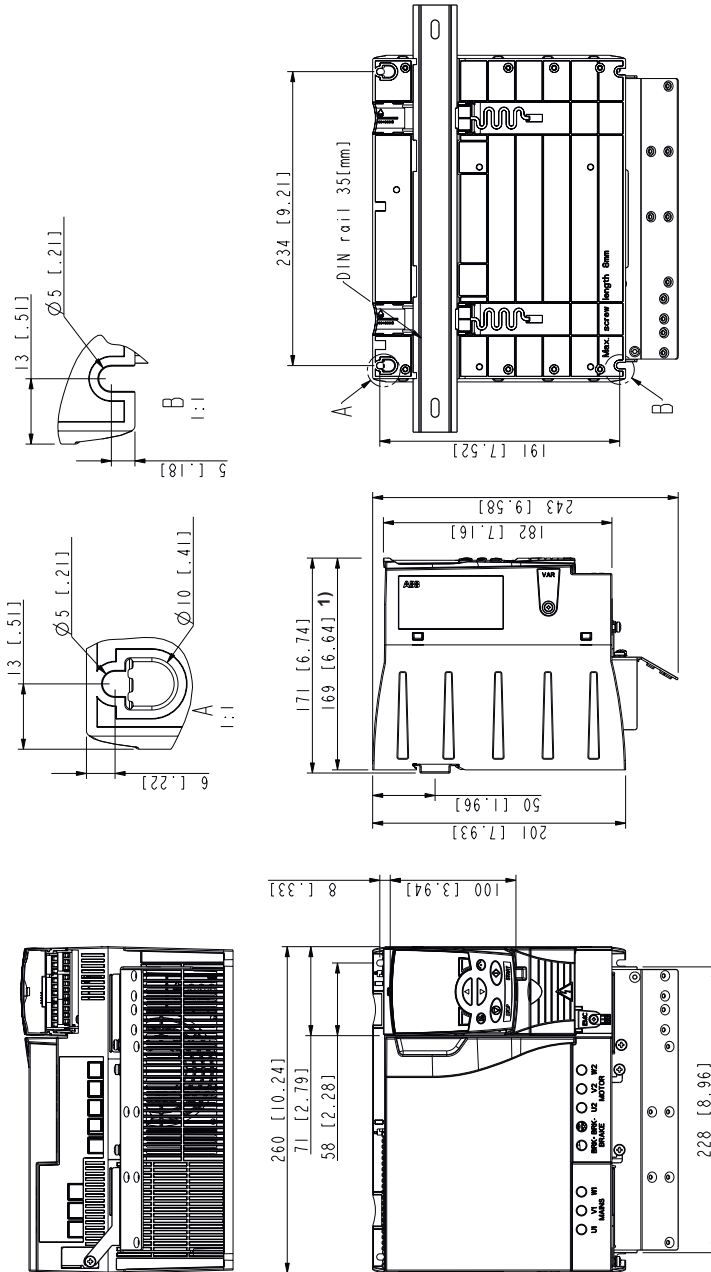


1) Extension modules add 26 mm (1.02 in) to the depth measure.

3AU0000067836-A

Frame size R4, IP20 (cabinet installation) / UL open

# Frame size R4, IP20 / NEMA 1

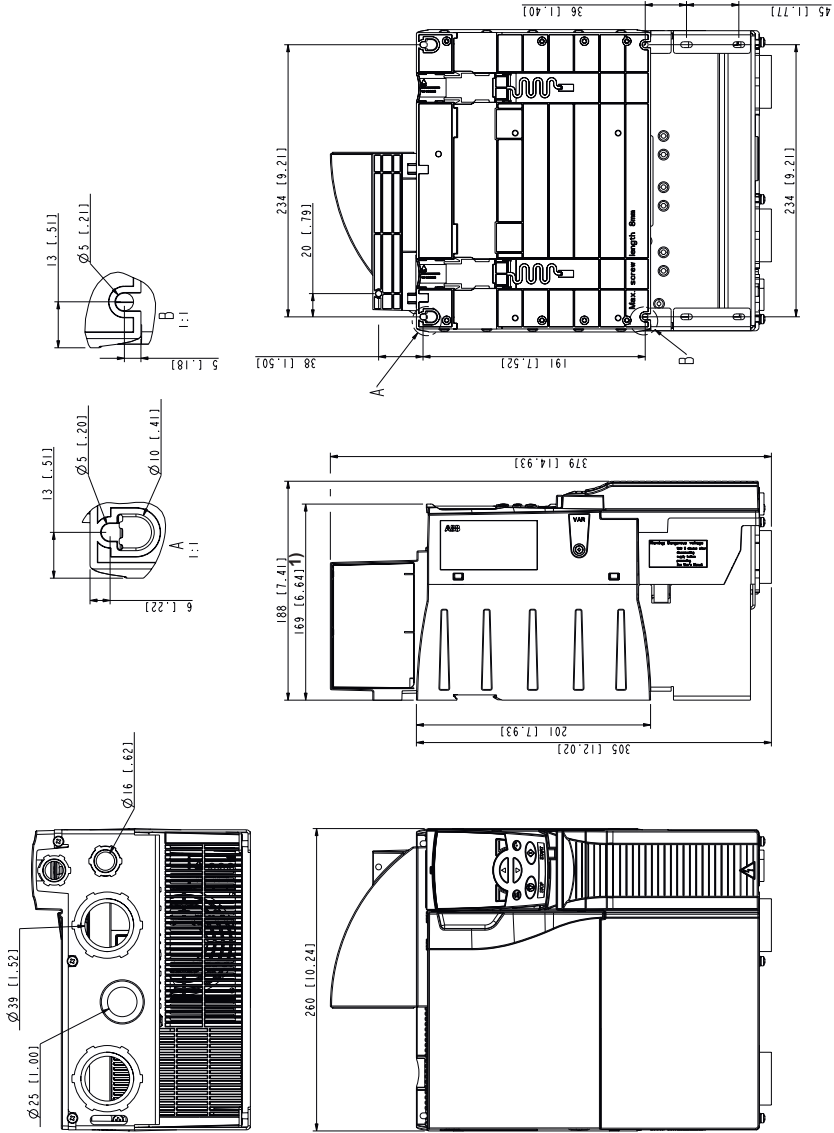

1) Extension modules add 26 mm (1.02 in) to the depth measure.

Frame size R4, IP20 / NEMA 1

3AU0000067883-A



# 19

## Appendix: Resistor braking

---

### What this chapter contains

The chapter tells how to select the brake resistor and cables, protect the system, connect the brake resistor and enable resistor braking.

### Planning the braking system

#### ■ Selecting the brake resistor

ACS355 drives have an internal brake chopper as standard equipment. The brake resistor is selected using the table and equations presented in this section.


1. Determine the required maximum braking power  $P_{Rmax}$  for the application.  $P_{Rmax}$  must be smaller than  $P_{BRmax}$  given in the table on page 408 for the used drive type.
  2. Calculate resistance  $R$  with Equation 1.
  3. Calculate energy  $E_{Rpulse}$  with Equation 2.
  4. Select the resistor so that the following conditions are met:
    - The rated power of the resistor must be greater than or equal to  $P_{Rmax}$ .
    - Resistance  $R$  must be between  $R_{min}$  and  $R_{max}$  given in the table for the used drive type.
    - The resistor must be able to dissipate energy  $E_{Rpulse}$  during the braking cycle  $T$ .
-

Equations for selecting the resistor:

$$\text{Eq. 1. } U_N = 200 \dots 240 \text{ V: } R = \frac{150000}{P_{R\max}}$$

$$U_N = 380 \dots 415 \text{ V: } R = \frac{450000}{P_{R\max}}$$

$$U_N = 415 \dots 480 \text{ V: } R = \frac{615000}{P_{R\max}}$$

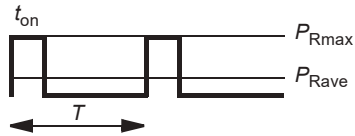

$$\text{Eq. 2. } E_{R\text{pulse}} = P_{R\max} \cdot t_{\text{on}}$$

$$\text{Eq. 3. } P_{R\text{ave}} = P_{R\max} \cdot \frac{t_{\text{on}}}{T}$$

For conversion, use 1 hp = 746 W.

where

$R$  = selected brake resistor value (ohm)

$P_{R\max}$  = maximum power during the braking cycle (W)

$P_{R\text{ave}}$  = average power during the braking cycle (W)

$E_{R\text{pulse}}$  = energy conducted into the resistor during a single braking pulse (J)

$t_{\text{on}}$  = length of the braking pulse (s)

$T$  = length of the braking cycle (s).

Resistor types shown in the table are pre-dimensioned resistors using the maximum braking power with cyclic braking shown in the table. Resistors are available from ABB. Information is subject to change without further notice.

| Type  | $R_{\min}$ | $R_{\max}$ | $P_{BR\max}$ |      | Selection table by resistor type |     |     |     |     |                            |    |
|---|------------|------------|--------------|------|----------------------------------|-----|-----|-----|-----|----------------------------|----|
|   |            |            |              |      | CBR-V / CBT-H <sup>2)</sup>      |     |     |     |     | Braking time <sup>3)</sup> |    |
| ACS355-<br>$x = E/U$ <sup>1)</sup>  | ohm        | ohm        | kW           | hp   | 160                              | 210 | 260 | 460 | 660 | 560                        | s  |
| <b>1-phase <math>U_N = 200 \dots 240 \text{ V}</math> (200, 208, 220, 230, 240 V)</b> |            |            |              |      |                                  |     |     |     |     |                            |    |
| 01x-02A4-2  | 70         | 390        | 0.37         | 0.5  | •                                |     |     |     |     |                            | 90 |
| 01x-04A7-2  | 40         | 200        | 0.75         | 1    | •                                |     |     |     |     |                            | 45 |
| 01x-06A7-2  | 40         | 130        | 1.1          | 1.5  | •                                |     |     |     |     |                            | 28 |
| 01x-07A5-2  | 30         | 100        | 1.5          | 2    | •                                |     |     |     |     |                            | 19 |
| 01x-09A8-2  | 30         | 70         | 2.2          | 3    | •                                |     |     |     |     |                            | 14 |
| <b>3-phase <math>U_N = 200 \dots 240 \text{ V}</math> (200, 208, 220, 230, 240 V)</b> |            |            |              |      |                                  |     |     |     |     |                            |    |
| 03x-02A4-2  | 70         | 390        | 0.37         | 0.5  | •                                |     |     |     |     |                            | 90 |
| 03x-03A5-2  | 70         | 260        | 0.55         | 0.75 | •                                |     |     |     |     |                            | 60 |
| 03x-04A7-2  | 40         | 200        | 0.75         | 1    | •                                |     |     |     |     |                            | 42 |
| 03x-06A7-2  | 40         | 130        | 1.1          | 1.5  | •                                |     |     |     |     |                            | 29 |
| 03x-07A5-2  | 30         | 100        | 1.5          | 2    | •                                |     |     |     |     |                            | 19 |
| 03x-09A8-2  | 30         | 70         | 2.2          | 3    | •                                |     |     |     |     |                            | 14 |
| 03x-13A3-2  | 30         | 50         | 3.0          | 4    |                                  |     |     | •   |     |                            | 16 |
| 03x-17A6-2  | 30         | 40         | 4.0          | 5    |                                  |     |     | •   |     |                            | 12 |
| 03x-24A4-2  | 18         | 25         | 5.5          | 7.5  |                                  |     |     |     |     | •                          | 45 |
| 03x-31A0-2  | 7          | 19         | 7.5          | 10   |                                  |     |     |     |     | •                          | 35 |
| 03x-46A2-2  | 7          | 13         | 11.0         | 15   |                                  |     |     |     |     | •                          | 23 |

| Type<br>ACS355-<br>x = E/U <sup>1)</sup>                                       | $R_{min}$<br>ohm | $R_{max}$<br>ohm | $P_{BRmax}$<br>kW    hp |      | Selection table by resistor type |     |     |     |     |                                 |     |
|--|------------------|------------------|-------------------------|------|----------------------------------|-----|-----|-----|-----|---------------------------------|-----|
|  |                  |                  |                         |      | CBR-V / CBT-H <sup>2)</sup>      |     |     |     |     | Braking time <sup>3)</sup><br>s |     |
|  |                  |                  |                         |      | 160                              | 210 | 260 | 460 | 660 |                                 | 560 |
| <b>3-phase <math>U_N = 380...480</math> V</b> (380, 400, 415, 440, 460, 480 V) |                  |                  |                         |      |                                  |     |     |     |     |                                 |     |
| 03x-01A2-4   | 200              | 1180             | 0.37                    | 0.5  |                                  | •   |     |     |     |                                 | 90  |
| 03x-01A9-4   | 175              | 800              | 0.55                    | 0.75 |                                  | •   |     |     |     |                                 | 90  |
| 03x-02A4-4   | 165              | 590              | 0.75                    | 1    |                                  | •   |     |     |     |                                 | 60  |
| 03x-03A3-4   | 150              | 400              | 1.1                     | 1.5  |                                  | •   |     |     |     |                                 | 37  |
| 03x-04A1-4   | 130              | 300              | 1.5                     | 2    |                                  | •   |     |     |     |                                 | 27  |
| 03x-05A6-4   | 100              | 200              | 2.2                     | 3    |                                  | •   |     |     |     |                                 | 17  |
| 03x-07A3-4   | 70               | 150              | 3.0                     | 4    |                                  |     |     | •   |     |                                 | 29  |
| 03x-08A8-4   | 70               | 110              | 4.0                     | 5    |                                  |     |     | •   |     |                                 | 20  |
| 03x-12A5-4   | 40               | 80               | 5.5                     | 7.5  |                                  |     |     | •   |     |                                 | 15  |
| 03x-15A6-4   | 40               | 60               | 7.5                     | 10   |                                  |     |     | •   |     |                                 | 10  |
| 03x-23A1-4   | 30               | 40               | 11                      | 15   |                                  |     |     |     | •   |                                 | 10  |
| 03x-31A0-4   | 16               | 29               | 15                      | 20   |                                  |     |     |     |     | •                               | 16  |
| 03x-38A0-4   | 13               | 23               | 18.5                    | 25   |                                  |     |     |     |     | •                               | 13  |
| 03x-44A0-4   | 13               | 19               | 22.0                    | 30   |                                  |     |     |     |     | •                               | 10  |

- 1) E=EMC filter connected (metal EMC filter screw installed),  
U=EMC filter disconnected (plastic EMC filter screw installed), US parametrization.
- 2) CBR-V / CBT-H resistor types available in selected countries.
- 3) Braking time = maximum allowed braking time in seconds at  $P_{BRmax}$  every 120 seconds, at 40 °C (104 °F) ambient temperature.

00353783.xls K

### Symbols

$R_{min}$  = minimum allowed brake resistor that can be connected to the brake chopper

$R_{max}$  = maximum allowed brake resistor that allows  $P_{BRmax}$

$P_{BRmax}$  = maximum braking capacity of the drive, must exceed the desired braking power.

| Ratings by resistor type | CBR-V | CBR-V | CBR-V | CBR-V | CBR-V | CBT-H |
|--------------------------|-------|-------|-------|-------|-------|-------|
|                          | 160   | 210   | 260   | 460   | 660   | 560   |
| Nominal power (W)        | 280   | 360   | 450   | 790   | 1130  | 2200  |
| Resistance (ohm)         | 70    | 200   | 40    | 80    | 33    | 18    |



**WARNING!** Never use a brake resistor with a resistance below the minimum value specified for the particular drive. The drive and the internal chopper are not able to handle the overcurrent caused by the low resistance.

### Selecting the brake resistor cables

Use a shielded cable with the conductor size specified in section [Power cable sizes and fuses](#) on page 379. The maximum length of the resistor cable(s) is 5 m (16 ft).



## ■ Placing the brake resistor

Install all resistors in a place where they will cool.



**WARNING!** The materials near the brake resistor must be non-flammable. The surface temperature of the resistor is high. Air flowing from the resistor is of hundreds of degrees Celsius. Protect the resistor against contact.

## ■ Protecting the system in brake circuit fault situations

### Protecting the system in cable and brake resistor short-circuit situations


For short-circuit protection of the brake resistor connection, see [Brake resistor connection](#) on page 390. Alternatively, a two-conductor shielded cable with the same cross-sectional area can be used.

### Protecting the system in brake resistor overheating situations

The following setup is essential for safety – it interrupts the main supply in fault situations involving chopper shorts:

- Equip the drive with a main contactor.
- Wire the contactor so that it opens if the resistor thermal switch opens (an overheated resistor opens the contactor).

Below is a simple wiring diagram example.

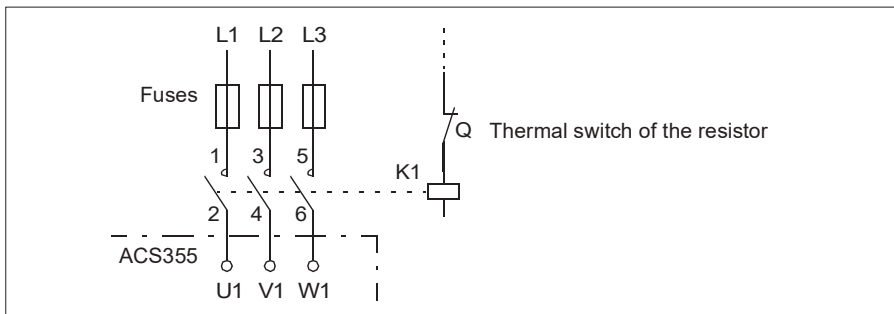

## Electrical installation

For the brake resistor connections, see the power connection diagram of the drive on page 51.

## Start-up

**Note:** When the brake resistor is used for the first time, it is possible that some smoke appears as the protective oil or lacquer on the resistor burns off. Therefore it is important to have adequate ventilation when the brake resistor is used for the first time.

To enable resistor braking, switch off the drive's overvoltage control by setting parameter **2005 OVERVOLT CTRL** to 0 (**DISABLE**). If parameter **2005 OVERVOLT CTRL** is set to 2 (**EN WITH BRCH**) both braking chopper and overvoltage controller are enabled so that the braking chopper capability is used to its maximum and the overvoltage controller is activated above that.

---



# 20

## Appendix: Extension modules

---

### What this chapter contains

The appendix describes common features and mechanical installation of the optional extension modules for the ACS355: MPOW-01 auxiliary power extension module, MTAC-01 pulse encoder interface module and MREL-01 output relay module.

The appendix also describes specific features and electrical installation for the MPOW-01; for information on the MTAC-01 and MREL-01, refer to the corresponding user's manual.

### Extension modules


#### ■ Description

Extension modules have similar enclosures and they are mounted between the control panel and the drive. Therefore, only one extension module can be used for a drive. ACS355 IP66/67 / UL Type 4X drives are not compatible with extension modules due to space restrictions.

The following optional extension modules are available for the ACS355. The drive automatically identifies the module (parameter *0181 EXTENSION* shows the value), which is ready for use after the installation and power-up.

- MTAC-01 pulse encoder interface module
  - MREL-01 output relay module
  - MPOW-01 auxiliary power extension module.
-

## Generic extension module layout

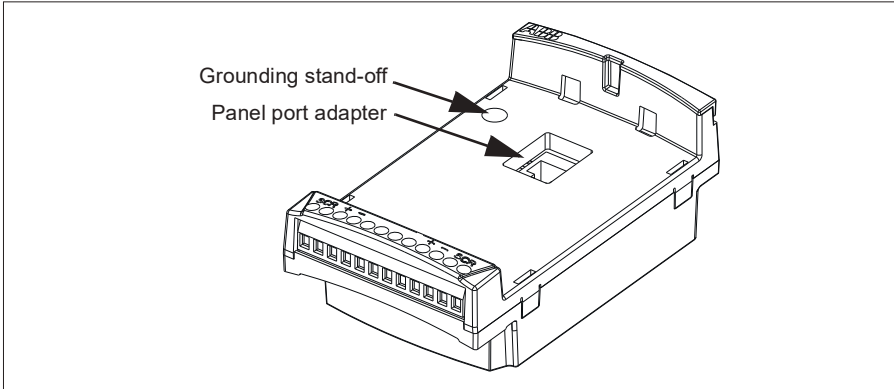

## ■ Installation

### Checking the delivery

The option package contains:

- extension module
- grounding stand-off with an M3 × 12 screw
- panel port adapter (fixed to the MPOW-01 module at the factory).

### Installing the extension module



**WARNING!** Follow the safety instructions given in chapter [Safety](#) on page [17](#).

To install the extension module:


1. If not already off, remove input power from the drive.
2. Remove the control panel or panel cover: remove the terminal cover by simultaneously pushing the recess and sliding the cover off the frame.
3. Remove the grounding screw in the top left corner of the drive's control panel slot and install the grounding stand-off in its place.
4. For the MREL-01 and MTAC-01, ensure that the panel port adapter is attached to either the panel port of the drive or the mate part of the extension module. The adapter of the MPOW-01 is already fixed to the extension module at the factory.
5. Gently and firmly install the extension module to the drive's panel slot directly from the front.

**Note:** The signal and power connections to the drive are automatically made through a 6-pin connector.

6. Ground the extension module by inserting the screw removed from the drive in the top left corner of the extension module. Tighten the screw using a torque of 0.8 N·m (7 lbf·in).

**Note:** Correct insertion and tightening of the screw is essential for fulfilling the EMC requirements and proper operation of the extension module.


7. Install the control panel or panel cover on the extension module.
8. Electrical installation is module-specific. For MPOW-01, see section *Electrical installation* on page 417. For MTAC-01, see *MTAC-01 pulse encoder interface module user's manual* (3AFE68591091 [English]), and for MREL-01, see *MREL-01 output relay module user's manual* (3AUA0000035957 [English]).

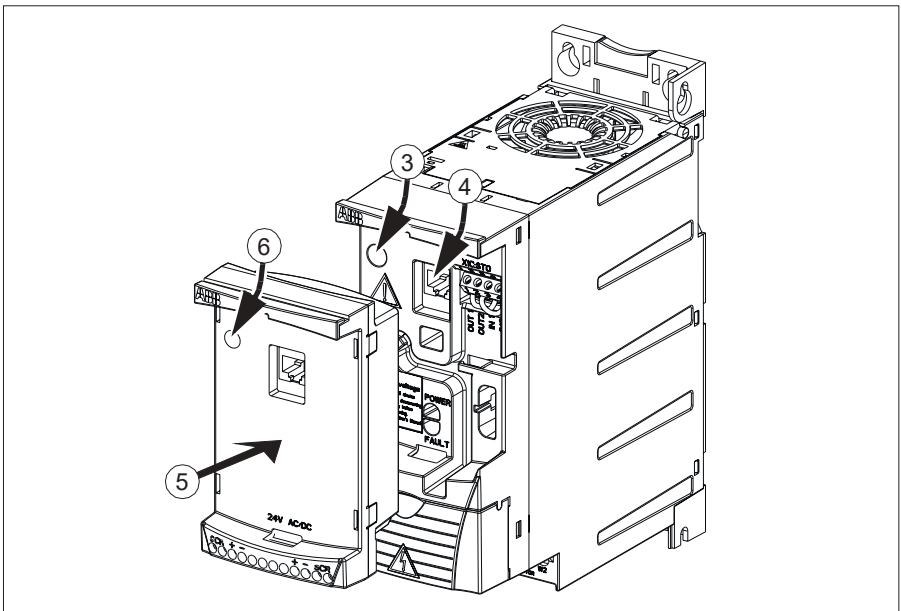

## ■ Technical data

### Dimensions

Extension module dimensions are shown in the figure below.

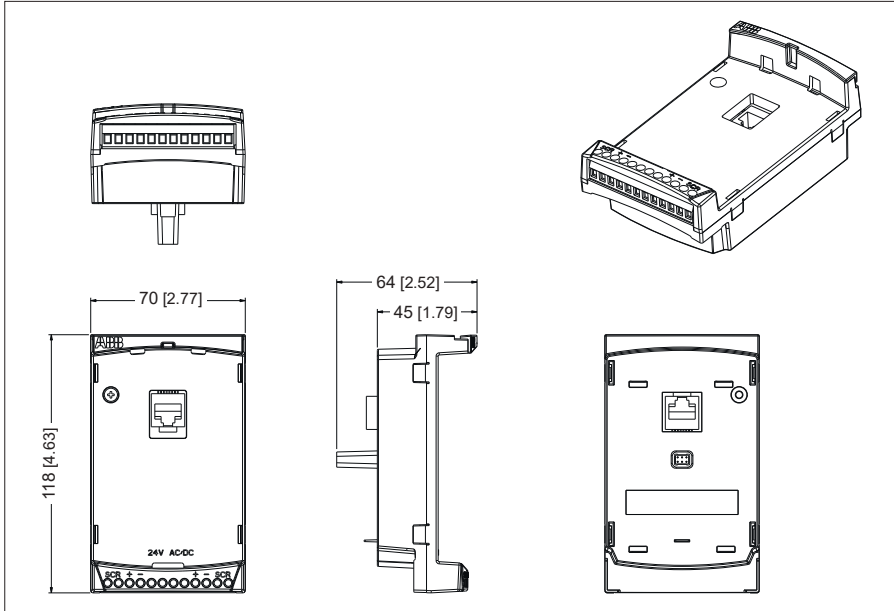

### Generic extension module specifications

- Enclosure degree of protection: IP20
- All materials are UL/CSA-approved.
- When used with ACS355 drives, the extension modules comply with EMC standard EN/IEC 61800-3:2004 for electromagnetic compatibility and EN/IEC 61800-5-1:2005 for electrical safety requirements.

### MTAC-01 pulse encoder interface module

See *MTAC-01 pulse encoder interface module user's manual* (3AFE68591091 [English]) delivered with this option.

### MREL-01 output relay module

See *MREL-01 output relay module user's manual* (3AUA0000035957 [English]) delivered with this option.

## MPOW-01 auxiliary power extension module

### Description

The MPOW-01 auxiliary power extension module is used in installations where the drive's control part is required to be powered during network failures and maintenance interruptions. The MPOW-01 provides auxiliary voltages to the control panel, fieldbus and I/O.

**Note:** If you change any of the drive parameters when the drive is powered through the MPOW-01, you have to force parameter saving with parameter **1607 PARAM SAVE** by setting the value to (1) **SAVE...**; otherwise all changed data will be lost.


### Electrical installation

#### Wiring

- Use 0.5...1.5 mm<sup>2</sup> (20...16 AWG) shielded cable.
- Connect the control wires according to the diagram in section [Terminal designations](#) below. Use a tightening torque of 0.8 N·m (7 lbf·in).

#### Terminal designations

The diagram below shows the MPOW-01 terminals and how the MPOW-01 module is connected to the external power supply and how the modules are daisy chained.

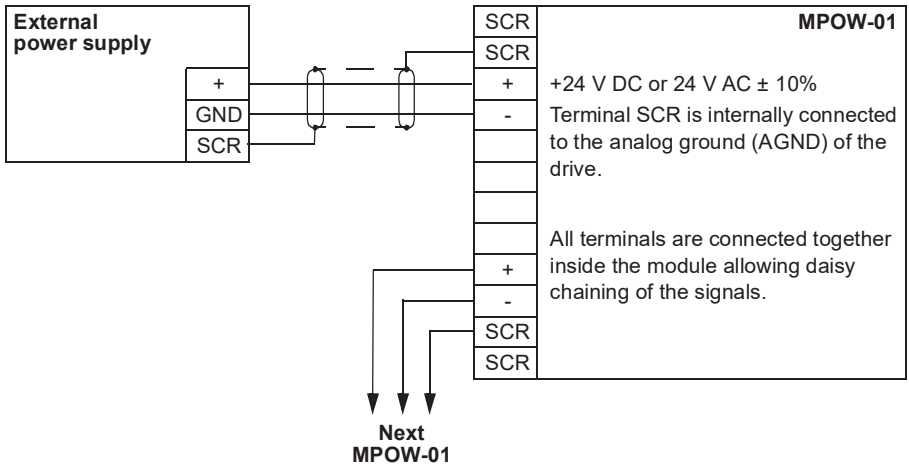



## ■ Technical data

### Specifications

- Input voltage: +24 V DC or 24 V AC  $\pm$  10%
  - Maximum load 1200 mA rms
  - Power losses with maximum load 6 W
  - Designed lifetime of the MPOW-01 module is 50 000 hours in the specified ambient conditions of the drive (see section *Ambient conditions* on page 391).
-

# 21

## Appendix: Safe torque off (STO)

---

### What this appendix contains

The appendix describes the Safe torque off (STO) function of the drive and gives instructions for its use.

### Description

The Safe torque off function can be used, for example, as the final actuator device of safety circuits that stop the drive in case of danger (such as an emergency stop circuit). Another typical application is a prevention of unexpected start-up function that enables short-time maintenance operations like cleaning or work on non-electrical parts of the machinery without switching off the power supply to the drive.

When activated, the Safe torque off function disables the control voltage of the power semiconductors of the drive output stage (A, see diagrams on page [421](#)), thus preventing the drive from generating the torque required to rotate the motor. If the motor is running when Safe torque off is activated, it coasts to a stop.

The Safe torque off function has a redundant architecture, that is, both channels must be used in the safety function implementation. The safety data given in this manual is calculated for redundant use, and does not apply if both channels are not used.

---

The Safe torque off function of the drive complies with these standards:

| Standard  | Name   |
|---|--|
| IEC 60204-1:2018  | <i>Safety of machinery – Electrical equipment of machines – Part 1: General requirements</i>   |
| IEC 61000-6-7:2014  | <i>Electromagnetic compatibility (EMC) – Part 6-7: Generic standards – Immunity requirements for equipment intended to perform functions in a safety-related system (functional safety) in industrial locations</i>  |
| IEC 61326-3-1:2017  | <i>Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 3-1: Immunity requirements for safety-related systems and for equipment intended to perform safety-related functions (functional safety) – General industrial applications</i> |
| IEC 61508-1:2010  | <i>Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 1: General requirements</i>  |
| IEC 61508-2:2010  | <i>Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems</i>   |
| IEC 61511:2016  | <i>Functional safety – Safety instrumented systems for the process industry sector</i>   |
| IEC 61800-5-2:2016<br>EN 61800-5-2:2007   | <i>Adjustable speed electrical power drive systems – Part 5-2: Safety requirements – Functional</i>  |
| IEC 62061:2005 + A1:2012 + A2:2015<br>EN 62061:2005 + AC:2010 + A1:2013 + A2:2015 | <i>Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems</i>  |
| EN ISO 13849-1:2015   | <i>Safety of machinery – Safety-related parts of control systems – Part 1: General principles for design</i>   |
| EN ISO 13849-2:2012   | <i>Safety of machinery – Safety-related parts of control systems – Part 2: Validation</i>  |

The function also corresponds to Prevention of unexpected start-up as specified by EN ISO 14118:2018 (ISO 14118:2017) and Uncontrolled stop (stop category 0) as specified in EN/IEC 60204-1.

## ■ Compliance with the European Machinery Directive


See section [Compliance with the Machinery Directive on page 396](#).

## Wiring


For information on the specifications of the STO connection, see the technical data of the control unit.

### ■ Connection principle

#### Single ACS355 drive, internal power supply

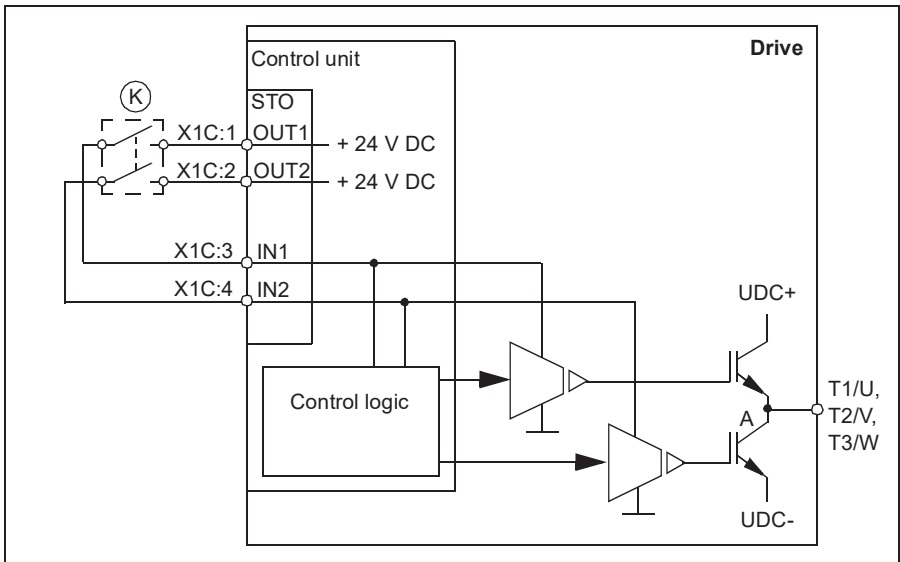


### Single ACS355 drive, external power supply

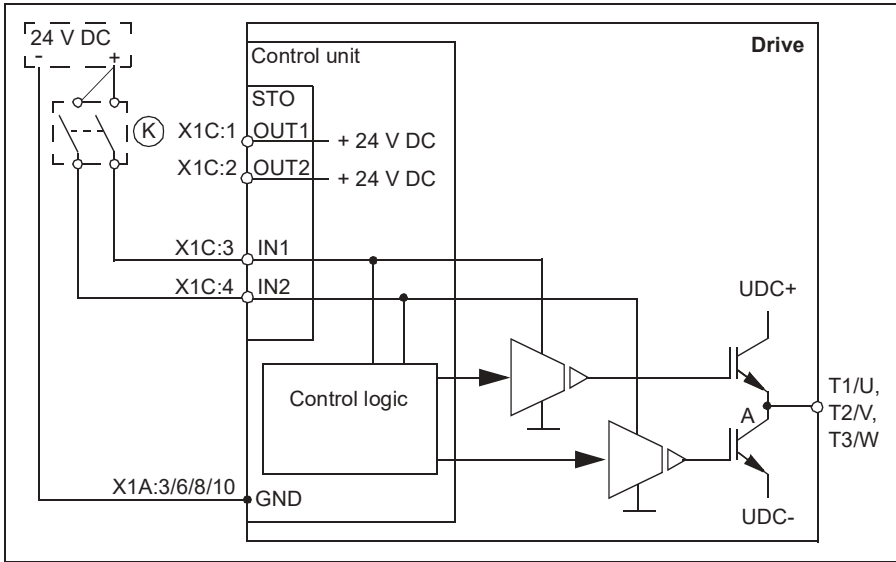


### ■ Wiring examples

#### Single ACS355 drive, internal power supply

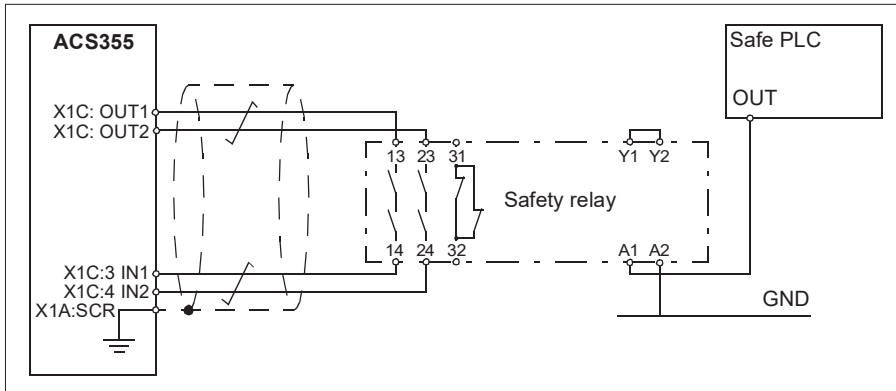

## Single ACS355 drive, external power supply

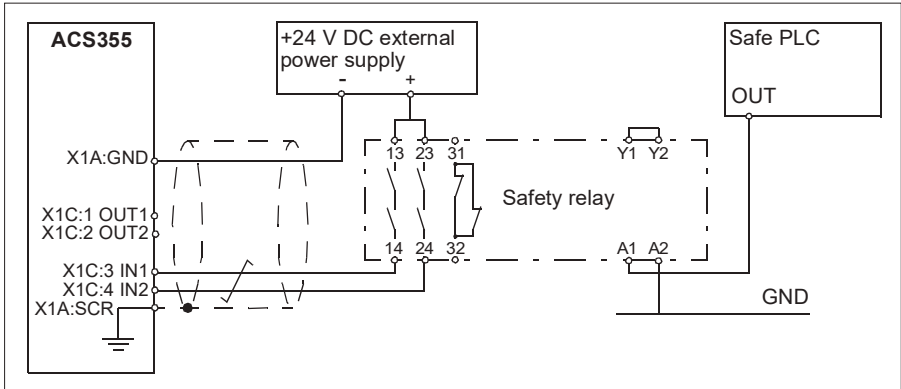

### ■ Activation switch

In the wiring diagrams, the activation switch has the designation (K). This represents a component such as a manually operated switch, an emergency stop push button switch, or the contacts of a safety relay or safety PLC.

- If a manually operated activation switch is used, the switch must be of a type that can be locked out to the open position.
- The STO inputs must be switched on/off within 200 ms of each other.

### ■ Cable types and lengths

- Double-shielded twisted-pair cable is recommended.
- Maximum cable lengths:
  - 300 m (1000 ft) between activation switch (K) and drive control board
  - 60 m (200 ft) between external power supply and drive control board.

**Note:** A short-circuit in the wiring between the switch and an STO terminal causes a dangerous fault. Therefore, it is recommended to use a safety relay (including wiring diagnostics), or a wiring method (shield grounding, channel separation) which reduces or eliminates the risk caused by the short-circuit.

**Note:** The voltage at the STO input terminals of each drive must be at least 13 V DC to be interpreted as “1”. The pulse tolerance of the input channels is 1 ms.

### ■ Grounding of protective shields

- Ground the shield in the cabling between the activation switch and the control board at the control board.
- Ground the shield in the cabling between two control boards at one control board only.

## Operation principle

1. The Safe torque off activates (the activation switch is opened, or safety relay contacts open).
2. The STO inputs of the drive control board de-energize.
3. The control board cuts off the control voltage from the output IGBTs.
4. The control program generates an indication as defined by parameter 3025 STO OPERATION.

The parameter selects which indications are given when one or both STO signals are switched off or lost. The indications also depend on whether the drive is running or stopped when this occurs.

**Note:** This parameter does not affect the operation of the STO function itself. The STO function will operate regardless of the setting of this parameter: a running drive will stop upon removal of one or both STO signals, and will not start until both STO signals are restored and all faults reset.

**Note:** The loss of only one STO signal always generates a fault as it is interpreted as a malfunction of STO hardware or wiring.

5. The motor coasts to a stop (if running). The drive cannot restart while the activation switch or safety relay contacts are open. After the contacts close, a reset may be needed (depending on the setting of parameter 3025). A new start command is required to start the drive.

## Start-up including acceptance test

To ensure the safe operation of a safety function, validation is required. The final assembler of the machine must validate the function by performing an acceptance test. The acceptance test must be performed

- at initial start-up of the safety function
- after any changes related to the safety function (circuit boards, wiring, components, settings, etc.)
- after any maintenance work related to the safety function.

### ■ Competence

The acceptance test of the safety function must be carried out by a competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6. The test procedures and report must be documented and signed by this person.

### ■ Acceptance test reports


You must store the signed acceptance test reports in the logbook of the machine. The report must include documentation of start-up activities and test results, references to

---

failure reports and resolution of failures. You must store any new acceptance tests performed due to changes or maintenance in the logbook of the machine.

## ■ Acceptance test procedure

After wiring the Safe torque off function, validate its operation as follows.

| Action   | <input checked="" type="checkbox"/> |
|--|-------------------------------------|
|  <p><b>WARNING!</b> Follow the instructions in chapter <i>Safety</i>, page 17. Ignoring the instructions can cause physical injury or death, or damage to the equipment.</p>  | <input type="checkbox"/>            |
| Ensure that the drive can be run and stopped freely during start-up.   | <input type="checkbox"/>            |
| Stop the drive (if running), switch the input power off and isolate the drive from the power line using a disconnecter.  | <input type="checkbox"/>            |
| Check the Safe torque off circuit connections against the wiring diagram.  | <input type="checkbox"/>            |
| Close the disconnecter and switch the power on.  | <input type="checkbox"/>            |
| <p>Test the operation of the STO function when the motor is stopped.</p> <ul style="list-style-type: none"> <li>• Give a stop command for the drive (if running) and wait until the motor shaft is at a standstill.</li> </ul> <p>Ensure that the drive operates as follows:</p> <ul style="list-style-type: none"> <li>• Open the STO circuit. The drive generates an indication as defined in parameter 3025 STO OPERATION. For the description of the warning, see chapter <i>Fault tracing</i>.</li> <li>• Give a start command to verify that the STO function blocks the drive's operation. The drive displays a warning. The motor should not start.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> </ul> | <input type="checkbox"/>            |
| <p>Test the operation of the STO function when the motor is running.</p> <ul style="list-style-type: none"> <li>• Start the drive and ensure the motor is running.</li> <li>• Open the STO circuit. The motor should stop. The drive generates an indication if one is defined for the 'running' state in parameter 3025 STO OPERATION. For the description of the warning, see chapter <i>Fault tracing</i>.</li> <li>• Reset any active faults and try to start the drive.</li> <li>• Ensure that the motor stays at a standstill and the drive operates as described above in testing the operation when the motor is stopped.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> </ul>                           | <input type="checkbox"/>            |



| Action   | <input checked="" type="checkbox"/> |
|--|-------------------------------------|
| <p>Test the operation of the failure detection of the drive. The motor can be stopped or running.</p> <ul style="list-style-type: none"> <li>• Open the 1st channel of the STO circuit (wire coming to IN1). If the motor was running, it should coast to a stop. The drive generates a STO2 LOST (FFA2) fault indication. For the description of the fault, see chapter <a href="#">Fault tracing</a>.</li> <li>• Give a start command to verify that the STO function blocks the drive's operation. The drive displays a warning. The motor should not start.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> <li>• Open the 2nd channel of the STO circuit (wire coming to IN2). If the motor was running, it should coast to a stop. The drive generates a STO1 LOST (FFA1) fault indication. For the description of the fault, see chapter <a href="#">Fault tracing</a>.</li> <li>• Give a start command to verify that the STO function blocks the drive's operation. The drive displays a warning. The motor should not start.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> </ul> |                                     |
| <p>Document and sign the acceptance test report which verifies that the safety function is safe and accepted for operation.</p>  | <input type="checkbox"/>            |

## Use

1. Open the activation switch, or activate the safety functionality that is wired to the STO connection.
2. The STO inputs on the drive control unit de-energize, and the drive control board cuts off the control voltage from the output IGBTs.
3. The control program generates an indication as defined by parameter 3025 STO OPERATION.
4. The motor coasts to a stop (if running). The drive will not restart while the activation switch or safety relay contacts are open.
5. Deactivate the STO by closing the activation switch, or resetting the safety functionality that is wired to the STO connection.
6. Reset any faults before restarting.



**WARNING!** The Safe torque off function does not disconnect the voltage of the main and auxiliary circuits from the drive. Therefore maintenance work on electrical parts of the drive or the motor can only be carried out after isolating the drive from the supply and all other voltage sources.



**WARNING!** (With permanent magnet motors only) In case of a multiple IGBT power semiconductor failure, the drive can produce an alignment torque which maximally rotates the motor shaft by  $180/p$  degrees regardless of the activation of the Safe torque off function.  $p$  denotes the number of pole pairs.

---

**Notes:**

- If a running drive is stopped by using the Safe torque off function, the drive will cut off the motor supply voltage and the motor will coast to a stop. If this causes danger or is not otherwise acceptable, stop the drive and machinery using the appropriate stop mode before activating the Safe torque off function.
  - The Safe torque off function overrides all other functions of the drive unit.
  - The Safe torque off function is ineffective against deliberate sabotage or misuse.
  - The Safe torque off function has been designed to reduce the recognized hazardous conditions. In spite of this, it is not always possible to eliminate all potential hazards. The assembler of the machine must inform the final user about the residual risks.
-

## Maintenance

After the operation of the circuit is validated at start-up, the STO function shall be maintained by periodic proof testing. In high demand mode of operation, the maximum proof test interval is 20 years. In low demand mode of operation, the maximum proof test interval is 5 or 2 years; see section [Safety data](#) (page 430). It is assumed that all dangerous failures of the STO circuit are detected by the proof test. To perform the proof test, do the [Acceptance test procedure](#) (page 425).

**Note:** See also the Recommendation of Use CNB/M/11.050 (published by the European co-ordination of Notified Bodies) concerning dual-channel safety-related systems with electromechanical outputs:

- When the safety integrity requirement for the safety function is SIL 3 or PL e (cat. 3 or 4), the proof test for the function must be performed at least every month.
- When the safety integrity requirement for the safety function is SIL 2 (HFT = 1) or PL d (cat. 3), the proof test for the function must be performed at least every 12 months.

The STO function does not contain any electromechanical components.

In addition to proof testing, it is a good practice to check the operation of the function when other maintenance procedures are carried out on the machinery.

Include the Safe torque off operation test described above in the routine maintenance program of the machinery that the drive runs.

If any wiring or component change is needed after start up, or the parameters are restored, follow the test given in section [Acceptance test procedure](#) (page 425).

Use only spare parts approved by ABB.

Record all maintenance and proof test activities in the machine logbook.

### ■ Competence

The maintenance and proof test activities of the safety function must be carried out by a competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6.

---

## Fault tracing

The indications given during the normal operation of the Safe torque off function are selected by parameter 3025 STO OPERATION. The indications can be read via fieldbus. The indications are not safety-classified signals.

The diagnostics of the Safe torque off function cross-compare the status of the two STO channels. In case the channels are not in the same state, a fault reaction function is performed and the drive trips on an “STO hardware failure” fault. An attempt to use the STO in a non-redundant manner, for example activating only one channel, will trigger the same reaction.

For the indications generated by the drive, see chapter *Fault tracing*, and for details on directing fault and warning indications to an output on the control unit for external diagnostics.

Any failures of the Safe torque off function must be reported to ABB.

---

## Safety data

The safety data for the Safe torque off function is given below.

**Note:** The safety data is calculated for redundant use, and does not apply if both STO channels are not used.

| Frame size  | SIL/SILCL | PL | SFF | PFH                              | PFD <sub>avg</sub>     | PFD <sub>avg</sub>     | MTTF <sub>D</sub> | DC  | Cat. | SC | HFT | CCF | T <sub>M</sub> |
|---|-----------|----|-----|----------------------------------|------------------------|------------------------|-------------------|-----|------|----|-----|-----|----------------|
|   |           |    | (%) | (T <sub>1</sub> = 20 a)<br>(1/h) | (T <sub>1</sub> = 2 a) | (T <sub>1</sub> = 5 a) |                   |     |      |    |     |     | (a)            |
| <b>1-phase U<sub>N</sub> = 200...240 V (200, 208, 220, 230, 240 V)</b>      |           |    |     |                                  |                        |                        |                   |     |      |    |     |     |                |
| R0<br>R1  | 3         | e  | >90 | 6.05E-09                         | 3.64E-05               | 9.11E-05               | 2623              | ≥90 | 3    | 3  | 1   | 80  | 10             |
| R2  | 3         | e  | >90 | 5.99E-09                         | 3.64E-05               | 9.11E-05               | 2672              | ≥90 | 3    | 3  | 1   | 80  | 10             |
| <b>3-phase U<sub>N</sub> = 200...240 V (200, 208, 220, 230, 240 V)</b>      |           |    |     |                                  |                        |                        |                   |     |      |    |     |     |                |
| R0<br>R1  | 3         | e  | >90 | 6.05E-09                         | 3.64E-05               | 9.11E-05               | 2623              | ≥90 | 3    | 3  | 1   | 80  | 10             |
| R2<br>R3  | 3         | e  | >90 | 5.99E-09                         | 3.64E-05               | 9.11E-05               | 2672              | ≥90 | 3    | 3  | 1   | 80  | 10             |
| R4  | 3         | e  | >90 | 5.77E-09                         | 3.45E-05               | 8.62E-05               | 2673              | ≥90 | 3    | 3  | 1   | 80  | 10             |
| <b>3-phase U<sub>N</sub> = 380...480 V (380, 400, 415, 440, 460, 480 V)</b> |           |    |     |                                  |                        |                        |                   |     |      |    |     |     |                |
| R0<br>R1<br>R3  | 3         | e  | >90 | 5.99E-09                         | 3.64E-05               | 9.11E-05               | 2672              | ≥90 | 3    | 3  | 1   | 80  | 10             |
| R4  | 3         | e  | >90 | 5.77E-09                         | 3.45E-05               | 8.62E-05               | 2673              | ≥90 | 3    | 3  | 1   | 80  | 10             |

3AXD00000588033 F

- The following temperature profile is used in safety value calculations:
  - 670 on/off cycles per year with  $\Delta T = 71.66\text{ }^{\circ}\text{C}$
  - 1340 on/off cycles per year with  $\Delta T = 61.66\text{ }^{\circ}\text{C}$
  - 30 on/off cycles per year with  $\Delta T = 10.0\text{ }^{\circ}\text{C}$
  - 32  $^{\circ}\text{C}$  board temperature at 2.0% of time
  - 60  $^{\circ}\text{C}$  board temperature at 1.5% of time
  - 85  $^{\circ}\text{C}$  board temperature at 2.3% of time.
- The STO is a type A safety component as defined in IEC 61508-2.
- Relevant failure modes:
  - The STO trips spuriously (safe failure)
  - The STO does not activate when requested

A fault exclusion on the failure mode “short circuit on printed circuit board” has been made (EN 13849-2, table D.5). The analysis is based on an assumption that one failure occurs at one time. No accumulated failures have been analyzed.

- STO reaction time (shortest detectable break): 10 microseconds
- STO response time: 2 ms (typical), 5 ms (maximum)
- Fault detection time: Channels in different states for longer than 200 ms
- Fault reaction time: Fault detection time + 10 ms

- STO fault indication (parameter 3025) delay: < 200 ms
- STO warning indication (parameter 3025) delay: < 200 ms

## ■ Abbreviations

| Abbreviation       | Reference        | Description  |
|--------------------|------------------|--|
| Cat.               | EN ISO 13849-1   | Classification of the safety-related parts of a control system in respect of their resistance to faults and their subsequent behavior in the fault condition, and which is achieved by the structural arrangement of the parts, fault detection and/or by their reliability. The categories are: B, 1, 2, 3 and 4.   |
| CCF                | EN ISO 13849-1   | Common cause failure (%)   |
| DC                 | EN ISO 13849-1   | Diagnostic coverage  |
| HFT                | IEC 61508        | Hardware fault tolerance   |
| MTTF <sub>D</sub>  | EN ISO 13849-1   | Mean time to dangerous failure: (Total number of life units) / (Number of dangerous, undetected failures) during a particular measurement interval under stated conditions   |
| PFD <sub>avg</sub> | IEC 61508        | Average probability of dangerous failure on demand, that is, mean unavailability of a safety-related system to perform the specified safety function when a demand occurs  |
| PFH                | IEC 61508        | Average frequency of dangerous failures per hour, that is, average frequency of a dangerous failure of a safety related system to perform the specified safety function over a given period of time  |
| PL                 | EN ISO 13849-1   | Performance level. Levels a...e correspond to SIL  |
| SC                 | IEC 61508        | Systematic capability  |
| SFF                | IEC 61508        | Safe failure fraction (%)  |
| SIL                | IEC 61508        | Safety integrity level (1...3)   |
| SILCL              | IEC/EN 62061     | Maximum SIL (level 1...3) that can be claimed for a safety function or subsystem   |
| STO                | IEC/EN 61800-5-2 | Safe torque off  |
| T <sub>1</sub>     | IEC 61508        | Proof test interval. T <sub>1</sub> is a parameter used to define the probabilistic failure rate (PFH or PFD) for the safety function or subsystem. Performing a proof test at a maximum interval of T <sub>1</sub> is required to keep the SIL capability valid. The same interval must be followed to keep the PL capability (EN ISO 13849) valid.<br>See also section <a href="#">Maintenance</a> (page 428). |
| T <sub>M</sub>     | EN ISO 13849-1   | Mission time: the period of time covering the intended use of the safety function/device. After the mission time elapses, the safety device must be replaced. Note that any T <sub>M</sub> values given cannot be regarded as a guarantee or warranty.   |

## ■ TÜV certificate

The TÜV certificate (3AXD00000600767) is available on the Internet. See section *Document library on the Internet* on the inside of the back cover.

---

## Declaration of conformity



### EU Declaration of Conformity

Machinery Directive 2006/42/EC

We

Manufacturer:  
Address:  
Phone:

ABB Oy  
Hiomotie 13, 00380 Helsinki, Finland.  
+358 10 22 11

declare under our sole responsibility that the following product:

**Frequency converter(s)**  
AL3333

with regard to the safety function(s)

#### Safe Torque Off

is/are in conformity with all the relevant safety component requirements of EU Machinery Directive 2006/42/EC, when the listed safety function is used for safety component functionality.

The following harmonized standards have been applied:

|  |  |
|--|--|
| EN 61800-5-2:2007                              | Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional                                 |
| EN 62061:2005<br>+ AC:2010 + A1:2013 + A2:2015 | Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems |
| EN ISO 13849-1:2015                            | Safety of machinery – Safety-related parts of control systems. Part 1: General requirements                                  |
| EN ISO 13849-2:2012                            | Safety of machinery – Safety-related parts of the control systems. Part 2: Validation  |
| EN 60204-1:2018                                | Safety of machinery – Electrical equipment of machines – Part 1: General requirements  |

The following other standards have been applied.

|                           |   |
|---------------------------|---|
| IEC 61508:2010, parts 1-2 | Functional safety of electrical / electronic / programmable electronic safety-related systems |
| IEC 61800-5-2:2016        | Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional  |

The product(s) referred in this Declaration of conformity fulfil(s) the relevant provisions of other European Union Directives which are notified in Single EU Declaration of conformity 3AXD10000499279.

Person authorized to compile the technical file:

Name and address: Jussi Vesti, Hiomotie 13, 00380 Helsinki, Finland.

Helsinki, 09.04.2020

Signed for and on behalf of:

  
Tuomo Tarala  
Vice president, ABB Oy

  
Vesa Tuomainen  
Product Engineering manager, ABB Oy

Document number 3AND00000467062



[www.nicsanat.com](http://www.nicsanat.com)

021-87700210



# 22

## Appendix: Permanent magnet synchronous motors (PMSMs)

---

### What this chapter contains

This chapter gives basic guidelines on how the ACS355 drive parameters should be set when using permanent magnet synchronous motors (PMSMs). In addition, some hints are given for tuning the motor control performance.

### Setting the parameters

With PMSMs special attention must be paid on setting the motor nominal values correctly in parameter group *99 START-UP DATA*. It is always recommended to use vector control. If the nominal back-emf of the motor is not available, a full ID run should be performed for improving performance.

---

The following table lists the basic parameter settings needed for permanent magnet synchronous motors.

| No.  | Name                  | Value  | Description   |
|------|-----------------------|--------|---|
| 9903 | MOTOR<br>TYPE         | 2      | Permanent magnet synchronous motor  |
| 9904 | MOTOR<br>CTRL<br>MODE | 1<br>2 | VECTOR: SPEED<br>VECTOR:TORQ<br><b>Note:</b> Scalar control mode (3) can also be selected, but it is not recommended because in the scalar control mode the permanent magnet synchronous motor may get unstable and damage either the process, the motor or the drive.  |
| 9905 | MOTOR<br>NOM VOLT     |        | <b>Note:</b> If the back emf voltage of the motor is not available, set the rated value here and run the ID run. If the voltage is given as a proportional value, such as 103 V/1000 rpm in a 3000 rpm motor, set 309 V here. Sometimes the value is given as the peak value. In this case, divide the value by the square root of 2 (1.41).<br><b>Note:</b> It is recommended to use the back emf voltage. If it is not used, a full ID run must be performed. |
| 9906 | MOTOR<br>NOM<br>CURR  |        | Rated current of the motor. Do not use the peak value.  |
| 9907 | MOTOR<br>NOM FREQ     |        | Rated electrical frequency of the motor. If the frequency is not given in the motor rating plate, it can be calculated using the following formula:<br>frequency [Hz] = speed [rpm] x (number of pole pairs) / 60   |
| 9908 | MOTOR<br>NOM<br>SPEED |        | Rated mechanical speed of the motor. If it is not given, it can be calculated using the following formula:<br>speed [rpm] = frequency [Hz] x 60 / (number of pole pairs)  |
| 9909 | MOTOR<br>NOM<br>POWER |        | Motor nominal power. If it is not given, it can be calculated using the following formula:<br>Power [kW] = Rated torque [Nm] x 2 x pi x rated speed [rpm] / 60000   |
| 2102 | STOP<br>FUNCTION      | RAMP   | It is recommended to use ramp stop with a PMSM.   |

## Start mode

The default value of parameter *2101 START FUNCTION* is 1 (AUTO). In most cases this is suitable for starting the rotation. If fast start with low inertia is required, it is recommended to set parameter *2101 START FUNCTION* to 2 (DC MAGN).

## Smooth start

The Smooth start function can be used if the motor is not able to start or when rotation at low speeds needs to be improved. The following table lists the needed parameter settings.

| No.  | Name                    | Value     | Description  | Default |
|------|-------------------------|-----------|--|---------|
| 2621 | <i>SMOOTH START</i>     | 0         | Disabled   | 0       |
|      |                         | 1         | Enabled always   |         |
|      |                         | 2         | Start only   |         |
| 2622 | <i>SMOOTH START CUR</i> | 10...100% | Current applied to the motor when the Smooth start is active. Increasing the current helps enable starting with a load or with a large inertia. Decreasing the current can prevent the rotor from turning into a wrong direction during the start. | 50%     |
| 2623 | <i>SMOOTH START FRQ</i> | 2...100%  | Set the smooth start frequency range as small as possible. This should be tuned so that the rotation is stable throughout the whole speed range.   | 10%     |

## Speed controller tuning

In vector control mode, it is recommended to tune the speed controller. In applications where the motor can be rotated freely, automatic tuning can be used. See parameter *2305 AUTOTUNE RUN* for more information.

Usually it is enough to adjust the proportional gain (parameter *2301 PROP GAIN*) of the speed controller to a higher value. The default value is 5 which results in rather conservative speed controller tuning. Increase the proportional gain value by 5 until the performance is satisfactory. If the application becomes unstable, divide the last gain value by 2, and you have reached rather robust speed controller tuning.

**Note:** It is recommended to use encoder feedback if accurate torque control, high torque production, or sustained operation is required at low speeds (below 20% of the motor nominal speed).

### ■ Adjusting motor speed estimation gain in case of an over current failure

The inertia of the PM motor application may cause over current trips. If the drive fails constantly to over current with the PM motor (Fault 01), the speed estimation gain may need to be adjusted. This is done by changing the parameter *2626 SPD EST BW TRIM*.

# Further information

## Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to [abb.com/searchchannels](http://abb.com/searchchannels).

## Product training

For information on ABB product training, navigate to [new.abb.com/service/training](http://new.abb.com/service/training).

## Providing feedback on ABB Drives manuals

Your comments on our manuals are welcome. Navigate to [new.abb.com/drives/manuals-feedback-form](http://new.abb.com/drives/manuals-feedback-form).

## Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet at [abb.com/drives/documents](http://abb.com/drives/documents).



[abb.com/drives](http://abb.com/drives)

[www.nicsanat.com](http://www.nicsanat.com)

021-87700210



3AUA0000066143E